



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG FR310P. You'll find the answers to all your questions on the SMEG FR310P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SMEG FR310P**  
**User guide SMEG FR310P**  
**Operating instructions SMEG FR310P**  
**Instructions for use SMEG FR310P**  
**Instruction manual SMEG FR310P**

**Gebrauchsanweisung**  
Instructions for use  
**Mode d'emploi**  
Gebruiksaanwijzing  
**Istruzioni per l'uso**



**Brugsanvisning**  
Bruksanvisning  
**Käyttöohje**  
Manual de utilização  
**Instrucciones para el uso**



**Οδηγίες χρήσης**  
Instrukcje użytkowania  
**Használati utasítás**  
Инструкции за употреба



**Návod k použití**  
Nóvod na použitie  
**Instrucțiuni de utilizare**  
Инструкции по эксплуатации



[You're reading an excerpt. Click here to read official SMEG FR310P user guide](http://yourpdfguides.com/dref/5518394)

<http://yourpdfguides.com/dref/5518394>

**Manual abstract:**

Refrigerator Compartment 1. Crisper drawer 2. Shelves / Shelf area 3. Control panel with LED light 4. Upper door tray 5. Door trays 6. Bottle rack 7. Bottle restrainer (if present) 8. Rating plate (at the side of crisper drawer) 9. Fan with filter (if present), see specific instructions for filter.

B. Freezer compartment (if present) 1. Ice cube tray (inside the compartment) 2. Freezer compartment inner door 3. Grille (inside compartment) Note: The number of shelves and type of accessories may vary, depending on the model.

All shelves, door trays and racks are removable. Important: Refrigerator accessories must not be washed in a dishwasher. DE GB FR NL ES PT IT GR SE NO DK FI QUICK GUIDE 1 2 LED Light LEDs last longer than traditional light bulbs, improve internal visibility and are environmentally friendly. Contact the Service Centre if replacement is necessary. Fan (if available) The fan is preset as ACTIVE.

The fan can be deactivated by pressing the button on the base (as shown in the figure). If the room temperature exceeds 27°C, the fan must be on in order to guarantee the correct preservation of food. Deactivation of the fan enables energy consumption to be optimised. @@ Press the button again briefly to reactivate the appliance. Note: This does not disconnect the appliance from the power supply. @@@ Possible causes: The control panel is There may be an appliance switched off, the appliance power supply problem. @@@ Activate the appliance with the Temp. button. Contact an authorized Service Centre. To stop the alarm, close the refrigerator door.

@@ The inside light does not The light may need replacing. work. Malfunction of a technical component. The inside light flashes. Door alarm active It is activated when the refrigerator compartment door remains open for a prolonged period of time. The temperature inside the There could be various causes compartments is not low (see "Solutions"). enough. There is water on the bottom of the refrigerator compartment. The front edge of the appliance, at the door striker seal, is hot. One or more green lights flash continuously.

Make sure: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the vents at the bottom of the appliance is not obstructed. The defrost water drain is Clean the defrost water drain blocked. hole (see the section "Appliance Maintenance and Cleaning"). This is not a defect. It prevents No solution is necessary.

condensation from forming. 01/13 DE GB FR NL ES PT IT GR SE NO DK FI 5019 600 00385 Printed in Italy Malfunction alarm Call the authorised Service Centre. @@@@ In this case, disable the function temporarily. To ensure correct operation of the product, adequate preservation of food and to optimise energy consumption, it is advisable not to remove the Meat & Fish compartment if the symbol (see Quick Guide) is not present on the control panel. In all other cases, the Meat & Fish compartment can be removed to obtain more space inside the refrigerator.

Proceed as follows: 1. Remove the compartment drawer (Figure 1). 2. Remove the drawer cover by releasing the bottom side clips (Figure 2). To reinstate the Meat & Fish compartment, make sure to refit the drawer cover before inserting the drawer and reactivating operation. 3. Press the "Meat & Fish compartment function" button on the control panel for 3 seconds, until the yellow indicator goes off. To optimise energy consumption, it is advisable to deactivate the Meat & Fish compartment and remove its components (except the shelf above the crisper drawers). Removing the Meat & Fish compartment: Fig. 1 Fig.

2 13 "ZERO DEGREES" BOX (depending on the model) The "Zero Degrees" box is specifically designed to maintain a low temperature and a suitable humidity level, in order to keep foods fresher for longer (e.g. meat, fish, fruit and winter vegetables). Activating and deactivating the box To activate the compartment, press the button shown in the figure for more than 1 second, until the symbol lights up The temperature inside the box, when active, is approximately 0°. The symbol lit indicates that the compartment is functioning. @@@@ In this case, temporarily deactivate the function. @@@ Note: the upper shelf and the side supports cannot be removed. @@@@ Freezing fresh food • The recommended position for fresh food is that indicated in Fig. 1, if a wire shelf is present, or that in Fig. 2 for models with no wire shelf.

• Place food in the middle of the making sure it does compartment, not touch already frozen food, but is placed at a distance of approx. 20 mm (fig. 1 and 2). How to use the freezer compartment (if present) Fig. 1 The table alongside shows the recommended maximum storage time for frozen fresh foods.

When purchasing frozen food products: • Make sure the packaging is not damaged, since the product quality may have deteriorated. @@@ • Place the items in the compartment as soon as you get home. • If food has defrosted even partially, do not re-freeze it. Consume within 24 hours. • Avoid, or reduce temperature variations to the minimum.

Respect the best-before date on the package. @@@@ the • Bend the ice tray slightly to remove the cubes. Fig. @@@ • Fit the spacers (if supplied) on the rear of the condenser positioned at the back of the appliance. • Install the appliance in a dry, well-ventilated place, and ensure it is level, using the front adjustment feet if necessary. • Clean the interior. • Fit the accessories. Electrical connection • Electrical connections must be made in accordance with local regulations. • Voltage and power consumption are indicated on the rating plate inside the appliance. Installation • Regulations require that the appliance be earthed.

The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from failure to observe the above procedures and reminders. • If the plug and socket are not of the same type, have the socket replaced by a qualified electrician. • Do not use extension leads or adapters. @@@ 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. @@@@ Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, please contact After-sales Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

20 REFRIGERATORS AND FREEZERS PRODUCT FICHE BRAND NAME COMMERCIAL CODE CATEGORY ENERGY EFFICIENCY CLASS SMEG FR310P Refrigerator A+ Energy consumption 296 kWh per year, based on standard test results for 24 hours. Actual energy consumption will depend on how the appliance is used and where it is located.



[You're reading an excerpt. Click here to read official SMEG FR310P user guide](#)

<http://yourpdfguides.com/dref/5518394>

*FREEZER CAPACITY STAR RATING REFRIGERATOR CAPACITY TEMPERATURE OF SPECIAL COMPARTMENT FROST FREE SYSTEM  
TEMPERATURE RISE TIME (h) FREEZING CAPACITY (kg/24h) CLIMATE CLASS 32 l 4 264 l -°C No 14 3 SN-T This appliance is intended to be used at  
an ambient temperature between 10°C and 43°C. NOISE LEVEL dB(A) re 1 pW TYPE OF INSTALLATION 35 Half-integrated 5019 600 00387 DE IT GB GR  
FR SE NO NL DK ES PT FI 12/12 .*



[You're reading an excerpt. Click here to read official SMEG FR310P user guide](#)

<http://yourpdfguides.com/dref/5518394>