



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG PL663X. You'll find the answers to all your questions on the SMEG PL663X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG PL663X
User guide SMEG PL663X
Operating instructions SMEG PL663X
Instructions for use SMEG PL663X
Instruction manual SMEG PL663X

INSTRUCTION MANUAL



DISHWASHER



[You're reading an excerpt. Click here to read official SMEG PL663X user guide](http://yourpdfguides.com/dref/3476237)

<http://yourpdfguides.com/dref/3476237>

Manual abstract:

2. 3. 4. @@@@ Follow the recommended cleaning procedures to ensure that your dishwasher always remains in perfect working order. This manual provides a quick and easy reference for answering all your questions concerning the use of your new dishwasher. **INSTALLATION INSTRUCTIONS:** these are intended for the qualified technician who must carry out the installation, hook-up and testing of the appliance. **USER INSTRUCTIONS:** these consist of recommendations for using the appliance, a description of its controls and of the correct cleaning and maintenance procedures. 3 Safety instructions 1. Safety and operating instructions **THIS MANUAL FORMS AN INTEGRAL PART OF THE APPLIANCE: IT MUST ALWAYS BE KEPT INTACT TOGETHER WITH THE DISHWASHER. BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS CONTAINED IN THIS MANUAL.**

INSTALLATION MUST BE PERFORMED BY A QUALIFIED TECHNICIAN, IN COMPLIANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USE, AND COMPLIES WITH THE EEC DIRECTIVES 72/23, 897336 (INCLUDING 92/31) CURRENTLY IN FORCE, INCLUDING THE PREVENTION AND ELIMINATION OF RADIO FREQUENCY INTERFERENCE. THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE. THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR.

THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE. THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION.

@@@AVOID USING ADAPTORS OR SHUNT CONNECTIONS. @@@OBsolete appliances must be rendered unusable. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). THE APPLIANCE MUST THEN BE TAKEN TO A SORTED WASTE COLLECTION CENTRE. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP. THEN CALL IN A QUALIFIED TECHNICIAN. DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER. THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THE APPLIANCE IS INTENDED FOR USE BY ADULTS.

DO NOT ALLOW CHILDREN TO COME NEAR OR PLAY WITH THE DISHWASHER. KEEP CHILDREN AWAY FROM DETERGENTS AND FROM THE OPEN DISHWASHER DOOR. THE PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, METAL BARS, ETC.) MUST NOT BE LEFT WITHIN THE REACH OF CHILDREN. KEEP CHILDREN AWAY FROM THE OPEN DISHWASHER. THE APPLIANCE MAY CONTAIN RESIDUES OF DETERGENT WHICH CAN CAUSE IRREVERSIBLE DAMAGE TO THE EYES, MOUTH, AND THROAT, AS WELL AS POSSIBLE DEATH BY SUFFOCATION. DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION. DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. 5 Safety instructions LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. DO NOT UNDER ANY CIRCUMSTANCES TOUCH THE HEATING ELEMENT IMMEDIATELY AFTER THE END OF A WASHING PROGRAM.

OVER TIME, THE DISHWASHER HEATING ELEMENTS MAY CHANGE COLOUR, IN PART OR OVERALL. THIS IS PERFECTLY NORMAL AND DOES NOT IN ANY WAY AFFECT THE OPERATION OF THE APPLIANCE. DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE. AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK. WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT.

IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE. DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE. @@@@6 Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers.

Position the appliance in the desired place of installation. @@@@ Level the appliance on the floor using its adjustable feet. @@@@ Installation instructions The dishwasher can also be connected to a hot water supply not exceeding 60°C. Supplying the appliance with hot water cuts down the washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply. **DRAIN CONNECTION Insert the dishwasher's drain hose into a drain pipe having a diameter of at least 4 cm, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling.**

For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap. The free end should be positioned at a height of between 30 and 100 cm, and should never be submerged in water. If a horizontal drain extension hose is used (for a maximum of 3 m) the drain hose can be placed at a maximum height of 85 cm from the ground. 2.2 Electrical connection Plug the power cord into a suitable electrical outlet, according to the instructions given in chapter "1. Safety and operating instructions". 8 User instructions 3. Description of the controls 3.1 Front panel All the dishwasher controls are grouped on the front panel. **CONTROL LEGEND (2 buttons models) 1 2 3 4 5 6 WASHING PROGRAM SELECTOR ON/OFF BUTTON ½ LOAD WASH BUTTON POWER ON LIGHT NO RINSE AID WARNING LIGHT RECESSED DOOR HANDLE CONTROL LEGEND (3 buttons models) 1 2 3 4 5 6 7 WASHING PROGRAM SELECTOR ON/OFF BUTTON ½ LOAD WASH BUTTON ECO (45°C) PROGRAM BUTTON POWER ON LIGHT NO RINSE AID WARNING LIGHT RECESSED DOOR HANDLE 9 User instructions SETTING THE WASHING PROGRAM To select the most suitable washing program, refer to the table below which indicates the recommended washing according to dish type and the degree of soiling.**

After using the table to identify the most appropriate washing program, turn the PROGRAM SELECTION knob (1) (see section "3.

[You're reading an excerpt. Click here to read official SMEG PL663X user guide](#)



<http://yourpdfguides.com/dref/3476237>

Description of the controls") to set the program of choice by aligning the pointer with the program number. If necessary, depending on the programme selected, press one of the keys (3 or 4) allowing selection of the 1/2 LOAD or 45°C wash programmes. Now simply pressing the ON/OFF key (2) will start the program. The PILOT LIGHT (4/5) lights up.

TABLE OF PROGRAMS (2 buttons model) SWITCH CYCLE AND BUTTON SOAK TYPE AND DEGREE OF DIRT ON DISHES PROGRAM SEQUENCE AMOUNT OF DETERGENT GRAMS DURATION MINUTES (2) CONSUMPTION WATER LITRES (1) POWER KWh (2) 1 _ STRONG Pans and dishes awaiting completion of the load Very dirty pans and dishes, dirt dried-on Cold prewash _ 6' 4 _ 2 (1/2) Cold prewash Wash at 60°C 2 cold rinses Rinse at 65°C Dry Wash at 65°C Cold rinse Rinse at 65°C Dry Cold rinse Rinse at 65°C Dry 30 90' 22 1,55 3 NORMAL ECO 60°C (*) (1/2) RINSE Normally dirty pans and dishes 30 80' 18 1,40 4 _ Dishes requiring "refreshing" _ 45' _ 0,80 10 User instructions TABLE OF PROGRAMS (3 buttons model) SWITCH CYCLE AND BUTTON SOAK TYPE AND DEGREE OF DIRT ON DISHES PROGRAM SEQUENCE AMOUNT OF DETERGENT GRAMS DURATION MINUTES (2) CONSUMPTION WATER LITRES (1) POWER KWh (2) 1 _ STRONG Pans and dishes awaiting completion of the load Very dirty pans and dishes, dirt dried-on Cold prewash _ 6' 4 _ 2 (1/2) Cold prewash Wash at 60°C 2 cold rinses Rinse at 65°C Dry Wash at 65°C Cold rinse Rinse at 65°C Dry Wash at 45°C Cold rinse Rinse at 65°C Dry Cold rinse Rinse at 65°C Dry 30 90' 22 1,55 3 SUPER Normally dirty pans and dishes 30 80' 18 1,40 (1/2) NORMAL ECO (*) ECO 45°C (1/2) RINSE 4 Dishes with little dirt 30 70' 16 1,20 5 _ Dishes requiring "refreshing" _ 45m the selector will be on one of the STOP markers, depending on the program carried out. Switch off the dishwasher by pressing the ON/OFF key (2) (see section "3. Description of the controls"). REMOVING THE DISHES At the end of the washing program, wait at least 20 minutes before removing the dishes, to allow them to cool down. To prevent any water droplets on the upper basket from falling on the dishes in the lower basket, it is advisable to unload the lower basket first, and then the upper basket.

14 User instructions 4. Operating instructions Once the dishwasher has been correctly installed, prepare for use as follows: . . . Adjust the water softening system; Add the regenerating salt; Add the rinse aid and detergent. 4.1 Using the water softening system Th . . . Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the washing cycle. Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the wash pump. Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out. Do not stack dishes or place them in such a way that they cover one other. Do not place glasses too close together because they may knock against each other and break, or there might be staining at the point where they touch. MAKE SURE that the items being washed are dishwasher-safe. 20 User instructions Items which are not dishwasher-safe: Wooden dishes, pots or pans: these may be damaged by the high washing temperatures.

Handcrafted items: these are rarely suitable for washing in a dishwasher. @@@@Heat resistant plastic dishes must be washed in the upper basket. @@@@Silverware: silver items may stain. @@@@Pots, pans and their covers must be loaded upside down. When loading soup plates and dessert bowls, be sure to leave a gap between them. Loading examples: 22 User instructions CUTLERY BASKET The cutlery should be arranged in an orderly manner inside the basket, with the handles pointing downwards. Take care during loading to avoid injury from the knife blades. The basket is suitable for all types of cutlery, except those long enough to interfere with the upper spray arm. Ladles, wooden spoons and cooking knives can be placed in the upper basket, making sure that the knife blades do not protrude from the basket. UPPER BASKET It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic.

If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. With fixed metal cup rack To make the most of the space inside the basket, certain models are equipped with two lift-up plastic racks. With mobile plastic cup rack in two sections 23 User instructions LOADING THE UPPER BASKET Load the dishes with the top side facing forwards; cups and concave containers should always be loaded with the opening facing down. The left side of the basket can be loaded with cups and glasses on two levels. In the centre section, plates and saucers can be loaded vertically into the supports provided.

Loading examples: ADJUSTING THE UPPER BASKET The upper basket can be adjusted in two positions, according to the user's needs and according to the height of the dishes in the lower basket. Proceed as follows. Pull-out version: pull out the right-hand basket guide; remove the stop, first releasing it as shown in the diagram; push the guide to free the wheels; fit the upper or lower pair of wheels into the guide, depending on the setting required; return the stop to its original position. 24 User instructions Push-button version: . . pull out the basket to its limit position and pull the right side upwards.

@@@@@Clean the door gaskets with a damp sponge.

Periodically (once or twice a year) it is advisable to clean the tank and gaskets, using a soft cloth and water to remove any deposits. CLEANING THE WATER INTAKE FILTER The water intake filter A located at the outlet of the water supply tap needs to be cleaned periodically. After having closed the water supply tap, unscrew the end of the water intake hose, remove the filter A and clean it delicately under running water. Reassemble filter A in its seat and carefully screw the water intake hose back into position. CLEANING THE SPRAY ARMS The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging. Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded. . To remove the upper spray arm, unscrew locking ring R.



[You're reading an excerpt. Click here to read official SMEG PL663X](http://yourpdfguides.com/dref/3476237)

[user guide](http://yourpdfguides.com/dref/3476237)

<http://yourpdfguides.com/dref/3476237>

· To remove the lower spray arm, simply lift it up, pulling by the central part. @@@@After reassembly, check that the spray arms turn freely. Otherwise, check that they have been installed correctly.

@@@It is essential to thoroughly clean the filters according to the above instructions: the dishwasher cannot function if the filters are clogged. Carefully replace the filters in their seats, to avoid damaging the wash pump. **PROLONGED DISUSE:** ···· Run the soak program twice in succession. Unplug the power cord from the socket. Leave the door slightly open, in order to prevent the formation of unpleasant odours inside the washing tank. Fill the rinse aid dispenser. Shut off the water supply tap. **27 User instructions BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE:** ··· Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes. Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again.

TROUBLESHOOTING MINOR PROBLEMS In some cases it is possible to remedy minor problems by referring to the following instructions: If the program fails to start, check that: ··· the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: ··· the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged. If the dishes are not being cleaned properly, check that: ···· the correct amount of detergent has been added; there is regenerating salt inside the special container; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms. **28 User instructions** If the dishes fail to dry or remain dull, check that: ··· there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open). If the dishes show signs of streaking, staining, etc.

, check that: · the rinse aid dispenser setting is not too high. If there are visible traces of rust inside the tank: · the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.). Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others.

check that the cap of the salt container is securely closed, and that the water softening setting is correct. · If after following the above troubleshooting instructions the problem persists, call the nearest After-Sales Centre. **WARNING:** any operations performed on the appliance by unauthorised persons are not covered by the warranty and shall be paid for by the user. **TECHNICAL DATA** Width Depth measured flush with the outer edge of the control panel Height Capacity Water supply pressure Electrical characteristics 597 ÷ 599 mm Free standing: 600 mm Semi-integrated: 590 mm Free standing from 850 mm to 870 mm Semi-integrated from 820 mm to 870 mm 12 Standard place settings min. 50 max. 900 KPa (min. 0.5 max. 9 bar) See rating plate 29

Solosualcunimodelli Certainmodelsonly Seulementsurcertainsmodèles nurbeieinigeModellen Sóloen algunos modelos alleenindienvantoepassing **SUPERFICIE INTERNA SURFACE INTERNE INNERSURFACE INNENFLACHE LATO SUPERIORE BORDS SUPERIEURE UPPER EDGE OBERKANTE**

Solosualcunimodelli-Certainmodelsonly Seulementsurcertainsmodèles-nurbeieinigeModellen Sóloen algunos modelos-alleenindienvantoepassing **Regolazione vitetensionemolle(12)-Copertura fotocontappoindotazione(13) Doorspring Adjustment device(12)-Covering of hole using cap provided(13)**

Réglage des ressorts de la porte(12)-Couverture du trou avec le bouchon fourni(13)

Vorrichtung für die Einstellung der Spannung der Türfedern(12) Abdeckendes Lochs mit dem mitgelieferten Stopfen(13) 10 1 11 8 13 9.



[You're reading an excerpt. Click here to read official SMEG PL663X user guide](http://yourpdfguides.com/dref/3476237)

<http://yourpdfguides.com/dref/3476237>