



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG SA561X-9. You'll find the answers to all your questions on the SMEG SA561X-9 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG SA561X-9
User guide SMEG SA561X-9
Operating instructions SMEG SA561X-9
Instructions for use SMEG SA561X-9
Instruction manual SMEG SA561X-9

Contents

GB-IE

1. INSTRUCTIONS FOR USE	40
2. SAFETY PRECAUTIONS	42
3. ENVIRONMENTAL RESPONSIBILITY	44
4. GET TO KNOW YOUR OVEN	45
5. AVAILABLE ACCESSORIES	46
6. USING THE OVEN	48
7. COOKING WITH THE OVEN	52
8. CLEANING AND MAINTENANCE	60
9. EXTRAORDINARY MAINTENANCE	65
10. INSTALLING THE APPLIANCE	69



INSTRUCTIONS FOR THE USER: these instructions contain user recommendations, a description of the controls and the correct procedures for cleaning and maintenance of the appliance.



INSTRUCTIONS FOR THE INSTALLER: these are intended for the qualified technician who must install the appliance, set it functioning and carry out an inspection test.



Further product information is available from the website www.smeg.com

3



[You're reading an excerpt. Click here to read official SMEG SA561X-9 user guide](http://yourpdfguides.com/dref/3946449)
<http://yourpdfguides.com/dref/3946449>

Manual abstract:

2. 3. 4. 5. 6. 7. 8. 9. 10. INSTRUCTIONS FOR USE .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 40 SAFETY PRECAUTIONS

.....
.....
.....

.....
.....
.....

..... 42 ENVIRONMENTAL RESPONSIBILITY..

.....
.....
.....

.....
.....
.....

.... 44 GET TO KNOW YOUR OVEN

.....
.....
.....

.....
.....
.....

... 45 AVAILABLE ACCESSORIES..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 46 USING THE OVEN

.....
.....
.....

.....
.....
.....
.....

48 COOKING WITH THE OVEN.....

.....
.....
.....
.....
.....
.....
.....

. 52 CLEANING AND MAINTENANCE

.....
.....
.....
.....
.....
.....

... 60 EXTRAORDINARY MAINTENANCE

.....
.....
.....
.....
.....
.....

... 65 INSTALLING THE APPLIANCE.....

.....
.....
.....
.....
.....
.....

.....
@@@@@@@ CAREFUL READING OF THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE APPLIANCE IS ESSENTIAL. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE AND COMPLIES WITH THE EEC DIRECTIVES CURRENTLY IN FORCE. @@@@ DO NOT REMOVE THIS PLATE FOR ANY REASON. BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED.

TAKE CARE THAT NO OBJECTS ARE STUCK IN THE DOOR OF THE OVEN. THE APPLIANCE BECOMES VERY HOT DURING USE. SUITABLE HEAT-PROOF GLOVES SHOULD BE WORN FOR ALL OPERATIONS. DO NOT USE METALLIC SPONGES AND SHARP SCRAPERS AS THEY WILL DAMAGE THE SURFACE. USE NORMAL NON-ABRASIVE PRODUCTS, INCLUDING WOODEN OR PLASTIC UTENSILS IF NECESSARY. RINSE THOROUGHLY AND DRY USING A SOFT CLOTH OR CHAMOIS LEATHER. DO NOT ALLOW RESIDUES OF SUGARY FOODS (SUCH AS JAM) TO SET INSIDE THE OVEN. IF THEY ARE ALLOWED TO SET FOR TOO LONG, THEY COULD RUIN THE ENAMEL COVERING THE INSIDE OF THE OVEN. 4 General instructions DO NOT USE PLASTIC KITCHENWARE OR CONTAINERS. THE HIGH TEMPERATURES INSIDE THE OVEN COULD MELT THE PLASTIC, DAMAGING THE APPLIANCE. DO NOT USE SEALED TINS OR CONTAINERS IN THE APPLIANCE. OVERPRESSURE MAY OCCUR INSIDE THE CONTAINERS DURING COOKING, CREATING A DANGER OF EXPLOSION. DO NOT LEAVE THE APPLIANCE UNATTENDED DURING COOKING PROCESSES WHERE FATS OR OILS COULD BE RELEASED. FATS AND OILS MAY CATCH FIRE. @@@@ THE STEAM COULD CAUSE SEVERE BURNS AND DAMAGE TO ENAMELLED SURFACES.

@@@OUR APPROVED INSTALLERS GUARANTEE A SATISFACTORY JOB. @@@THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT-IN. NEVER DISCONNECT THE PLUG BY PULLING ON THE CABLE. @@SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE ELECTRICITY SUPPLY AND CALL THE NEAREST TECHNICAL SUPPORT CENTRE. NEVER ATTEMPT TO REPAIR THE APPLIANCE. DO NOT USE OR LEAVE FLAMMABLE MATERIALS NEAR THE APPLIANCE OR IN THE FOOD WARMING COMPARTMENT. DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN. THIS APPLIANCE MAY NOT BE USED BY PEOPLE (INCLUDING CHILDREN) OF REDUCED PHYSICAL AND MENTAL CAPACITY, OR LACKING IN EXPERIENCE IN THE USE OF ELECTRICAL APPLIANCES, UNLESS THEY ARE SUPERVISED OR INSTRUCTED BY ADULTS RESPONSIBLE FOR THEIR SAFETY. 6 General instructions DO NOT LET CHILDREN GO NEAR THE APPLIANCE WHEN IT IS IN OPERATION OR PLAY WITH IT AT ANY TIME.

DO NOT INSERT POINTED METAL OBJECTS (CUTLERY OR UTENSILS) INTO THE SLITS IN THE APPLIANCE. IF THE APPLIANCE IS INSTALLED ON CARAVANS OR BOATS, IT MUST NOT BE USED TO HEAT ROOMS. DO NOT USE STEAM JETS FOR CLEANING THE APPLIANCE. THE STEAM COULD REACH THE ELECTRONICS, DAMAGING THEM AND CAUSING SHORT-CIRCUITS. DO NOT MODIFY THIS APPLIANCE. DO NOT SPRAY ANY SPRAY PRODUCTS NEAR THE ELECTRICAL APPLIANCE WHILE IT IS IN OPERATION. DO NOT USE SPRAY PRODUCTS WHILE THE PRODUCT IS STILL HOT. The manufacturer cannot be held liable for damage to persons or things caused by failure to observe the above instructions, by interference with any part of the appliance or by the use of non-original spare parts. 7 Instructions for disposal 3. ENVIRONMENTAL RESPONSIBILITY Our product's packing is made of non-polluting materials, which are therefore compatible with the environment and recyclable. Please help by disposing of the packaging correctly. You can obtain the addresses of collection, recycling and disposal centres from your retailer or from the competent local organisations. Do not discard the packaging or any part of it, or leave it unattended. It can constitute a suffocation hazard for children, especially the plastic bags. Your old appliance also needs to be disposed of correctly. Important: hand over your appliance to the local agency authorised for the collection of electrical appliances no longer in use. Correct disposal enables intelligent recovery of valuable materials. Before disposing of your appliance it is important to remove doors and leave shelves in the same position as for use, to ensure that children cannot accidentally become trapped inside during play. It is also necessary to cut the connecting cable to the power grid, removing it along with the plug. 8 Instructions for the user 4.

GET TO KNOW YOUR OVEN 1 Control panel Oven light 2 4 3 5 Oven fan Oven seal Rack and tray support frames 9 Instructions for the user 5.

@@@The mechanical lock must always face the back of the oven. @@@@The numbers from 5 to 90 correspond to minutes.

@@@@@. Use the ECO function for cooking on a single runner.

@@@@@How to use: pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth. 9.3 Food stains or residues Do not use steel sponges or sharp scrapers as they will damage the surface. Use normal non-abrasive products and a wooden or plastic tool if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth. Do not allow residues of sugary foods (such as jam) to set inside the oven.

If left to set for too long, they might damage the enamel lining of the oven. 9.4 Cleaning the door glazing The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll; remove stubborn dirt with a damp sponge and an ordinary detergent. Do not use abrasive or corrosive cleaners for cleaning the door glazing.

(e.g. powder products, oven-cleaner sprays, stain removers and metal scouring pads). @@. Take out all removable parts. @@ Rinse and dry.

· For easier cleaning, th in the oven door by applying slight pressure. 27 Instructions for the installer 11. INSTALLING THE APPLIANCE 11.1 Electrical connection The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance. Do not remove this plate for any reason. @@ If a fixed connection is being used, fit the power line with an omnipolar circuitbreaker in accordance with the installation rules, located in a position which is easy to reach and near the appliance. If a plug and socket connection is being used, make sure that the plug and socket are compatible. Avoid use of adapters and shunts as these could cause overheating and a risk of burns. @@@@ Replace the cable. @@ Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the oven.

WARNING: The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm. 28 Instructions for the installer 11.3 Positioning the oven Never use the oven door to lever the oven into place when fitting. Avoid exerting too much pressure on the oven door when open.



[You're reading an excerpt. Click here to read official SMEG](#)

[SA561X-9 user guide](#)

<http://yourpdfguides.com/dref/3946449>

We recommend installing the oven with the help of a second person. The base on which the oven is resting must be complete as shown in the illustrations below. The oven is designed for mounting into any piece of furniture as long as it is heatresistant (90°C). The adjacent figure shows the general dimensions of the appliance. For installing under a work top, follow the dimensions given in paragraph "11.

3.1 Positioning underneath worktops". When installing in tall units, comply with the dimensions shown in paragraph "11.3.2 Positioning in tall units", bearing in mind that the top/rear of the unit must have an opening 35-40 mm deep.

29 Instructions for the installer 11.3.1 Positioning underneath worktops 11.3.2 Positioning in tall units 914774197/A 30 .



[You're reading an excerpt. Click here to read official SMEG](#)

[SA561X-9 user guide](#)

<http://yourpdfguides.com/dref/3946449>