



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG SA579X. You'll find the answers to all your questions on the SMEG SA579X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SMEG SA579X**  
**User guide SMEG SA579X**  
**Operating instructions SMEG SA579X**  
**Instructions for use SMEG SA579X**  
**Instruction manual SMEG SA579X**

Contents	
<b>1 Instructions</b>	<b>4</b>
1.1 General safety instructions	4
1.2 Manufacturer liability	5
1.3 Appliance purpose	5
1.4 Disposal	5
1.5 Identification plate	6
1.6 This user manual	6
1.7 How to read the user manual	6
<b>2 Description</b>	<b>7</b>
2.1 General Description	7
2.2 Control panel	8
2.3 Other parts	8
2.4 Available accessories	9
<b>3 Use</b>	<b>10</b>
3.1 Instructions	10
3.2 First use	10
3.3 Using the accessories	11
3.4 Using the oven	11
3.5 Cooking advice	13
3.6 Programming clock	14
<b>4 Cleaning and maintenance</b>	<b>18</b>
4.1 Instructions	18
4.2 Cleaning the surfaces	18
4.3 Ordinary daily cleaning	18
4.4 Food stains or residues	18
4.5 Removing the door	18
4.6 Cleaning the door glazing	19
4.7 Removing the internal glass panels	19
4.8 Cleaning the inside of the oven	20
4.9 Vapor Clean: assisted oven cleaning (on some models only)	21
4.10 Extraordinary maintenance	23
<b>5 Installation</b>	<b>24</b>
5.1 Electrical connection	24
5.2 Cable replacement	24
5.3 Positioning	25

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.  
For further information on the product: [www.smeg.com](http://www.smeg.com)



[You're reading an excerpt. Click here to read official SMEG SA579X user guide](http://yourpdfguides.com/dref/5315177)  
<http://yourpdfguides.com/dref/5315177>

**Manual abstract:**

• Children must never play with the appliance. • Switch the appliance off immediately after use. • Never try to put out a fire or flames with water: turn off the appliance and smother the flames with a fire blanket or other appropriate cover. • The appliance must never be cleaned by unsupervised children. • Have qualified personnel carry out installation and assistance interventions according to the standards in force. • Do not modify this appliance. • Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance. • Do not try to repair the appliance yourself or without the intervention of a qualified technician. • If the power supply cable is damaged, contact technical support immediately and they will replace it. Risk of damaging the appliance @ powder products, stain removers and metallic sponges).

• Use wooden or plastic utensils. • Do not seat on the appliance. • Do not use steam jets for cleaning the appliance. • Do not obstruct ventilation openings and heat dispersal slots. • Never leave the appliance unattended during cooking operations where fats or oils could be released.

• Never leave objects on the cooking surface. • Do not use the appliance to heat rooms for any reason. 4 Instructions • Ensure that the appliance is switched off before replacing the bulb. • Do not rest any weight or sit on the open door of the appliance. • Take care that no objects are stuck in the doors.

This appliance must be disposed of separately from other waste (Directives 2002/95/EC, 2002/96/EC, 2003/108/EC). The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives. To dispose of the appliance: • Cut the power supply cable and remove it along with the plug. Power voltage Danger of electrocution • Disconnect the main power supply. • Disconnect the power cable from the electrical system. • Consign the appliance to the appropriate selective collection centres for electrical and electronic equipment waste, or deliver it back to the retailer when purchasing an equivalent product, on a one for one basis. 1.2 Manufacturer liability The manufacturer declines all liability for damage to persons or property caused by: • use of the appliance other than the one envisaged; • non-observance of the user manual provisions; • tampering with any part of the appliance; • use of non-original spare parts. 1.3 Appliance purpose • This appliance is intended for cooking food in the home environment.

Every other use is considered improper. • This appliance may be used by children aged at least 8 and by people of reduced physical and mental capacity, or lacking in experience in the use of electrical appliances, as long they are supervised or instructed by adults who are responsible for their safety.

@@@ Description Description of the appliance and its accessories. Use Information on the use of the appliance and its accessories, cooking advice. Cleaning and maintenance Information for proper cleaning and maintenance of the appliance. Installation Information for the qualified technician: installation, operation and inspection. Safety instructions 1.5 Identification plate The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason. 1.

6 This user manual This user manual is an integral part of the appliance and must therefore be kept in its entirety and in an accessible place for the whole working life of the appliance. Read this user manual carefully before using the appliance. Information Advice 1. Use instruction sequence. • Single use instruction.

6 Description EN Multifunction models 2 Description 2.1 General Description 1 Control panel 2 Oven light 3 Seal 4 Door 5 Fan 6 Rack/tray support frames Frame shelf 7 Description 2.2 Control panel Multifunction models Temperature knob (1) This knob allows you to select the cooking temperature, the cooking time and to set programmed cooking and time. Thermostat indicator light (2) The indicator light comes on to indicate that the oven is heating up. It turns off as soon as it reaches the set temperature.

It flashes regularly to indicate that the temperature set inside the oven is kept constant. Display (3) Useful for displaying the current time and the cooking temperature, for setting programmed cooking operations and for programming the timer. Function knob (4) The oven's various functions are suitable for different cooking modes. After selecting the required function, set the cooking temperature using the temperature knob. 2.3 Other parts Shelves The appliance features shelves for positioning trays and racks at different heights. The insertion heights are indicated from the bottom upwards (see 2.1 General Description). @@@@ Do not touch the heating elements inside the oven. • Do not pour water directly onto very hot trays.

@@ High temperature inside the oven during use Danger of fire or explosion • Do not spray any spray products near the oven. • Do not use or leave flammable materials near the oven. • Do not use plastic kitchenware or containers when cooking food. • Do not put sealed tins or containers in the oven. • Do not leave the oven unattended during cooking operations where fats or oils could be released. • Remove all trays and racks which are not required during cooking. Improper use Risk of damage to enamelled surfaces • Do not cover the bottom of the cooking compartment with aluminium or tin foil sheets. • If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven. • Do not place pans or trays directly on the bottom of the cooking compartment. • Do not pour water directly onto very hot trays.

3.2 First use 1. Remove any protective film from the outside or inside of the appliance, including accessories. 2. Remove any labels (apart from the technical data plate) from the accessories and from the cooking compartment.

3. Remove and wash all the appliance accessories (see 4 Cleaning and maintenance). 4. Heat the empty oven at the maximum temperature to burn off any residues left by the manufacturing process. 10 Use Racks and trays Racks and trays have to be inserted into the side guides until they come to a complete stop. • The mechanical safety locks that prevent the rack from being taken out accidentally have to face downwards and towards the oven back. The tray rack has to be inserted into the tray. In this way fat can be collected separately from the food which is being cooked. 3.4 Using the oven Switching on the oven To switch the oven on: 1. Select the cooking function using the function knob. 2. Select the temperature using the temperature knob. Gently insert racks and trays into the oven until they come to a stop.



[You're reading an excerpt. Click here to read official SMEG SA579X user guide](http://yourpdfguides.com/dref/5315177)

<http://yourpdfguides.com/dref/5315177>

Clean the trays before using them for the first time to remove any residues left by the manufacturing process.

11 EN 3.3 Using the accessories Tray rack Use Functions list Convection (Static) As the heat comes from above and below at the same time, this system is particularly suitable for certain types of food. Traditional cooking, also known as static cooking, is suitable for cooking just one dish at a time.

@@@Perfect for sausages, ribs and bacon. @@@Perfect for cakes, pies, tarts and pizzas. @@Perfect for large volumes that call for intense cooking.

@@@@Perfect for large cuts of meat (e.g. shin of pork). 12 Use Fan forced (Fan-assisted circular) The combination of the fan and the circular element (incorporated in the rear of the oven) allows you to cook different foods on several levels, as long as they need cooking duration will appear on the display.

@@@After the setting, to display the cooking time left press the key. @@@Timer The timer can be activated at any time. By pressing key , the display shows the figures . Hold down and use or to set the required number of minutes. @@@@When the buzzer is in operation, press to change the setting.

@@It can be deactivated manually by pressing . @@@@anodizing, nickel- or chromium-plating). @@powder products, stain removers and metallic sponges). @@@Rinse thoroughly and dry with a soft cloth or a microfibre cloth. @@@To remove the door proceed as follows: 1.

@@@@2. @@@1. Remove the internal glass panel by pulling the rear part gently upwards, following the movement indicated by the arrows (1). 2. Then, pull the front part upwards (2). In this way, the 4 pins attached to the glass detach from their housings in the oven door. 3. To reassemble the door, put the hinges in the relevant slots in the oven, making sure that grooved sections A are resting completely in the slots. Lower the door and once it is in place remove the pins from the holes in the hinges. 3.

Some models have an intermediate glass panel. Remove the intermediate glass panel by lifting it upwards. 4.6 Cleaning the door glazing The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll. In case of stubborn dirt, wash with a damp sponge and an ordinary detergent. We recommend the use of cleaning products distributed by the manufacturer. Cleaning and maintenance 4. Clean the external EN 4.10 Extraordinary maintenance 4.

Slide out and remove the lamp. Installation 5 Installation 5.1 Electrical connection Power voltage Danger of electrocution •Have the electrical connection performed by authorised technical personnel. •The appliance must be connected to earth in compliance with electrical system safety standards. •Disconnect the main power supply.

General information Check the grid characteristics against the data indicated on the plate. The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance. Do not remove this plate for any reason. The appliance works at 220-240 V~.

@@@@@Connection with plug and socket Make sure that the plug and socket are of the same type.

Avoid using adapters and shunts as these could cause overheating and a risk of burns. 5.2 Cable replacement Power voltage Danger of electrocution • Disconnect the main power supply. 1. Unscrew the rear casing screws and remove the casing to access the terminal board. 2. Replace the cable. 3. Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the appliance. 24 Installation Heavy appliance Danger of crush injuries • Place the appliance into the piece of furniture with the aid of a second person.

Pressure on the open door Risk of damages to the appliance •Never use the oven door to lever the appliance into place when fitting. •Avoid exerting too much pressure on the oven door when open. Heat production during appliance operation Risk of fire • Check that the piece of furniture material is heat resistant. • Check that the piece of furniture has the required slots. Fastening bushings Remove the bushing covers inserted on the oven front. Cover the bushings with the covers removed previously. Appliance overall dimensions (mm) Mount the appliance into the recess. 25 EN 5.3 Positioning Secure the appliance to the piece of furniture using screws. Installation Mounting under worktops (mm) Mounting into a column (mm) Make sure that the piece of furniture rear/bottom part has an opening of approx.

60 mm. Make sure that the piece of furniture top/rear part has an opening approx. 35-40 mm deep. 26 .



[You're reading an excerpt. Click here to read official SMEG SA579X user guide](http://yourpdfguides.com/dref/5315177)

<http://yourpdfguides.com/dref/5315177>