



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG SA823X. You'll find the answers to all your questions on the SMEG SA823X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG SA823X
User guide SMEG SA823X
Operating instructions SMEG SA823X
Instructions for use SMEG SA823X
Instruction manual SMEG SA823X

INSTRUCTION MANUAL

DISHWASHER



[You're reading an excerpt. Click here to read official SMEG SA823X user guide](http://yourpdfguides.com/dref/3478994)
<http://yourpdfguides.com/dref/3478994>

Manual abstract:

2. 3. 4. 5. @@@@ Follow the recommended cleaning procedures to ensure that your dishwasher always remains in perfect working order. This manual provides a quick and easy reference for answering all your questions concerning the use of your new dishwasher. **INSTALLATION INSTRUCTIONS:** these are intended for the qualified technician who must carry out the installation, hook-up and testing of the appliance. **USER INSTRUCTIONS:** these consist of recommendations for using the appliance, a description of its controls and of the correct cleaning and maintenance procedures. Safety instructions 1. Safety and operating instructions **THIS MANUAL FORMS AN INTEGRAL PART OF THE APPLIANCE: IT MUST ALWAYS BE KEPT INTACT TOGETHER WITH THE DISHWASHER.**

BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS CONTAINED IN THIS MANUAL. INSTALLATION MUST BE PERFORMED BY A QUALIFIED TECHNICIAN, IN COMPLIANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USE, AND COMPLIES WITH THE EEC DIRECTIVES 72/23, 89/336 (INCLUDING 92/31) CURRENTLY IN FORCE, INCLUDING THE PREVENTION AND ELIMINATION OF RADIO FREQUENCY INTERFERENCE. THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE.

THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR. THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE. THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE.

THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION. IF THE APPLIANCE IS INSTALLED ON A CARPETED OR COVERED FLOOR, ENSURE THAT THE OPENINGS ON ITS UNDERSIDE ARE NOT OBSTRUCTED. ALWAYS SWITCH OFF THE DISHWASHER AFTER EACH USE TO AVOID WASTING ELECTRICITY. OBSOLETE APPLIANCES MUST BE RENDERED UNUSABLE. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). Safety instructions THIS APPLIANCE IS MARKED ACCORDING TO THE EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE). BY ENSURING THIS PRODUCT IS DISPOSED OF CORRECTLY, YOU WILL HELP PREVENT POTENTIAL NEGATIVE CONSEQUENCES FOR THE ENVIRONMENT AND HUMAN HEALTH, WHICH COULD OTHERWISE BE CAUSED BY INAPPROPRIATE WASTE HANDLING OF THIS PRODUCT. ON THE PRODUCT, OR ON THE DOCUMENTS THE SYMBOL ACCOMPANYING THE PRODUCT, INDICATES THAT THIS APPLIANCE MAY NOT BE TREATED AS HOUSEHOLD WASTE. INSTEAD IT SHALL BE HANDED OVER TO THE APPLICABLE COLLECTION POINT FOR THE RECYCLING OF ELECTRICAL AND ELECTRONIC EQUIPMENT.

DISPOSAL MUST BE CARRIED OUT IN ACCORDANCE WITH LOCAL ENVIRONMENTAL REGULATIONS FOR WASTE DISPOSAL. FOR MORE DETAILED INFORMATION ABOUT TREATMENT, RECOVERY AND RECYCLING OF THIS PRODUCT, PLEASE CONTACT YOUR LOCAL CITY OFFICE, YOUR HOUSEHOLD WASTE DISPOSAL SERVICE OR THE SHOP WHERE YOU PURCHASED THE PRODUCT. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP. DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER. THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THE APPLIANCE IS INTENDED FOR USE BY ADULTS. DO NOT ALLOW CHILDREN TO COME NEAR OR PLAY WITH THE DISHWASHER. KEEP CHILDREN AWAY FROM DETERGENTS AND FROM THE OPEN DISHWASHER DOOR. THE PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, METAL BARS, ETC.) MUST NOT BE LEFT WITHIN THE REACH OF CHILDREN.

KEEP CHILDREN AWAY FROM THE OPEN DISHWASHER. THE APPLIANCE MAY CONTAIN RESIDUES OF DETERGENT WHICH CAN CAUSE IRREVERSIBLE DAMAGE TO THE EYES, MOUTH, AND THROAT, AS WELL AS POSSIBLE DEATH BY SUFFOCATION. DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION. DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK.

NEVER LEAVE THE DISHWASHER DOOR OPEN; PEOPLE MIGHT TRIP OVER IT. Safety instructions DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE. KNIVES OR OTHER SHARP-ENDED COOKING UTENSILS MUST BE PLACED IN THE CUTLERY BASKET BLADE-DOWN, OR LAID HORIZONTAL IN THE TOP BASKET. TAKE CARE NOT TO CUT YOURSELF AND ENSURE THAT THEY DO NOT PROJECT FROM THE BASKET. AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK.

WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE. DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY. IMMEDIATELY AFTER INSTALLING THE DISHWASHER, PERFORM A QUICK TEST OF THE APPLIANCE FOLLOWING THE INSTRUCTIONS BELOW. IF THE DISHWASHER FAILS TO OPERATE CORRECTLY, DISCONNECT IT FROM THE ELECTRICAL POWER SUPPLY AND CALL THE NEAREST TECHNICAL SERVICE CENTRE. DO NOT ATTEMPT TO REPAIR THE APPLIANCE. THE DISHWASHER MEETS ALL THE REQUIREMENTS SET OUT BY THE REGULATIONS IN FORCE CONCERNING SAFETY AND ELECTRICAL EQUIPMENT. ANY TECHNICAL CHECKS SHOULD BE CONDUCTED EXCLUSIVELY BY A TRAINED AND AUTHORISED TECHNICIAN: REPAIRS CARRIED OUT BY UNAUTHORISED PERSONS WILL INVALIDATE THE WARRANTY, AS WELL AS POSING A POTENTIAL HAZARD TO THE USER. The manufacturer declines all responsibility for damage to persons or property resulting from failure to observe the above precautions, from tampering with even a single component of the appliance, or from the use of non original spare parts.

Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation. The back or sides of the dishwasher may be placed up against walls or other furniture units. If the dishwasher is installed near a heat source, fit the special insulating panel to prevent overheating and malfunction of the appliance. To ensure stability, install integrated or built-under dishwashers only under continuous worktops, and screw them to the adjacent units. To facilitate the installation procedure, the intake and drain hoses can be positioned in any direction; make sure that the hoses are not kinked, crushed or pulled too tightly. Make sure to tighten the locking ring-nut once the pipes have been placed in

the direction required.



[You're reading an excerpt. Click here to read official SMEG SA823X user guide](#)

<http://yourpdfguides.com/dref/3478994>

A hole at least 8 cm in diameter is required to allow the power supply cable and pipes to pass. Level the appliance on the floor using its adjustable feet. This operation is essential for ensuring correct operation of the dishwasher. Building-in a dishwasher underneath a ceramic hob is absolutely forbidden. A dishwasher can be built-in underneath a conventional hob provided there is no break in the kitchen worktop, and the dishwasher and hob are installed and secured correctly, so that no hazards are generated. For free-standing models only - Installing a hob on top of a free-standing dishwasher is absolutely forbidden. - If the appliance is not built-in and is therefore accessible on one side, the door hinge area must be covered for safety reasons (injury hazard). The covering fixtures are available as an accessory from specialist dealers or the After-Sales Service. - To build in the dishwasher, the special kit must be purchased from authorised dealers or the After-Sales Service. Installation instructions 2.1 Water supply connection Preventing the risk of clogging or damage: if the water pipe is new or has not been used for a long time, before connecting to the water supply check that the water is clear and free of impurities, to prevent damage to the appliance. The dishwasher must always be connected to the water system with new hoses; old or used hoses must never be reused.

CONNECTING TO THE WATER SUPPLY Connect the intake hose to a cold water supply with " gas thread, inserting the filter A supplied with the dishwasher. Take care to screw the hose firmly into place with your hands and then complete by tightening about of a turn with pliers. In dishwashers equipped with the ACQUASTOP device, the filters is already fitted inside the threaded ring. The dishwasher can also be connected to a hot water supply not exceeding 60C. Supplying the appliance with hot water cuts down the washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply. **DRAIN CONNECTION** Insert the dishwasher's drain hose into a drain pipe having a diameter of at least 4 cm, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling. For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap. The free end should be positioned at a height of between 30 and 100 cm, and should never be submerged in water.

If a horizontal drain extension hose is used (for a maximum of 3 m) the drain hose can be placed at a maximum height of 85 cm from the ground. Installation instructions 2.2 Electrical connection and precautions **CHECK THAT THE VOLTAGE AND THE FREQUENCY OF THE MAINS MATCH THE RATINGS ON THE NAME PLATE OF THE APPLIANCE POSITIONED ON THE INNER EDGE OF THE DOOR. THE PLUG ON THE SUPPLY CORD AND THE CORRESPONDING SOCKET OUTLET MUST BE OF THE SAME TYPE AND MEET THE REGULATIONS IN FORCE. THE PLUG MUST BE ACCESSIBLE AFTER INSTALLATION. NEVER DISCONNECT THE PLUG BY PULLING ON THE POWER SUPPLY LEAD. IN THE EVENT OF DAMAGE TO THE SUPPLY CORD, HAVE IT REPLACED BY THE MANUFACTURER OR AN AUTHORIZED TECHNICAL SERVICE CENTRE. DO NOT USE ADAPTORS OR SHUNT CONNECTIONS IN ORDER TO AVOID THE POSSIBILITY OF OVERHEATING OR BURNING.** In the event of damage to the supply cord, have it replaced by the manufacturer or an Authorized Technical Service Centre in order to avoid any risk. User instructions 3.

Description of the controls 3.1 Front panel All the dishwasher control are grouped on the front panel. Programming and option selection are only possible with the door closed. 42 8 742 8 1 9 3 5 1 9 63 5 1 2 3 4 5 6 7 8 9 **ON/OFF BUTTON ON/OFF LIGHT START/PAUSE BUTTON START/PAUSE LIGHT PROGRAMS SELECTOR HALF LOAD BUTTON (on some models only) HALF LOAD LIGHT (on some models only) NO RINSE AID LIGHT RECESSED DOOR HANDLE Light off Light on Light flashing User instructions SETTING THE WASHING PROGRAM** To select the most suitable program for the dishes to be washed refer to the table below, which indicates the most appropriate program according to dish type and degree of soiling. **PROGRESS PROGRAM DURATION MINUTES (1) CONSUMPTION WATER LITRES POWER kWh (1) PROGRAM SELECTION TYPE AND GRADE DIRT SOAK PANS AND DISHES IN WAITING OF COMPLETING THE LOAD Cold prewash Cold prewash Wash at 45C Cold rinse Rinse at 68C Dry Cold prewash Wash at 40C Cold rinse Rinse at 45C Dry Cold prewash Wash at 65C Cold rinse Rinse at 68C Dry Prewash at 45C Wash at 70C 2 cold rinses Rinse at 70C Dry 12' 7 0,03 DELICAT PANS AND DISHES NORMAL DIRTY 5 ANNULING A PROGRAM** To annul the program in progress, it must first be interrupted (see "INTERRUPTION OF A PROGRAM").

Turn the **PROGRAM SELECTOR (5)** to any point on the "empty" sector (with no symbols) on the left of the selector and start the dishwasher. After the water has discharged from the tank, the **ON/OFF (2)** and **START/PAUSE (4)** lights will both remain on. If the door is opened with the dishwasher in operation, the appliance switches to "Pause" state, indicated by a series of beeps and the following configuration of the **ON/OFF (2)** and **START/PAUSE (4)** lights. Once the door has been closed again, the "START PROGRAM" procedure already described must be repeated. The washing cycle will restart from the point where it was interrupted.

In case that the tub temperature is higher than 50C the program will start about 30 seconds later. If the dishwasher door is not properly closed, the washing cycle will not start. 16 User instructions **HALF LOAD WASH FUNCTION (on some models only)** Pressing button **LOAD WASH (6)** selects washing on the top basket only. After selecting the program, proceed as follows: press the **LOAD WASH** button (6) once to select washing in the top basket only; Press the button (6) again to return to the full load washing mode (washing in both baskets). The option is disabled at the end of the cycle. **WARNING: dishes and cutlery placed in the basket not selected will not be washed. INDICATOR LIGHT CONFIGURATION FOR HALF-LOAD WASHING (7)** Washing in top basket only. Washing in both baskets. 17 User instructions **TO SAVE ON ENERGY! ..**

. **AND PROTECT THE ENVIRONMENT** Always try to run the dishwasher fully loaded. Do not wash the dishes in running water. Use the washing program that is most appropriate for each type of load. Do not carry out any preliminary rinsing. If available, connect the dishwasher to a hot water supply up to 60C. **TO CUT DOWN ON DETERGENT CONSUMPTION! ... AND PROTECT THE ENVIRONMENT** The phosphates contained in dishwasher detergents are harmful to the environment.

To avoid using excessive amounts of detergent and to save on electricity, observe the following: separate the more delicate items from dishes that are more resistant to aggressive detergents and high temperatures; do not pour the detergent directly on the dishes.



[You're reading an excerpt. Click here to read official SMEG SA823X user guide](http://yourpdfguides.com/dref/3478994)
<http://yourpdfguides.com/dref/3478994>

REMOVING THE DISHES At the end of the washing program, wait at least 20 minutes before removing the dishes, to allow them to cool down. To add rinse aid: Open the door. Rotate the container cap anticlockwise by of a turn and remove it. Replace the cover and turn it in a clockwise direction.

Replace the cap, turning it clockwise. Add the detergent and close the cap carefully. Use only detergents specially formulated for dishwashers. Add the correct amount of detergent. Also available are tablet detergents which state that that no salt or rinse aid is required.

In some cases, these detergents might not give good results, especially with short and/or low-temperature washing cycles. If performance problems (e.g. a white coating on the tank or dishes, poor drying, dirt on dishes at the end of the wash) are noted, users are advised to return to conventional products (granular salt, powder detergent and liquid rinse aid). However, please note that on return to the use of conventional salt, a number of cycles will be required before the system becomes fully efficient again, so traces of white coating may still be found on the tank and dishes. If the problem persists for too long, contact the After-Sales Service. When using detergent in tablet form (bear in mind that we recommend the use of three separate products: detergent, salt and rinse aid), place the tablets in the cutlery rack. The dispenser is designed to use powder or liquid detergent and the door does not open completely during the washing cycle. This means that a tablet is not completely dissolved (released), which may lead to the following: - not enough detergent released during the cycle, with poor washing results; - the detergent forms a solid block in the distributor and is released during the final rinse cycle. The introduction of detergent into the rinse aid dispenser, even in liquid form, will damage the dishwasher.

21 User instructions 4.1 General warnings and recommendations Before using the dishwasher for the first time, it is advisable to read the following recommendations concerning dish types to be washed and their loading. There are generally no constraints on the washing of domestic dishes, but in certain cases it is necessary to take their characteristics into account. Before loading the dishes into the baskets it is necessary to: remove coarse food remains: e.g. bones, fish-bones, etc. which may clog the filter or damage the wash pump. soak any pots or pans with burnt-on food remains on the bottom to facilitate removal, then load them into the LOWER BASKET. If a small quantity of dishes has to be washed, use the "load wash" option; this saves electricity and water. Remember to load the upper basket only; the lower basket must be left empty.

There is no need to pre-wash the dishes under running water before loading them into the baskets since this only wastes water. Correct loading of the dishes helps ensure optimal washing results. **WARNING!** Make sure that the dishes are securely in place so that they cannot tip over or obstruct the rotation of the spray arms during the washing cycle. Do not place very small objects in the baskets as these could fall and obstruct the spray arms or the wash pump. Containers such as cups, bowls, glasses and pots should always be loaded with the opening facing downwards and with any cavities at an angle, to allow the water to drain out.

Do not stack dishes or place them in such a way that they cover one other. Do not place glasses too close together because they may knock against each other and break, or there might be staining at the point where they touch. **MAKE SURE** that the items being washed are dishwasher-safe. **22 User instructions Items which are not dishwasher-safe:** Wooden dishes, pots or pans: these may be damaged by the high washing temperatures. Handcrafted items: these are rarely suitable for washing in a dishwasher.

The relatively high water temperatures and the detergents used may damage them. Plastic dishes: heat resistant plastic dishes must be washed in the upper basket. Dishes and objects in copper, tin, zinc or brass: these tend to stain. Aluminium dishes: items made from anodised aluminium may lose their colour. Silverware: silver items may stain. Glass and crystal: in general, glass and crystal objects can be washed in the dishwasher. However, certain types of glass and crystal may become dull and lose their clearness after many washings. Therefore, for these items we recommend using the least aggressive program available. Decorated items: the decorated objects available on the market are generally able to withstand washing in the dishwasher, although the colours may fade after a great many washes. If in doubt as to the fastness of the colours, it is advisable to wash just a few items at a time for approximately one month.

23 User instructions 4.2 Using the baskets The dishwasher has a capacity of 12 place-settings, including serving dishes. **LOWER BASKET** The lower basket receives the full force of the lower spray arm, and should therefore be used for the "toughest" items with a heavier degree of soiling. All types and combinations of loads are permitted, provided that the dishes, pots and pans are arranged with all the soiled surfaces exposed to the water jets coming from the bottom. **LOADING THE LOWER BASKET** Carefully load flat plates, soup plates, dessert and serving dishes, positioning them vertically. Pots, pans and their covers must be loaded upside down. When loading soup plates and dessert bowls, be sure to leave a gap between them. Loading examples: **24 User instructions CUTLERY BASKET** The basket has removable top grids into which items of cutlery can be inserted to keep them properly spaced and allow water to pass between them effectively. The function of the central lid is only a cover. Do not add cutlery.

The cutlery should be arranged in an orderly manner inside the basket, with the handles pointing downwards. Take care during loading to avoid injury from the knife blades. The basket is suitable for all types of cutlery, except those long enough to interfere with the upper spray arm. Ladles, wooden spoons and cooking knives can be placed in the upper basket, making sure that the knife blades do not protrude from the basket. **UPPER BASKET** It is recommended to load the upper basket with small- or medium-sized items such as glasses, small plates, tea or coffee cups, shallow bowls and light objects made from heat resistant plastic.

If the upper basket is used in the lowermost position, it can also be loaded with serving dishes, provided they are only slightly soiled. The top basket is fitted (on the left) with two plastic racks which can be raised to make room for tall glasses, such as stem glasses. On the right there are two cutlery racks designed to take knives and teaspoons; when not in use, they can be left vertical, attached to the basket. To use the space designed for teaspoons, remove the insert as shown in the illustrations.



You're reading an excerpt. Click here to read official SMEG SA823X user guide
<http://yourpdfguides.com/dref/3478994>

25 User instructions **LOADING THE UPPER BASKET** Load the dishes with the top side facing forwards; cups and concave containers should always be loaded with the opening facing down.

The left side of the basket can be loaded with cups and glasses on two levels. In the centre section, plates and saucers can be loaded vertically into the supports provided. Loading examples: **ADJUSTING THE UPPER BASKET** The upper basket can be adjusted in two positions, according to the user's needs and according to the height of the dishes in the lower basket. Proceed as follows: pull out the right-hand basket guide; remove the stop, first releasing it as shown in the diagram; push the guide to free the wheels; fit the upper or lower pair of wheels into the guide, depending on the setting required; return the stop to its original position. 26 User instructions 5. Cleaning and maintenance Before carrying out any work, always unplug the appliance from the electrical supply or switch off the all-pole disconnection device. 5.1 General warnings and recommendations Avoid the use of acidic or abrasive detergents. Clean the outer surfaces and door-lining of the dishwasher regularly using a soft cloth moistened with water or with a normal detergent suitable for painted surfaces. Clean the door gaskets with a damp sponge.

Periodically (once or twice a year) it is advisable to clean the tank and gaskets, using a soft cloth and water to remove any deposits. **CLEANING THE WATER INTAKE FILTER** The water intake filter A located at the outlet of the water supply tap needs to be cleaned periodically. After having closed the water supply tap, unscrew the end of the water intake hose, remove the filter A and clean it delicately under running water. Reassemble filter A in its seat and carefully screw the water intake hose back into position. **CLEANING THE SPRAY ARMS** The spray arms can be easily removed for periodic cleaning of the nozzles, to prevent possible clogging. Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded. To remove the upper spray arm, unscrew locking ring R. To remove the lower spray arm, simply lift it up, pulling by the central part. To remove the orbital spray arm assembly, take hold of the longer arm and pull the orbital unit upward. Wash the arms under a jet of running water and return them carefully to their seat.

After reassembly, check that the spray arms turn freely. Otherwise, check that they have been installed correctly. 27 User instructions **CLEANING THE FILTER UNIT** It is advisable to periodically inspect the centre filter C and, if necessary, to clean it. To remove the filter, grip the tabs, turn them anticlockwise and lift upwards; push the centre filter D from the underside to remove it from the micro-filter: separate the two parts which make up the plastic filter by pressing the body of the filter in the zone shown by the arrows; remove the centre filter by lifting it upwards. **GENERAL WARNINGS AND RECOMMENDATIONS FOR CORRECT MAINTENANCE:** The filters should be cleaned under running water using a stiff brush.

It is essential to thoroughly clean the filters according to the above instructions: the dishwasher cannot function if the filters are clogged. Carefully replace the filters in their seats, to avoid damaging the wash pump. **PROLONGED DISUSE:** Run the soak program twice in succession. Unplug the power cord from the socket. @@ Fill the rinse aid dispenser.

@@ Plug the power cord back into the socket. @@@@ Certain detergents can be more corrosive than others; If after following the above troubleshooting instructions the problem persists, call the nearest After-Sales Centre. **WARNING:** any operations performed on the appliance by unauthorised persons are not covered by the warranty and shall be paid for by the user. 30 User instructions 6. Troubleshooting In case of a malfunction, the dishwasher will warn the user by flashing the ON/OFF (2) and START/PAUSE (4) lights, in some cases combined with a continuous beep. **LIGHTS DESCRIPTION** The dishwasher is not able to fill or discharge the tank. Temperature sensor disconnected (on some models only). Alternate washing system malfunction (on some models only). Water level at limit (on some models only). - - - + continuous beep Anti-flooding system or safety level switch tripped.

In some cases, the alarm signal may indicate a temporary problem, so before contacting the after-sales service, proceed as follows. Open and close the door, or switch the dishwasher off and back on, and if necessary reprogram it. If the problem persists, contact the after-sales service. **TECHNICAL DATA** Width: 600 mm Depth measured flush with the outer edge of the control panel Height Capacity Water supply pressure Electrical characteristics 597 599 mm Free standing: 600 mm Semi-integrated: 570 mm Free standing from 850 mm to 870 mm Semi-integrated from 820 mm to 870 mm 12 Standard place settings min. 0,05 - max. 0,9 MPa (min. 0.5 max. 9 bar) See rating plate 31 115 125 135 145 155 Misurare l'altezza del pannello comandi; fare coincidere l'indice relativo a tale valore con il profilo superiore dell'apertura in legno; tracciare il posizionamento degli agganci porta. Measure the height of the control panel; bring the mark relating to this value into line with the top edge of the wood end door; mark the positions of the door connections.

Mesurer la hauteur du panneau de commandes; faire coïncider l'index relatif à cette valeur avec le profil supérieur de la porte en bois; tracer le positionnement des crochets de la porte. Die Höhe des Bedienfelds messen; Die diesem Wert entsprechende Markierung mit dem oberen Profil der Holz- zur Deckung bringen; Die Position der Traufhungen anzeichnen. Meet de hoogte van het bedieningspaneel; laat de markering die bij de waarde hoort overeenstemmen met het bovenste profiel van de houtendeur; tekende positie van de deurhangers af. Medir la altura del panel de mandos; hacer coincidir el índice correspondiente a dicho valor con el perfil superior de la puerta de madera; trazar el posicionamiento de las bisagras de la puerta. Medir a altura do painel de comandos; fazer coincidir o indicador relativo a este valor com o perfil superior da porta de madeira; marcar a posição dos ganchos da porta.

Solos alcuni modelli Certain model only Seulements sur certains modèles nur bei einigen Modellen Sloen algunos modelos alleen in dienvan toepassing 115 125 135 145 155 **ATTENZIONE:** Montare la porta e regolare la tensione delle molle laterali prima dell'installazione. **IMPORTANT:** Door template, do not destroy. Fit door and adjust hinge tension before installation. **ATTENTION:** Apres montage de la porte, régler la tension des ressorts latéraux avant l'installation.

Solos alcuni modelli Certain model only Seulements sur certains modèles nur bei einigen Modellen Sloen algunos modelos alleen in dienvan toepassing **SUPERFICIE INTERNA SURFACE INTERNE INNENFLACHE LATOSUPERIORE BORDSUPERIEURE UPPER EDGE OBERKANTE** **WICHTIG:** Tr montieren, Trfedern vor Einbau einstellen.

ATENEO: Antes de instalarlo, monte a porta e regule a tensão das molas laterais.



[You're reading an excerpt. Click here to read official SMEG SA823X user guide](http://yourpdfguides.com/dref/3478994)
<http://yourpdfguides.com/dref/3478994>

*IMPORTANTE: Montar la puerta y regular los muelles laterales antes de la instalacin. 10 1 11 8 Regolazionevitetensionemolle(13)
Coperturafotocontappindotazione(14) DoorspringAdjustementdevice(13) Coveringofholeusingcapproved(14) Rglagedesressortsdelaporte(13)
Couverturedutrouaveclebouchonfourni(14) VorrichtungfrdieEinstellungderSpannungderTrfedem(13)AbdeckendesLochsmitemmitgeliefertenStopfen(14) 13 9
NOTA: Solamentealcuni modellisonodotati diuno dei dispositivisotto illustrati. N.B.: Onlysomemodelsareequippedwithone ofthetwodevicesillustrated below.
REMARQUE: seulquelques modlessontmunis del'undedeuxdispositifsillustrsci-dessus. ANMERKUNG: Nur einigeModelleverfgenber
einerbeidenuntendargestelltenEinrichtungen.NOTABENE: uitsluitend bepaalde modellenzijn uitgerustmetn vandetweeonderstaand afgebeeldeinrichtungen
NOTA: Slo algunos modelos estn equipados conunodelosdosdispositivosqueseilustranacontinuacin. NOTA: Salguns
modelosestoequipadoscomoudosdoisdispositivosilustrados abaixo 1/2" 3/4" 3/4" SW32 Cu10 MIN 40cm .*



[You're reading an excerpt. Click here to read official SMEG SA823X user guide](http://yourpdfguides.com/dref/3478994)
<http://yourpdfguides.com/dref/3478994>