



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG SA945X-2. You'll find the answers to all your questions on the SMEG SA945X-2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG SA945X-2
User guide SMEG SA945X-2
Operating instructions SMEG SA945X-2
Instructions for use SMEG SA945X-2
Instruction manual SMEG SA945X-2

INSTRUCTION MANUAL



DISHWASHER



[You're reading an excerpt. Click here to read official SMEG SA945X-2 user guide](http://yourpdfguides.com/dref/3479016)
<http://yourpdfguides.com/dref/3479016>

Manual abstract:

2. 3. 4. @@@@ Follow the recommended cleaning procedures to ensure that your dishwasher always remains in perfect working order. This manual provides a quick and easy reference for answering all your questions concerning the use of your new dishwasher. **INSTALLATION INSTRUCTIONS:** these are intended for the qualified technician who must carry out the installation, hook-up and testing of the appliance. **USER INSTRUCTIONS:** these consist of recommendations for using the appliance, a description of its controls and of the correct cleaning and maintenance procedures. 3 Safety instructions 1.

Safety and operating instructions THIS MANUAL FORMS AN INTEGRAL PART OF THE APPLIANCE: IT MUST ALWAYS BE KEPT INTACT TOGETHER WITH THE DISHWASHER. BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS CONTAINED IN THIS MANUAL. INSTALLATION MUST BE PERFORMED BY A QUALIFIED TECHNICIAN, IN COMPLIANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR DOMESTIC USE, AND COMPLIES WITH THE EEC DIRECTIVES 72/23, 897336 (INCLUDING 92/31) CURRENTLY IN FORCE, INCLUDING THE PREVENTION AND ELIMINATION OF RADIO FREQUENCY INTERFERENCE. THE APPLIANCE IS DESIGNED FOR THE FOLLOWING PURPOSE: WASHING AND DRYING OF DISHES; ANY OTHER USE SHALL BE CONSIDERED IMPROPER. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR USES OTHER THAN THOSE DESCRIBED ABOVE. THE NAME PLATE FEATURING THE TECHNICAL DATA, SERIAL NUMBER AND MARKINGS IS VISIBLY POSITIONED ON THE INNER EDGE OF THE DOOR.

THE NAME PLATE ON THE INNER EDGE OF THE DOOR MUST NEVER BE REMOVED. DO NOT LEAVE THE DISCARDED PACKAGING MATERIALS UNSUPERVISED WITHIN THE HOME. SEPARATE THE VARIOUS MATERIALS WHICH MAKE UP THE PACKAGING AND TAKE THEM TO THE NEAREST SORTED WASTE COLLECTION CENTRE. THE APPLIANCE MUST BE PROVIDED WITH AN EARTH CONNECTION IN ACCORDANCE WITH THE ELECTRICAL SAFETY REGULATIONS IN FORCE. THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR DAMAGE TO PERSONS OR PROPERTY RESULTING FROM THE FAILURE TO EARTH THE APPLIANCE OR FROM A DEFECTIVE EARTH CONNECTION.

@@@AVOID USING ADAPTORS OR SHUNT CONNECTIONS. @@@AFTER CHANGING THE POWER CORD, MAKE SURE THAT THE BRACKET WHICH SECURES THE CORD IS FIXED SECURELY IN PLACE. IF THE APPLIANCE IS INSTALLED ON A CARPETED OR COVERED FLOOR, ENSURE THAT THE OPENINGS ON ITS UNDERSIDE ARE NOT OBSTRUCTED. ALWAYS SWITCH OFF THE DISHWASHER AFTER EACH USE TO AVOID WASTING ELECTRICITY. OBSOLETE APPLIANCES MUST BE RENDERED UNUSABLE. CUT OFF THE MAINS POWER CORD AFTER UNPLUGGING IT FROM THE WALL OUTLET, AND MAKE SAFE ANY COMPONENTS WHICH MIGHT BE DANGEROUS FOR CHILDREN (LOCKS, DOORS, ETC.). THE APPLIANCE MUST THEN BE TAKEN TO A SORTED WASTE COLLECTION CENTRE. IN THE EVENT OF A FAULT, DISCONNECT THE DISHWASHER FROM THE ELECTRICAL POWER SUPPLY AND SHUT OFF THE WATER TAP. THEN CALL IN A QUALIFIED TECHNICIAN.

DO NOT USE APPLIANCES WHICH HAVE BEEN DAMAGED DURING TRANSIT! IF IN DOUBT, CONSULT YOUR DEALER. THE APPLIANCE MUST BE INSTALLED AND CONNECTED IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED BY THE MANUFACTURER OR BY A QUALIFIED TECHNICIAN. THE APPLIANCE IS INTENDED FOR USE BY ADULTS. DO NOT ALLOW CHILDREN TO COME NEAR OR PLAY WITH THE DISHWASHER. KEEP CHILDREN AWAY FROM DETERGENTS AND FROM THE OPEN DISHWASHER DOOR. THE PACKAGING MATERIALS (PLASTIC BAGS, POLYSTYRENE, METAL BARS, ETC.) MUST NOT BE LEFT WITHIN THE REACH OF CHILDREN. KEEP CHILDREN AWAY FROM THE OPEN DISHWASHER. THE APPLIANCE MAY CONTAIN RESIDUES OF DETERGENT WHICH CAN CAUSE IRREVERSIBLE DAMAGE TO THE EYES, MOUTH, AND THROAT, AS WELL AS POSSIBLE DEATH BY SUFFOCATION. DO NOT INTRODUCE SOLVENTS SUCH AS ALCOHOL OR TURPENTINE WHICH MAY CAUSE AN EXPLOSION.

DO NOT LOAD DISHES THAT ARE SOILED WITH ASH, WAX OR PAINTS. 5 Safety instructions LEANING OR SITTING ON THE DISHWASHER DOOR WHEN OPEN MAY CAUSE THE APPLIANCE TO OVERTURN, PUTTING PEOPLE AT RISK. DO NOT DRINK THE WATER RESIDUES WHICH MAY BE PRESENT INSIDE THE DISHES OR DISHWASHER AT THE END OF THE WASHING PROGRAM AND BEFORE THE DRYING CYCLE. KNIVES OR OTHER SHARP-ENDED COOKING UTENSILS MUST BE PLACED IN THE CUTLERY BASKET BLADE-DOWN, OR LAID HORIZONTAL IN THE TOP BASKET. TAKE CARE NOT TO CUT YOURSELF AND ENSURE THAT THEY DO NOT PROJECT FROM THE BASKET.

AQUASTOP MODELS THE AQUASTOP DEVICE PREVENTS FLOODING IN THE EVENT OF A WATER LEAK. WHEN THE AQUASTOP DEVICE IS TRIPPED, CALL IN A QUALIFIED TECHNICIAN TO IDENTIFY AND REPAIR THE FAULT. IN MODELS EQUIPPED WITH THE AQUASTOP DEVICE, THERE IS A SOLENOID VALVE INSIDE THE WATER INTAKE HOSE. DO NOT CUT THE HOSE AND DO NOT ALLOW THE SOLENOID VALVE TO DROP INTO WATER. IN THE EVENT OF DAMAGE TO THE WATER INTAKE HOSE, DISCONNECT THE APPLIANCE FROM THE ELECTRICAL POWER SUPPLY AND FROM THE WATER SUPPLY.

@@@DO NOT ATTEMPT TO REPAIR THE APPLIANCE. @@@6 Installation instructions 2. Installation and hook-up Remove the polystyrene basket retainers. Position the appliance in the desired place of installation. @@@@Level the appliance on the floor using its adjustable feet. @The covering fixtures are available as an accessory from specialist dealers or the After-Sales Service. Some models are equipped with only one adjustable foot at the rear, which can be adjusted by turning the screw on the lower front part of the appliance. 2.1 Water supply connection Preventing the risk of clogging or damage: if the water pipe is new or has not been used for a long time, before connecting to the water supply check that the water is clear and free of impurities, to prevent damage to the appliance. The dishwasher must always be connected to the water system with new hoses; old or used hoses must never be reused.

7 Installation instructions CONNECTING TO THE WATER SUPPLY Connect the intake hose to a cold water supply with 3/4" gas thread, inserting the filter A supplied with the dishwasher. Take care to screw the hose firmly into place with your hands and then complete by tightening about 1/4 of a turn with pliers. In dishwashers equipped with the ACQUASTOP device, the filters is already fitted inside the threaded ring. The dishwasher can also be connected to a hot water supply not exceeding 60°C. Supplying the appliance with hot water cuts down the washing time by approximately 20 minutes, but slightly reduces its effectiveness. Make the connection to the domestic hot water supply using the same procedure described for connecting to the cold water supply. DRAIN CONNECTION Insert the dishwasher's drain hose into a drain pipe having a diameter of at least 4 cm, or alternatively, place it inside the kitchen sink using the plastic support provided, taking care not to crush or excessively bend the hose. It is important to prevent the hose from coming loose and falling. For this purpose, the plastic support is equipped with a hole for tying it to the wall or water tap. The free end should be positioned at a height of between 30 and 100 cm, and should never be submerged in water.

If a horizontal drain extension hose is used (for a maximum of 3 m) the drain hose can be placed at a maximum height of 85 cm from the ground.

[You're reading an excerpt. Click here to read official SMEG](#)



[SA945X-2 user guide](#)

<http://yourpdfguides.com/dref/3479016>

2.2 Electrical connection Plug the power cord into a suitable electrical outlet, according to the instructions given in chapter "1. Safety and operating instructions". 8 User instructions 3.

Description of the controls 3.1 Front panel All the dishwasher controls are grouped on the front panel. 1 2 3 4 WASHING PROGRAM SELECTOR ON/OFF KEY ON/OFF INDICATOR LIGHT RECESSED DOOR HANDLE 9 User instructions SETTING THE WASHING PROGRAM To select the most suitable washing program, refer to the table below which indicates the recommended washing according to dish type and the degree of soiling. After using the table to identify the most appropriate washing program, turn the PROGRAM SELECTION knob (1) (see section "3. Description of the controls") to set the program of choice by aligning the pointer with the program number.

TABLE OF PROGRAMS SELECTOR AND CYCLE TYPE OF CUTLERY AND DEGREE OF DIRTNESS PROGRAM SEQUENCE AMOUNT OF DETERGENT GRAMS 1 PRE-WASH Pots and crockery, before a wash programme. Cold prewash Cold prewash cycle Wash cycle at 65°C 2 cold water rinse Rinse cycle at 68°C 3 Drying cycle with hot hair Cold prewash cycle Wash cycle at 65°C Cold rinse cycle Rinse cycle at 68°C Drying cycle with hot hair Wash cycle at 65°C Cold rinse cycle Rinse cycle at 68°C Drying cycle with hot hair Cold rinse cycle Rinse cycle at 68°C Drying cycle with hot hair _ 2 INTENSIVE Heavily soiled crockery, pots, not for delicate crockery. 25 3 NORMAL Normally soiled crockery pots. 25 4 DAILY (*) EN 50242 Slightly soiled crockery washed immediately after use. 25 5 DRYING/ PLATE WARM Cycle for rising and drying clean or dusty crockery. _ Only run the soak program with half loads. (*) Reference program as per EN 50242 standard. () Not present. 10 User instructions The washing cycle will not take place if the dishwasher door is left open or not properly closed. TABLE FOR CERTIFICATION BODIES Reference standard Reference program Load Type of detergent Amount of detergent Rinse aid setting EN 50242 (*) Selector on 4 9 place-settings B 25 g Depending on the model 3/4 or 4/6 EN 50242 The upper basket must be set in the low position.

3.2 Washing programs Before starting a washing program make sure that: · The water supply tap is open. @@ · The baskets have been correctly loaded. @ @ & middle AID DISPENSER SETTING The dishwasher is factory set for medium water hardness. @ @ @ @ @ @ @ @ Replace the cap, turning it clockwise. @ @ @ @ @ @ @ @ Add the detergent and close the cap carefully. @ @ @ @ @ @ @ @ @ @ Add the correct amount of detergent. @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ If performance problems (e.g. @ @ @ @ @ @ @ @ @ @ This means that a tablet is not completely dissolved (released), which may lead to the followis and their covers must be loaded upside down. @ @ Take care during loading to avoid injury from the knife blades. @ @ @ @ @ @ @ @ must always be facing downwards. @ @ On the right plates and saucers can be slotted verticalli into the forks. Loading examples: ADJUSTING THE UPPER BASKET The upper basket can be adjusted in two positions, according to the user's needs and according to the height of the dishes in the lower basket. Proceed as follows: · · · turn the retainer E on both runners, right and left, through 90°; remove the basket; lift the basket and fit the smaller pairs of wheels in the runners; return the retainers E to their original position.

21 User instructions 5. Cleaning and maintenance Before carrying out any work, always disconnect the appliance from the electrical power supply. 5.1 General warnings and recommendations Avoid the use of acidic or abrasive detergents. Clean the outer surfaces and door-lining of the dishwasher regularly using a soft cloth moistened with water or with a normal detergent suitable for painted surfaces. Clean the door gaskets with a damp sponge. Periodically (once or twice a year) it is advisable to clean the tank and gaskets, using a soft cloth and water to remove any deposits. @ @ @ @ @ @ @ @ Wash them under running water and carefully replace them in their seats, checking that their rotary movement is in no way impeded. · To remove the upper spray arm, unscrew locking ring R. · To remove the lower spray arm, simply lift it up, pulling by the central part. · To remove the orbital spray arm assembly, take hold of the longer arm and pull the orbital unit upward. Wash the arms under a jet of running water and return them carefully to their seat. After reassembly, check that the spray arms turn freely. Otherwise, check that they have been installed correctly. ORBITAL 22 User instructions CLEANING THE FILTER UNIT · · · The filter H should be periodically removed and inspected, and if necessary, cleaned.

To remove the filter, take hold of the handle and turn clockwise, then lift upwards. Then separate parts L and M, and separate the two parts of the plastic filter by pressing gently in the points shown, lifting it upwards to extract it. @ @ @ @ @ @ @ @ Unplug the power cord from the socket. @ @ Fill the rinse aid dispenser. Shut off the water supply tap. 23 User instructions BEFORE STARTING THE DISHWASHER AFTER PROLONGED DISUSE: · · · Check that there are no deposits of sludge or rust inside the water pipe: if there are, allow the water to run from the water supply tap for a few minutes. Plug the power cord back into the socket. Reconnect the water intake hose and open the tap again. TROUBLESHOOTING MINOR PROBLEMS In some cases it is possible to remedy minor problems by referring to the following instructions: If the program fails to start, check that: · · · the dishwasher is connected to the electrical power supply; there is no power failure; the water tap is open; the dishwasher door is properly closed. If water remains inside the dishwasher, check that: · · · the drain hose is not kinked; the drain siphon is not obstructed; the dishwasher filters are not clogged. If the dishes are not being cleaned properly, check that: · · · · · the correct amount of detergent has been added; the dishes are being loaded correctly; the selected program is suitable for the dish types and their degree of soiling; all the filters are clean and positioned correctly; the spray arm nozzles are not obstructed; there is no object obstructing the rotation of the spray arms. 24 User instructions If the dishes fail to dry or remain dull, check that: · · · there is rinse aid inside the special container; the rinse aid dispenser setting is correct; the detergent used is of good quality and has not lost its effectiveness (for example, through incorrect storage, with the box left open). If the dishes show signs of streaking, staining, etc., check that: · the rinse aid dispenser setting is not too high.



[You're reading an excerpt. Click here to read official SMEG SA945X-2 user guide](http://yourpdfguides.com/dref/3479016)
<http://yourpdfguides.com/dref/3479016>

If there are visible traces of rust inside the tank: · the tank is made of steel, and therefore any rust marks are due to external elements (fragments of rust from the water pipes, pots, cutlery, etc.

). Special products are commercially available to remove such marks; check that the amount of detergent being used is correct. Certain detergents can be more corrosive than others. · If after following the above troubleshooting instructions the problem persists, call the nearest After-Sales Centre. **WARNING:** any operations performed on the appliance by unauthorised persons are not covered by the warranty and shall be paid for by the user.

TECHNICAL DATA Width Depth measured flush with the outer edge of the control panel Height Capacity Water supply pressure Electrical characteristics
447 ÷ 449 mm Free standing: 600 mm Semi-integrated: 590 mm Free standing from 850 mm to 870 mm Semi-integrated from 820 mm to 870 mm 9 Standard
place settings min. 50 max. 900 KPa (min. 0.5 max. 9 bar) See rating plate 25 1 820 - 870 570 448 0 45 2 min. 570 1 55 0 60 3 3 100 - 170 90 130 4 820870
2 820-870 5 max. 1,10 m 6 1/2" S N SF 3/4" 0,3-10 bar 0,3-10 bar min. 0,5 m 3x16 4 min. 0,4 m min.

0,4 m 6 1,14 m 1,23 m 1,78 m 1,25 m 1,50 m 1,66 m 5 min. 0,00 m 820870 7 7 8 8 9 10 9 Superficie interna Surface interne Inner surface Innenfläche Lato
superiore Bord supérieure Upper edge Oberkante 10 11 12 13 11 15 14 12 1 13 14 16 15 14 8 10 .



[You're reading an excerpt. Click here to read official SMEG](#)

[SA945X-2 user guide](#)

<http://yourpdfguides.com/dref/3479016>