



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG SE2010MFX. You'll find the answers to all your questions on the SMEG SE2010MFX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG SE2010MFX
User guide SMEG SE2010MFX
Operating instructions SMEG SE2010MFX
Instructions for use SMEG SE2010MFX
Instruction manual SMEG SE2010MFX

Contents

1. Preliminary instructions	29
1.1 DISPOSING OF PACKAGING	30
1.2 DISPOSING OF OLD APPLIANCES	30
2. Description of controls	31
2.1 FRONT CONTROL PANEL	31
2.2 ELECTRONIC PROGRAMMER	33
2.3 CLOCK AND PROGRAMMER	36
3. Using the oven	37
3.1 WARNINGS AND GENERAL ADVICE	37
3.2 OVEN LIGHT	37
3.3 COOLING VENTILATION	37
4. Available accessories	38
5. Cooking hints	40
5.1 TRADITIONAL COOKING	40
5.2 HOT-AIR COOKING	40
5.3 GRILL COOKING	41
5.4 HOT-AIR GRILLING	41
5.5 DELICATE COOKING	42
5.6 DEFROSTING	42
5.7 SPIT ROASTING	43
6. Recommended cooking table	44
7. Maintenance and cleaning	46
7.1 ENAMELLED PARTS	46
7.2 DOOR GLASS	46
7.3 OUTER OVEN STRUCTURE	46
7.4 PYROLYSIS: AUTOMATIC OVEN CLEANING	46
8. Extraordinary maintenance	50
8.1 REPLACING THE LIGHT BULB	50
8.2 DISMANTLING THE DOOR	50

27



[You're reading an excerpt. Click here to read official SMEG SE2010MFX user guide](http://yourpdfguides.com/dref/3510490)
<http://yourpdfguides.com/dref/3510490>

160 - 170 150 - 160 150 - 160 160 - 170 140 - 170 150 - 170 210 - 240 150 - 170 170 - 190 190 - 220 160 - 170 150 160 - 170 190 - 210 220 - 240 20 - 25 25 - 30 20 - 25 65 - 90 70 - 100 65 - 90 35 - 45 100 - 130 40 - 45 70 - 90 100 - 160 160 - 240 80 - 100 30 - 50 15 - 25 according to dimensions 30 - 50 35 - 45 40 - 50 25 - 35 40 - 60 25 - 35 30 - 40 40 7 45 Maintenance and cleaning 7.



[You're reading an excerpt. Click here to read official SMEG](#)

[SE2010MFX user guide](#)

<http://yourpdfguides.com/dref/3510490>

Maintenance and cleaning 7.1 ENAMELLED PARTS Wait for the oven to cool, take out all the removable parts and proceed to wash with water and regular detergent.

Dry and replace components. For cleaning enamelled parts, never use abrasive products, metal wire sponges or sharp objects so as not to damage the surface. Remove any dried remains of food on surfaces with a wooden or plastic utensil. DO NOT USE A STEAM JET FOR CLEANING THE INSIDE OF THE OVEN. 7.

2 DOOR GLASS Always keep this clean. Use absorbent kitchen paper. In tft up the door forming an angle of about 45° and remove. To refit, slide the hinges A in the grooves, drop the door and release levers B. 50 .



[You're reading an excerpt. Click here to read official SMEG](#)

[SE2010MFX user guide](#)

<http://yourpdfguides.com/dref/3510490>