



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG SE20XMFR7. You'll find the answers to all your questions on the SMEG SE20XMFR7 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG SE20XMFR7  
User guide SMEG SE20XMFR7  
Operating instructions SMEG SE20XMFR7  
Instructions for use SMEG SE20XMFR7  
Instruction manual SMEG SE20XMFR7

## Contents

GB-IE

1.	INSTRUCTIONS FOR SAFE AND PROPER USE	26
2.	INSTALLATION	28
3.	DESCRIPTION OF CONTROLS	30
4.	USE OF THE OVEN	35
5.	AVAILABLE ACCESSORIES	36
6.	COOKING HINTS	37
7.	CLEANING AND MAINTENANCE	43
8.	EXTRAORDINARY MAINTENANCE	45



**INSTRUCTIONS FOR THE INSTALLER:** these are intended for the **qualified technician** who must install the appliance, set it functioning and carry out an inspection test.



**INSTRUCTIONS FOR THE USER:** these contain user advice, description of the commands and the correct procedures for cleaning and maintenance of the appliance.

25



[You're reading an excerpt. Click here to read official SMEG SE20XMFR7 user guide](http://yourpdfguides.com/dref/3510667)  
<http://yourpdfguides.com/dref/3510667>





*How to use: pour the product on a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or deerskin. 7.1.2 Food stains or residues Do not use metallic sponges or sharp scrapers: they will damage the surface. Use normal non-abrasive products for steel, and a wooden or plastic tool if necessary. Rinse thoroughly and dry with a soft cloth or deerskin. Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven. 43 Instructions for the user 7.*

*2 Cleaning of the oven For best oven upkeep clean regularly after having allowed to cool. @@Rinse and dry. @@For easier cleaning, the door can be removed (see P. 8.2) 7.3 Door glass The door glass should always be kept clean. Use absorbent kitchen paper to clean. @@@@Before any intervention, disconnect the power supply of the device. 8.1 Replacement of light bulb Remove the bulb protector A by turning anticlockwise and change bulb B (in the 8-function model with front glass panel change the halogen bulb C) with a similar one. Re-fit the bulb protector A. Only use oven bulbs (T 300°C). 45 Instructions for the user 8.2 Removing Hold the door on both sides with both hands near hinges A and raise levers B. Lift up the door forming an angle of about 45° and remove. To refit, slide the hinges A in the grooves, drop the door and release levers B. 8.3 Oven door seal To permit thorough cleaning of the oven, the seal may be removed. Before removing the seal, take off the door as described above. Once the door has been taken off, lift the tabs at the corners as shown in the figure. After cleaning, refit the seal with the longer side horizontal and insert the tabs into the appropriate holes starting from the top ones. 46 .*



[You're reading an excerpt. Click here to read official SMEG](#)

[SE20XMFR7 user guide](#)

<http://yourpdfguides.com/dref/3510667>