




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SMEG WM63141BK. You'll find the answers to all your questions on the SMEG WM63141BK in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SMEG WM63141BK
User guide SMEG WM63141BK
Operating instructions SMEG WM63141BK
Instructions for use SMEG WM63141BK
Instruction manual SMEG WM63141BK

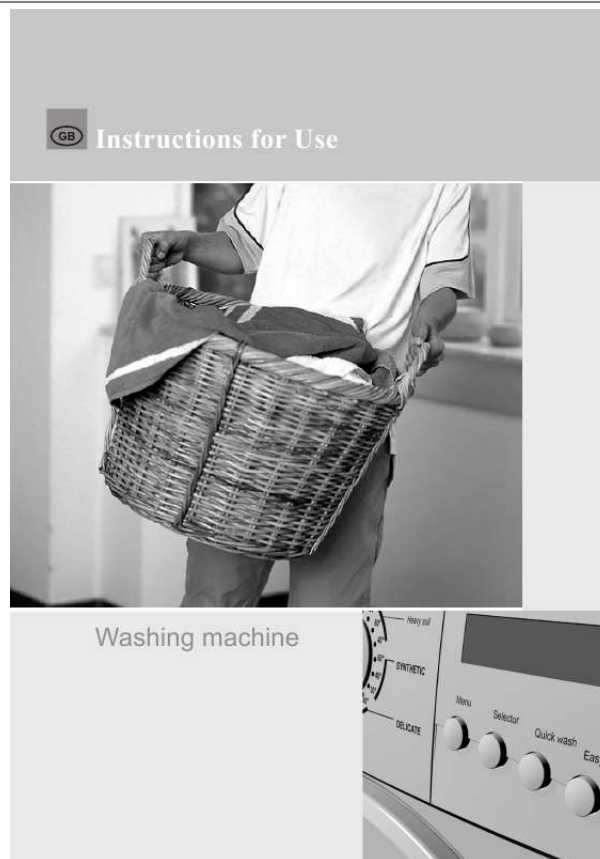

[You're reading an excerpt. Click here to read official SMEG WM63141BK user guide](http://yourpdfguides.com/dref/3516573)
<http://yourpdfguides.com/dref/3516573>

Manual abstract:

@@To avoid pollution of environment, once your appliance is no longer useful, take it to your local authorized waste appliance dealer. The appliance is intended exclusively for use in households. If the appliance is used for professional purposes, for profit, or for purposes beyond regular use in a household, or if appliance is used by a person who is not a consumer, the warranty period equals the shortest warranty period possible as stipulated by the relevant legislation. Description of washing machine

.....
.....
..... 3 Cautions

.....
.....
.....

.....
.....
.....
..... 4 Installation and connection

.....
.....
.....
..... 6 Operation.....

.....
.....
.....

.....
.....
.....
..... 10 Tips for washing and energy saving

..... 24 Cleaning and maintenance
.....
.....

..... 26 Failures

.....
.....
.....

..... 29 Tables
.....
.....

.....
.....
.....

..... 32 2 185426 Description of washing machine 1.

Front panel 2. Detergent dispenser 3. Door (depending on the model) 4. Filter lid Technical information 5. Adjustable legs 6. Water outlet hose 7. Water inlet hose 8. Mains power cable · Model (WA63xxx, WA64xxx) Dimensions (w x d x h): 600 mm x 600 mm x 850 mm Depth with door open: 106 cm Weight (net): 90 kg Nominal voltage: 230 V, 50 Hz Power: 2300 W Max. load: 6 kg Power socket: (230 V, 50 Hz, 10 A) Water pressure: min. 0,05 MPa, max.

0,8 MPa Fuse: 10 A 185426 3 Cautions -Besuretoremovetransportbracketspriorfirstuseoftheappliance. Attemptedoperationoftheblockedmachinemayresultinirreparable damagewhichisnotcoveredbythemanufacturer'swarranty!

·When connecting your washing machine to water supply, be sure to use brand new water inlet hose and appropriate sealing gaskets (attached).

·Do not locate the machine in a room with temperature below 0°C. Part of the machine may be damaged if frozen.

·Install the washing machine in a perfectly horizontal position, on a solid flat concrete floor. ·Follow the instructions for correct installation and water and mains connections. ·Never immerse the end of the drain hose into the draining water. ·Prior to starting the washing cycle lock the door by pressing the designated spot.

·Do not open the door during the washing cycle. ·Use only detergents and softeners for machine wash.

Manufacturer may not assume responsibility for any damage and eventual discoloring of gaskets and plastic components as a consequence of incorrect use of bleach and/or coloring agents. For removal of limeresidues use such agents with added anti-corrosion agents. Follow the manufacturer's instructions. Finish the limer removal by multiple rinsing to remove completely eventual acid residues.

@@ ·Upon completion of washing operation close the water faucet. @@@@ ·Repairing the failure arising from inappropriate connections or use of the appliance is not covered by the guarantee. The belt can be replaced by a servicing engineer only, who incorporates an original spare part with the marking MIG OPTIBELT 6EPJ 1260, code 111622 or 6EPJ 1278 code 587612. The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. 5 185426 Installation and connection Package removal In removing the wrapping be careful not to damage the appliance with a sharp object. Before connecting the appliance, let it warm up to room temperature (wait for two hours). ·Our appliances are packed in environmentally friendly materials which may be recycled, deposited or decomposed without any threat to the environment. ·To this end all wrappings are marked accordingly.

Removal of transport brackets · Move the pipes. · Loosen screws A at the rear of the machine · Remove the brackets B (Fig. 1) and slide them (Fig. 1) into the groove on the blocking rod (Fig. 1).

2) - the right ones should be turned around. · Use the bracket to rotate blocking rods for 90° and pull them out. · Close the openings with attached plastic pegs. Save transport brackets for eventual later use. Save the transport brackets for eventual later use. Be sure to remove the transport brackets prior first use, otherwise the appliance may be permanently damaged. In such cases the warranty conditions are void. Fig. 2 185426 Fig. 1 Fig.

2 6 Leveling the appliance · Put the appliance in horizontal position by turning the adjustable legs. The legs are adjustable up to +/- 1 cm. After the adjustment tighten the nuts firmly (A) - towards the bottom of the machine! Vibrations, moving of the appliance and loud operation due to incorrect setting of the adjustable feet shall not be covered by this warranty. @@@@ · Inlet pipe must be replaced. @@@@ · socket. 8 The wall socket must be accessible at all times and must be equipped with an earth lead (in accordance with the local safety regulations). The permanent connection must be fitted by an authorized personnel only. Damaged mains power cable may be replaced only by the producer or his authorized personnel. Never plug the appliance into the electric shaver socket or hair dryer socket. If the socket, the machine is connected to, is protected by the overload protection switch (FID), the nominal differential current of the switch must be 30 mA (switch mark I_{dn} or I_n).

In case of a smaller nominal current in the switch, the machine may be switched off during its normal operation. 9 185426 Operation A - program selector B - MENU knob C - SELECTOR knob D - quick wash E - easy iron knob F - START/PAUSE knob G - display Program selector Basic programs Cotton Heavy soil Synthetic Delicate Wool Hand wash Gym Mixed Partial programs Rinse Softener Drain Spin Functional knobs Knob B (MENU) - Use this knob to scroll around main menu. Knob C (SELECTOR) - Use this knob to scroll around main menu. Knob F (START/PAUSE) - Use it to start or finish the program. 10 185426 Before first use - Selecting language To change the language in which the information appears on the display, press simultaneously the key MENU (B) and SELECTOR (C), and turn the program selector (A) from position "0" to the first program in clockwise direction (Cotton 95°C).

The name of actually selected language appears on the display. Scroll down the selector of languages by pressing the SELECTOR knob (C), until you find the desired language. Then turn the program selector back to position "0". Last selected language will be saved automatically. Washing procedure · Open the door of the machine.

· Load the laundry into the drum. · Close the door. · Open the water inlet faucet. · Push the ON/OFF button and select the program · Add washing and treatment agents (detergent and · Start the operation by pushing the START knob (F). · Open the door of the machine. Door is opened by pulling the handle (lever) on the right hand side of the door towards you. · Sort the laundry by the type of fabrics. softener). Do the buttons and zippers, tie the strings and pull out the pockets.



[You're reading an excerpt. Click here to read official SMEG](http://yourpdfguides.com/dref/3516573)

[WM63141BK user guide](http://yourpdfguides.com/dref/3516573)

<http://yourpdfguides.com/dref/3516573>

Very delicate laundry should be put in a special protective sack.

It is suggested to load the drum with items of different sizes. Pay attention to the labels on the clothes, indicating the recommending washing mode (see table of textile treatment 11 185426 symbols on the last page of these instructions). - Load the laundry into the drum. Check that the drum is empty. - Close the door of the appliance. - Open the water inlet faucet. - Switch the machine on. Washing machine operation 1. Name of the program, 2. Duration or time of day, 3.

Symbols for activation of additional functions, 4. Water quantity in liters, 5. Spin RPM Program is selected by turning the program selector from the "0" position to the desired washing program. The display indicates particular washing program, selected by the program selector. The program selector may be turned in both directions, and the appropriate program selected according to the type of laundry washed and the required washing temperature (see Program Chart for help).

You may select basic or partial programs. With each basic program you may also select additional functions. Selected program may be changed at random prior pushing the START button (F). - Selection of basic programs (,,,...) Basic programs are selected by turning the program 12 185426 selector (A) to the desired program. The display indicates the selected program, along with basic settings.

With each basic program you may also select additional functions. Cotton: whites/colored Normally stained cotton and flax bed linen and underwear, tablecloth, bathroom towels, top garments, etc. For heavily stained permanent press use the heavy duty program, or program with the pre-wash, or select soaking in case of stains. Synthetic Normally stained shirts, blouses and other polyester and polyamide garments, or a mixture of these fabrics with cotton. For heavily stained resistant color laundry, use program with pre-wash. Delicate This is a program for delicate fabrics (dresses, skirts, blouses) and curtains. @@ Hand wash Very gentle program concluded with short gentle spin (max. 400 RPM). @@ Gym

Quick program for washing less stained athletic attire made of cotton or synthetic fabrics. 185426 13 Mixed Special program for washing normally stained colored laundry made from various resistant fumes 6 hours, in 30 minute steps.

At the end of the preset time the machine automatically starts the selected washing program. @@@@ The delayed start appears; using the SELECTOR button (C) reset the delay period. @@@@ - Stop the program by pressing the START/PAUSE knob (F). - Change settings. -

Press the START/PAUSE button (F) and reactivate the child lock. @@@@ - Stop the program by pressing the START/PAUSE knob (F). -

Using the MENU knob (B) move to child lock option. - Press the SELECTOR knob (C) to disengage the function.

@@@@ You may engage the reduced spin RPM function. Softener This program is intended for softener, bleaching ENU (B) and Easy Iron knobs (E), and turn the program selector to the first clockwise program.

Display reads SENSOR CALIBRATION. - Start calibration by pushing the START knob (F). The machine performs calibration procedure automatically. During the process the reading SENSOR CALIBRATION is flashing. When the procedure is completed, the display reads END.

- Return the program selector (A) back to "0" position. If you change the inlet water source during the use of your washing machine, or in case you think that water quality has changed, you may repeat the calibration procedure at any time. The machine will save the value of the last calibration. · Setting the Water clean sensor 23 185426 Tips for washing and energy saving · Before washing sort out the laundry according to · Prior selecting the washing program consult the the type, degree of dirtiness and color resistance. · Sewn tab with information on a particular piece of laundry (see Maintenance chart on the last page).

· Wash separately the new colored textile products for the first time. · Wash heavily soiled laundry in small quantities and add more detergent.

· Treat stubborn stains with special stain remover, it will save energy. @@@@ - Loosen the stacked laundry prior to inserting it into the drum.

· Use only detergents for machine wash. @@@@ - Liquid detergents are intended for main wash only, without pre-wash.

@@@ - High spin RPM leave less moisture in laundry which dries out much quicker in the tumble dryer, thereby saving energy. Do not put clods of detergent into the soap dispenser as the tube in the washing machine may clog. 185426 25 Cleaning and maintenance Disconnect the washing machine from the mains before cleaning! · The casing should be cleaned with soft cloth and · The interior of the drum and the door gasket is mild detergent. cleaned by washing at 60°C without laundry and adding half quantity of detergent.

· If necessary, clean the detergent dispenser. Pull it out from its casing completely by pressing the flap (see Fig.). · If necessary, clean the cover of the bung under the running water. 185426 26 · Wash it under running water using a brush, and dry it. Remove any left over dried detergent from the bottom of the casing. ·

Clean the entire rinsing area of the washing machine with a brush, especially the nozzle on the upper side of the rinsing chamber.

· Clean frequently the water inlet hose screen · After each wash wipe the door rubber gasket. This will prolong its useful life. under running water.

· Open the filter lid using flatscrew driver or similar tool. · Filter needs occasional cleaning, especially following heavily soiled laundry. Before cleaning, drain any water from the machine via drain pipe. 185426 2 · Turn it anti-clockwise, pull it out and clean under running water.

· Insert the filter back as shown on the picture (arrow and pointer), and tighten by turning it in clockwise direction.

To ensure good sealing the gasket surface (A) must be dirt free. 185426 28 Failures If the washing machine identifies failures in the operation, it reports it immediately. Sound alarm is heard and the display reads ERROR. Number identifies the type of failure.

In some cases you may attempt removing certain failures yourself (see the chart below), and the machine will continue to perform the operation after pressing the START knob (F).

The machine signals failures immediately after detecting them and stops the program, except for heater failure, where the machine completes the washing program without heating water (FAILURE1). In case the machine signals faults number you have to wait for at least 2 minutes before you can open the door of the washing machine. @@ If the fault repeats, call authorized service shop. @@ Water does not enter the machine. Possible cause Machine is not powered. @@ Tighten the filter properly. Tighten the inlet pipe. @@ the water faucet. Outlet pipe fell to the floor. The machine is not properly leveled.

Transport brackets are not removed. Unevenly distributed laundry, especially with very small quantities (for ex. only the bathrobe). Level the machine with the adjustable legs. Remove transport brackets. This is normal, the machine will reduce the RPM if vibrations are too strong. Wash larger quantity of laundry. The machine moves during operation. The machine vibrates during the spin. 29 185426 Failure Excessive foaming during washing.

Possible cause Excessive measure of detergent. Remedy Use washing powder according to the instructions by the producer and according to the water hardness and soiled laundry. Use only detergents for machine washing.



[You're reading an excerpt. Click here to read official SMEG](#)

[WM63141BK user guide](#)

<http://yourpdfguides.com/dref/3516573>

The machine operates normally. Wash large and small pieces of laundry together.

Laundry is not properly spun. No failure is reported. Greasy wads appear on the laundry. Laundry is stained after washing. The machine switched on the UKS* function.

Because of bad laundry balance, the machine has automatically reduced spin RPM. Too little detergent (laundry was very greasy). Wash the laundry again. Add more detergent for such soiled laundry, or use liquid detergent. Use the detergent containing whitener. Select the heavily soiled laundry program, or activate soaking function. Immediately rinse the laundry once again. Use liquid detergents which do not contain zeolites. Try removing the residues with the brush. Use program for heavily soiled laundry, or activate soaking function.

Clean the inlet pipe screen. Wipe the dispenser prior loading detergent. You used liquid detergent or detergent for colored laundry which does not contain whitener. You selected inappropriate program. @ @ Inappropriately selected program. Low water flow pressure. @ @ @ @ Power failure occurred. Water clean sensor is engaged. @ @ Time is prolonged for the power failure period. Time is prolonged for extra rinses.

Push it towards the machine. Washing program does not start. FAILURE2 Water does not enter the machine. FAILURE3 Water is poorly pumped out or not at all (machine signals FAILURE7). Disturbed water inlet.

Check if: the water faucet is open, inlet pipe net filter is clean. (Push the START button again). Check if: the filter is clean, outlet pipe is not jammed, outlet pipe is positioned higher than 1 m. (Push START knob again). Water outlet is clogged.

UKS: universal stability control - this function prevents excessive vibrations during spinning. In case you were not successful in repairing the malfunction in spite of the above suggestion chart, call the nearest authorized service shop. Repairing the failure arising from inappropriate connections or use of the appliance is not covered by the guarantee, and the repair expenses are paid by the customer. 31 185426 Tables Program chart - 6kg Basic programs Max. load (kg) Water cons. l RPM 1000 - 1300 1400 - 1800 Spin (RPM) Temp. (°C) Energy cons. kWh RPM 1000 - 1300 2,10 1,19 1,14 0,66 0,93 0,52 0,33 0,45 0,36 0,32 0,20 0,25 0,10 0,42 0,32 1400 - 1800 2,05 1,15 1,02 0,64 0,93 0,52 0,33 0,45 0,34 0,32 0,18 0,25 0,10 0,42 0,32 800 - 900 Type of laundry Cotton Cotton Heavy soil Cotton Synthetic Synthetic Synthetic Delicate Delicate Wool Wool Hand wash Hand wash Gym Mixed 6 6 6 3 3 2,5 2,5 2 2 1,5 1,5 3 3 95 60 60 40 60 40 30 40 30 40 30 40 30 max. 00 max. 800 max.

400 max. 1000 max. 1000 max. 1800 58 52 52 52 43 40 40 55 55 42 42 50 50 32 40 51 45 45 45 43 40 40 55 55 42 42 50 50 32 40 51 45 45 39** 45 43 40 40 55 55 42 42 50 50 32 40 2,10 1,19 1,14 0,66 0,93 0,52 0,33 0,45 0,36 0,32 0,20 0,25 0,10 0,42 0,32 * Testing program by EN60456 with the selection of max. spin RPM. ** Depending on the model. 32 800 - 900 185426 Program chart / Additional functions Program / Quick wash Spin speed Rinse hold Extra rinse / water clean sensor Higher water level Basic programs Cotton Heavy soil Synthetic Delicate Wool Hand wash Gym Mixed Partial programs Rinse Softener Drain Spin possibility / / / / / - / / / / / / - / / / - / - Cold washing Easy iron Pre-wash Soaking 33 185426 Maintenance chart Normal wash Delicate wash Max. washing temp. 95°C Max. washing temp.

60°C Max. washing temp. 40°C Max. washing temp. 30°C Hand washing Washing not allowed Whitening Whitening in cold water Whitening not allowed Ironing Hot iron max.

200°C Hot iron max. 150°C Hot iron max. 110°C Ironing not allowed Drycleaning Drycleaning in all solvents Perchlorinetylene R11, R113, Kerosene Drycleaning in kerosene, in pure alcohol and in R 113 High temperature Low temperature Drycleaning not allowed Drying Place on flat surface Hang wet Hang Tumbledrying not allowed 185426 34 PSPG3,4 OEMSMEG 185426/en(07-07).



[You're reading an excerpt. Click here to read official SMEG](#)

[WM63141BK user guide](#)

<http://yourpdfguides.com/dref/3516573>