



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON ??????? T100. You'll find the answers to all your questions on the SONY ERICSSON ??????? T100 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY ERICSSON ??????? T100**  
**User guide SONY ERICSSON ??????? T100**  
**Operating instructions SONY ERICSSON ??????? T100**  
**Instructions for use SONY ERICSSON ??????? T100**  
**Instruction manual SONY ERICSSON ??????? T100**

## Contents

### **Quick guide 3**

Easy access to certain functions.

### **Getting started 6**

Make and receive the first call.

### **Getting to know your phone 9**

Key functions, quick keys, entering letters.

### **Personalizing your phone 16**

Choose ring signal, create pictures and more.

### **Calling 25**

Use the phone book, call options.

### **Messaging 40**

E-mail and text messages.

### **Using mobile Internet 46**

WAP browser, bookmarks.

### **More features 49**

Calendar, alarm clock, games and more.

### **Security 52**

SIM card lock, phone lock.

### **Troubleshooting 54**

Why doesn't the phone work the way I want?

### **Additional information 56**

Safe and efficient use, warranty, declaration of conformity.

### **Display icons 64**

What do the icons mean?

### **Index 67**

Contents 1

This is the Internet version of the user's guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)  
<http://yourpdfguides.com/dref/2737988>

**Manual abstract:**

©Sony Ericsson Mobile Communications AB, 2002 Publication number: EN/LZT 108 6583 RIA INNOVATRON PATENTS Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. Please read the Guidelines for safe and efficient use and the Limited warranty chapters before you use your mobile phone. T9TM Text Input is a registered trademark of Tegic Communications. T9TM Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat.

No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No.

51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Please note: Some of the services in this manual are not supported by all networks. This also applies to the GSM International Emergency Number 112. 2

Contents This is the Internet version of the user's guide. © Print only for private use. Quick guide To... Do this: To...

Do this: enter the Call list press from standby to enter the first function in press and hold the menu My shortcuts from standby to enter the Find and call menu press and hold from standby press and hold any of the find a phone book entry beginning with the first letter keys from (or the closest following) on standby a key find a phone book entry enter the position number and press from standby press press Call your voice mail service press and hold from standby enter the + sign to make an press and hold international phone call from standby set the phone to silent turn off the microphone speed dial (phone book positions 19) press and hold from standby press and hold during a call press any of the number keys and from standby put a call on hold switch between two calls enter the Options menu press and hold when writing a text message Quick guide 3 This is the Internet version of the user's guide. © Print only for private use. 4 Quick guide This is the Internet version of the user's guide. © Print only for private use. Front Indicator light Back Back cover Volume key Display On/off key Keypad Microphone Option key 5 This is the Internet version of the user's guide. © Print only for private use. Getting started About this User's Guide Some services and functions described in this User's Guide are network- and subscription-dependent. Because of this, all menus may not be available in your phone and the shortcut numbers to menus and functions may vary between phones. This symbol indicates that a service or function is network- or operator-dependent. Please refer to the information provided by your network operator for more information about your subscription.

We recommend that you read the chapter "Getting to know your phone" on page 9 for information about how to move through the menus. Warning! If your magnetic loudspeaker comes in contact with your credit card, it may impair the magnetism in the latter. The SIM card When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your Phone Book information, among other things. Assembly Before you can use your phone you need to: · insert the SIM card.

· attach and charge the battery. Note: Always turn off the phone and detach the charger before you insert or remove a SIM card. 6 Getting started This is the Internet version of the user's guide. © Print only for private use. You have to insert the SIM card and charge the battery before you can use the phone.

1. 2. 3. 4. 5. 6. SIM card and battery information It may take up to 30 minutes before an icon appears in the display when charging. Insert the SIM card. Make sure the SIM card is placed under the silvery holders. Place the battery on the back of the phone and push until you hear a click.

Connect the charger to the phone at the flash symbol. The flash symbol on the charger plug must face upwards. It can take up to 30 minutes before an icon is shown in the display. Wait approximately four hours or until you see the battery is fully charged. Remove the charger by tilting the plug upwards. Getting started 7 This is the Internet version of the user's guide. © Print only for private use. Making and receiving calls SIM locked PIN: On/off If you make a mistake while entering your PIN, delete the wrong number by pressing . If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message PIN blocked.

To unblock it you need to enter you PUK (Personal Unblocking Key). Your PUK is provided by your network operator. To make and receive calls · Enter the area code and phone number, · Press to answer the call. · Press to end the call. .

My Network 12:18 To turn on the phone · Press and hold until you hear a tone. · Enter your PIN (Personal Identity Number), if you have one for your SIM card. Your PIN is provided by your network operator. 8 Getting started This is the Internet version of the user's guide. © Print only for private use. Getting to know your phone Key functions Make and answer calls. Select a menu, submenu or an option. Press and hold to turn the phone on or off or to go back to standby mode. Press to end or reject a call, go back one level in the menus or leave an option unchanged. Move through the menus, lists and text. (clear) Delete numbers and letters from the display. Delete an item from a list. To turn off the microphone during a call, press and hold the key. Enter \*. Enter #.

Press and hold to enter the Option menu. 19, 0 Enter the digits 09 and letters. Press and hold to enter the international prefix +. Move through menus using shortcuts. Volume key Increase or decrease the volume of the earpiece during a call. Scroll through menus, lists and text. Enter the Status menu. To reject an incoming call, slide the key up or down twice. Getting to know your phone 9 This is the Internet version of the user's guide. © Print only for private use. Moving through the menus There are two ways of moving through the menus: · Scrolling with the and keys · Using shortcuts Scrolling by using Press... to.. · How to interpret the instructions In this example of how to interpret the instructions, we are going to set the key sound to the tone option. To set the key sound 1. Scroll to Settings, YES, Sounds & alerts, YES, Key sound, YES. 2.

Select Tone and press YES. Interpret the instructions as follows: 1. From standby, press or to scroll to the Settings menu. 2. Press to select the Settings menu. The name of the menu that you have chosen is shown at the top of the display Settings.



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON ??????? T100 user guide](#)

<http://yourpdfguides.com/dref/2737988>

3. Press to select the Sounds & alerts submenu. (You do not need to scroll with the arrow keys as this is the first submenu). 4.

Press or to scroll to the Key sound submenu and press to select it. 5. Press or to scroll to the Tone option and press to select it. You have now set the key sound to tones. 6. Press and hold to go back to standby. or scroll left or up through the menus. scroll right or down through the menus. select a menu, submenu or an option. go back one level in the menus, leave an option unchanged.

press and hold to go back to standby. Using shortcuts A quicker way to move through the menus is to use shortcuts. Enter the menus by pressing or and then simply enter the number of the menu to which you want to go. To get back to standby, press and hold . 10 Getting to know your phone This is the Internet version of the user's guide.

© Print only for private use. Display text · A text that is highlighted shows your position in the menu. If you press , you enter this menu or select this option. · Grey text indicates a function that is temporarily unavailable, for example due to your subscription or due to a certain setting which has not been turned on. Getting to know your phone 11 This is the Internet version of the user's guide.

© Print only for private use. Menu overview My Network 12:18 Phone book Messages Call info Settings Extras WAP services My shortcuts Find and call Add number Find and edit CLI pictures Personal rings Groups Email addresses Options Memory status Special numbers Call voice mail Inbox Write new Unsent Templates Sent items Options Missed calls Call list Call costs Call timers Next call Options Turn off tones\* Hold call\* Switch calls\* Release active\* Join calls\* Transfer call\* Release all\* Sounds & alerts Profiles Call options Networks Display Language Time and date Locks Handsfree Phone name Master reset Calendar Time Pictures Calculator Games Homepage Bookmarks Push inbox Enter address Resume Select profile Clear cache WAP settings Write new Pictures Ring volume Edit shortcuts Please note that some menus are network- and subscription-dependent. \* Only available during a call. 12 Getting to know your phone This is the Internet version of the user's guide. © Print only for private use. Entering letters You can enter letters when you add names to the phone book, write text messages (SMS) or enter WAP addresses. You enter letters in your phone using multitap text input, which is default, or you can use T9TM Text Input, if the input language you select supports this. T9 Text Input is a quicker way to write texts. See "T9TM Text Input" on page 14. Input language Before you start entering letters, you need to select the input languages that you want to use when writing.

To select input language 1. Scroll to Settings, YES, Language, YES, Input, YES. 2. Scroll to the language that you want to use for entering letters and press . Repeat step 2 if you want to use another language. 3. Press YES to exit the menu. Multitap text input When saving names in the phone book or when writing WAP addresses, you always enter letters using multitap text input. In the following example, we are going to write a text message: To enter letters using multitap text input 1. Scroll to Messages, YES, Write new, YES.

2. Press the appropriate key, , or repeatedly, until the character you want appears in the display. Press... to get... Space - ? ! , . : ; " ' < = > ( ) \_ 1 ABCÄÅÆàÇ2 DEFèÉ3 GHIì4 JKLS MNOÑÖøð6 PQRSß7 TUVÛü8 WXYZ9 + & @ / % \$ £ ¥ § ; ; 0 Getting to know your phone 13 This is the Internet version of the user's guide.

© Print only for private use. Press... to get... # \* to delete letters and numbers to shift between capital and lower-case letters press and hold to enter numbers press and hold to switch to one of your selected input methods T9TM Text Input You can use T9 Text Input when writing texts such as text messages and e-mail messages. The T9 Text Input method uses a built-in dictionary to recognize the most commonly used word for every sequence of key presses. This way, you press each key only once, even if the letter you want is not the first letter on the key.

Wumber you have specified, then that caller's ring signal is used. You can include question marks in a phone number. For example, 012345??? means that calls from phone numbers between 012345000 and 012345999 will have the same personal ring signal. Press and hold to insert a question mark. To set a specific ring signal for a caller 1. Scroll to Settings, YES, Sounds & alerts, YES, Ring signals, YES, Personal rings, YES, Add new?, YES. 2. Enter the caller's number and press YES. Press to retrieve a number from the phone book. 3.

Select a ring signal and press YES. Composing your own ring signal You can compose ten different ring signals. To compose or edit a ring signal 1. Scroll to Settings, YES, Sounds & alerts, YES, My melodies, YES. 2.

Select one of the melodies and press YES. 3. Press to remove notes. 4. Use the keypad to enter notes: · Press and hold a key to enter a long note. · Press to raise the note one octave. · Press once to raise the note one semitone. · Press twice to lower the note one semitone. 5. To listen to your melody, press YES. 6. Press YES again to save it or press NO to continue composing. Vibrating alert You can choose to be notified of an incoming call by the buzzing of the Vibrating alert. You can set the phone's Vibrating alert to one of the following: · On (all the time) · On if silent (on when the ring volume is turned off or when you have set the phone to silent) · Off (all the time) Personalizing your phone 17 This is the Internet version of the user's guide. © Print only for private use.

To set the Vibrating Alert 1. Scroll to Settings, YES, Sounds & alerts, YES, Vibrating alert, YES. 2. Select the setting you want, and then press YES. Message signal You can set the message signal to clicks, tones or silent. · Select Message alert from the Settings/Sounds & alerts menu and then select the signal you want. Key sound You can set the key sound to clicks, tones or silent. · Select Key sound from the Settings/Sounds & alerts menu and then select the key sound you want. Minute minder If you turn on the minute minder, you hear a beep once every minute during a call. · Select Minute minder from the Call info/Call timers menu and then select On or Off.

Menu language Most SIM cards automatically set the menu language to the language of the country where you bought your SIM card, Automatic. If this is not the case, the preset language is English. To change the menu language 1. Scroll to Settings, YES, Language, YES, Menus, YES.



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON ??????? T100 user guide](#)

<http://yourpdfguides.com/dref/2737988>

2.

Select a language and press YES. Note: You can always choose Automatic by pressing 8888 in standby. You can always choose English by pressing 0000 in standby. Display light The display light can be set to automatic, off or on. In automatic mode, the display light is turned off a few seconds after you press the last key.

Select Light from the Settings/Display menu, and then select the alternative you want. 18 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. Pictures Your phone comes with a number of pictures. · Scroll to Extras, YES, Pictures, YES, where you can: · Assign a picture to a number in the phone book. When that person calls, the picture appears in the display (provided your subscription supports the Calling Line Identification service). See "To add a picture to a phone book entry" on page 29. · Edit a picture. To draw your own picture 1. Scroll to Extras, YES, Pictures, YES, My pictures, YES.

2. Press YES to start drawing with the picture editor. 3. Press YES twice to save the picture. To edit a picture 1. Scroll to Extras, YES, Pictures, YES. 2. Select a picture group and press YES. 3. Select a picture and press YES to start editing with the picture editor.

4. Press YES twice to save the picture. The picture is saved in My pictures. Picture editor keys and functions This table lists the keypad functions. Key Use

Move the cursor up and left. Move the cursor up. Move the cursor up and right. Move the cursor left. Lift up, or put down, the pen. Press and hold to switch between zoom and full size view.

Move the cursor right. Move the cursor down and left. Move the cursor down. Move the cursor down and right. Switch line thickness. Open the Options menu. Exit the picture editor Delete the picture Move the cursor 1, 5 or 10 spaces. Switch between black and white pen colour. Personalizing your phone 19 This is the Internet version of the user's guide. © Print only for private use.

1. 2. 3. 4. 1. 2. 3. 4. To save a picture in My Favourites Scroll to Extras, YES, Pictures, YES. Select a picture group and press YES.

Select a picture and press . Press YES to save the picture. To delete a picture from My Favourites Scroll to Extras, YES, Pictures, YES. Select My favourites and press YES. Select a picture and press .

Press YES to delete the picture. Background picture Select a picture as background when in standby mode. Your phone comes with 10 preset pictures. You can also save an additional 10 pictures in your phone, that you either create yourself or download from Sony Ericsson Mobile Internet. For more information, visit wap.

SonyEricsson.com/. To turn on the background picture 1. Scroll to Settings, YES, Display, YES, Background, YES, Activate, YES. 2. Select On and press YES. Display sleep Turn on the sleeping display to save power. To turn on the sleeping display 1. Scroll to Settings, YES, Display, YES, Display sleep, YES. 2.

Select On and press YES. Time and date The time is always displayed in standby mode. To set the clock 1. Scroll to Settings, YES, Time and date, YES, Set time, YES. 2. Enter the time and press YES. If you select the 12-hour clock, you can alternate between am and pm by pressing . You can choose a 12-hour or a 24-hour clock. · Select Time format from the Settings/Time and date menu, then select the time format you want. To set a picture as background 1.

Scroll to Settings, YES, Display, YES, Background, YES, Select picture, YES. 2. Select a picture and press YES. 20 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use.

Date When the phone is in standby mode, you can press either of the volume keys to see today's date. To set the date 1. Scroll to Settings, YES, Time and date, YES, Set date, YES. 2. Enter the date, and then press YES.

You can select another date format. · Select Date format from the Settings/Time and date menu, then select the date format you want. Answering mode When using a portable handsfree unit, you can choose to answer a call by pressing any key (except the NO key) or set the phone to answer the call automatically. To select answering mode 1. Scroll to Settings, YES, Handsfree, YES, Answering mode, YES. 2. Select an answering mode and press YES. Start-up/Shut-down show When you turn your phone on or off, the Sony Ericsson start-up/shut-down show appears in the display. Your operator's own greeting may be shown instead. If you want to interrupt the start-up show, press NO.

You can also create your own start-up show. To select a start-up/shut-down show 1. Scroll to Settings, YES, Display, YES, User greeting, YES. 2. Select an existing show, or write your own greeting by selecting Custom, then press YES. You can also turn off the start-up/shut-down show by selecting Off. To turn the start up melody on or off 1. Scroll to Settings, YES, Display, YES, User greeting, YES. 2. Select a show and press YES.

3. Select AnimationSound, YES, On or Off, YES. To create your own start-up show 1. Scroll to Settings, YES, Display, YES, User greeting, YES. 2. Select My animation, YES, Image, YES. 3. Draw your own picture, then press YES twice to save the picture. 4. Select AnimationSound, YES, On or Off, YES. 5. Select Transition, YES. Decide how you want the start-up show to move across the display, YES. 6. Select Preview to view the start-up show, YES.

Personalizing your phone 21 This is the Internet version of the user's guide. © Print only for private use. Phone number display You can check your own phone number(s). · Select My numbers from the Phone book/Special numbers menu. If your number is not stored on your SIM card, you can enter it yourself.

Keypad lock You can lock the keypad to avoid dialling a number by accident. Note: Calls to the international emergency number 112 can still be made, even when the keypad is locked. The keypad remains locked until you: · answer an incoming call · unlock the keypad To lock the keypad manually 1. Press and hold . 2. Select Turn on keylock and press YES. Automatic keylock Automatic keylock means that if no keys are pressed after 25 seconds, the keypad will be locked. To turn the automatic keylock on or off 1. Scroll to Settings, YES, Locks, YES, Auto keylock, YES. 2.

Select On or Off and press YES. To unlock the keypad 1. Press and hold . 2. Select Turn off keylock? and press YES.

Phone name You can choose a name for your phone. To enter a phone name 1. Scroll to Settings, YES, Phone name, YES. 2. Select Edit and enter a name, press YES.

My Shortcuts You can place your favourite functions in the My shortcuts menu. In this way, you can quickly and easily reach the functions you use most. When you buy your phone, My Shortcuts contains a few functions which you can remove if you wish. 22 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. To add a function to My Shortcuts 1. Scroll to My shortcuts, YES, Edit shortcuts, YES.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737988)

[ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)

<http://yourpdfguides.com/dref/2737988>

2. Select a function from the list by pressing . 3.

Enter the position number you want for your function in this menu and press YES. To add another function, repeat steps 2 and 3. To remove a function, repeat steps 1 and 2. 4. Press YES to exit the list. Tip: Press and hold to reach the first submenu in the My shortcuts menu. Profiles A profile is a group of settings which are set to suit a certain environment. For example, when you go to a meeting, you can simply choose the Meeting profile and a number of settings that suit a meeting are set the ring signal is turned off etc. Some phone accessories can activate a profile automatically. For example, when you connect a portable handsfree to your phone, the Port h-free profile is activated.

The profiles There are five profiles in the phone: · Normal · Meeting · Outdoors · Port H-free (portable handsfree) · Home When you buy your phone, it is set to the Normal profile. You cannot create more profiles, but you can change the name of a profile, change the settings included in a profile or add an accessory to a profile. You cannot change the name of or add any accessories to the Normal profile. To choose a profile manually 1. Scroll to Settings, YES, Profiles, YES, Select profile, YES.

2. Select a profile and press YES. To change the name of a profile 1. Scroll to Settings, YES, Profiles, YES, Edit profile, YES, Profile name, YES. 2. Enter a new name and press YES. Personalizing your phone 23 This is the Internet version of the user's guide. © Print only for private use. To change a profile setting 1. Scroll to Settings, YES, Profiles, YES, Edit profile, YES. 2. Select a setting and press YES. 3. Change the profile settings and press YES to confirm. You can reset all profile settings to the way they were set when you bought your phone.

· Select Reset profiles from the Settings/Profiles menu. Automatic activation The profile Port h-free, is automatically activated when used with a portable handsfree. When you disconnect your phone from the accessory, the profile is changed back to the one which was active before, if the current profile was activated automatically. Master reset You can reset all the settings in the phone to the way they were when you bought your phone. Note: If you select Reset all, some pictures, melodies and templates which came with your phone are deleted. To reset the phone 1. Scroll to Settings, YES, Master reset, YES, Reset settings, YES. 2. Enter the phone lock code (0000 or the new code if you have changed it) and press YES. See "The phone lock" on page 53.

24 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. Calling This chapter gives information about the calling functions that your phone supports. Making calls Before you can make and receive calls, you need to turn on the phone and be within range of a network. Making a call 1.

Enter the area code and phone number. 2. Press YES. Ending a call · Press NO to end the call. Changing the earpiece volume During a call, you can change the listening volume by pressing the volume keys on the side of the phone.

· Press the upper key to increase the volume. · Press the lower key to decrease the volume. Turning off the microphone During a call, you can turn off the microphone. · Press and hold to turn off the microphone. · Press and hold again to resume the conversation. Re-dialling a previously called number In the Call list you can find the numbers for calls that you have made, answered or missed. To re-dial a previously called number 1. Press YES from standby mode to enter the Call list. 2. Press or to scroll through the list.

3. When the number you want to call is highlighted, press YES to make the call. See "Call list" on page 28. Automatic re-dialling If a connection failed, and the display shows Retry?, you can re-dial the number by pressing the YES key. Your phone automatically re-dials (up to 10 times): · until the call is answered. · until you press a key or receive a call. Making international calls 1. Press and hold until a + sign appears. The + replaces the international prefix number of the country from which you are calling. 2.

Enter the country code, area code (without the leading zero) and phone number. 3. Press YES. Calling 25 This is the Internet version of the user's guide. © Print only for private use.

Making emergency calls 1. Enter 112 (the international emergency number). 2. Press YES. Your Sony Ericsson phone supports the international emergency number 112.

This means that it can normally be used to make an emergency call in any country, with or without a SIM card inserted, if a GSM network is within range. Note: Some network operators may require that a SIM card is inserted, and in some cases that the PIN has been entered as well. Emergency numbers Some countries may not promote the international emergency number, 112. Your operator may therefore have stored local emergency numbers on the SIM card, which work in addition to the international emergency number. To use another emergency number 1. Press to go to the Phone book menu. 2. Press YES to select the menu. 3. Press to go to Special numbers, YES, SOS numbers, YES.

4. Press or to go to the number you want, then press YES to make the call. Receiving calls When you receive a call, the phone rings and the display shows Answer? If your subscription includes the Calling Line Identification service and the caller's network sends the number, the caller's number is shown in the display. If you have saved the caller's name and number in the phone book, and added a picture to it, the caller's name and the picture is displayed. If the network does not send the number, the display shows Withheld. Answering a call · Press YES to answer a call. Rejecting a call · Press NO, or · Press either of the volume keys on the side of the phone twice to reject a call. 26 Calling This is the Internet version of the user's guide. © Print only for private use. The caller hears a busy tone if this is supported by the caller's network.

If "Divert calls When busy" is on, the call is diverted to the number you have specified. See "Diverting incoming calls" on page 34. Missed calls If you have missed a call, the message Missed calls: 1 appears in standby mode. (The number indicates the number of missed calls.) To check your missed calls 1. Press YES. 2. If you wish to call a number from the list, select the number and press YES. Press NO if you do not want to check your missed calls now. You can always check them later.

· Select Missed calls from the Call info menu. The notepad If you want to make a note of a phone number during a call, you can use your phone display as a notepad. Use the number keys to enter the number. When you end the call, the number remains in the display. 1. 2. 3. 4. 5. 6.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)  
<http://yourpdfguides.com/dref/2737988>

1. 2. 3. 4. When you enter the number, the person at the other end can hear the tones. You can turn the tones off (can only be done during a call). To turn the tone signals off during a call Press until the Ongoing call menu appears. Press YES to select the menu. Select Turn off tones, YES. Press YES again to turn off the tone signals.

Showing and hiding your phone number You can choose to show or hide your number for a particular call, if this service is supported by your subscription. To hide or show your phone number Enter the phone number you wish to call. Press until the Call info menu appears. Press YES to select the menu. Press again until Next call is highlighted.

Press YES to select Next call. Select Hide my number or Show my number and press YES to make the call. Calling 27 This is the Internet version of the user's guide. © Print only for private use. CIPHERING CIPHERING is a built-in feature that encodes your calls and messages to provide additional privacy.

An icon is shown in the display during a call to indicate that ciphering is currently not being provided by the network. Call list The Call List is a phone number log that saves information (time, date, phone number and name) about the last 20 dialled, answered and missed calls. Once your list exceeds 20 calls, the oldest one is deleted. The calls are saved in chronological order, except for the last dialled number, which is always displayed in the first position. If you check a call within 24 hours, the time of the call is displayed. Otherwise, the time is replaced by the date. If the incoming call is a restricted number, the display shows Withheld. To call a number from the call list 1. Press YES when the phone is in standby mode. 2.

Select the number you want to call and press YES. Tip: You can also select the Call list from the Call info menu. Clearing the call list · Select Clear call list from the Call info/Options menu. To turn the call list on or off 1. Scroll to Call info, YES, Options, YES, Call listing, YES. 2. Select On or Off and press YES.

The list is cleared if you select Off, and then accept to clear the list. Phone book Your phone has a phone book in which you can save numbers and accompanying names (an entry). This means that you can retrieve a number from the phone book instead of entering the number again.

Saving a number When you want to save a phone number, you use the Add number function in the Phone Book menu. If you have already made and received calls, you can find these numbers in the Add numbers list. 28 Calling This is the Internet version of the user's guide. © Print only for private use. Every phone number you save also gets a position number.

If you want to, you can choose to sort your phone book entries according to their position number instead of the name. If you intend to use your phone both at home and abroad, it is a good idea to save all phone numbers as international phone numbers, i.e. with the + sign, followed by the country code, the area code and the phone number. Press and hold to enter the + sign.

1. 2. 3. 4. 5. To save a number together with a name Scroll to Phone book, YES, Add number, YES. Select Add new? or any of the numbers from the list by pressing YES. Enter the phone number that you want to save and press YES. Enter a name that you want to associate with the phone number and press YES. See "Entering letters" on page 13.

Press YES again to save the entry in the suggested position. Pictures and personal rings You can add a picture to a phone book entry. 1. 2. 3. 4. 5. To add a picture to a phone book entry Scroll to Phone book, YES, CLI Pictures, YES. Select Add new?, press YES. Press to go to the phone book, YES.

When the phone book entry is highlighted, press YES. This takes you to Pictures. Select a picture and press YES. · Select Personal rings to add a personal ring signal. Calling a number saved in the phone book You use the Find and call function to call a number that you have saved in the phone book.

To call a number saved in the phone book 1. Press and hold until the Find and call menu appears. 2. Enter the name or the first few letters of the name (sort order by name) associated with the number that you want to call and press YES. If the name displayed is not the one you want, press or until you find the correct name and number.

3. Press YES to make the call. Calling 29 This is the Internet version of the user's guide. © Print only for private use. Shortcuts to phone book entries You can call the phone numbers that you have saved in positions 19 by entering the position number in standby, and then pressing YES. Example: · Press and then YES. When in standby, you can find an entry by pressing and holding one of the keys to find an entry beginning with the first letter on that key, or the closest following. Example · Press and hold to get to the first entry beginning with the letter "G" (or the closest following). Then scroll up or down, using or . When you find the entry you want, press YES to make the call.

Ask to save If Ask to Save is on, you are asked if you want to save any called or answered number that is not already saved in your phone book. To turn the Ask to Save function on or off 1. Scroll to Phone book, YES, Options, YES, Ask to save, YES. 2. Select On or Off and press YES. Note: Your subscription must support the Calling Line Identification Service, if you want to save answered numbers. Keeping the phone book up to date You can change and delete names and numbers from the phone book. To edit an entry 1. Scroll to Phone book, YES, Find and edit, YES. 2.

Enter the name (or the first few letters) for the entry that you wish to edit and press YES. 3. Press YES to select the entry. 4. Select Edit and press YES. 5. When you have finished editing, press YES to save your changes. 30 Calling This is the Internet version of the user's guide. © Print only for private use. To delete an entry from the phone book 1.

Scroll to Phone book, YES, Find and edit, YES. 2. Enter the name (or the first few letters) for the entry that you wish to edit and press YES. 3. When the entry you want to delete is highlighted, press . 4. Press YES to confirm. Sort order You may change the sort order of your phone book entries, so that they are sorted according to their position number instead of the name. This means that you search for the position number when you use the Find and Call or the Find and Edit functions. To choose a sort order 1.

Scroll to Phone book, YES, Options, YES, Sort order, YES. 2. Select a sort order and press YES. Phone book memories Your phone book entries are saved in the memory on your SIM card. The number of entries you can save depends on your SIM card. By saving your entries on the SIM card, you still have access to them if you use the card with another phone. You can also save your entries in the phone memory. The phone memory holds 100 positions in which your entries are saved when all SIM positions are occupied.



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON ??????? T100 user guide](#)

<http://yourpdfguides.com/dref/2737988>

If you save your entries in the phone memory, you still have access to them if you use another SIM card with your phone. Choosing where to save an entry When you save an entry and are asked to enter the position number, you can do the following: · To save the number in the first empty position suggested, press YES.

· To save the number in another position, press to delete the position number, enter a new position number and press YES. · To save the number in the phone memory, you first need to know how many positions you have got on your SIM card. You can check this in the Memory status menu, see page 32. If, for example, you have 200 positions on your SIM card, you can enter position number 201 to save a number in the first position of the phone memory. Calling 31 This is the Internet version of the user's guide.

© Print only for private use. Overwrite protection If you try to save a phone number in a position which already contains a phone number, the message Overwrite? appears together with the name saved in that position. You now have two options: · Press YES to replace the number with the new one. · Press NO if you do not want to replace the old number. Enter a new position and press YES.

Checking the status of the memory You can check how many memory positions you have in your memories and how many of them you have used. To check the status of the memories · Scroll to Phone book, YES, Memory status, YES. If you have saved entries in the phone memory, you can delete them. To delete all entries from the phone memory 1. Scroll to Phone book, YES, Options, YES, Delete all, YES. 2. Press YES again. Note: The entries on your SIM card are not deleted. 32 Calling Copy phone book entries You can copy the phone book entries between your phone's memory and the SIM card. The number of entries that can be saved depends on the type of SIM card.

· To copy entries to the SIM card, scroll to Phone book, YES, Options, YES, Copy all to SIM. · To copy entries to the phone, scroll to Phone book, YES, Options, YES, Copy from SIM. Groups You can create a group of phone book entries. You can then send a text message to all members of that group at the same time. See "Text messages (SMS)" on page 40. 1. 2. 3. 4. 5.

6. To create a new group Scroll to Phone book, YES, Groups, YES, Add new?, YES. Enter a name for the group and press YES. Scroll to Add new? and press YES. Select an entry in your phone book and press YES.

To add the next member, repeat steps 3 and 4. Press NO to leave the menu. To add a member to an existing group · Select the group you want and then select Input/Add new? This is the Internet version of the user's guide. © Print only for private use. Your voice mail service The answering service of your network operator allows callers to leave a voice message when you cannot answer your calls.

Depending on your operator, you are informed that someone has left a message in different ways. Most operators send a text message (SMS), asking you to call your voice mail service, for example. See "Text messages (SMS)" on page 40 for more information. Other operators send a specific voice mail indication. If this is the case, the voice mail icon appears in the display. Using your voice mail service You can save the number to your voice mail service, making it easier for you to call your voice mail. To save your voice mail number 1. Scroll to Messages, YES, Options, YES, Voice mail no., YES. 2.

Enter your Voice Mail number and press YES. To call your voice mail service · Press and hold from standby. You can also select Call Voice Mail from the Messages menu. Receiving a voice mail When you receive a voice mail, your phone beeps and the message New voice mail appears in the display. · Press YES to listen to the voice mail. If you want to listen to it later, press NO. Call time and call cost During a call, the duration of the call is shown in the display. If you subscribe to cost information, the call cost (or the number of call units) is displayed instead. Call time You can check the duration of your Last call, Outgoing Calls, Incoming calls and the Total time. To check the call time 1.

Scroll to Call info, YES, Call timers, YES. 2. Select a call time and press YES. 3. Select Reset timers if you want to reset a call time counter. Calling 33 This is the Internet version of the user's guide. © Print only for private use. Call cost You can check the cost of your Last call and the Total time of your calls. To check the call cost 1. Scroll to Call info, YES, Call costs, YES.

2. Select a call cost and press YES. 3. Select Clear total cost to reset the counter. Note: If you subscribe to cost information, you must enter your PIN2 to clear the cost or time counter. Determining the call cost You can use the "tariff" function to specify the price per call unit. If you do not specify a price per call unit, the number of call units is displayed instead. To enter the price per call unit Scroll to Call info, YES, Call costs, YES, Set tariff, YES. Enter your PIN2 and press YES. Select Change tariff and press YES.

Enter the code for the currency you want, (for example GBP for Pounds Sterling), and press YES. 5. Enter the price per call unit and press YES. To enter a decimal point, press . 1. 2. 3. 4. 34 Calling Credit limit for calls If supported by your network and your subscription, you can enter a total amount of money that can be used for making calls. When the amount reaches zero, no more calls can be made.

Please note that the credit limit is only an estimated value. 1. 2. 3. 4.

To set a specific credit limit Scroll to Call info, YES, Call costs, YES, Set credit, YES. Enter your PIN2 and press YES. Select Change credit and press YES. Enter an amount and press YES. To set an unlimited credit, select Unlimited.

Diverting incoming calls If you cannot answer an incoming voice call, you can divert it to another number. For voice calls, you can choose between the following divert alternatives: All voice calls divert all voice calls. When busy divert calls if you are already on the phone. Not reachable divert calls if your phone is turned off or if you are unreachable. No reply divert calls that you do not answer within a specified time limit (operator service). . . . This is the Internet version of the user's guide. © Print only for private use. To turn on a call divert 1. Scroll to Settings, YES, Call options, YES, Divert calls, YES. 2.

Select a divert option and press YES. 3. Select Activate and press YES. 4. Enter the phone number to which you want your calls to be diverted and press YES, or retrieve it from the phone book by pressing . Note: When the Restricted Calls function is on, some Divert Calls options cannot be activated. See "Restrict calls" on page 37. 1. 2. 3.

4. To turn off a call divert Scroll to Settings, YES, Call options, YES, Divert calls, YES.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737988)

[ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)

<http://yourpdfguides.com/dref/2737988>

Scroll to a divert option and press YES. Select Cancel and press YES. Select Get status to check if a divert option is on or off. More than one call Your phone can handle more than one call simultaneously. You can, for example, put an ongoing call on hold while you make or answer a second call, and then switch between the two calls. You can also set up a conference call to have a joint conversation with up to five people. Call waiting service If the call waiting service is on, you hear a beep if you receive a second call during an ongoing call. To turn the call waiting service on or off. Scroll to Settings, YES, Call options, YES, Call waiting, YES. 2. Select Activate or Cancel and press YES. Select Get status to check if call waiting is on or off. Making a second call 1. Put the ongoing call on hold by pressing YES. 2. Enter the number you wish to call and press YES. Press and hold to retrieve a number from the phone book. Note: You can only put one call on hold.

Calling 35 You can check the status of all divert options. · Select Check all from the Settings/Call options/ Divert calls menu. This is the Internet version of the user's guide. © Print only for private use. Receiving a second call If the Call Waiting service is on, you hear a beep in the earpiece if you receive a second call. A list of alternatives, Answer, Busy and Release&answer, is shown in the display. You can do one of the following: Put the ongoing call on hold and answer the waiting call · Press YES to answer the waiting call. The held call is marked in grey and the ongoing call is marked in black. Continue the ongoing call and reject the waiting call · Select Busy. @@@@Press NO.

2. Press YES. End both calls · Press NO twice. @@@@The waiting call becomes active and the call on hold remains on hold. @@@@To add a new participant 1.

Press YES to put the conference group on hold. 2. Call the next person you wish to include in the conference group. 3. Scroll to Ongoing call, YES, Join calls, YES.

@@To extract a participant 1. Scroll to Ongoing call, YES, Extract part, YES. 2. Select a participant and press YES. @@Scroll to Ongoing call, YES, Release part, YES. 2. Select a participant and press YES. @@You can put a conference on hold and make a new call. @@To end the conference call · Press NO. @@@@Scroll to Settings, YES, Call options, YES, Restrict calls, YES.

2. Select an option and press YES. 3. Select Activate or Cancel and press YES. 4. Enter your password and press YES. @@ · To turn off all call restrictions, select Cancel all. · To change the password, select Change passwd. @@@@Fixed dialling The Fixed dialling function allows calls to be made only to certain numbers saved on the SIM card. If an attempt is made to call other numbers, the message Number not permitted appears 38 Calling in the display.

Fixed dialling requires a SIM card that allows fixed numbers to be saved. The fixed numbers are protected by your PIN2. · Partial numbers can be saved. For example, storing 0123456 allows calls to be made to all numbers starting with 0123456. · Numbers that include question marks can be saved.

For example, storing 01234567?0, allows calls to be made to numbers from 0123456700 to 0123456790. To enter a question mark, press and hold . Note: Calls to the international emergency number 112 can still be made, even when Fixed Dialling is on. To turn fixed dialling on or off 1. Scroll to Phone book, YES, Options, YES, Fixed dialling, YES.

2. Enter your PIN2 and press YES. 3. Select On or Off and press YES. To save a fixed number · Select Add new? from the Phone book/Fixed numbers menu, then enter the number. This is the Internet version of the user's guide. © Print only for private use. Closed user groups The Closed User Group function is a way of lowering call costs. On some networks it is cheaper to make calls within a call group. Your network operator can place certain numbers in groups.

You can have a maximum of 10 groups. To add a group 1. Scroll to Settings, YES, Call options, YES, Closed groups, YES, Edit list, YES. 2. Scroll to Add new? and press YES. 3. Enter the name of the user group and press YES. 4. Enter the index number and press YES. You get the index number from your operator.

To activate a group 1. Scroll to Settings, YES, Call options, YES, Closed groups, YES, Edit list, YES. 2. Select a group and press YES. 3.

Select Activate and press YES. Calls can only be made within the selected group. To call outside closed user groups 1. Scroll to Settings, YES, Call options, YES, Closed groups, YES, Open calls, YES. 2.

Select On and press YES. Accept calls With the Accept Calls service, you can choose to receive calls only from certain numbers. Other calls are rejected by a busy tone. You have to save the numbers that you want to receive in an Accepted Callers List. The numbers must first be saved in your phone book. The rejected calls are saved in the Call List. To add numbers to the Accepted Callers List 1. Scroll to Settings, YES, Call options, YES, Accept calls, YES, Accepted list, YES. 2. Scroll to Add new?, YES.

This takes you to the phone book. 3. Select an entry and press YES. To set the accept calls option 1. Scroll to Settings, YES, Call options, YES, Accept calls, YES, Accept options, YES. 2. Select an option and press YES. Calling 39 This is the Internet version of the user's guide. © Print only for private use. Setting network preferences When you turn on the phone, it automatically searches for your home network.

If this is not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming.

To select a network 1. Scroll to Settings, YES, Networks, YES, Select network, YES. 2.

Select a network and press YES. Messaging Text messages (SMS) You can use the Short Message Service (SMS) to send and receive text messages consisting of up to 160 characters. If the number to your service centre is not saved on your SIM card, you must specify the number yourself. Otherwise you cannot reply to received messages or send your own messages. Your phone also features enhanced messaging services that allow you to add pictures, animations, sounds and melodies to text messages.

To check the number to your service centre 1. Scroll to Messages, YES, Options, YES, Service centre, YES. If no number is found, select Add new? and press YES. 2. Enter the number, including the international + sign and country code, and press YES. Note: The number to your service centre is provided by your operator. 40 Messaging This is the Internet version of the user's guide. © Print only for private use. To send a text message 1. Scroll to Messages, YES, Write new, YES.

2. Enter your message and press YES. See "Entering letters" on page 13. 3. Enter the recipient's phone number or retrieve it from the phone book by pressing . 4. Press YES to send the message. If you want to send the message later, press NO twice when you are asked to enter the phone number.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)  
<http://yourpdfguides.com/dref/2737988>

The message is saved in the Unsent list in the Messages menu. 1.

2. 3. 4. 5. To insert an object in a text message Scroll to Messages, YES, Write new, YES.

While writing your message press and hold to enter the option menu. Select Add symbol or Insert object, YES. Select Picture, Sound, Melody or Animation YES. Select an object or symbol, YES. Then press YES again to confirm.

Text formatting You can change the style, size and alignment of the text in a text message. 1. 2. 3. 4. To format the text in a text message Scroll to Messages, YES, Write new, YES. Write the text message. Press and hold . Select Text format, YES. Then select Text size, Text style or Alignment, YES.

Select a format and press YES. Long messages A text message can contain up to 160 characters. You can send a longer message by linking two or more messages. Please note that you are charged for the number of linked messages. To turn long messages on · Scroll to Messages, YES, Options, YES, Long messages, YES, On, YES. Sending a text message to a group You can send text messages to group that you have specified and saved in your phone book, see "Groups" on page 32. Messaging 41 This is the Internet version of the user's guide. © Print only for private use. 1. 2.

3. 4. To send a text message to a group Scroll to Messages, YES, Write new, YES. Enter your message and press YES. Press , select Groups and press YES. Select a group and press YES. Note: You will be charged for each group member. Message options You can set a default value for the message options below, or you can turn on the Set on send option which means that you choose the settings each time you send a message. Message type The phone supports different types of messages. Your service provider may offer the facility of converting a text message into a format (e-mail or fax, for example) that suits the equipment that is going to receive the message.

Validity period If your message cannot be delivered, for example, if the recipient has turned off the phone, your service centre can save the message to send it later. Request reply Include a reply request if you want the recipient of your message to reply. Status request Check if a message has been delivered. 1. 2. 3. 4. To set a default message option Scroll to Messages, YES, Options, YES. Select an option, YES. Select Set default, YES.

Select an option from the list, YES. To turn set on send on or off · Repeat steps 1 and 2 above, then select Set on send, YES. Templates If you have one or more messages that you send often, you can save these as templates. You can save 20 templates consisting of up to 60 characters each. Your phone may come with a set of templates that your operator or service provider has prepared for you. These templates appear in the list of templates, indicated by a letter icon with a dotted sheet. To create a template 1. Scroll to Messages, YES, Templates, YES, Add new?, YES. 2. Enter the message and press YES.

3. To send the template now, press YES when Send message now? appears and proceed as described in "To send a text message" on page 41. Press NO if you do not want to send the template now. . . . 42 Messaging This is the Internet version of the user's guide. © Print only for private use.

To send a template later, select it from the Templates list in the Messages menu, and proceed as described in "To send a text message" on page 41. Message counter You can check the number of text messages that you have sent. To check the number of sent messages · Scroll to Call info, YES, Call costs, YES, Sent SMS, YES. Select Clear msg count to reset the counter. Receiving a message New message When you receive a message, the Read now? phone beeps, the indicator light rapidly flashes green and the message New message Read now? appears in the display.

To read the message now 1. Press YES. 2. Press and to scroll through the message. 3. When you have read the message, press YES. A new menu with different options appears. These options are described on the following pages. Note: If the sender of the message wants you to reply, the message Reply requested Reply?' appears in the display. Press again to reply.

If you do not want to reply, press . To read the message later · Press NO to save the message in your Inbox in the Messages menu. To reply to a message 1. When you have read the message, press YES. 2. Select Reply in the option list and press YES. 3. Select the message you want to send as a reply and press YES. You can choose between: · Send new. · Include this Message.

The message you received is included in your answer. · Any templates. 4. Write your message and press YES. To forward a message 1.

When you have read the message, press YES. 2. Select Forward and press YES. Continue in the same way as when sending a new text message. Messaging 43 This is the Internet version of the user's guide.

© Print only for private use. To call a phone number found in a message · When the number is highlighted, press YES. To call the sender of the message 1. When you have read the message, press YES. 2. Select Call and press YES. To read the next message 1. When you have read the message, press YES. 2. Select Read next and press YES.

To delete a message 1. When you have read the message, press YES. 2. Select Delete and press YES. Tip: To delete a message from your Inbox, select the message and press . Saving incoming messages Incoming messages are saved in the phone memory. The phone memory can hold up to 15 messages. When the phone memory and SIM memory are full, a flashing envelope in the display indicates that you have to empty the inbox to be able to receive new messages. If the phone memory becomes full of unread messages, new messages are automatically saved on the SIM card. Messages that are saved on the SIM card remain there until you delete them.

To save a message on the SIM card 1. When you have read the message, press YES. 2. Select Save and press YES. E-mail addresses You can save e-mail addresses to be used when you want to send a text message as an e-mail. You can save 10 e-mail addresses. To save an e-mail address 1. Scroll to Phone book, YES, Email addresses, YES, Add new?, YES. 2. Enter an e-mail address and press YES.

3. Enter a name and press YES. Area information The ordinary Short Message Service is a personal service that carries your private messages. Area Information is another type of text message that is sent to all subscribers in a certain network area. 44 Messaging This is the Internet version of the user's guide. © Print only for private use. This information could, for example, be a local traffic report or the phone number of a local taxi company. To turn area information on or off 1. Scroll to Messages, YES, Options, YES, Area info, YES, Reception. 2.

Select On or Off and press YES. Area information codes Please refer to the information provided by your operator for more information about the area information codes.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)  
<http://yourpdfguides.com/dref/2737988>

To enter an area information code 1. Scroll to Messages, YES, Options, YES, Area info, YES, Edit list, YES, Add new?, YES. 2. Enter the new code and press YES. Receiving an area message When you receive an Area Information message, the message automatically appears in the display. You read the message in the same way as you read an ordinary text message. You cannot save area messages. When you have read the message and press YES or NO, it is deleted. Cell information The "Cell information channel" is used by some network operators for sending messages to their subscribers within a certain network area. You read messages on the Cell information channel in the same way as when reading area messages. To turn on the channel, select Cell information from the Messages/Options menu and then select On. Messaging 45 This is the Internet version of the user's guide. © Print only for private use.

Using mobile Internet Your phone has a WAP (Wireless Application Protocol) browser which is designed to bring a modified Internet to your mobile phone. A wide range of services are available, for example, news, entertainment, timetables, reservations, banking, e-commerce, positioning and e-mail. Before you start To use the mobile Internet you need 1. A phone subscription that supports data transmission. 2.

A correctly set WAP profile, including GSM data settings, for WAP browsing. Note: The settings may already be entered when you buy the phone, or you can receive the settings from your network operator or your service provider in a text message. To request settings from Sony Ericsson Mobile Internet 1. Use a PC to go to www.SonyEricsson.com. By using the WAP Configurator, you can request that a text message be sent to your phone with the settings you need. 2. When the message arrives, New settings. Install? appears: · Press YES to install the new settings or · Press NO to cancel installation.

A new request for settings is then required, as in step 1. 1. 2. 3. 4. 5. 6. 7. 8. To set up a WAP profile and a GSM data account Scroll to WAP services, YES, WAP settings, YES.

Select a WAP profile and press YES. Scroll to Gateway, YES, User ID, YES. Enter the User ID for your gateway and press YES. Select Password and press YES. Enter the password for your gateway and press YES.

Select IP address and press YES. Enter the IP address of your gateway and press YES. An IP address looks something like this: 136.225.37.

163. 46 Using mobile Internet This is the Internet version of the user's guide. © Print only for private use. Note: An IP address consists of four groups of digits, with a maximum of three digits in each group. If one of your digit groups consists of only one or two digits, you have to enter a zero (0) in front of the original digit for each digit that is missing. For example, to enter the IP number above, 136.225.37.163, write 136.225.

037.163. 9. Scroll to GSM data, YES, Phone number, YES. 10. Enter the phone number you use with your GSM Data connection and press YES. 11. Scroll to User ID and press YES. 12. Enter the User ID for your GSM Data Connection and press YES.

13. Scroll to Password and press YES. 14. Enter the password for your GSM Data Connection and press YES. You have now entered the settings you need to start the WAP browser.

Using WAP To select a WAP profile 1. Scroll to WAP services, YES, Select profile, YES. 2. Select a WAP profile, YES. To start browsing · Scroll to WAP services, YES, Enter address, YES.

Enter the WAP address, YES. To exit the browser · Press and hold NO. Remain connected? appears. · Disconnect completely, press NO. Options When Browsing When browsing, you can reach different browsing options such as links or special features by pressing and holding . The options may vary depending on the WAP page you are visiting. To change the homepage of a WAP profile 1. Scroll to WAP services, YES, WAP settings, YES. 2. Select the profile whose homepage you want to change, YES.

3. Scroll to Chg homepage, YES. 4. Enter the name of the homepage, YES. 5. Enter the address of the homepage, YES. To work with your bookmarks when not browsing 1. Scroll to WAP services, YES, Bookmarks, YES. 2. Select the bookmark you want to work with, YES.

Using mobile Internet 47 This is the Internet version of the user's guide. © Print only for private use. 3. Select one of the following submenus, YES: · Go to bookmark. Go to the marked WAP page.

· Edit bookmark. Edit the name and/or the WAP address of the bookmark. · Delete. Delete the bookmark. · Send as link.

This creates a text message in which the WAP address is sent as a link. You can add a comment if you wish. To empty the cache memory 1. Scroll to WAP services, YES, Clear cache, YES. 2. Empty cache? appears, YES. Security To establish secure connections when using certain WAP services, you need to have certificates in your phone. Your phone contains certificates when you buy it. 1. 2.

3. 4. To turn on a secure connection Scroll to WAP services, YES, WAP settings, YES. Select the profile you want to edit. Select Gateway, YES, Security, YES. Select On, YES. To check the certificates in your phone 1. Scroll to WAP services, YES, WAP settings, YES, Common, YES. 2. Scroll to Security, YES, select Trusted certif.

YES. WAP push messages A service provider can send updated news or new WAP settings to your phone in a push message. Accepting or rejecting push messages If you do not want to receive push messages, you can turn off the Push access. This setting is valid for all your WAP profiles. To turn the push access on or off 1.

Scroll to WAP services, YES, WAP settings, YES, Common, YES, Push access, YES. 2. Select On or Off. Receiving push messages When you receive a push message, it comes to the Push inbox. You can respond to a push message as follows: · Postpone.

Saves the push message so that you can load and see it later. 48 Using mobile Internet This is the Internet version of the user's guide. © Print only for private use. · Load. The browser starts and loads the pushed WAP page. · Delete. Deletes the push message. Note: There are different kinds of push messages. Some of them cannot be saved to your phone. 1.

2. 3. 4. 5. 6. More features Calendar In the calendar you can add a maximum of 25 tasks for things that you have to remember. The tasks can be edited or deleted. To add a task Scroll to Extras, YES, Calendar, YES. Select Add task?, YES. Enter a description, YES.

Enter the start/end dates and times, YES. Scroll to Continue?, YES. Set a reminder, if required, or select None and press YES to save. YES Note: If you select Set reminder, enter the alarm date, and the alarm time, YES to save the task. To view a task 1.

Scroll to Extras, YES, Calendar, YES. 2. Select one of the options below, YES. · View today. Press or to see the next or previous task.

· View all tasks. Press or to see the next or previous task. More features 49 This is the Internet version of the user's guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737988)

[ERICSSON ??????? T100 user guide](http://yourpdfguides.com/dref/2737988)

<http://yourpdfguides.com/dref/2737988>