



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON ??????? T28S. You'll find the answers to all your questions on the SONY ERICSSON ??????? T28S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON ??????? T28S
User guide SONY ERICSSON ??????? T28S
Operating instructions SONY ERICSSON ??????? T28S
Instructions for use SONY ERICSSON ??????? T28S
Instruction manual SONY ERICSSON ??????? T28S



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)
<http://yourpdfguides.com/dref/2737984>

Manual abstract:

@ You should read the Guidelines for Safe and Efficient Use and the Warranty chapters before using your mobile phone. The symbol on our products signifies that they have been certified according to the EMC directive 89/336/EEC, the Telecommunications directive 91/263/EEC, and the Low Voltage directive 73/23/EEC when applicable. The products fulfil the requirements according to the following standards: Cellular Phones and Accessories in Combination: ETS 300 342-1 EMC for European digital cellular telecommunications. Accessories Without Direct Connection to a Cellular Phone: EN 50081 Electromagnetic compatibility, Generic Emission Standard, and EN 50082 Electromagnetic compatibility, Generic Immunity Standard. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. AB Some of the services in this manual are not supported by all networks. This also applies to the GSM International Emergency Number 112. Getting Started Preparing Your Phone for Use 4 9 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Turning Your Phone On and Off Display Information and Key Functions Making and Receiving Calls During a Call 11 13 16 AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Overview Front Antenna Volume key Indicator light Earpiece Power On/Off Display Keypad Microphone Flip Back Connector for external antenna Battery release catch Battery Hole for belt clip Flip release button Charging connector 4 Preparing Your Phone for Use Flip release button Handsfree connector AB Preparing Your Phone for Use Assembly You need to do the following to use your phone: · · · insert the SIM card attach the battery to the phone charge the battery Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns The SIM Card that keeps track of your phone number, the services included in your subscription, and your Phone Book information, among other things. your phone, you must insert the SIM card as shown below. Inserting and Removing the SIM Card Preparing Your Phone for Use When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card.

The SIM card contains a computer chip SIM cards come in two sizes. One is the size of a credit card and the other is smaller. Your phone uses the smaller card. Many credit card-sized SIM cards have a perforated smaller card that you can take out easily. Before you can use 1.

Remove the battery if attached. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right. AB 5 2. Raise the edge of the SIM card and slide it out. The PIN Most SIM cards are supplied with a security code, also known as PIN (Personal Identity Number), which you need to access the network.

Every Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns your PIN in the information from your operator. unauthorized use of your subscription. Unblocking Key code), which you also get from your operator. time you turn on your phone, you are asked to enter your PIN. You will find Some operators may have services that require a second PIN, your PIN2. You should be careful with your PIN, since it is your protection against If your PIN is entered incorrectly three times in a row, the SIM card is blocked. If this happens, you can unlock it by using your PUK (Personal The Battery Your T28 comes with a lithium battery. The battery is not charged when you buy your phone, but there may be enough power to switch the phone on. We recommend that you charge the battery up to three hours before you use the phone for the first time. Attaching the Battery to Your Phone · Place the battery on the back of the phone and push until you hear a click.

When to Charge the Battery The battery that comes with your phone can be charged whenever you wish without affecting its performance. You can also charge the battery when the phone is off. To remind you that you will soon need to charge the battery or replace it with a charged one: · an alarm signal (a short beep) sounds and the message Attention! Battery low appears in the display 6 Preparing Your Phone for Use AB · the indicator light on top of the phone starts flashing red If you have an Ericsson-approved battery, you can check the remaining talk downwards in standby mode. You can move downwards in the menu by pressing and standby times in the Status menu by sliding the volume key upwards or The remaining standby and talk times depend on the type of Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns satisfactorily. Charging the Battery into the mains socket. To indicate charging: · · the phone is switched on) the message Charging only is shown in the display · the battery meter in the display pulses continuously Preparing Your Phone for Use battery you use and your position in the network. Please note that these times are approximate and you may have 20% less time than is shown in the display. Note!

The phone turns itself off when the battery can no longer power it #. 1. Make sure that the battery is 3.

Connect the charger to the phone attached to the phone. as shown. The flash symbol on the 2. Connect the charger to the mains. plug must face upwards. Note! The mains plug may look different depending on the mains socket in your country. Do not connect it to any other item than you Ericsson Travel Charger CTR-10. It must not be separated from the charger when plugged the indicator on the top of the phone shows a steady red light (or green, if Note! If you charge a new battery that is empty, or a battery that has not been used for a long time, it may take a while until you get an indication of charging in the display. Only then can you switch on and use your phone. AB 7 An Ericsson-approved battery is indicated by Ericsson Optimized charging each charging, talk and standby times in the long run, we recommend that you use only Ericsson-approved batteries with your phone.

Batteries that are not Ericsson-approved are charged slowly for safety reasons. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns battery when the phone is switched on. lengthens the charging time. the indicator on the top of the phone shows a steady green light. Disconnecting the Charger Disconnect the charger from the phone by moving the plug upwards. Removing the Battery 1. Slide the release catch upwards. 8 Preparing Your Phone for Use These are indicated by Charging alien battery each time you start charging the Tip! You can use the phone while the battery is being charged. However, this When the battery is fully charged, the battery meter in the display is full and 2. Lift the battery away from the phone.

AB time you start charging the battery when the phone is switched on.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)
<http://yourpdfguides.com/dref/2737984>

For the best Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Turning your Phone on If "PIN:" Appears in the Display after you have turned on the phone: wrong number by pressing the C key. 2. Press Y E S . page 58. "The Phone Lock" on page 59. Network Search searches for a network name (in most cases abbreviated) appears in the display. This is called standby mode. You can now make and receive calls.

Turning Your Phone On and Off 1. Open the flip by pressing the flip release button on the right side of the phone. 2. Press and hold the N O key until you hear a tone. Some SIM cards are protected with a PIN code.

If PIN: appears in the display 1. Enter your PIN. If you make a mistake while entering your PIN, erase the Note! If your PIN is entered incorrectly three times in a row, the SIM card is blocked. You can unblock it by using your PUK. See "The SIM Card Lock" on If 'Phone locked' appears in the display, enter your phone lock code.

See After you have turned on the phone (and entered your PIN), the phone When a network is found, the phone beeps three times. The indicator light on top of the phone flashes green once every second and your network operator's Note! See "Error Messages" on page 106, if you do not reach standby. AB 9 Turning Your Phone On and Off Initial Settings The first time you turn on your phone, you may want to choose the ring signal type and set the clock and date. For more information about these and other settings, see "Personalizing Your Phone" on page 39. Display Language Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns "Display Language" on page 43. to Automatic, or English, in the following ways: To change the display language to Automatic arrow key. 2. Press the 3. Enter 8888. 4.

Press the To change the display language to English arrow key. 2. Press the 3. Enter 0000. 4. Press the Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card, (Automatic). If this is not the case, the preset language is English. To change the display language, see If your phone shows a language that you do not understand, you can change it 1. If not in standby mode, press and hold the N O key to go to standby. 1.

If not in standby mode, press and hold the N O key to go to standby. % # % # arrow key. arrow key. Turning Your Phone Off · In standby mode, press and hold the N O key until you hear a tone. 10 Turning Your Phone On and Off AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns In this chapter, you will also learn about the key functions.

In standby mode, the display shows the name of your operator, the time, the signal strength and the battery power. Other icons appear if you receive any messages, divert all your incoming calls, set the alarm clock and so on. Display Information The table below shows and explains each icon which may appear in standby. Icon Name Explanation Signal strength meter Battery meter Tells you the strength of the network signal. Tells you the status of the battery. You have missed an incoming call. Missed call indicator Divert indicator Accept Some/None indicator Profile indicator All incoming calls will be diverted to a defined number. No calls or only certain calls from numbers in a list are received. Another profile than Normal has been chosen. Ring signal off indicator Alarm indicator Silent indicator SMS indicator No sound can be heard when you receive a call. The alarm clock has been set and is on. All audible signals are turned off, except the alarm and timer. You have received a text message. Voice mail indicator You have received a voice message, depending on your subscription. Indicates that voice dialling is set to Start on Flip.

Line 1 is in use for outgoing calls if you subscribe to the Two Line Service Voice label in phone indicator Line 1 indicator Lntil you press a key or receive a call. signal. Automatic re-dialling is not available for fax and data calls. until the call is answered. When the call is successfully connected, you Note! You do not need to take the phone to your ear until you hear the ring Making International Calls 1. Press and hold the 0 key until a + sign appears. you are calling. number. The + replaces the international prefix number of the country from which 2. Enter the country code, area code (without the leading zero) and phone 3.

Press Y E S . Making Emergency Calls 1. Enter 112 (the international emergency number). 2. Press Y E S .

The international emergency number 112 can normally be used in any country, with or without a SIM card inserted, if a GSM network is within range. Note! Some network operators may require that a SIM card is inserted, and in some cases that the PIN code has been entered as well. Some networks may not use the international emergency number 112. Receiving a Call When you receive a call, the phone rings and the display shows Answer? If your subscription includes the Calling Line Identification (CLI) service and the caller's network sends the number, you see the caller's number in the display. If the caller's number and name are stored in the phone book, the caller's name is also shown.

If the incoming call is a restricted number, the display shows Withheld. If the incoming call is a number without any CLI service, Unknown is shown. 14 Making and Receiving Calls AB Answering a Call · Busy tone Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Rejecting a Call · Slide the volume key on the side of the phone twice. The display shows Busy tone. The caller hears a busy tone if this is Calls" on page 56. closing the flip. Open the flip by pressing the flip release button or press Y E S if the flip is open. supported by the caller's subscription. If Divert When Busy is on, the call is diverted to the number you have specified. See "Diverting Incoming Note! To open the flip without answering a call, you need to slide the volume key while opening the flip.

Then you may reject a call by pressing N O or by Ciphering Ciphering is a built-in feature that scrambles your calls and messages to provide additional privacy. An exclamation mark is shown in the display to indicate that ciphering is currently not being provided by the network. Making and Receiving Calls AB 15 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns in progress. Your phone has several functions, which you might find helpful while a call is Changing the Listening Volume You can easily change the listening volume during a call by sliding the volume key on the side of the phone. To change the listening volume during a call Slide upwards to increase the volume. Slide downwards to decrease the volume.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737984)

[ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)

<http://yourpdfguides.com/dref/2737984>

· · Muting the Microphone If you wish, you may turn the microphone off during a call. To turn the microphone off temporarily during a call 1. Press and hold down the C key. Muted appears in the display.

Muted 2. To continue your conversation, release the C key. Tip! Instead of pressing and holding the C key, you can put the call on hold. To put a call on hold 1. Press Y E S .

Call held Call held appears in the display. 2. To continue your conversation, press Y E S again. Sending Tone Signals To use telephone banking services or to control an answering machine, you need to use codes. These codes are sent as tone signals (also known as DTMF tones or touch tones).

With your mobile phone, you may use these codes during a call. If you press 0-9, * and # during a call, these numbers and characters are sent as tone signals.

Tip! You can also save codes only or codes together with a phone number in your Phone Book. See "Telephone Banking Services" on page 32. However, it may be a risk to save your codes in the phone in case it is stolen. 16 During a Call AB During a Call The Notepad If you want to make a note of a phone number during a call, you can use your phone display as a notepad. To use the notepad during a call · Use the number keys to enter the number. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Features" on page 20. page 42. When you end the call, the number remains in the display or, if Ask to Save is on, you will be asked to save the number in your phone book.

You can also find the number in Add Number in the Phone Book menu. See "T28 When you enter the number, the person you are talking to will hear the tones.

If you wish, you may turn the tones off during a call. See "Turn off Tones" on Checking the Duration or Cost of the Call During a call, the display normally shows the duration in minutes and seconds. Depending on your subscription, you may see the call cost displayed instead. Note! This depends on your network and SIM subscription. See "Knowing the Call Time/Call Cost" on page 73. Minute Minder If you turn on the minute minder, you hear a beep once every minute during a call as a reminder of the duration of the ongoing call. See "Minute Minder" on page 42. More than One Call Simultaneously Your phone is capable of handling more than one call simultaneously.

You can put the current call on hold and then make or answer a second call. You can also set up a conference call with up to five people. See "Handling More than One Call Simultaneously" on page 65. During a Call AB 17 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns AB 18 During a Call Functions and Settings T28 Features 20 21 27 35 37 39 46 56 58 65 70 73 75 76 79 82 84 88 91 99 Sending and Receiving Text Messages (SMS) Security for Your Phone and Subscription Setting Network Preferences Handling More than One Call Simultaneously Knowing the Call Time/Call Cost Using Two Voice Lines Voice Control Sending and Receiving Fax and Data Calls Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Using the Menus Your Personal Phone Book Using the Call List Your Voice Mail Service Personalizing Your Phone Diverting Incoming Calls Calling Card Calls Extras The Profile Concept Accessories Online Services AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns battery; a phone of modern design and advanced technology. name.

settings that suit a meeting are then set automatically. so on. 20 T28 Features Your T28 is a small new generation phone: a Dual Band phone with a lithium The active flip makes it possible for you to answer by just opening the flip. Or why not use the Voice Control and say 'Answer' to answer a call or 'Busy' if you wish to reject the call. You can also call a person by simply saying the The T28 has a 'Profile' feature which makes it possible for you to change a few settings by just choosing a certain Profile, since each profile includes a group of settings preset to suit a certain environment.

For example, when you go to a meeting, you can just choose the 'Meeting' profile and a number of The Profiles are also related to intelligent accessories such as a desktop charger, a portable or vehicle handsfree. For example, you may place the T28 in a vehicle handsfree kit and the 'In Car' profile is chosen automatically. In the display of the T28 you can see a mixture of text and symbols, which makes it easier for you to move through the menus when you want to change a certain setting, turn on the Vibrating Alert, send a message, save a number and An extra feature is the numbered shortcuts, which takes you to a certain setting quickly and easily. You may also create your own favourite menu, 'My Shortcuts', by including the settings you use most often. If you should need help using the menus, the T28 is equipped with help texts to guide you. AB T28 Features Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns send text messages, save important phone numbers, etc. with the of options. Some menus have sub-menus with additional options. You can find all your phone functions in the menus. You use the menus every time you want to change a setting in your phone, such as the ring signal.

You also use the menus to get the most out of your phone: to set the alarm clock, The menus are arranged in a loop, which you enter and move (scroll) through and keys or by using shortcuts. Each menu contains a list %# Name Menu Graphics You enter the menus by pressing are icons symbolizing each menu. Besides these, there are symbols within the sub-menus indicating missed calls, help texts, voice labels etc. % #. or At the top of the display, there The table below illustrates and explains each menu icon and symbol. Symbol Description Phone Book menu Messages menu Call Info menu Settings menu Extras menu Your personal phone book. Handling of text and voice messages. Call time and call cost information. Personal settings and profiles. Games, alarm clock and other extras.

Call Handling menu My Shortcuts menu Ongoing call indicator Missed calls indicator Handling of ongoing calls. A selection of your most frequently used functions. You have an ongoing call. Indicates a missed call in the call list, in the missed calls list and in standby. Indicates an answered call in the call list. Indicates a dialled number in the call list. Answered call indicator Dialled number indicator Using the Menus AB 21 Using the Menus Symbol Name Phone memory indicator Group indicator Unread SMS indicator Description Indicates that a phone book entry is a group. Indicates that a text message has not been read. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Unchecked Voice Mail Phone book look up indicator SIM card memory indicator Indicates that a voice message has not been checked.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)
<http://yourpdfguides.com/dref/2737984>

Indicates that you can enter the phone book by pressing Indicates that a phone book entry is saved in the SIM card memory.

% Voice label in phone Indicates that a voice label has been recorded for an entry in the phone only. Indicates that voice dialling is set to Start on Flip. Voice label in car indicator Indicates that a voice label has been recorded for an entry in the car handsfree kit. Voice label in phone Indicates that a voice label has been and in car indicator recorded for an entry in the phone and in the car handsfree kit. Preferred network indicator Indicates that a network is preferred and can be used. Indicates that a network is forbidden and cannot be used. Forbidden network indicator Home zone indicator Indicates that you are in your home zone. Does not appear on all networks. Help text indicator Lock indicator Indicates a help text.

Indicates that the card lock or phone lock is on. 22 Using the Menus AB Indicates that a phone book entry is saved in the phone memory and the SIM memory is full. Moving through the Menus There are two ways of moving through the menus: · · scrolling with or using shortcuts Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Scrolling by Using YES NO C Press... to... %#%# or scroll left or up through menus or functions. scroll right or down through menus or functions.

select a menu, sub-menu or setting. go back one level in the menu system, exit a setting or leave a setting unchanged. go back to standby mode by pressing and holding the key. delete an item from a list. Note! For information about how to enter letters, see "Entering Letters" on page 28.

Tip! Once in the menu system, you can press and hold the or slide and hold the volume key until you reach the menu or sub-menu that you want instead of pressing the Using Shortcuts key repeatedly. A quicker way to move through the menus is to use the shortcuts. You simply enter the number of the menu or sub-menu to which you want to go, but you first need to enter the menus by pressing or To get back to standby, you press and hold N O as normal. Tip! A quicker way to enter the 'Find and Call' function is to press and hold A quicker way to enter the first sub-menu in the 'My Shortcuts' menu is to press and hold #. %.

%#%# #. %# or Note! Your phone may not have all the menu alternatives described in this manual since many of them are network- and subscription-dependent. Because of this, the shortcut numbers may vary between phones. How To Interpret the Instructions In the instructions in this manual we use the the functions and settings, since the shortcut numbers may vary between phones due to your subscription and network. %# and keys to describe The following instruction tells you how to set the key sound to 'Tone'. Using the Menus AB key or 23 To set the key sound 2. Select Tone. Interpret the instruction as follows:
1. From the standby mode, use 2. Press Y E S to select the menu.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Now you are in the Settings menu. display (Settings). 3. Press Y E S to select the Sounds & Alerts sub-menu. sub-menu in the main menu Settings). or or Press Y E S to select the sub-menu. 4. Use 5. Use Press Y E S to select the Tone alternative. %# or to scroll to the Settings menu.

The name of the menu that you have chosen is shown at the top of the (You do not need to scroll with the arrow keys since this is the first to scroll to the Key Sound sub-menu. to scroll to Tone. %#%# or Now you have set the key sound to 'Tone'. To go back to standby mode, press and hold the N O key. This is how to interpret the same instruction as above when using shortcuts: To set the key sound 1.

Press 2. Press 4 to select the Settings menu. %# to enter the menu system. 3. Press 1 to select the Sounds & Alerts sub-menu.

4. Press 5 to select the Key Sound sub-menu. 5. Select Tone. Display Text When you move through the menu system, the display changes. The following hints can help you: · · Black text within a frame at the top indicates the menu you have chosen. Inverted text on a black layer indicates your position in the menu system. If you press Y E S you enter this menu or select this setting. Grey text indicates a function that is temporarily unavailable, for example due to your subscription or due to a certain setting which is not on. Text marked with a tick indicates the current setting or settings selected.

Text marked with a filled button indicates the current setting selected. · · · Note! Most sub-menus in the 'Call Handling' menu are shown in grey text when no call is active. However, they are shown in black text during a call. 24 Using the Menus AB 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Key Sound, Y E S . My Shortcuts You can place your favourite settings in the menu My Shortcuts. In this way, you can quickly and easily reach the settings you use most. When you buy your phone, My Shortcuts contains a few settings which you Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Shortcuts. To add a setting to My Shortcuts 1. Scroll to My Shortcuts, Y E S , Edit Shortcuts, Y E S .

2. Select a setting from the list by pressing *. 4. Press Y E S . 3.

Enter the position number you want for your setting in this menu. If you want to add another setting, repeat steps 2 and 3. To remove a setting from My Shortcuts, repeat steps 1 and 2. 5. Press Y E S to exit the list.

to press and hold can remove if you wish. You can also add a setting from another menu to My Tip! A quicker way to enter the first sub-menu in the 'My Shortcuts' menu is %. Help texts To help you use the functions and settings of the menus, your phone includes pop-up help texts that explain the sub-menus.

These help texts are set to On when you buy your phone, but you may turn them off at any time. To turn the help texts on or off 1. Scroll to Settings, Y E S , Display, Y E S , Help Functions, Y E S , Menu Help, Y E S . 2. Select On or Off. 25 Using the Menus AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 26 Using the Menus Find and Call Find and Send* Add Number Find and Edit Voice Labels Delete All Groups Email Addresses Calling Cards Options Memory Status Fixed Numbers Info Numbers ServiceNumbers Call Voicemail Inbox Send New Unsent Templates Sent Items Options Missed Calls

Call List Last Call Credit Total Cost Tariff Total Time Outgoing Time Clear Call List Reset Counters Options Sounds & Alerts Profiles Call Options Networks Display Language Time and Date Locks Voice Control Handsfree Master Reset Alarm Clock Timer Stopwatch Calculator Games Accessories Switch to Line 1 Next Incoming Show MyNumber Hide My Number Turn off Tones* Hold Call* Switch Calls* Release Active* Retrieve Call* Join Calls* Transfer Call* Extract Part* Release All* Select Profile Ring Volume Switch to Line 1 Edit Shortcuts Please note that many of the menu alternatives are network- and subscription-dependent.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737984)

[ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)

<http://yourpdfguides.com/dref/2737984>

* Only available during a call.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns You can create a personal phone book by saving phone numbers and phone numbers or names saved in your phone book. accompanying names (an entry). An easy way to make calls is by recalling the **Creating a Personal Phone Book Before you start creating your personal phone book, there are a few things you need to know. You need to learn about the memories, how to save the numbers with the international (+) sign and how to enter letters. Phone Book Memories** . . You can save phone numbers and names in: the card memory on the SIM card the phone memory Your entries are first saved in the positions on your SIM card. The actual number of memory positions available depends on your SIM card. Saving your numbers in the card memory allows you to use the numbers saved on the SIM card even when you change phones, i.e. when you insert your SIM card into another phone. By saving your numbers in the phone memory, they are always available to you in your phone, even if you change SIM cards. The phone memory holds 99 positions in which your entries are saved when all SIM positions are occupied. **International Numbers** If you intend to use your phone both at home and abroad, it is a good idea to save all phone numbers as international phone numbers, i.e. with the (+) sign, (which automatically replaces the international dialling prefix for the country you are calling from) followed by the country code, the area code and the phone number. Your **Personal Phone Book AB 27 Your Personal Phone Book** To enter an international phone number Exclude the leading zero in the area code. **Entering Letters** You can enter letters when you use the phone book and when you compose a **Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns** page 46. appears in the display. Press...

to get... 1 Space - ? ! , . . ; ' ' < = > () _ 1 2 3 ABCÄÄÆÇ2 DEFÈÉ3 GHÏ4 JKL5 4 5 6 MNOÑÖØö6 PQRSß7 TUVÜù8 WXYZ9 #* 7 8 9 0 + & @ / % \$ £ ¥ § ; ; 0 # short message (SMS). See "Sending and Receiving Text Messages (SMS)" on Press the appropriate key, 19, 0 or #, repeatedly until the character you want Example: . To enter an 'A', press 2 once. . To enter a 'B', quickly press 2 twice. . To enter lower-case letters, enter the letter, for example an 'A', and then press *. An 'a' appears. Lower-case letters now appear until you press * again.

. . To enter numbers, press and hold any number key. To delete letters and numbers, press the C key. You may also use the volume key as a shortcut to certain letters: . To enter a 'B', slide the volume key upwards and press 2. . To enter a 'C', slide the volume key downwards and press 2. Tip! You can choose another alphabet by pressing and holding #. 28 **Your Personal Phone Book AB** . Press and hold 0 to enter the + sign. Saving a Number Together with a Name Every phone number that you save gets a position number. You can save the your phone numbers. To save a number together with a name phone numbers together with a name to make it easier for you to keep track of **Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns** 1. Scroll to Phone Book, Y E S , Add Number, Y E S .

A list of numbers used but not saved appears. country code) and press Y E S . YES. 2. Select Add New? or any of the numbers from the list by pressing Y E S . 3. Enter a phone number that you wish to save (including the (+) sign and the 4. Enter a name that you want to associate with the phone number and press 5. You now have three options: . . To save the number in the suggested first empty position, press Y E S . To save the number in another position, press C to erase the position number, enter a new position number and press Y E S .

. To save the number in the phone memory, you need to know how many positions you have got on your SIM card. You can check this in Memory Status in the Phone Book menu. If, for example, you have 200 positions on your SIM, you can enter position number 201 to save a number in the phone memory. If you have turned Voice Dialling on, you are asked if you want to add a voice label to your phone book entry. See "Voice Control" on page 76. Ask to Save If you wish to be asked to save any dialled or answered number that is not already saved in your phone book, you can turn on the Ask to Save option. To turn the Ask to Save function on or off 1. Scroll to Settings, Y E S , Display, Y E S , Help Functions, Y E S , Ask to Save, Y E S . 2. Select On or Off.

Note! Your subscription must support the Calling Line Identification service. **Calling a Number Saved In the Phone Book** You can either call a number by using the name saved with it or you can call the number by using the position number that it was saved in. The order of searching for names and numbers depends on the sort order you have chosen, i.e. by name or by position. **Your Personal Phone Book AB 29 To choose a sort order** 2. Select a sort order. To call a number saved in the phone book 1. Scroll to Phone Book, Y E S , Find and Call, Y E S . associated with the number that you want to call.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 3. Press Y E S . If the name displayed is not the one you want, press find the correct name and number. 2. Enter the position number or the name (or the first few letters of the name) %# or 4.

Press Y E S to make the call. . . Tip! A quicker way to enter the 'Find and Call' function is to press and hold Shortcuts to Phone Book Entries When in standby, you can find an entry by: entering the position number followed by # . pressing and holding one of the keys 2-9 to find an entry beginning with a specific letter. For example, pressing and holding 2 takes you to the first entry beginning with the letter A (or closest following).

or to Once you are in the list of phone book entries you can use scroll through the positions, or enter a position number or a letter to go to a certain entry. %# **Speed Dialling** You can call the phone numbers that you have saved in positions 19 in the memory by entering the position number and then pressing Y E S . Example: 1. Enter the number 3. 2. Press Y E S to make the call. **Keeping the Phone Book Up to Date** You may need to change the names and numbers in the phone book from time to time. You may also want to change the position number of an entry. **Editing a Phone Number In the Phone Book** You need to find the phone book entry that you wish to edit. You can use either the stored position or the name.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)
<http://yourpdfguides.com/dref/2737984>

See "Calling a Number Saved In the Phone Book" on page 29. 30 Your Personal Phone Book AB until you 1. Scroll to Phone Book, Y E S , Options, Y E S , Sort Order, Y E S . To edit an entry 2. Enter the position number or the name of the entry that you wish to edit. Press Y E S . If the name displayed is not the one you want, press find the correct name and number. 3. Press Y E S to select the entry. 4. Select Edit. Use the or Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 5. Edit the number and press Y E S . or 6. Edit the name and press Y E S .

Use the %# keys to move the cursor. Use the C key to delete. 7. Edit the position number and press Y E S . Overwrite Protection If you try to save a phone number in a position which already contains a phone number, the message Overwrite? appears together with the name saved in that position.

You now have two options: To save the number in the selected position · Press Y E S to replace the number with the new one. To save the number in a different position 1. Press N O . 2. Enter the new position number. 3. Press Y E S to save the number in the new position. When the Card Memory Is Full When all SIM card positions are full, an icon appears next to the position number, see margin. From now on your entries are stored in the phone memory. If all positions, including the phone memory are full, you have to delete an old number by entering a position that is already occupied and press Y E S .

To delete an entry from the memory 1. Scroll to Phone Book, Y E S , Find and Edit, Y E S . 2. Enter the position number or the name of the number that you want to delete and press Y E S . (This depends on the sort order, i.e. by name or by position.) 3. Press Y E S . 4.

Select Delete. 5. Press Y E S to confirm your choice. Your Personal Phone Book AB 1. Scroll to Phone Book, Y E S , Find and Edit, Y E S .

Use the %# until you 31 To delete all entries from the phone memory 2. The question Delete all in phone memory? appears. Delete all in phone memory? Press Y E S . self). 3.

Enter the phone lock code (0000 or another one that you have chosen your- Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns All entries in the phone memory are deleted. Telephone Banking Services If you use telephone banking services, you can save the phone number of your banking service together with your personal codes, or you can save your codes only. You need to add a pause (p) between the phone number and the codes. You insert a pause by pressing and holding the * key. Usually, a # is required after each code. Sometimes a pause is required, too. Talk to your bank if you are in doubt about how to use # and pause (p). Note! It may be a risk to save your codes in the phone in case it is stolen. To save a phone number with codes 1. Scroll to Phone Book, Y E S , Add Number, Y E S , Add new?, Y E S .

character p appears in the display. 2. After entering the phone number, press and hold the * key until the pause 3. Enter the code and #. If required, enter a pause, the next code and so on. 4. Enter the name that you want to associate with the phone number and code and press Y E S . 5. Press Y E S to save. If you want to save the number in a different position than the one suggested, see "Saving a Number Together with a Name" on page 29.

To make a call with tone signal codes, proceed as described in "Calling a Number Saved In the Phone Book" on page 29. When you make the call, the phone dials the number, waits until the call is answered and then sends the code. If you insert another pause and another code, it pauses again, sends the next code and so on. To save codes only 1. Scroll to Phone Book, Y E S , Add Number, Y E S , Add new?, Y E S . 2. Enter the code followed by a # and if required, a pause, another code and 3. Press Y E S . 4.

Enter a name that you want to associate with your codes and press Y E S . 5. Press Y E S to save. 32 Your Personal Phone Book AB 1. Scroll to Phone Book, Y E S , Delete All, Y E S . During a call, you can retrieve these codes from the phone book and send To send the codes during a call 1. Scroll to Phone Book, Y E S , Find and Send, Y E S . press Y E S . 2. Enter the name (or first few letters) or position number of your codes and Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 3.

Press Y E S to send the codes. Groups The T28 allows you to create groups of phone book entries. In this way you can send a text message to several recipients at the same time. See "Sending and Receiving Text Messages (SMS)" on page 46. To create a new group 1. Scroll to Phone Book, Y E S , Groups, Y E S , Add new?, Y E S . 2. Enter a name for the group and press Y E S . 3. Scroll to Add new?, Y E S .

4. Select an entry in your phone book. 5. To add the next member, press Y E S at Add new?. To add a new member to an existing group 1.

Scroll to Phone Book, Y E S , Groups, Y E S . 2. Select the group that you want to edit. 3. Scroll to Edit, Y E S , Add new?, Y E S .

4. Select an entry in your phone book. To delete a member from a group 1. Scroll to Phone Book, Y E S , Groups, Y E S . 2. Select the group that you want to edit. 3. Select Edit. 4. Scroll to the member that you want to delete and press C .

5. Press Y E S to confirm your choice. To delete a group 1. Scroll to Phone Book, Y E S , Groups, Y E S . 2. Select the group that you want to delete. 3. Select Delete. 4. Press Y E S to confirm your choice.

Your Personal Phone Book AB 33 them. e-mail addresses You can save e-mail addresses to be used when you want to send a text message as an e-mail. See "Sending and Receiving Text Messages (SMS)" on page 46. You can save 10 e-mail addresses, each consisting of 60 characters. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1.

Scroll to Phone Book, Y E S , Email Addresses, Y E S , Add new?, Y E S . 2. Enter an e-mail address and press Y E S . 3. Enter a name and press Y E S .

Tip! The @ sign is accessed by pressing the 0 key three times. To edit an e-mail address 1. Scroll to Phone Book, Y E S , Email Addresses, Y E S . 2. Select the entry that you want to edit. 3. Select Edit. 4. Edit the e-mail address and press Y E S . 5.

Edit the name and press Y E S . To delete an e-mail address 1. Scroll to Phone Book, Y E S , Email Addresses, Y E S . 2. Select the entry that you want to delete. 3. Select Delete. 4. Press Y E S to confirm your choice. To save an e-mail address Checking the Status of the Memories The Memory Status function in your phone book lets you check how many memory positions you have left in your memories.

To check the status of your different phone book memories or to scroll through the list. 1. Scroll to Phone Book, Y E S , Memory Status, Y E S . 2. Use %# 34 Your Personal Phone Book AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns list exceeds 30 calls, the oldest one is deleted.



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S user guide](http://yourpdfguides.com/dref/2737984)
<http://yourpdfguides.com/dref/2737984>

The Call List is a phone number log that saves information (time, date, phone number and name) about the last 30 incoming and outgoing calls. Once your What Calls Are Saved? The numbers that you have dialled are always saved. If your subscription includes the Calling Line Identification (CLI) service and the caller's network sends the number, you will also find the numbers (together with a name if saved in your phone book) of answered and missed calls in the Call List. If the incoming call is a restricted number, the display shows Withheld. If the incoming call is a number without any CLI service, Unknown is shown.

You can call any of the numbers in the Call List. The Call List saves: Dialled numbers Answered calls Missed calls All the calls are saved together in chronological order. The last call you have made is saved in the first position. If the same number is called more than once, the latest call replaces earlier ones. If you check a call within 24 hours, the time of the call is displayed. Otherwise, the time is replaced by the date. Note! If you change SIM cards or turn the Call List off, the list is cleared. Called numbers may remain in the SIM card memory though. To call a number from the call list 1. Scroll to Call Info, Y E S , Call List, Y E S .

2. Scroll to the number that you want to call and press Y E S . Tip! Press Y E S when the phone is in standby mode to go directly to the call list. Using the Call List AB 35 Using the Call List To delete a number from the call list 2. Scroll to the number you want to delete and press C . The question Delete? appears in the display. 3. Press Y E S to delete the number. To clear the call list Missed calls: 1 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1. Scroll to Call Info, Y E S , Clear Call List, Y E S .

The question Call List Clear? appears in the display. 2. Press Y E S to clear the call list. To turn the call list on or off 1. Scroll to Call Info, Y E S , Options, Y E S , Set Call List, Y E S .

2. Select On or Off. If you select Off the question Call List Clear? appears in the display. 3. Press Y E S to clear the call list.

Missed Calls where the number 1 indicates the number of missed calls. 1. Press Y E S to display the missed calls. number you want to call. calls are also saved in the Call List. To be able to see if you have missed a call, the Call List must be on. If you have missed a call, the message Missed Calls: 1 appears in standby mode. 2. If you wish to call a number from the Missed Calls List, press Y E S at the Note! You can also see the Missed Calls List in the 'Call Info' menu. Missed Showing And Hiding Your Number Some operators offer subscriptions where your phone number is normally hidden. You can choose to show or hide your number for a particular call, if Calling Line Identification Restriction service (CLIR) is supported by your subscription.

To hide your phone number for a particular call 1. Enter the phone number you wish to call. 2. Scroll to Call Handling, Y E S , Hide My Number, Y E S . 3. Press Y E S to make the call. To show your phone number for a particular call 1. Enter the phone number you wish to call. 2. Scroll to Call Handling, Y E S , Show MyNumber, Y E S .

3. Press Y E S to make the call. 36 Using the Call List AB 1. Scroll to Call Info, Y E S , Call List, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Note! This service depends on your subscription and operator.

different ways. this is the case, the voice mail icon appears in the display. Message" on page 50. information provided by your network operator. The answering service of your network allows callers to leave a voice message when you cannot answer your calls.

Depending on your network operator, you will be informed that you have received a voice message in Some operators inform you by sending a specific Voice Mail indication. If Most operators, however, inform you by sending a text message, (i.e. an SMS), for example asking you to call your Voice Mail Service. For more information about receiving and reading text messages, see "Receiving a Note! For more information about your Voice Mail Service, please refer to the Communicating With Your Voice Mail Service If you want your phone to easily interact with your Voice Mail Service, you can store the number to your Voice Mail Service. You will get the number in the information provided by your network operator. To store your Voice Mail number 1. Scroll to Messages, Y E S , Options, Y E S , Voice Mail No., Y E S . 2.

Enter your Voice Mail number and press Y E S . Note! The number to your Voice Mail Service may be different if you are calling from a network that is not your home network. Calling your Voice Mail When you receive a voice mail, an alert signal sounds and the message New voicemail appears in the display (only if you receive the specific voice mail indication). If you want to check your voice mail now, press Y E S to call your Voice Mail Service. If you press N O , you can call your Voice Mail Service at a later time to listen to your recorded messages. Your Voice Mail Service AB 37 Your Voice Mail Service To call your Voice Mail Service Tip! You can also call your Voice Mail Service by pressing and holding 1 from standby. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns To change your Voice Mail number 1. Scroll to Messages, Y E S , Options, Y E S , Voice Mail No., Y E S . 2.

Press and hold C to delete the existing number. 3. Enter your new Voice Mail number and press Y E S . To change the message alert signal 1. Scroll to Messages, Y E S , Options, Y E S , Message Alert, Y E S .

2. Select the signal you want. your Voice Mail and let all incoming calls on Line 2 be connected. operating instructions supplied by your network operator. 38 Your Voice Mail Service Changing Number and Signal Tip! If you subscribe to the Two Line Service, you may have different Voice Mail numbers for your two lines.

You may also set different options for the two lines. For example, you can set all incoming calls on Line 1 to be diverted to Further information about your Voice Mail Service can be found in the AB - Scroll to Messages, Y E S , Call Voicemail, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Silent the alarm and timer signals are turned off. To set the phone silent 1. From standby, press and hold C . 2. Silent on? appears. Press Y E S . An icon appears in standby. To cancel, repeat step 1 and press Y E S at Silent off?.

You can choose to set your phone completely silent so that all signals except Ring Signal Volume You can set the volume in six steps. The first step means that two clicks are heard when you receive a call. You can also turn the ring signal off (0). An icon then appears in standby. To set the ring signal volume 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Volume, Y E S .



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON ??????? T28S user guide](#)

<http://yourpdfguides.com/dref/2737984>

The level of the ring volume appears in the display. To increase the volume, press the volume key. To decrease it, press the volume key. 2. Use The phone rings once with the actual setting as you increase the volume.

3. Press YES to save the setting. Tip! Use the volume key on the side of the phone to change the volume of the ring signal silently. Increasing Ring You can choose a ring signal that rises in steps from the softest volume to the loudest, Increasing Ring. To set the ring signal to Increasing Ring 1. Scroll to Settings, YES, Sounds & Alerts, YES, Increasing Ring, YES. 2. Select On. The Increasing Ring must be Off for the ring signal volume to apply. Personalizing Your Phone AB 39 Personalizing Your Phone Note! If the phone is set to silent, the increasing ring signal is not heard.

Ring Signal Type You can choose a ring signal from a list of different sounds and melodies. You can also compose up to four melodies of your own by entering notes with the keypad. See "Composing Ring Signals" on page 41. To choose one of the ring signal types YES. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 2. Select the ring signal type that you want. of the phone to scroll silently. Different Ring Signals for Line 1 and Line 2 the two lines. L1 and L2 are displayed instead of Voice. Different Ring Signals for Voice, Data and Fax Calls different ring signals for voice, fax and data calls respectively.

Specific Ring Signals for Personal Calls colleague. specified, then that caller's ring signal is used. by pressing and holding #. To specify a caller's number and the accompanying ring signal YES, Add new?, YES. 1. Scroll to Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Voice Calls, Tip! If you do not wish to disturb other people, use the volume key on the side If you subscribe to the Two Line Service, you can set different ring signals for Provided your SIM subscription supports Fax and Data calls, you can set If your subscription includes the Calling Line Identification (CLI) service, you can assign a personal ring signal to up to ten callers. You can, for example, have one ring signal for your friend and another one for your If the last seven digits of a caller's number correspond to a number you have You can include question marks (?) in a phone number. For example, 012345??? means that calls from phone numbers between 012345000 and 012345999 will have the same personal ring signal. You get a question mark 1. Scroll to Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Personal Rings, 2.

Enter the caller's number and press YES. You can also recall it from the Phone Book by pressing 3. Select the ring signal type you want. %. 40 Personalizing Your Phone AB To delete a caller's number YES.

2. Scroll to the number you wish to delete and press YES. 3. Select Delete. B Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Composing Ring Signals You can compose four different ring signals.

To compose a ring signal YES. 1. Scroll to Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, My Melodies, 2. Select My Melody 1, My Melody 2, My Melody 3 or My Melody 4. 3. Press C to clear the display. 4. Use the keypad to enter notes. · · The keypad now works as a keyboard (see figure in margin above): Press and hold a key to enter a long note. Press 0 to raise the note one octave.

· Press # once to raise the note one semitone. · Press # twice to lower the note one semitone. 5. To listen to your melody, press YES. 6. Press YES again to save it or press NO to continue editing. Vibrating Alert You can choose to be notified of an incoming call by the buzzing of the Vibrating Alert. You can set the phone's Vibrating Alert to one of the following: · · · On (all the time) On If Silent (on when the ring volume is turned off or when you have set the phone to silent) Off (all the time) Note! When your phone is placed in a desktop charger or a handsfree car kit, the Vibrating Alert is turned off automatically. To set the Vibrating Alert 1. Scroll to Settings, YES, Sounds & Alerts, YES, Vibrating Alert, YES.

2. Select the setting you want. Message Signal You can choose whether to hear clicks, tones or nothing (silent) when you receive a voice or text message (SMS). Personalizing Your Phone AB 1. Scroll to Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Personal Rings, 41 To set the message signal YES.

2. Select the signal you want. You can also find the Message Alert in Options in the Messages menu. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Alarm Signal To change the alarm signal for the alarm clock YES. 1.

Scroll to Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Alarm Signal, 2. Select the signal you want. Key Sound You can choose whether to hear clicks, tones or nothing (silent) when you press the keys. To set the key sound 1. Scroll to Settings, YES, Sounds & Alerts, YES, Key Sound, YES. 2. Select the key sound you want. Minute Minder If you turn on the minute minder, you hear a beep once every minute during a call. To turn the minute minder on or off 1. Scroll to Settings, YES, Sounds & Alerts, YES, Minute Minder, YES.

2. Select On or Off. You can also find the minute minder in Options in the Call Info menu. Turn off Tones If you make a note of a number during a call, you use the display as a notepad, see "The Notepad" on page 17. The person you are talking to will hear the tone signals as you press the keys. If you wish to, you may turn the tone signals off. Note! You can only turn the tones on or off during a call. To turn the tone signals off during a call 1. Scroll to Call Handling, YES. 2.

Select Turn off Tones. 42 Personalizing Your Phone AB 1. Scroll to Settings, YES, Sounds & Alerts, YES, Ring Signals, YES, Message Alert, To turn the tone signals on during a call 2. Select Turn on Tones. Display Light You can set the display light to automatic, off or on.

In automatic mode, the Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns you receive a call or message. To set the display light 1. Scroll to Settings, YES, Display, YES, Light, YES. 2. Select the display light setting you want.

display light is turned off automatically a few seconds after you have pressed the last key. It comes on again when you press a key, open the flip, or when Display Language Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card, Automatic. If this is not the case, the preset language is English. To change the display language 1. Scroll to Settings, YES, Language, YES.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737984)

[ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)

<http://yourpdfguides.com/dref/2737984>

2. Select the language you want. Tip! You can always choose English by pressing , 0000, 8888, Greeting Text When you turn on your phone, Ericsson' appears in the display. Instead of this, you can write your own greeting. Note! Some operators may have their own greeting.

To write a new greeting 1. Scroll to Settings, Y E S , Display, Y E S , User Greeting, Y E S . 2. Select Custom. 3. Write your new greeting, using the number keys. For information on how to enter letters, see "Entering Letters" on page 28. You may also edit your greeting. 4. Press Y E S to confirm your setting. To set the standard greeting 1. Scroll to Settings, Y E S , Display, Y E S , User Greeting, Y E S . 2. Select Standard. Personalizing Your Phone AB in standby. in standby. 43 1. Scroll to Call Handling, Y E S . To turn the greeting off 2. Select Off.

Phone Number Display My Numbers allows you to check your phone number(s). If your phone Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns To enter your phone number 1. Scroll to Settings, Y E S , Display, Y E S , My Numbers, Y E S , Voice, Y E S . 2. Enter the number and then press Y E S . number cannot be retrieved from your SIM card, you can enter it yourself. Tip! You can also enter your fax and/or data number and your different numbers for Line 1 and Line 2, if these are supported by your subscription. Time The time is always displayed when the phone is in standby mode. To set the time format 1. Scroll to Settings, Y E S , Time and Date, Y E S , Time Format, Y E S .

2. Select the 24-hour or 12-hour (am/pm) clock. To set the clock 1. Scroll to Settings, Y E S , Time and Date, Y E S , Set Time, Y E S . 2. Enter the time in hours and minutes, and press Y E S . Move from number to number by pressing pressing #. or If you select the 12-hour clock, you can alternate between am and pm by % #. Automatic Time Zone With the Automatic Time Zone function, you will be asked whether to update the clock when you enter a new time zone. You can choose to turn the function off, if you like.

To turn the Automatic Time Zone off 1. Scroll to Settings, Y E S , Time and Date, Y E S , Auto Time Zone, Y E S . 2. Select Off. Note! This service depends on the network.

Date When the phone is in standby mode, you can slide the volume key upwards or downwards to see today's date in the Status menu. 44 Personalizing Your Phone AB 1. Scroll to Settings, Y E S , Display, Y E S , User Greeting, Y E S . To set the date format 2. Select the date format you want.

To set the date 1. Scroll to Settings, Y E S , Time and Date, Y E S , Set Date, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Master Reset phone. To reset the phone 1. Scroll to Settings, Y E S , Master Reset, Y E S . 2. Enter the phone lock code (0000) and press Y E S . Personalizing Your Phone 2. Enter the year (two digits), month and day and then press Y E S . If you have chosen another date format you must enter the date differently.

You can reset the phone's settings to the way they were when you bought your The phone lock code may be another one, in case you have changed it. AB 45 1. Scroll to Settings, Y E S , Time and Date, Y E S , Date Format, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns messages consisting of up to 160 characters. at a time, you can simply send a single group SMS. Send SMS" below. The Short Message Service (SMS) allows you to send and receive text A useful feature in your T28 is that you can send text messages to a group which you have defined in your phone book. See "Groups" on page 33. Instead of calling or sending a text message to the members of that group one If your SIM card does not contain the phone number to your network service centre, you must specify the number yourself. Otherwise you cannot reply to received messages or send your own messages.

See "Enable the Phone to Note! The Short Message Service may not be available on all networks. Some network operators may only allow SMS to be sent within their own network. Enable the Phone to Send SMS If you want to send or reply to a message, you need to make sure that your network operator's Service centre number is set. Most modern SIM cards already contain this information at the time of purchase. You can obtain the service centre number from your network operator.

To activate a service centre number found in the list 1. Scroll to Messages, Y E S , Options, Y E S , Service Centres, Y E S . 2. Scroll to the number you want and press Y E S . 3.

Select Activate. If no number is found in the list, you have to set the number yourself. To enter the phone number to your service centre 1. Scroll to Messages, Y E S , Options, Y E S , Service Centres, Y E S , Add new?, Y E S . and press Y E S . 2. Enter the number, including the international (+) sign and country code 46 Sending and Receiving Text Messages (SMS) AB Sending and Receiving Text Messages (SMS) Composing a Text Message For more information on how to enter text and the letters, see "Entering Letters" on page 28. Example: · To enter an 'A', press 2 once. · To enter a 'B', quickly press 2 twice. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns · again.

· · To enter numbers, press and hold any number key. To delete letters and numbers, press the C key. You may also use the volume key as a shortcut to certain letters: · To enter a 'B', slide the volume key upwards and press 2. · To enter a 'C', slide the volume key downwards and press 2. Tip! You can choose another alphabet by pressing and holding #. To enter lower-case letters, enter the letter, for example an 'A', and then press *. An 'à' appears. Lower-case letters now appear until you press * Sending a New Text Message 1. Scroll to Messages, Y E S , Send New, Y E S . 2.

Enter your message and press Y E S . pressing 3. Enter the recipient's phone number or recall it from the phone book by 4. Press Y E S to send the message. %.

5. Sending message appears in the display followed by Message has been sent. Note! If you have turned on any of the "Set On Send" options (Message Type, Validity Period, Reply Request), you need to make these choices before entering the phone number. See "Customizing your Text Messages" on page 48. Saving the Message for Later Use memory and send it later: · If you do not want to send the message now, you can save it in the phone Press N O when you are asked to enter a phone number.

The message can now be recalled from the Unsent list in the Messages menu. To send the message later 1. Scroll to Messages, Y E S , Unsent, Y E S The message appears in the display. 2. Select the message you want to send.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T28S user guide](http://yourpdfguides.com/dref/2737984)
<http://yourpdfguides.com/dref/2737984>