



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON ??????? T630. You'll find the answers to all your questions on the SONY ERICSSON ??????? T630 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY ERICSSON ??????? T630**  
**User guide SONY ERICSSON ??????? T630**  
**Operating instructions SONY ERICSSON ??????? T630**  
**Instructions for use SONY ERICSSON ??????? T630**  
**Instruction manual SONY ERICSSON ??????? T630**

## Contents

## Sony Ericsson T630

### Getting to know your phone 4

Key functions, quick keys, entering letters and characters.

### Personalizing your phone 17

Download settings or choose from the phone.

### Calling 25

Use the Phonebook, voice control, call options.

### Messaging 45

Text, picture, chat and e-mail.

### Camera 55

Use the camera.

### Setting up WAP and e-mail 58

All you need to know about setting up WAP and e-mail.

### Using WAP 66

WAP browser, bookmarks.

### Transferring and exchanging information 69

*Bluetooth* wireless technology, synchronization.

### More features 74

Calendar, alarm clock, stopwatch, timer, games.

### Security 82

SIM card lock, phone lock.

### Troubleshooting 84

Why doesn't the phone work the way I want?

### Additional information 86

Safe and efficient use, warranty, declaration of conformity.

### Icons 93

What do the icons mean?

### Index 100

Contents 1

This is the Internet version of the user's guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)  
<http://yourpdfguides.com/dref/2738096>

**Manual abstract:**

©Sony Ericsson Mobile Communications AB, 2003 Publication number: EN/LZT 108 6685 R1A Please read the Guidelines for Safe and Efficient Use and the Limited Warranty chapters before you use your mobile phone. The BLUETOOTH trademarks are owned by Bluetooth SIG, Inc. T9TM Text Input is a trademark or a registered trademark of Tegic Communications. T9TM Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat.

No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No.

51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries/ regions.

End-user license agreement for Sun™ Java™ J2METM. Please note: Some of the services in this manual are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. 2 Contents This is the Internet version of the user's guide. © Print only for private use.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part. 2. Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries/regions.

Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Irak, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to anyone on the U.S.

Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. 3. Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.

2277013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable. Part of the software in this product is copyright © SyncML initiative Ltd. (1999-2002). All rights reserved. Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. Contents 3 This is the Internet version of the user's guide. © Print only for private use. Getting to know your phone About this user's guide The "Getting to know your phone" chapter gives a quick overview of the main functions of the phone, shortcuts and general information.

More information and downloads are available at [www.SonyEricsson.com](http://www.SonyEricsson.com) or [wap.SonyEricsson.com](http://wap.SonyEricsson.com). Available services Some services and functions described in this user's guide are network or subscription-dependent, which means that all menus may not be available in your phone. This symbol indicates that a service or function is network or subscriptiondependent. Please consult your network operator for more information about your subscription. Assembly Before you can use your phone you need to: · Insert the SIM card. · Attach and charge the battery.

See "SIM card and battery information" on page 5. Note: Always turn off the phone and detach the charger before you insert or remove a SIM card. The SIM card When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your Phonebook information, among other things. Note: Make sure that your information is saved to the SIM card before you remove it from another phone.

For example, Phonebook entries may have been saved in the phone memory. 4 Getting to know your phone This is the Internet version of the user's guide. © Print only for private use. SIM card and battery information It may take up to 30 minutes before an icon appears when charging. Insert the SIM card. Slide the silvery holder over the SIM card to lock it in place. Place the battery on the back of the phone with the connectors facing each other. Place the back cover as shown in the picture and slide it into place. Connect the charger to the phone at the flash symbol. The flash symbol on the charger plug must face upwards. It may take up to 30 minutes before the battery charging icon appears in the display. Wait approximately 4 hours or until the icon indicates that the battery is fully charged. If you do not see the battery icon after this time, press any key or the joystick to activate the display. Remove the charger by tilting the plug upwards. Note: You have to insert the SIM card and charge the battery before you can use the phone.

1. 2. 3. 4. 5. 6. 7. Getting to know your phone 5 This is the Internet version of the user's guide. © Print only for private use. Turning the phone on/on/off If your PIN starts with the same digits as an emergency number, for example 112, the digits are not hidden with an \* when you enter them. This is so that you can see and call an emergency number without entering a PIN. See "Making emergency calls" on page 26. Note: If you enter the wrong PIN three times in a row, the SIM card is blocked and the message PIN blocked appears. To unblock it, you need to enter your PUK (Personal Unblocking Key). Your PUK is provided by your network operator.

To turn off the phone Press and hold the on/off button at the top of the phone. To turn on the phone Press the on/off button on the top of the phone. · Enter your PIN (Personal Identity Number), if you have one for your SIM card. Your PIN is provided by your network operator. If you make a mistake while entering your PIN, delete the wrong number by pressing .

6 Getting to know your phone This is the Internet version of the user's guide. © Print only for private use. Navigating the menus The main menus are shown as icons on the desktop. To go to the desktop, press the joystick. Example To set an alarm 1. Use the joystick to scroll to Organizer, and press the left key to select it. 2. Use the joystick to scroll down to Alarms, and press the left key to select this function. Press the left key again to select Alarm.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)  
<http://yourpdfguides.com/dref/2738096>

Enter the time and press the left key to save your entry. Throughout this user's guide instructions such as those above will be given in a shorter form, as follows: To set an alarm 1. Scroll to Organizer, Alarms, Alarm. 2. Enter the time, Save. To make and receive calls from standby · Enter the area code and phone number, press Call. · Press End call to end the call. · When the phone rings, press Yes to answer the call. Press to go to the desktop. Move up, down, left, right through menus.

Press to select highlighted items. Desktop Press to go back one level in the menus. Press and hold to return to standby. Press to select the options shown above these keys in the display. Getting to know your phone 7 This is the Internet version of the user's guide.

© Print only for private use. Key functions Press once to activate camera function. Press again to take a picture. Volume keys increase/decrease the earpiece volume during a call. Scroll through menus, lists and text.

Enter the Status menu in standby. Press twice to reject an incoming call. Press once to turn off the ring signal when receiving a call. Press to select the options that appear in the display immediately above these keys. Press once to go back one level in the menus. Press and hold to return to standby. Enter \*. Shift between lower/ upper case. 1-9, 0 Infrared port. Press and hold to switch the phone on or off.

Press to go directly to the Internet. Move through the menus, lists and texts. Delete numbers, letters or an item from a list. Press and hold to turn off the microphone (during calls) or turn off sound. Enter digits, 0-9, and letters. Press and hold to enter the international prefix +. Enter # or a space. 8 Getting to know your phone This is the Internet version of the user's guide. © Print only for private use. Quick keys Useful key combinations are described below.

To... When in standby: To..

. When in standby: reach a phone number at press the position number a specific position. and speed dial press any of the number keys and Call make an emergency call enter the emergency number and press Call enter Call contact enter Internet services voice dial press press and hold a volume key or say your magic word press Calls press and hold press and hold press , or press a volume key once press and hold write new message enter the main menu enter the menu to see today's date, the profile in use and the model name of the phone change the language to Automatic change the language to English reject a call press press or press the centre of the joystick press a volume key once enter Call list call your voice mail enter the + sign turn off the ring signal when receiving a call set the phone to silent press press press No 8888 0000 reach a contact beginning press and hold any of with a specific letter the keys - Getting to know your phone 9 This is the Internet version of the user's guide. © Print only for private use. To.

.. During a call: put a call on hold retrieve a call turn off the microphone enter a quick options menu To... press Hold press Retrieve press and hold press Joystick To... When entering letters using multitap text input: shift between capital and lower-case letters enter numbers enter a space press , then the letter press and hold any of the number keys press When in the menus: move through menus or lists delete an item go back to standby press (and hold) a volume key or use the joystick press when in lists press and hold When entering letters using multitap text input: delete letters and numbers press shift between multitap press and hold or T9 Text input methods shift between input languages (including character or numeric) To..

. press and hold To... When entering letters using T9 Text Input: reach the second letter or press and hold the character of a key volume key and press any of the number keys reach the third letter or character of a key press and hold the volume key and press any of the number keys view alternative words accept a word and add a space enter a full stop press press press or 10 Getting to know your phone This is the Internet version of the user's guide. © Print only dresses, you enter letters using multitap text input. You press each key as many times as needed to show the letter you want. In the following example, we are going to write a name in the Phonebook. To enter letters using multitap text input 1. Scroll to Phonebook, Add contact.

2. Press Add and then the appropriate key, , or , repeatedly until the character you want appears in the display. See the table below: Press... to get... , - ? ! ' @ ; / ( ) 1 ABCÄÄÈàÇ2 DEFèÉ3 GHİİ4 JKL5 MNOÑÖØö6 PQRSß7 TUVÛü8 WXYZ9 14 Getting to know your phone This is the Internet version of the user's guide.

© Print only for private use. Press... to get... More - +0 Space ¶ for an options list to delete letters and numbers to shift between capital and lower-case letters press and hold to enter numbers T9TM Text Input You can use T9TM Text Input when writing, for example, text messages and e-mail. The T9TM Text Input method uses a built-in dictionary that recognizes the most commonly used word for each sequence of key presses. This way, you press each key only once, even if the letter you want is not the first letter on the key.

To shift from multitap to T9 text input method Press and hold . To enter letters using T9TM Text Input 1. Scroll to Messaging, Text, Write new. 2. For example, if you want to write the word "Jane", press , , . 3. If the word shown is the one you want: · Press to accept and add a space. (To accept a word without adding a space, press .) If the word shown is not the one you want: or repeatedly to view alternative · Press words (candidates). Accept a word and add a space by pressing .

Example: · To enter an 'A', press once. · To enter a 'B', quickly press twice. · To shift between capital and lower-case letters, press , then enter the letter. Tip: You can also use the volume keys as a shortcut to certain letters: To enter a 'B', press and hold the volume key and press . To enter a 'C', press and hold the volume key and press .

Getting to know your phone 15 This is the Internet version of the user's guide. © Print only for private use. If you do not find the word you want by pressing or : · Press More to go to a list of options. · Select Spell word. · Press and hold to delete the entire word, or delete one letter at a time by pressing repeatedly. · Write the new word using multitap text input and press Insert. The word is added to the dictionary. The next time you enter the word, it appears as one of the alternative words. 4. Continue writing your message.



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON ??????? T630 user guide](#)

<http://yourpdfguides.com/dref/2738096>

See "Sending text messages" on page 46. Press to enter a full stop. To enter other punctuation marks, press and then or repeatedly. Accept by pressing . Press and hold to select an input language.

..... The list of options If you press More when writing a text message, you enter a list of options. The list may contain some or all of the following options: Add symbol Symbols and punctuation marks such as ? and , are shown. Move between the symbols by using the joystick. Insert item Pictures, melodies and sounds. Spell word Change the suggested word by using multitap text input. Text format Change style, size and alignment. Input language Change input language. Input method Change input method. Word suggestions Select to show a list of suggested words. My words A list of words you have added to the dictionary.

Help. 16 Getting to know your phone This is the Internet version of the user's guide. © Print only for private use. Personalizing your phone You can adjust the phone settings to suit your own requirements. Note: If you change a setting which is included in a profile, the active profile is also changed.

See "Profiles" on page 24. Themes You can change the appearance of the display, for example, the colours and background picture, by using themes. Your phone comes with some pre-set themes. You cannot delete these, but you can create new themes and download them to your phone. For more information, visit [www.SonyEricsson.com](http://www.SonyEricsson.com).

[www.SonyEricsson.com](http://www.SonyEricsson.com) or [wap.SonyEricsson.com](http://wap.SonyEricsson.com). To download a theme 1. Scroll to Pictures & sounds, More themes. 2. Select a link. 1. 2.

3. 4. To send a theme You can exchange themes via IR, Bluetooth wireless technology, picture message or e-mail. Please note that you are not allowed to exchange copyright-protected material. For more information on sending themes in messages, see "Messaging" on page 45. Scroll to Pictures & sounds, Themes. Select a theme, press More. Select Send. Select a transfer method. To receive and save a theme 1.

From standby, press More and select Turn on Bluetooth or Turn on infrared. 2. When you receive the theme, Incoming item, Continue? appears. Press Yes or No. Pictures Your phone comes with a number of pictures.

You can: · Download more pictures to your phone. · Have a picture as wallpaper when in standby mode. Personalizing your phone 17 This is the Internet version of the user's guide. © Print only for private use. · Assign a picture to a contact in the Phonebook.

When that person calls, the picture appears in the display (provided your subscription supports the Calling Line Identification service). See "To add a picture to a phonebook contact" on page 28. · Insert a picture in a text message. All pictures are saved in My pictures, in the Pictures & sounds menu. You can also save animations in your phone. These are handled like pictures. Handling pictures You can add, edit, or delete pictures in My pictures. The number of pictures that can be saved depends on the size of the pictures. File types supported are GIF, JPEG and WBMP. The pictures are shown in thumbnail view.

To get a full view, press View. To view your pictures Scroll to Pictures & sounds, My pictures. To download a picture Scroll to Pictures & sounds, More pictures. To turn wallpaper on or off Scroll to Settings, Display, Wallpaper, Activate. To set a picture as wallpaper 1. Scroll to Settings, Display, Wallpaper, Set picture. 2. Select a picture. Tip: You can select Wallpaper by pressing More when viewing pictures in My pictures. To edit and save a picture Scroll to Pictures & sounds, My pictures.

Scroll to the picture you want, More. Scroll to Edit. You can now start to edit the picture. Press More, select Save picture. The picture is saved in My pictures. Note: To edit pictures taken with the camera, you must select 120x160 as picture size. To draw a picture 1. Scroll to Pictures & sounds, Picture editor. 2. Select a type.

3. Select Tool and choose the tool you want to work with. 1. 2. 3. 4. 18 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. When editing or drawing a picture: Press..

. to... More move the cursor up and left. move the cursor up. move the cursor up and right. move the cursor left. activate the current drawing tool. move the cursor right.

move the cursor down and left. move the cursor down. move the cursor down and right. view an options menu. press and hold to exit the picture editor. undo the last action. select tool. select a colour. Exchanging pictures You can exchange pictures via IR, Bluetooth wireless technology, picture message or e-mail. Please note that you are not allowed to exchange copyright-protected material.

For more information on sending pictures in messages, see "Messaging" on page 45. Save the e-mail address of a WAP album in your Phonebook and you can save pictures in that album if you send the pictures as attachments. To send a picture 1. Scroll to Pictures & sounds, My pictures. Scroll to the picture you want, More. 2. Select Send. 3. Select a transfer method. If you use infrared make sure that the infrared ports are facing each other.

To receive and save a picture 1. From standby, press More and select Turn on Bluetooth or Turn on infrared. 2. When you receive the picture, Incoming item, Continue? appears. Press Yes or No. Personalizing your phone 19 This is the Internet version of the user's guide. © Print only for private use. When you receive a picture in a text message or a picture message, a new message appears in your Inbox. To save the picture in My pictures, highlight the picture by moving the joystick to select it and press Save. Screen saver The phone has a screen saver, which is activated automatically when the phone has been in idle mode for a few seconds.

After a few more seconds, the screen saver changes to sleep mode to save power. To turn the screen saver On or Off, scroll to Settings, Display, Screen saver, Activate. To use a picture as the screen saver You select a picture saved in the phone and use it as the screen saver. 1. Scroll to Settings, Display, Screen saver, Set picture.

2. Scroll to and select the picture you want to use as the screen saver. 3. Press Yes to accept. Ring signals and melodies Your phone comes with a number of ring signals and melodies.

You can edit your own ring signals and send them to a friend in a text message. It is also possible to exchange melodies via WAP, Bluetooth wireless technology, IR or cable. Please note that you are not allowed to exchange copyright-protected material. You can also download ring signals to your phone. To select a ring signal Scroll to Settings, Sounds and alerts, Ring signal. To download a ring signal 1. Scroll to Pictures & sounds, More sounds. 2. Select a link. 1.

2. 3. · To set the ring signal volume Scroll to Settings, Sounds and alerts, Ring volume.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2738096)

[ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)

<http://yourpdfguides.com/dref/2738096>

Press or to decrease or increase the volume. Press Save to save the setting. To turn the ring signal on or off, press and hold from standby. All signals except the alarm are turned off. 20 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. To compose a ring signal or melody 1.

Scroll to Pictures & sounds, Music DJ. 2. Choose to insert a selection of pre-recorded music blocks. You can choose from four different selections. 3. Copy and paste these blocks to build up your melody. 4. Select More to play the melody and view other options. Note: To edit your own melody, scroll to Pictures & sounds, My sounds, select the melody and press More. Select Edit.

To send a melody 1. Scroll to Pictures & sounds, My sounds. 2. Scroll to a melody, More. 3. Select Send. Select a transfer method. Note: To send a ring signal or melody in a text message, see "To insert an item in a text message" on page 46. Receiving melodies You can receive a sound or melody via IR, Bluetooth wireless technology, text, picture message, or download it via WAP. When you receive the sound or melody, press Yes to save it in My sounds.

Increasing ring You can choose a ring signal that rises in steps from the lowest volume to the highest. To turn increasing ring On Scroll to Settings, Sounds and alerts, Increasing ring. Specific ring signals for personal calls If you subscribe to the Two Line Service, you can set different ring signals for the two voice lines. Line 1 and Line 2 are displayed instead of Voice calls. If your subscription includes the Calling Line Identification (CLI) service, you can assign a personal ring signal to up to ten callers. Personalizing your phone 21 This is the Internet version of the user's guide. © Print only for private use. 1. 2. 3. 4. To set a specific ring signal for a caller Scroll to Phonebook, Personal rings, New contact. Enter the first letters of the contact, Ok. Select a contact. Select a ring signal.

Sound and alerts You can choose to be notified of an incoming call by the buzzing of the vibrating alert. You can set the phone's vibrating alert to one of the following: · On all the time. · On if silent on when the ring volume is turned off or when you have set the phone to silent. · Off all the time. Menu language Most SIM cards automatically set the menu language to the language of the country where you bought your SIM card.

If this is not the case, the preset language is English. To change the menu language 1. Scroll to Settings, Language, Menu. 2. Select a language. Display light The display light can be set to automatic or on. In automatic mode, the display light is turned off a few seconds after you last press a key. · To set the display light, scroll to Settings, Display, Light. · To set the display contrast, scroll to Settings, Display, Contrast. Time settings The time is always displayed in standby.

· To set the time, scroll to Settings, Time and date, Set time. To set the vibrating alert 1. Scroll to Settings, Sounds and alerts, Vibrating alert. 2. Select the setting you want. From the Settings, Sounds and alerts menu, you can also select Message alert, Key sound and turn on the Minute minder. If you turn on the minute minder, you hear a beep once every minute during a call. 22 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. You can choose a 12-hour clock or a 24-hour clock.

· To set the time format, scroll to Settings, Time and date, Time format. Date When the phone is in standby mode, you can press a volume key up or down to see today's date in the Status menu. You can set the date and date format in the Settings, Time and date menu. Advanced time settings Under Advanced in the Settings, Time and date menu, you can set time zone and daylight saving time. By changing these you also change the time.

When your phone changes network, and the time sent out from the operator deviates from the time in your phone, you are asked whether you want to update the time if you have turned on Auto time zone. If you press Yes, the time is updated automatically. Answering mode When using a portable handsfree kit, you can choose to answer a call by pressing any key (except the No key) or set the phone to answer the call automatically. · To select answering mode, scroll to Settings, Handsfree, Answering mode. Start-up picture When you turn your phone on or off, the Sony Ericsson start-up picture appears in the display.

Your operator's own picture or a picture selected by you may be shown instead. To select a start-up picture 1. Scroll to Settings, Display, Start-up picture. 2. Select My picture. My phone numbers You can check your own phone number(s). · To check your phone number, scroll to Phonebook, Special numbers, My numbers. If your number is not saved on your SIM card, you can enter it yourself. Personalizing your phone 23 This is the Internet version of the user's guide. © Print only for private use.

Keypad lock You can lock the keypad to avoid dialling a number by accident. Note: Calls to the international emergency number 112 can still be made, even when the keypad is locked. Automatic keylock From standby, automatic keylock means the keypad is locked a short while after you last press a key. · To lock the keypad manually, press More in standby, and select \*Lock keys. You can still answer an incoming call and the keypad locks again after it. The keypad remains locked until you unlock it manually. · To unlock the keypad, press Unlock and then Profiles Your phone has a number of preset profiles which are set to suit a certain environment. You can rename, change and add accessories to these profiles. For example, when you go to a meeting, you can simply choose the Meeting profile and a number of settings, such as the ring signal, is turned off.

· To select a profile, scroll to Settings, Profiles, Select profile. To change a profile setting Scroll to Settings, Profiles, Edit profile. Select a setting. Change the profile settings. To rename a profile, scroll to Settings, Profiles, Edit profile, Profile name. 1. 2. 3. · You can reset all profile settings to the way they were set when you bought your phone. · To reset all profiles, scroll to Settings, Profiles, Reset profiles.

24 Personalizing your phone This is the Internet version of the user's guide. © Print only for private use. Automatic activation Some profiles, for example In car, are automatically activated when used with a specific accessory. When disconnected, the profile is changed back. Master reset If Reset settings is selected, some settings in the phone will be lost. If you also want to delete all contacts, messages and other personal data, such as games, music etc. select Reset all instead. Note: If you select Reset all, content such as melodies and pictures that you have downloaded, received or edited is also deleted.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2738096)

[ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)

<http://yourpdfguides.com/dref/2738096>

To reset the phone 1. Scroll to Settings, Master reset.

2. Select Reset settings or Reset all. Enter the phone lock code (0000 or the new code if you have changed it) and press Ok. Calling Before you can make or receive any calls, you must turn on the phone and be within range of a network. See "Turning the phone on" on page 6. Making calls 1. Enter the area code and the phone number. 2. Press Call to make the call. 3.

Press End call to end the call. To change the earpiece volume during a call Use the volume keys on the side of the phone to increase or decrease the earpiece volume during a call. To turn off the microphone during a call 1. Press and hold until the display shows Muted. 2.

Press and hold again to resume the conversation. Note: The microphone must be turned on to change the earpiece volume during a call. Calling 25 This is the Internet version of the user's guide. © Print only for private use. Automatic re-dialling If the connection of the call failed and the display shows Retry?, press Yes.

The phone re-dials the number (up to ten times): · Until the call is connected. · Until you press a key or receive a call. Note: Do not hold the phone to your ear while waiting. When the call is connected, the phone gives out a loud signal. Automatic re-dialling is not available for fax and data calls. Making international calls 1. Press and hold until a + sign appears in the display. The + replaces the international prefix number of the country from which you are calling. 2. Enter the country code, area code (without the leading zero) and phone number, Call.

Making emergency calls · Enter 112 (the international emergency number), Call. Your phone supports the international emergency numbers, 112, 911 and 08.

This means that these numbers can normally be used to make an emergency call in any country, with or without a SIM card inserted, if a GSM network is within range. Note: Some network operators may require that a SIM card is inserted, and in some cases that the PIN has been entered as well. In some countries, other emergency numbers may also be promoted. Your operator may therefore have saved additional local emergency numbers on the SIM card. ·

To view your local emergency numbers, scroll to Phonebook, Special numbers, SOS numbers. Receiving calls When you receive a call, the phone rings and the display shows Answer? 26 Calling This is the Internet version of the user's guide. © Print only for private use. If your subscription includes the Calling Line Identification service and the caller's number is identified, the number is displayed.

If you have saved the number in the Phonebook, the name and number are displayed. If you have assigned a picture to a contact, the picture is displayed. If the number is a restricted number, the display shows Withheld. To answer a call Press Yes. To reject a call Press No.

Tip: You can also use your voice to answer or reject calls. See "Voice control" on page 32. Missed calls If you have missed a call, Missed calls:1 appears in standby, indicating the number of missed calls. To check your missed calls 1. Press Yes to display the missed calls.

2. To call a number from the list, scroll to the number, Call. Call list The numbers of the last 30 calls that you have made are saved in the call list. If your subscription includes the Calling Line Identification service and the caller's number is identified, you will also find the numbers of answered and missed calls in the call list. To call a number from the call list 1. To enter the call list, press Calls from standby. 2. Scroll to the number you want to call, Call. · To clear the call list, scroll to Calls, Options, Clear call list. · To turn the call list on or off, scroll to Calls, Options, Call listing.

Call priority service You can request a certain priority when you make a call, if your subscription supports the call priority service. The priority levels are defined by your operator and are normally within the range of 0 - 4, where 0 is the highest priority. Calling 27 This is the Internet version of the user's guide. © Print only for private use. To check or change your standard priority level 1. Scroll to Calls, Manage calls, Default priority. 2. The network sends available priority levels. 3. Select a priority level.

To change the priority for one call 1. Enter the phone number you want to call. 2. Scroll to Calls, Next call, Next incoming call. 3.

Select a priority. The number is called. Phonebook In the Phonebook you can store the information on your SIM card and on your phone. You have space for up to 510 numbers. You can save all the information needed to contact people.

You can also set how much information you want to show for your contacts. Entries saved are stored in your phone's memory, not on your SIM card. To synchronize your phonebased contact list with your PDA or PC, see "Synchronization" on page 73. To set the fields in contact information 1. Scroll to Phonebook, Options, Contact info. 2. Press Check/Uncheck to select or clear fields. 28 Calling If your Phonebook is empty, you are prompted to copy information from your SIM card. If you press No, you can add new contacts. If you press Yes, your names and numbers are copied from your SIM.

To add a contact Scroll to Phonebook, Add contact. Scroll to the field you want to fill in, Add. Enter the information, Ok. Select the next field and so on. When you have entered the information, press Save. Tip: To enter an unsaved number, press Look up when you are in a number field, and select a number in the unsaved numbers list. Pictures, personal rings and voice commands You can add a picture, personal ring signal and voice command to a contact. To add a picture to a phonebook contact Scroll to Phonebook, Pictures. Enter the first letters of the contact, Ok. Select a contact.

This takes you to My pictures. Select a picture, Yes. 1. 2. 3.

4. 5. 1. 2. 3.

4. This is the Internet version of the user's guide. © Print only for private use. · Select Personal rings to add a personal ring signal. · Select Voice commands to add a voice command. To call a contact from your contact list 1. From standby, press and hold one of the number keys 2-9 to find a contact beginning with the first letter on that key (or closest following). · For example, press and hold 5 to go to the first contact beginning with "J". To go to a contact beginning with "L" press 5 three times after you have entered the list of contacts. 2.

When the contact you want to call is highlighted, press Select. 3. Select the number you want to call. To call a contact from your SIM card 1. Scroll to Phonebook, Advanced, Call from SIM. 2. Enter the first letters of the contact, Ok. 3. Scroll to the name, Call. Updating the phonebook When needed, you can easily update or delete any contact information.

1. 2. 3. 4. 5.

6. 7. 8. To edit a contact Scroll to Phonebook, Manage contact, Edit contact.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)  
<http://yourpdfguides.com/dref/2738096>

Enter the first letters of the contact, Ok.

When the contact is highlighted, press Edit. Select Edit info. Scroll to the field you want to fill in, Edit. Enter the information, Ok. Select the next field and so on. When you have entered the information, press Save. To delete a contact Scroll to Phonebook, Manage contact, Delete contact. Then select the contact and press Delete. Tip: You can also delete a contact by pressing when the contact is highlighted. To delete all contacts To delete all contacts, scroll to Phonebook, Advanced, Delete all.

Note: Contacts that are saved on the SIM card are not deleted. Calling 29 This is the Internet version of the user's guide. © Print only for private use. Default (standard) number Each contact has a default phone number. The first phone number you link to a contact automatically becomes the default number. If you scroll to a certain contact in the Call contact list and then press Select, the default number is highlighted. To set the default number Scroll to Phonebook, Manage contact, Edit contact. Enter the first letters of the contact, Ok. Select the contact, Edit. Select Default number.

Highlight the number you want as default, press Select. Groups You can create a group of contacts. By doing so, you can send text messages to several recipients at the same time. See "Sending text messages" on page 46. To create a group of contacts 1.

Scroll to Phonebook, Manage contact, Groups, New group, Add. 2. Enter a name for the group, Ok. 3. Select New member, Add.

4. Enter the first letters of the contact, Ok. 30 Calling 5. Select the contact. 6. Select a phone number. 7. Repeat steps 3-6 to add more members. Business cards You can add your own business card to the Phonebook. · To add your own business card, scroll to Phonebook, Manage contact, My card.

Then select Add. Exchanging business cards You can exchange business cards between your phone and another similar phone, a PDA or a PC, using Bluetooth wireless technology, the infrared port, text or picture message. To send your business card 1. Scroll to Phonebook, Manage contact, My card, Send.

2. Select a transfer method. When you receive a business card via a text message, you accept the card by pressing Yes. To be able to receive a business card using the infrared port or Bluetooth wireless technology, you need to turn these functions on. 1. 2.

3. 4. This is the Internet version of the user's guide. © Print only for private use. To receive a business card 1.

From standby, press More and scroll to Turn on Bluetooth or Turn on infrared. 2. When you receive the business card, press Yes. To send a contact 1. Scroll to Phonebook, Manage contact, Send contact.

2. Enter the first letters of the contact you want to send, Ok. 3. Scroll to the contact you want to send, Send. 4. Select transfer method. To send all contacts Scroll to Phonebook, Advanced, Send all and select a transfer method. Copy names and numbers You can copy the names and numbers between your phone's memory and the SIM card. The number of phone numbers that can be saved depends on the type of SIM card. To copy names and numbers to the SIM card Scroll to Phonebook, Advanced, Copy all to SIM.

Note: Everything on the SIM card is replaced. If you insert a SIM card with saved numbers in your phone, you can call a number by selecting Phonebook, Advanced, Call from SIM. If you want to edit a name and number saved on the SIM card, you first need to copy the name and number to the phone. To copy names and numbers to the phone Scroll to Phonebook, Advanced, Copy from SIM. Tip: When you have selected a name on the SIM card in the Call from SIM menu, you can copy it to the phone by pressing More and then selecting Copy to phone. Speed dialling You can save the phone numbers that you want to reach easily in positions 1-9 on your SIM card. To call any of these phone numbers from standby Enter the position number and press Call. Calling 31 This is the Internet version of the user's guide. © Print only for private use. To change position numbers 1.

Scroll to Phonebook, Advanced, Position list. 2. Select the phone number you wish to change. 3. Select the position to which you want to move the phone number.

4. Repeat steps 2 and 3 to continue to move phone numbers. 5. When you have finished, press . Checking the memory With the Memory status function in your Phonebook, you can check how many positions you have left in your memory for the phone, SIM, e-mail and voice commands.

To check the memory Scroll to Phonebook, Advanced, Memory status. Voice control With your phone, you can use your voice to: Voice dial call someone by saying the name and number type. Re-dial the last dialled number. Answer and reject calls when using a handsfree kit. Change profile. · Record or listen to sound recordings by using voice commands. · Activate the voice control by saying a "magic word". You can save approximately 50 recorded words as voice commands in the 40 seconds available. This also depends on what is saved in the memory with other functions. When recording, make sure you are in a quiet environment.

Before voice dialling You must first turn on the voice dialling function and record your voice commands. To turn voice dialling on and record number types Scroll to Settings, Voice control, Voice dialling. Select On. Now you are going to record a voice command for each number type you use with your Phonebook contacts, for example, "home" or "mobile". Instructions appear. Press Ok. Select a number type. Lift the phone to your ear, wait for the tone and say the command that you want to record. The voice command is played back to you. 1.

2. 3. 4. 5. . . . 32 Calling This is the Internet version of the user's guide.

© Print only for private use. 6. If the recording sounds OK, press Yes to save the voice command. If not, press No and repeat step 4. 7.

Repeat steps 4 and 5 for each voice command you need. You also need to record voice commands for each contact name, for example, "John". To record a voice command for a contact name 1. Scroll to Settings, Voice control, Voice dialling, Edit names, New voice. 2. Select a contact. 3. Follow the instructions in the display. An icon appears next to a contact name that has a voice command. Caller name You can choose whether you want to hear the recorded contact name when you receive an incoming call from that contact.

· To turn the caller name On or Off, scroll to Settings, Voice control, Caller name. Voice dialling To make a call with Voice dialling 1. From standby, press and hold a volume key for one second. 2. Lift the phone to your ear, wait for the tone and say a name, for example "John". The name is played back to you. 3. If you have several numbers for that contact, after a second tone, say the number type, for example, "home". The number type is played back to you, and the call is connected. From standby, you can also initiate voice dialling, voice profiles and voice control of sound recordings by: · Pressing and holding a volume key.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2738096)

[ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)

<http://yourpdfguides.com/dref/2738096>

· Pressing the handsfree button (when using a portable handsfree or a Bluetooth headset). · Saying the magic word. See "The magic word" on page 35. Calling 33 This is the Internet version of the user's guide. © Print only for private use.

**Redialling** You can use your voice to redial the last dialled number, if you record a voice command for redialling. To turn on and record a redial command Scroll to Settings, Voice control, Voice redial. Select On. Instructions appear. Press Ok.

Lift the phone to your ear, wait for the tone and say "Redial", or another word. If the recording sounds OK, press Yes. If not, press No and repeat step 4. 1. 2. 3. 4. 5. 6. 1.

2. 3. 4. To turn on voice answering and record voice answer commands Scroll to Settings, Voice control, Voice answer. Select On. Select the accessories you want to be able to use with voice answering by pressing Check and then Save. Instructions appear. Press Ok. Lift the phone to your ear, wait for the tone and say "Answer", or another word. If the recording sounds OK, press Yes.

If not, press No and repeat step 5. Say "Busy", or another word. Press Ok. To answer a call using voice commands When the phone rings, say "Answer". The call is connected.

To reject a call using voice commands When the phone rings, say "Busy". The call is rejected. The caller is diverted to voice mail, if turned on, or hears a busy tone. To redial using a voice command 1. From standby, press and hold a volume key for one second.

2. Lift the phone to your ear, wait for the tone and say "Re-dial". The voice command is played back to you and the last dialled number is called. Voice answering You can answer or reject incoming calls by using your voice, when using a portable handsfree or a car handsfree kit. 34 Calling This is the Internet version of the user's guide. © Print only for private use. The magic word You can record a magic word and use it as a voice command to allow total handsfree access to voice control. Instead of pressing a volume key, you say the magic word and then one of your recorded voice commands. The magic word is especially suitable when using a car handsfree kit. Tip: Choose a long, unusual word or phrase which can easily be distinguished from ordinary background speech.

To turn on and record the magic word 1. Scroll to Settings, Voice control, Magic word. 2. Select On. 3. Select the accessories you want to be able to use with the magic word by pressing Check and then Save. Changing profiles If you record voice commands for your profiles, you can change profile with your voice. To turn on and record profile commands Scroll to Settings, Voice control, Voice profiles. Select On. Instructions appear. Press Ok. Select a profile. Lift the phone to your ear, wait for the tone and say the profile name. Repeat steps 4 and 5 to record voice commands for the other profiles. 1. 2. 3. 4. 5. 4.

Instructions appear. Press Ok. 5. Lift the phone to your ear, wait for the tone and say the magic word. Tip: Turn off the magic word when you no longer need total handsfree access in order to save battery power. To change a profile using voice commands 1. From standby, press and hold a volume key for one second. 2. Lift the phone to your ear, wait for the tone and say the profile command for the required profile. The profile command is played back to you and the current profile is changed.

Sound recordings Instead of using the menus, you can record voice commands to start or to listen to a recording. Calling 35 This is the Internet version of the user's guide. © Print only for private use. 1. 2. 3. 4. To turn on and record recording commands Scroll to Settings, Voice control, Sound recorder. Select On. Instructions appear.

Press Ok. Lift the phone to your ear, wait for the tone and say "Record", then press Yes. 5. Say "Play", press Yes. Editing your voice commands You can keep all your voice commands up to date by re-recording them or deleting the ones you do not use.

See the following example: To re-record a voice command 1. Scroll to Settings, Voice control, Voice profiles, Edit commands. 2. Select a voice command. 3. Select Replace voice. To listen to a recorded voice command, select Play voice. 4. Lift the phone to your ear, wait for the tone and say the command. You can also edit the voice command for a contact name in Edit contact in the Phonebook menu. Tips when recording and using voice commands If your phone cannot detect speech, one of the following might have happened: · You spoke too softly try speaking more loudly. · You held the phone too far away hold it as you do during a call. To start a recording using a voice command 1. From standby, press and hold a volume key for one second. 2.

Lift the phone to your ear, wait for the tone and say "Record". The voice command is played back to you and a tone indicates that the recording has begun. 3. To end the recording, press Stop. To listen to recordings using a voice command 1. From standby, press and hold a volume key for one second. 2. Lift the phone to your ear, wait for the tone and say "Play". The voice command is played back to you. 3.

Listen to your recordings. Press Stop to stop. 36 Calling This is the Internet version of the user's guide. © Print only for private use. · The voice command was too short it should be around one second long and more than one syllable.

· You spoke too late or too soon speak immediately after the tone. · You did not record the voice command when the handsfree was attached for voice control with a handsfree kit, record when the handsfree is attached. · You used another intonation use the same intonation as you did when recording the voice command. Voice mail If your subscription includes an answering service, callers can leave a voice mail message when you cannot answer a call. Receiving a voice mail message Depending on your network operator, you are informed that someone has left a message by a text message or by a voice mail indication. Press Yes to listen to the message. Calling your voice mail service You can easily call your voice mail service by pressing and holding , if you have saved your voice mail number in the phone. You get the number from your service provider. · To enter the number, scroll to Messaging, Options, Voice mail number. Call time and cost During a call, the duration of the call is shown in the display. If you subscribe to cost information, the call cost (or the number of call units) is displayed. You can check the duration of your last call, outgoing calls and the total time. · To check the call time, scroll to Calls, Time and cost, Call timers and select an option. To reset the call time meter, select Reset timers. You can check the cost of your last call and the total cost of your calls.

· To check the call cost, scroll to Calls, Time and cost, Call costs and select an option.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)  
<http://yourpdfguides.com/dref/2738096>

To reset the call cost meter, select Clear total cost. Calling 37 This is the Internet version of the user's guide. © Print only for private use. Note: If you subscribe to cost information, you must enter your PIN2 to clear the cost or time counter. Setting the call cost You can use the Tariff function to specify the price per call unit. If you do not specify a price per call unit, the number of call units appears. To enter the price per call unit Scroll to Calls, Time and cost, Call costs, Set tariff. Enter your PIN2, Ok. Select Change, Ok.

Enter the code for the currency you want, (for example GBP for Pounds Sterling), Ok. 5. Enter the price per call unit, Ok. To enter a decimal point, press . 1. 2. 3. 4. Credit limit for calls You can enter a total amount of money that can be used for making calls. When the amount reaches zero, no more calls can be made.

Please note that the credit limit is only an estimated value. 1. 2. 3. 4. To set a credit limit Scroll to Calls, Time and cost, Call costs, Set credit. Enter your PIN2, Ok. Select Change, Ok. Enter an amount, Ok. Diverting calls If you cannot answer incoming voice, fax or data calls, you can divert them to another number, for example your answering service.

For voice calls, you can choose between the following divert alternatives: · Divert always divert all voice calls. · When busy divert calls if you are already on the phone. · Not reachable divert calls if your phone is turned off or if you are unreachable. · No reply divert calls that you do not answer within a specified time limit (operatordependent). Note: When the Restrict calls function is on, some Divert calls options cannot be activated. 38 Calling This is the Internet version of the user's guide. © Print only for private use. 1. 2. 3.

4. To turn on a call divert Scroll to Calls, Divert calls. Select a call category and then a divert alternative. Select Activate. Enter the phone number to which you want your calls to be diverted and press Ok, or retrieve it from the Phonebook.

To turn off a call divert, select a divert option and select Cancel. Call waiting service If the call waiting service is on, you hear a beep in the earpiece if you receive a second call during an ongoing call. · To turn the call waiting service on or off, scroll to Calls, Manage calls, Call waiting. To make a second call 1. Press Hold to put the ongoing call on hold.

2. Enter the number you want to call and press Call, or retrieve a number from the Phonebook. Note: You can only put one call on hold. Receiving a second call · To answer the second call and put the ongoing call on hold, select Answer?. · To reject the second call and continue the ongoing call, select Busy. · Select Release&answer to answer the second call and to end the ongoing call. Handling two calls When you have one ongoing call and one call on hold, you can do the following: To check status 1. Scroll to Calls, Divert calls. Select a call type. Scroll to the divert you want to check.

Select Get status. 2. To check the status of all call diverts, select Check all in the Divert calls menu. More than one call You can handle more than one call simultaneously. For example, you can put an ongoing call on hold, while you make or answer a second call, and then switch between the two calls. Calling 39 This is the Internet version of the user's guide. © Print only for private use. · Select Switch calls to switch between the two calls. · Press the joystick, then select Join calls to join the two calls into a conference call. · Press the joystick, then select Transfer call, to connect the two calls.

You are disconnected from both calls. · Press End call to end the ongoing call, then press Yes to retrieve the held call. · Press End call twice to end both calls. Note: You cannot answer a third call without ending one of the first two calls. Conference calls In a conference call, you can have a joint conversation with up to five other people.

You can also put a conference on hold and make another call. Note: There may be additional charges for calls involving multiple parties. Contact your service provider for more information. Creating a conference call To create a conference call, you must first have one ongoing call and one call on hold. To join the two calls into a conference call Press the joystick and select Join calls, Yes.

To add a new participant 1. Press Hold to put the conference call on hold. 2. Call the next person you wish to include in the conference call. 3. Press the joystick and select Join calls. Repeat steps 1 to 3 to include more participants. To release a participant 1. Press the joystick and select Release part. 2.

Select the participant. To end the conference call Press End call. Having a private conversation You can have a private conversation with one of the participants and put the other participants on hold. · Press the joystick, then select Extract part to select the participant that you want to talk with. · Select Join calls to resume the conference call. 40 Calling This is the Internet version of the user's guide. © Print only for private use. Two voice lines Your phone may have two voice lines with different phone numbers. This may be useful if, for example, you want to keep business and private calls on separate lines. · To select a line, scroll to Calls, Switch to line 1.

All outgoing calls are made on this line until you change it. Incoming calls can still be received on either line. You can change the names of the lines, and have different settings for each line, for example, different ring signals. · To change the name of a line, scroll to Settings, Display, Edit line tags. Calling card calls You can use the calling card service to redirect the cost of a call to a credit card or a calling card account, instead of your normal account.

This may be useful, for example, when making long distance calls. You can save two separate calling card numbers. The numbers and the codes associated with them are protected by the code. Before making a calling card call, you need to select and activate a card. Note: You cannot use the calling card service for fax and data calls.

To turn the calling card service on or off 1. Scroll to Calls, Time and cost, Calling cards, Use calling cards. 2. Enter your phone lock code, Ok. 3. Select On or Off. To save a card number 1. Scroll to Calls, Time and cost, Calling cards, My cards. 2. Enter your phone lock code, Ok.

3. Select New card. Enter the card settings (the access number and name of the calling card server, and the verification code). You get this information from your card provider. Select which you want to send first the number that you want to call, or the verification code. Calling 41 This is the Internet version of the user's guide. © Print only for private use. To select a card 1. Scroll to Calls, Time and cost, Calling cards, My cards.



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON ??????? T630 user guide](#)

<http://yourpdfguides.com/dref/2738096>

2.

Enter your phone lock code, Ok. 3. Select a card. 4. Select Activate card.

To make a calling card call 1. Enter the phone number of the person you want to call or retrieve the number from the Phonebook. 2. Press More, select Call via call. card The access number of the calling card server is called.

During the connecting phase, you are asked to send the phone number you want to call and the verification code. 3. Press Yes when the display shows Send called number?, or wait a few seconds and the number and code are sent automatically. Restricted dialling You can use the restrict calls service to restrict outgoing and incoming calls. This may be useful, for example, when you are abroad. To use this service, you need a password which you get from your service provider. Note: If you divert incoming calls, you cannot activate some Restrict calls options. The following calls can be restricted: · All outgoing calls All outgoing. · All outgoing international calls Outgoing intl. · All outgoing international calls except to your home country Outgoing intl roam.

· All incoming calls All incoming. · All incoming calls when you are abroad (when roaming) Inc. when roam. To turn a call restriction on or off Scroll to Calls, Manage calls, Restrict calls. Select an option. Select Activate or Cancel. Enter your PIN, Ok. To turn off all call restrictions, select Cancel all. To change the PIN, select Change password. 1.

2. 3. 4. · · 42 Calling This is the Internet version of the user's guide. © Print only for private use.

Fixed dialling The fixed dialling function allows calls to be made only to certain numbers saved on the SIM card. Fixed dialling requires a SIM card that allows fixed numbers to be saved. The fixed numbers are protected by your PIN2. Note: Contact your network operator to set the fixed dialling function on. Calls to the international emergency number 112 can still be made, even when the fixed dialling function is on.

· Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456. · Numbers with question marks can be saved. For example, saving 01234567?0, allows calls to be made to numbers from 0123456700 to 0123456790. To enter a question mark, press and hold . To turn fixed dialling on or off 1. Scroll to Phonebook, Options, Fixed dialling. 2. Enter your PIN2, Ok. 3.

Select On or Off. · To save a fixed number, scroll to Phonebook, Special numbers, Fixed numbers. Select New number and enter the information. Closed user groups The Closed User Group function is a way of lowering call costs. On some networks it is cheaper to make calls within a call group. You can save ten groups. To add a group Scroll to Calls, Manage calls, Closed groups, Edit list. Scroll to New group, Add. Enter the name of the user group, Ok. Enter the index number, Ok.

You get the index number from your operator. 1. 2. 3. 4.

Calling 43 This is the Internet version of the user's guide. © Print only for private use. To activate a group 1. Scroll to Calls, Manage calls, Closed groups, Edit list. 2.

Select a group. 3. Select Activate. Calls can only be made within the selected group. · To call outside a Closed User Group, select Calls, Manage calls, Closed groups, Open calls and then select On. Accept calls With the accept calls service, you can choose to receive calls only from certain numbers. Other calls are automatically rejected by a busy tone. The phone numbers of calls you have rejected are saved in the Call List. To add numbers to the accepted callers list 1. Scroll to Calls, Manage calls, Accept calls, Accepted list.

2. Scroll to New, Add. This takes you to the Phonebook or Groups. 3. Select an entry. · To select an accept option, scroll to Calls, Manage calls, Accept calls, Accept options. Networks When you turn on the phone, it automatically selects your home network if this is within range. If it is not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming. You can select the network you want to use, or you can add a network to your list of preferred networks.

You can also change the order in which networks are selected during an automatic search. For all such options, scroll to Connectivity, GSM Networks. Tone signals You can use telephone banking services or control an answering machine by sending tone signals (also known as DTMF tones or touch tones) during a call. · To send the tones, press the number keys 0-9, or . · To clear the display after the call is finished, press .

44 Calling This is the Internet version of the user's guide. © Print only for private use. Notepad You can use the phone to make a note of a phone number during a call. When you press the number keys, the person you are talking to hears tone signals. To turn these tone signals off during the call, press the joystick and select Turn off tones.

When you end the call, the number remains in the display. You can then call the number by pressing Call. Showing or hiding your number If your subscription supports the Calling Line Identification Restriction (CLIR) service, you can hide your phone number when making a call. To show or hide your phone number

1. Enter the phone number you want to call. 2. Press More and select Call and hide ID or Call and show ID. Messaging Your phone supports various messaging services. Please contact your service provider for details of which services you can use. For more information about text, see "Entering letters" on page 14.

Text messaging Text messages can be sent to one person, several recipients or to a group of recipients that you have saved in the Phonebook. See "Groups" on page 30. Text messages can also contain pictures, animations, melodies and sounds. Before you start First make sure that the number of your service centre is set. The number is supplied by your service provider and is usually saved on the SIM card. To set the service centre number 1. Scroll to Messaging, Text, Options, Service centres. If the service centre number is saved on the SIM card, it appears in the display. 2. If there is no number in the list, select New number, Add.

3. Enter the number, including the international "+" sign and country code, Ok. Messaging 45 This is the Internet version of the user's guide. © Print only for private use. Sending text messages For information about entering letters, see "Entering letters" on page 14.

To write and send a text message 1. Scroll to Messaging, Text, Write new. 2. Write your message, press Continue and the following options appear: · Contacts send the message to a phonebook entry. · Phone number send the message to a phone number.

· SIM entries send the message to an entry on your SIM card. · Unsaved numbers send the message to a number in your unsaved list.



[You're reading an excerpt. Click here to read official SONY ERICSSON ??????? T630 user guide](http://yourpdfguides.com/dref/2738096)  
<http://yourpdfguides.com/dref/2738096>