




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON F100I. You'll find the answers to all your questions on the SONY ERICSSON F100I in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY ERICSSON F100I**  
**User guide SONY ERICSSON F100I**  
**Operating instructions SONY ERICSSON F100I**  
**Instructions for use SONY ERICSSON F100I**  
**Instruction manual SONY ERICSSON F100I**

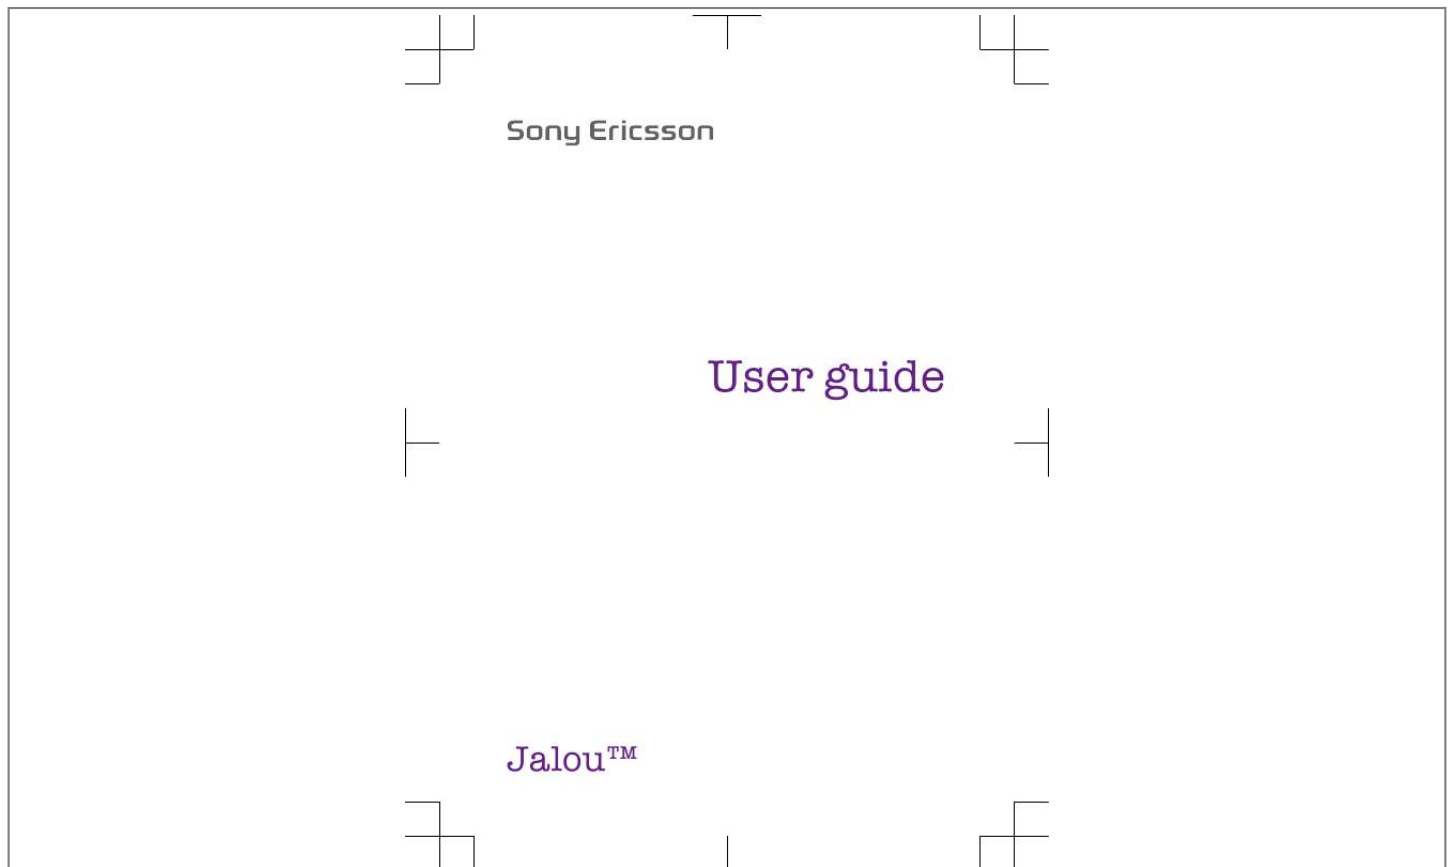

[You're reading an excerpt. Click here to read official SONY ERICSSON F100I user guide](http://yourpdfguides.com/dref/2712657)  
<http://yourpdfguides.com/dref/2712657>

### Manual abstract:

2 Slide the SIM card into its holder with the gold-coloured contacts facing down. 3 To insert the battery 1 Insert the battery with the label side up and the connectors facing each other. 2 Attach the battery cover. 4 Turning on the phone To turn on the phone 1 Press and hold down . 2 Enter your SIM card PIN (Personal Identification Number), if requested, and select OK. 3 Select a language. 4 Follow the instructions that appear. If you want to correct a mistake when you enter your . PIN, press 5 Help In addition to this User guide, an extended User guide, Feature guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Help and information are also available in your phone. To access the User guide · Select Menu > Settings > User help > User guide. To view tips and tricks · Select Menu > Settings > User help > Tips and tricks. To view information about functions · Scroll to a function and select Info, if available. In some cases, Info appears under Options. To view the phone status · Press the volume key. Phone, memory and battery information is shown. Charging the battery The phone battery is partly charged when you buy it. 6 To charge the battery 1 Connect the charger to the phone.

It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen. 2 Remove the charger by tilting the plug upwards. You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery. 7 Phone overview 1 Ear speaker 2 Screen/Mirror screen 1 3 Selection keys 4 Connector for charger, handsfree and USB cable 5 Call key 6 Activity menu key 7 Microphone 8 End key, On/off key 9 C key (Clear)/Mirror key 10 Navigation keys 3 4 5 6 7 8 9 10 2 8 11 Camera 12 External display 13 Strap hole 14 Volume keys 15 Memory card slot (under the cover) 16 Loudspeaker 12 11 13 14 15 16 9 Navigation To access the main menu · When Menu appears on the screen, press the centre selection key to select Menu. · If Menu does not appear on the screen, press , and then press the centre selection key to select Menu.

To navigate the phone menus · Press the navigation key through the menus. To end a function · Press . , , or to move 10 To return to standby · Press . To delete items · Press to delete items such as numbers, letters, pictures and sounds. Shortcuts You can use keypad shortcuts to go directly to functions from standby.

@@@2 Scroll to an option and select Edit. @@@@ · My shortcuts add your favourite functions to access them quickly. · Internet quick access to the Internet. To open the activity menu · Press . Memory card You may have to purchase a memory card separately.

11 Your phone supports a microSDTM memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices. You can move content between a memory card and the phone memory. See Handling content in the phone on page 23. To insert a memory card 3 · Remove the battery cover and insert the memory card with the gold-coloured contacts facing down.

Entering text You can use multitap text input or T9TM Text Input enter text. The T9 Text Input method uses a built-in dictionary. To change writing language · When you enter text, press and hold down . to 12 To change text input method · When you enter text, press and hold down To shift between capitals and lower-case letters · When you enter text, press . To enter numbers · When you enter text, press and hold down .

To enter full stops and commas · When you enter text, press . . To enter a symbol 1 When you enter text, select Options > Add symbol. 2 Scroll to a symbol and select Insert. To enter text using T9TM Text Input 1 Select, for example, Menu > Messaging > Write new > Message. 2 If is not displayed, press and hold down to change to T9 Text Input. 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the , , . Write the word "Jane", press whole word before looking at the suggestions. 4 Use or to view suggestions.

5 Press to accept a suggestion and add a space. To enter text using multitap text input 1 Select, for example, Menu > Messaging > Write new > Message. 2 If is displayed, press and hold down to change to multitap text input. 13 3 Press repeatedly until the desired letter appears. 4 When a word is written, press to add a space. To add words to the built-in dictionary 1 When you enter text using T9 Text Input, select Options > Spell word. 2 Write the word using multitap text input and select Insert. Calling Making and receiving calls You need to turn on your phone and be within range of a network. @@2 Press . You can call numbers from your contacts and call list.

See Contacts on page 16, and Call list on page 16. To end a call · Press . @@@@3 Press . 14 To answer a call · Press . To reject a call · Press . @@To mute the microphone during a call 1 Press and hold down . appears. 2 Press and hold down again to resume. To turn on the loudspeaker during a call · Select SpkrOn. appears.

Do not hold the phone to your ear when using the loudspeaker. @@@@In some countries, other emergency numbers may also be promoted. @@@@To call a number from the call list 1 Press and scroll to a tab. @@Information can be saved in the phone memory or on the SIM card. You can synchronise your contacts using the Sony Ericsson PC Suite. To add a phone contact 1 Select Menu > Contacts. 2 Scroll to New contact and select Add. 3 Enter the name and select OK. 4 Scroll to New number: and select Add. 5 Enter the number and select OK.

6 Select a number option. 7 Scroll between the tabs and add information to the fields. 8 Select Save. Calling contacts To call with Smart search 1 Press to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list. 16 2 Scroll to a contact or a phone number and press To turn on or off Smart search 1 Select Menu > Settings > Calls > Smart search. 2 Select an option. · Imaging You can take photos and record video clips to view, save or send. You find saved photos and video clips in Media and in File manager.

Using the camera To activate the camera · Select Menu > Camera. 17 Viewfinder and camera keys 1 5 2 3 4 7 8 9 10 6 18 1 2 3 4 5 6 7 8 9 10 Zoom indicator Zoom in or out Take photos/Record video Select still camera or video camera Brightness indicator Brightness Self-timer Night mode Camera: Shoot mode Video: Video length Camera key guide To take a photo 1 Activate the camera and press the navigation key to scroll to .



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2712657)

[ERICSSON F100I user guide](http://yourpdfguides.com/dref/2712657)

<http://yourpdfguides.com/dref/2712657>

2 Press the centre selection key to take a photo. The photo is automatically saved. 3 Press Back to return to the viewfinder to take another photo. To record a video clip 1 Activate the camera and press the navigation key to scroll . to 2 Press the centre selection key to start recording. 3 To stop recording, press the centre selection key. The video clip is automatically saved. 19 4 Press Back to return to the viewfinder to record another video clip.

To view photos 1 Activate the camera and press the navigation key to scroll to . 2 Select Options > View all photos 3 Press or to scroll to a photo. To view video clips 1 Activate the camera and press the navigation key to scroll . to 2 Select Options > View all clips. 3 Press or to scroll to a video clip and press the centre selection key. Video clips are indicated by in the upper left corner. Music You can listen to music, audio books and podcasts. Use the Media GoTM application to transfer content to and from your phone. For more information, see Transferring content to and from a computer on page 26. 20 Stereo portable handsfree Music player To play music 1 Select Menu > Media > Music.

2 Browse by category using the navigation key. 3 Scroll to a title and select Play. To stop playing music · Press the centre selection key. To fast forward and rewind · Press and hold down or To move between tracks · Press or . To change the volume · Press the volume key up or down. . 21 PlayNowTM When you select PlayNowTM you enter PlayNowTM arena, where you can download music, games, ringtones, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone. If you cannot use PlayNowTM and PlayNowTM arena, see I cannot use Internet-based services on page 35. This service is not available in all countries.

For extended functionality, you can also access the PlayNowTM arena Web shop on a computer from [www.playnow-arena.com](http://www.playnow-arena.com). @@To use PlayNowTM 1 Select Menu > PlayNowTM. @@@@To turn on the radio 1 Connect a handsfree to the phone.

@@@@@You are not allowed to exchange some copyrightprotected material. @@Tabs and icons in File 23 manager show where the content is sssage from the inbox 1 Select Menu > Messaging > Messages > Inbox. @@@@If you enter more than 160 characters, a second message is created. Your messages are sent as one concatenated message. @@2 Enter text.

To add items to the message, press , scroll and select an item. 3 Select Continue > Contacts look-up. 4 Select a recipient and select Send. If you send a message to a group, you may be charged for each member. @@To start browsing 1 Select Search. 2 Enter a Web address, a search phrase or the name of a bookmark. 3 Scroll to an item in the list and select Go to or Search. @@@@2 Turn on your phone and select Flight mode. @@@@Make sure all personal data in your phone memory is backed up before you perform an update using a PC. See Backing up and restoring on page 27.

To use Update Service using a PC · Go to [www.sonyericsson.com/updateservice](http://www.sonyericsson.com/updateservice). Alarms You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off. To set the alarm 1 Select Menu > Alarms. 2 Scroll to an alarm and select Edit. 3 Scroll to Time: and select Edit. 4 Enter a time and select OK > Save.

To set the alarm signal 1 Select Menu > Alarms. 2 Scroll to an alarm and select Edit. 3 Scroll to the tab. 4 Scroll to Alarm signal: and select Edit. 5 Find and select an alarm signal.

Select Save. To silence the alarm · When the alarm sounds, press any key. @@To add an appointment 1 Select Menu > Organiser > Calendt saved on your SIM card, you must enter the number yourself. @@@@The number is shown if it is saved on the SIM card. 2 If there is no number shown, select Edit. @@5 Select Save. @@2 Select an existing profile or create a new one. @@2 Scroll to a profile and select Options > Edit. 3 Scroll to Message server and select Edit. @@@@See To insert the SIM card on page 3. The SIM card connectors need cleaning. @@@@Enter the correct PIN or PIN2 and select Yes. PIN blocked/PIN2 blocked You have entered your PIN or PIN2 code incorrectly three times in a row. To unblock, see SIM card lock on page 32. Codes do not match Codes that you have entered do not match.

When you want to change a security code, for example your PIN, you have to confirm the new code. See SIM card lock on page 32. No netw. coverage · Your phone is in flight mode. See Flight mode on page 29. · Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are. · The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem.

Please contact the nearest Sony Ericsson service location. Emerg. calls only You are within range of a network, but you are not allowed to use it. However, in an emergency, some network 37 operators allow you to call the international emergency number 112. See Emergency calls on page 15.

PUK blocked. @@@@All rights reserved. @@Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply. Your mobile phone has the capability to download, store and forward additional content, e.

g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. @@and any use of such mark by Sony Ericsson is under license.

@@Sony is a trademark or registered trademark of Sony Corporation. @@@@Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. Microsoft, Windows, Outlook, Windows Vista, Windows Server and ActiveSync are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9TM Text Input is a trademark or a registered trademark of Tegic Communications. T9TM Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat.

No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat.

No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2712657)

[ERICSSON F100I user guide](http://yourpdfguides.com/dref/2712657)

<http://yourpdfguides.com/dref/2712657>

*This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.*

*Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone. 39 www.sonyericsson.com Sony Ericsson Mobile Communications AB SE-221 88 Lund, Sweden 1226-8067.1 .*



**[You're reading an excerpt. Click here to read official SONY  
ERICSSON F100I user guide  
http://yourpdfguides.com/dref/2712657](http://yourpdfguides.com/dref/2712657)**