



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON K205A. You'll find the answers to all your questions on the SONY ERICSSON K205A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON K205A
User guide SONY ERICSSON K205A
Operating instructions SONY ERICSSON K205A
Instructions for use SONY ERICSSON K205A
Instruction manual SONY ERICSSON K205A

Sony Ericsson

K205

This is the Internet version of the User's guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY ERICSSON K205A user guide](http://yourpdfguides.com/dref/2738048)
<http://yourpdfguides.com/dref/2738048>

Manual abstract:

© *Print only for private use. Contents Set up your phone*

.
.
. *4 Phone overview . . .*

.
.
.
. *7 Key functions*

.
.
.
. *8 Phone language*

.
.
.
. *10 Entering letters and characters*

. *10 Calling*
.
.
.

.
.
.
. *11 Contacts*

.
.
.
. *13 Text messages . . .*

. *14 Picture messages .*
.
.
.

. *15 Camera*
.
.
.

. *15 Infrared port . . .*
.
.
.

. *16 Internet*
.
.
.

. *17 Sounds & Alerts .*
.
.
.

. *18 Alarms*
.
.
.

..... 18 Settings .

.....
.....
.....

.....
.. 19 Troubleshooting ...

.....
.....

..... 21 Important information .

.....
.....
.....

. 24 Index

.....
.....
.....

..... 38 Congratulations on your purchase of this phone! For additional phone content, go to www.sonyericsson.com. @ For product support, go to www.sonyericsson.com/support. 1 This is the Internet version of the User's guide. @@@@ All rights reserved. © Sony Ericsson Mobile Communications AB, 2007 Publication number: EN/LZT 108 9616 R1A Please note: Some of the services in this User guide are not supported by all networks.

This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. Please read the Guidelines for safe and efficient use and the Limited warranty chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g.

ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. 2 This is the Internet version of the User's guide. © Print only for private use. The Liquid Identity logo is a trademark or registered trademark of Sony Ericsson Mobile Communications AB. Sony is a trademark or registered trademark of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No.

2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.

Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide. Other product and company names may be the trademarks of their respective owners.

Sony Ericsson advises users to backup their personal data information. All illustrations are for illustration only and may not accurately depict the actual phone. Any rights not expressly granted herein are reserved. User guide symbols The following instruction symbols appear in this User guide: % } This arrow points you to a page with more information. Use the navigation key to scroll and the selection key to select. Note 3 This is the Internet version of the User's guide. © Print only for private use. Set up your phone Insert the SIM card and battery 1 Gently pull the battery cover away from the phone. 2 Insert the SIM card. Make sure the SIM card is placed under the silver holders and that the contacts of the SIM card face downwards.

3 Place the battery on the back of the phone with the label side up and the connectors facing each other. 4 Replace the battery cover. If you have been using a SIM card in another phone, make sure that your information is saved to the SIM card before you remove it from that phone. 4 This is the Internet version of the User's guide. © Print only for private use. Charge the battery 2.5 h 1 Connect the battery charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.

2 Remove the battery charger by tilting it upwards. The time and date are reset when you remove the battery. 5 This is the Internet version of the User's guide. © Print only for private use. Turn on the phone 1 Press and hold down until the screen lights up.

2 Enter your PIN (Personal Identification Number) code if requested and select OK. Each digit appears as *. Press the right selection key to correct mistakes. If the screen turns dark, press any key to illuminate the screen. 3 Scroll to a language and select Save.

4 Enter the time and select Save. 5 Enter the date and select Save. If you enter the wrong PIN three times in a row, the SIM card is blocked. To unblock it % 23 PIN blocked. To turn off the phone · Press and hold down · Standby After you have turned the phone on and entered your PIN, the name of your operator appears on the screen. This is called standby you can now make and receive calls. 6 This is the Internet version of the User's guide. © Print only for private use. Phone overview 1 2 Infrared port Strength of GSM network (Five bars mean full network coverage) 6 7 Keylock Headset and battery charger connector 3,9 Function of selection key 4,10 Selection keys 5 7 Call key 8 Battery status (a green battery means fully charged) Navigation key with 11 shortcuts 12 End and On/Off key This is the Internet version of the User's guide.

© Print only for private use. Key functions To go to the main menu · From standby press to select Menu. The first menu you see is Messaging. To navigate the menus · Press the navigation key up or down to scroll. To use the selection keys · Press to select the options shown immediately above these keys on the screen. To go back one level or end a function · Press the right selection key to go back one level in the menus. · Press to end a function and go to standby. To turn the screen light on · Press any key. Shortcuts From standby, you can use the navigation key to go directly to a function: · Press to write a text or picture message. · Press to go to the camera.

8 This is the Internet version of the User's guide. © Print only for private use. · Press · Press to set the ring volume. to go to your contacts. To set the ringtone

*to silent · From standby press and select Silent.
To lock or unlock the keypad · To avoid dialling a number by accident, press and select Lock keys.*



[You're reading an excerpt. Click here to read official SONY
ERICSSON K205A user guide
http://yourpdfguides.com/dref/2738048](http://yourpdfguides.com/dref/2738048)

· To unlock the keypad, press and select **Unlock**. You can still answer a call, and call the international emergency number 112 when the keypad is locked.

Icons These icons appear on the screen to show status and new events. **Icon Description** You have received a new text or voice* message.

% 14 Text messages and % 13 Voice messages You have received a new picture message. % 15 Picture messages The phone is set to silent. % 9 To set the ringtone to silent The keypad is locked. % 9 To lock or unlock the keypad 9 This is the Internet version of the User's guide. © Print only for private use. **Icon Description** An alarm is activated. % 18 Alarms Divert calls* is activated. % 13 Diverting calls For more information, go to www.sonyericsson.com/support.

* Some items may be operator-, network- and subscription-dependent. **Phone language** To change the phone language · From standby select **Menu** } **Settings** } **Language** and select a language. **Entering letters and characters** You can enter letters and characters using either the **Multitap** or the **T9TM Text Input** method. T9 text input uses a dictionary to recognise words. To change writing method · When you enter letters, press and hold down · Common for both text input methods · Press the right selection key to delete characters. · Press and hold down to change the writing language. · Press to add a comma, full stop, question mark, etc. · Press to shift between capitals and lower case letters. to enter numbers.

· Press and hold down 10 This is the Internet version of the User's guide. © Print only for private use. To enter letters using multitap text input 1 Press repeatedly until the desired letter appears. 2 When a word is finished, press to add a space. To enter letters using T9 Text Input 1 Press each key only once, even if the letter you want is not the first letter on the key.

For example, to write the word "Jane", press . 2 Accept a word and add a space by pressing . To accept a word without adding a space, press . If the word shown is not the one you want, press or repeatedly to view alternative words. **Calling** To make a call 1 Enter the area code and phone number. 2 Press to call. Press to end the call. To answer or reject a call · Press to answer a call. · Press to reject a call. To make international calls 1 Press and hold down until a "+" sign appears. 2 Enter the country code, area code (without the leading zero), phone number and press . 11 This is the Internet version of the User's guide. © Print only for private use. To make an emergency call · Enter, for example, 112 and press selection key to correct mistakes. .

Press the right To check your missed calls 1 When Missed calls: is displayed, select **Details** to display the missed calls. 2 To call a number, scroll to the number and press . To change the ear speaker volume during a call · Press to increase the volume and to decrease the volume. To set the vibrating alert · From standby select **Menu** } **Settings** } **Sound & alerts** } **Vibration** and select an option. **Call options** During a call you can use **Options**, for example, to turn off the microphone. **Call list** Information about the last 30 calls is saved in **Call list**. indicates that you have missed a call. To call a number from the call list 1 From standby press and scroll to one of the numbers. 2 Press to call. 12 This is the Internet version of the User's guide.

© Print only for private use. **Diverting calls** If you cannot answer incoming calls, you can divert them to another number, for example, your answering service. To activate a call divert 1 From standby select **Menu** } **Calls** } **Call settings** } **Divert all calls**. 2 Scroll to one of the divert options and select **Activate**. 3 Select an option.

Voice messages If your subscription includes an answering service, callers can leave a voice message when you cannot answer a call. To call your voicemail service · From standby press and hold down if you have saved your voicemail number in the phone. To enter your voicemail number 1 From standby select **Menu** } **Contacts** } **Voicemail**. 2 Add voicemail number? appears. Select **Yes**.

3 Enter the voicemail number that you get from your service provider and select **Save**. **Contacts** You can save names and numbers in **Contacts**. To add a contact 1 From standby select **Menu** } **Contacts** } **Add contact** and select an option. 2 Enter; s guide. © Print only for private use. <20 cm (8 in) **Internet** To stop browsing · When you browse, select **Back** until you exit the Internet. **Internet options** When you browse you can select **Options**, for example, to create bookmarks. **Sounds & Alerts** Your phone comes with a number of standard and polyphonic melodies which can be used as ringtones. Do not hold the phone to your ear when using high ringtones as this can damage your hearing. To select a ringtone 1 From standby select **Menu** } **Settings** } **Sound & alerts** } **Ringtone**.

2 Select a ringtone. The sound is played when selected. To set the ring volume 1 From standby select **Menu** } **Settings** } **Sound & alerts** } **Ring volume**. 2 Select an option. The sound is played when selected. **Alarms** The alarm sounds even if the phone is set to silent or turned off. To set an alarm 1 From standby select **Menu** } **Extras** } **Alarm clock**. 2 Enter a time for the alarm and select **Save**. 3 Select if the alarm should recur or only sound on one occasion. 18 This is the Internet version of the User's guide.

© Print only for private use. To turn an alarm off when it sounds · Select **Stop** or **Snooze** to snooze for 9 minutes. **Snooze** is automatically turned on if you do not press any key. To disable an alarm · From standby select **Menu** } **Extras** } **Alarm clock** } **Alarm off**. **Settings** To select a wallpaper 1 From standby select **Menu** } **Settings** } **Wallpaper** and select an option.

2 Preview and select. To select a theme · From standby select **Menu** } **Settings** } **Theme** and select a theme. To set the date 1 From standby select **Menu** } **Settings** } **Time and date** } **Date** } **Set date**. 2 Enter the date and select **Save**. To set the time 1 From standby select **Menu** } **Settings** } **Time and date** } **Time** } **Set time**.

2 Enter the time and select **Save**. **Master reset** You can reset all settings in your phone to the way they were when you bought it. 19 This is the Internet version of the User's guide. © Print only for private use. To reset the settings you have made in the phone 1 From standby select **Menu** } **Settings** } **Advanced** } **Master reset**. 2 Select an option. If you do not want to reset user data such as contacts, messages, pictures and sounds, select **Reset settings**. The reset may take a few minutes. **Automatic keylock** Automatic keylock in standby means the keypad is locked a short while after you last pressed a key. To set the automatic keylock · From standby select **Menu** } **Settings** } **Advanced** } **Auto keylock** and select an option.



[You're reading an excerpt. Click here to read official SONY ERICSSON K205A user guide](http://yourpdfguides.com/dref/2738048)
<http://yourpdfguides.com/dref/2738048>

SIM card lock The SIM card lock protects your subscription, but not your phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card. To turn the SIM card lock on or off 1 From standby select Menu } Settings } Advanced } Security } SIM lock } Protection and select an option. 2 Enter your PIN and select OK. To edit your PIN 1 From standby select Menu } Settings } Advanced } Security } SIM lock } Change PIN. 2 Enter your PIN and select OK. 3 Enter a new four-to-eight-digit PIN and select OK. 4 Re-enter the new PIN to confirm and select OK. 20 This is the Internet version of the User's guide. © Print only for private use.

Troubleshooting Some problems require that you call your service provider, but most of the problems you can easily correct yourself. Remove the SIM card before handing your phone in for repair. Why do I have problems with memory capacity and speed? You need to restart your phone from time to time. 1 Turn off the phone and remove the battery cover % 4 Insert the SIM card and battery. 2 Remove the battery for 10 seconds and then insert it in the phone.

3 Put the battery cover on and turn on the phone. My screen freezes or flickers, what should I do? · Do a master reset % 19 Master reset. Why can't I turn on my phone? · Try charging the battery until it is fully charged. The battery icon may not appear until the phone has charged for 30 minutes. Why can't I charge my phone? · Attach the charger properly.

The power icon on the charger should face upwards. Why does my phone turn itself off? Something in your pocket or bag has probably pressed the on/off key accidentally. · Lock the keypad % 20 Automatic keylock. 21 This is the Internet version of the User's guide. © Print only for private use. Why can't I use SMS/text messages? The number to your service centre is not saved on your SIM card. You must specify the number yourself. If you cannot find your service centre number, please contact your service provider. 1 From standby select Menu } Messaging } Settings } Text message } Service centre. The number is shown if it is saved on the SIM card.

2 If there is no number, enter it, including the international "+" sign and country code. Select Save. Why can't I use Internet or picture messages? You need a phone subscription that supports data transmission (Internet) or picture messages. You also need the correct settings in your phone. To get the necessary settings 1 Either receive settings in a text message from your network operator, or use a computer to go to www.sonyericsson.com/support and request that a text message with the settings is sent to your phone. 2 When the message with the settings arrives, New settings received appears. Select Yes to install the settings. If settings already exist in your phone you can either keep or replace them.

Why are words suggested when I am writing? T9TM text input is turned on. · Turn T9TM text input off % 10 To change writing method. What is my phone lock code? A phone lock protects your phone against unauthorised use. If a different SIM card is inserted in the phone, the phone lock code has to be entered. The default phone lock code is 0000.

22 This is the Internet version of the User's guide. © Print only for private use. To turn the phone lock code on or off 1 From standby select Menu } Settings } Advanced } Security } Phone lock } Protection. 2 Select an option. 3 Enter the phone lock code and select OK.

What do the error messages mean? PIN blocked You have entered the wrong PIN code three times. Your phone is now locked. Unlock your phone with your PUK (Personal Unblocking Key) code, which is provided together with your PIN code by your network operator. 1 Enter your PUK code and select OK. 2 Enter a new four-to-eight-digit PIN and select OK. 3 Re-enter the new PIN to confirm and select OK. Insert SIM card Your SIM card is not inserted correctly or may be damaged or dirty. Try one or more of the following: · Remove the SIM card and insert it correctly. · Clean the connectors on the SIM card and phone with a soft brush, a cloth or a cotton bud moistened with any type of unflavoured colourless alcohol. · Check if the SIM card is damaged.

· Contact your network operator to get a new SIM card. @@@@@You can only make emergency calls from this location. @@@@@You can also contact our Call Centers. Use the phone number for the nearest Call Center in the list below. @@(The phone numbers below were correct at the time of going to print. @@@@@These instructions are intended for your safety. Please follow these guidelines. @@@@Warning! May explode if disposed of in fire. Do not expose your product to liquid or moisture or humidity. Do not expose your product to extremely high or low temperatures. @@@Do not expose your product to open flames or lit tobacco products. Do not drop, throw or try to bend your product. Do not paint your product. Do not attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.

@@@@@© Print only for private use. CHILDREN KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.

Power supply (Charger) Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug does not fit into the outlet, have a proper outlet installed by a qualified electrician. Use only Sony Ericsson branded original chargers intended for use with your mobile phone. Other chargers may not be designed to the same safety and performance standards. Battery We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used.

The battery should only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F). Use only Sony Ericsson branded original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous. Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used. Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed.



[You're reading an excerpt. Click here to read official SONY ERICSSON K205A user guide](http://yourpdfguides.com/dref/2738048)
<http://yourpdfguides.com/dref/2738048>

Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

29 This is the Internet version of the User's guide. © Print only for private use. Personal medical devices Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult your physician and the manufacturer of the device. Driving Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Sony Ericsson handsfree solutions intended for use with your product. Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna has been installed. Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require. Emergency calls Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use.

Check with your local service provider. Antenna This phone contains a built-in antenna. Use of antenna devices not marketed by Sony Ericsson specifically for this model could damage your mobile phone, reduce performance, and produce SAR levels above the established limits (see below). 30 This is the Internet version of the User's guide. © Print only for private use. Efficient use Hold your mobile phone as you would any other phone. Do not cover the top of the phone when it is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times. Radio frequency (RF) exposure and Specific Absorption Rate (SAR) Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields). Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.

g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements. Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while it is operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network. Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

For phones sold in the US, before a phone model is available for sale to the public, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts 31 This is the Internet version of the User's guide. © Print only for private use. in the vicinity of the phone or when used with the original Sony Ericsson accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. A separate leaflet with SAR information about this mobile phone model is included with the material accompanying this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on: www.sonyericsson.com/health.

Accessible Solutions/Special Needs For phones sold in the US, you can use your TTY terminal with your Sony Ericsson mobile phone (with the necessary accessory). For information on Accessible Solutions for individuals with special needs call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or visit the Sony Ericsson Special Needs Center at www.sonyericsson-snc.com. Disposal of old electrical and electronic equipment This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Disposing of the battery Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available. 32 This is the Internet version of the User's guide. © Print only for private use. Protection of personal information To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product.

To delete personal data, perform a master reset.



[You're reading an excerpt. Click here to read official SONY ERICSSON K205A user guide](http://yourpdfguides.com/dref/2738048)
<http://yourpdfguides.com/dref/2738048>

DELETION OF MATERIAL FROM THE PHONE MEMORY DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN IF A MASTER RESET HAS BEEN PERFORMED. If you are concerned about such potential disclosure retain your device or secure its permanent destruction. Accessories Sony Ericsson recommends use of Sony Ericsson original accessories for safe and efficient use of its products.

Use of third-party accessories may decrease performance or pose a risk to your health or safety. **LOUDNESS WARNING:** Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. Sony Ericsson does not test use of third-party audio accessories with this mobile phone. Sony Ericsson recommends using only Sony Ericsson original audio accessories. End User Licence Agreement This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile

Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software"). As user of this Device, Sony Ericsson grants you a non-exclusive, nontransferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device. You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules. 33 This is the Internet version of the User's guide.

© Print only for private use. You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect. Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The validity, construction and performance of this license shall be governed by the laws of Sweden.

The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights. Limited Warranty Sony Ericsson Mobile Communications AB, Nya Vattentorget, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product"). Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information. OUR WARRANTY Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product. WHAT WE WILL DO If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein. 34 This is the Internet version of the User's guide. © Print only for private use. Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below. Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads.

Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement. CONDITIONS 1 This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer. 2 If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson. 3 This warranty does not cover any failure of the Product due to normal tear and wear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. @@@@ @@@@ Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson. 35 This is the Internet version of the User's guide.

© Print only for private use. Minor variations in display brightness and colour may occur between the phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable. Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module. 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.



[You're reading an excerpt. Click here to read official SONY ERICSSON K205A user guide](http://yourpdfguides.com/dref/2738048)
<http://yourpdfguides.com/dref/2738048>

5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a nonSony Ericsson authorised person. 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

7 Tampering with any of the seals on the Product will void the warranty. 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract. 36 This is the Internet version of the User's guide. © Print only for private use. *GEOGRAPHICAL SCOPE OF THE WARRANTY If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center.

Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products. ** In some countries/regions additional information (such as a valid warranty card) may be requested. FCC Statement This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 37 This is the Internet version of the User's guide. © Print only for private use. Index A alarms 18 answer a call 11 answering service 13 P phone lock 23 phone overview 7 phonebook See contacts 13 picture messages 15 PIN code 20 PUK 23 B battery 4, 29 R reject a call 11 reset 19 restart 21 ring volume 18 ringtone 18 C camera 15 D display light 8 diverting calls 13 S safety guidelines 28 shortcuts 8 SIM 4, 23 standby 6 G GSM frequencies 2 I icons 9 important information 24 T T9TM Text Input 10 text messages 14 troubleshooting 21 turn on or off 6 K keypad lock 9, 20 L language 10 W wallpaper 19 warranty 34 writing methods 10 www.sonyericsson.com 1 M menu 8 missed calls 12 38 This is the Internet version of the User's guide.

© Print only for private use. .



[You're reading an excerpt. Click here to read official SONY ERICSSON K205A user guide](http://yourpdfguides.com/dref/2738048)
<http://yourpdfguides.com/dref/2738048>