



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON S312. You'll find the answers to all your questions on the SONY ERICSSON S312 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON S312
User guide SONY ERICSSON S312
Operating instructions SONY ERICSSON S312
Instructions for use SONY ERICSSON S312
Instruction manual SONY ERICSSON S312

Sony Ericsson

User guide

S312

This is the internet version of the User guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY ERICSSON S312 user guide](http://yourpdfguides.com/dref/2738573)
<http://yourpdfguides.com/dref/2738573>

Manual abstract:

@@For additional phone content, go to www.sonyericsson.com/fun. @@For product support, go to www.sonyericsson.com/support. @@@@Always turn off your phone and detach the charger and the battery before you insert or remove the SIM card. You can save contacts on the SIM card before you remove it from your phone. See Contacts on page 27. PIN code (SIM card lock) You may need a PIN (Personal Identification Number) to activate the services and functions in your phone.

Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN. @@@@It can also be used as a portable memory card with other compatible devices.

You can move content between the memory card and the phone memory.

See Entertainment on page 14 and Bluetooth™ wireless technology on page 30. To insert a memory card 1 Remove the back cover. 2 Detach the battery. 3 Insert the memory card with the gold-coloured contacts facing down. To remove a memory card 1 Remove the back cover.

2 Detach the battery. 3 Press the edge of the memory card to release and remove it. 4 This is the Internet version of the User guide. © Print only for private use. Charging the battery The phone battery is partly charged when you buy it. To charge the battery 1 Connect the charger to the phone with the power icon on the charger facing upwards. It takes approximately 3.5 hours to fully charge the battery. Press a key to view the screen and see the charging status. 2 To remove the charger, tilt the plug upwards.

It may take a few minutes before the battery icon appears on the screen. You can use your phone during charging. You can charge the battery at any time and for more or less than 3.5 hours. Interrupted charging does not damage the battery. 5 This is the Internet version of the User guide. © Print only for private use. Turning on the phone To turn on the phone 1 Press and hold down . 2 Enter your PIN, if requested. 3 Select OK to use the setup wizard.

If you want to correct a mistake when you enter your PIN, press . Standby After you have turned on the phone and entered your PIN, the name of your network operator appears. This view is called standby. Your phone is now ready for use. To turn off the phone · Press and hold down .

6 This is the Internet version of the User guide. © Print only for private use. Screen icons Network coverage Battery status Network coverage The network bars show the strength of the GSM network in your area. You should move to another location if you have problems calling and network coverage is poor. No network means you are not in range of a network.

= Good network coverage = Average network coverage Battery status = The phone battery is fully charged = The phone battery is empty When the phone is discharging, the battery power drops gradually. 7 This is the Internet version of the User guide. © Print only for private use. These icons may appear on the screen. Icon Description Missed call Handsfree connected Phone set to silent Text message received Picture message received Email message received

Predictive text input activated Voice message received Ongoing call FM radio playing Alarm activated Bluetooth function activated 8 This is the Internet version of the User guide. © Print only for private use. Phone overview 1 2 3 4 5 6 7 8 9 Ear speaker Screen Selection keys Call key Shortcuts menu key

Centre selection key Navigation key Keylock key Volume, digital zoom keys 3 4 5 6 7 8 10 11 12 13 1 2 9 10 Video recorder key 11 End key, on/off key 12 Camera key 13 C key (Clear) 14 Main camera Connector for charger, 15 handsfree and USB cable 15 14 9 This is the Internet version of the User guide. ©

Print only for private use. Keys Key Function Go to the main menu or select items Scroll between the menus and tabs Select options shown immediately above these keys on the screen Delete items pictures, sounds and contacts Shortcuts add your favourite functions to access them quickly From standby press to activate camera From standby press to activate video recorder Press to make a call after you have entered the phone number Turn on or off the phone 10 This is the Internet version of the User guide. © Print only for private use.

Navigation The main menus are shown as icons. Some submenus include tabs. To navigate the phone menus 1 From standby select Menu. 2 Use the navigation key to move through the menus. To scroll between the tabs · Press the navigation key left or right. To go back one step in the menu · Select Back. To return to standby · Press . To set the phone to silent · From standby press and hold down To call your voicemail service · From standby press and hold down To end a function · Press . . .

11 This is the Internet version of the User guide. © Print only for private use. Menu overview PlayNow™* Internet* Entertainment Camera Messaging Music player File manager** Contacts FM radio Calls** Answered Organiser Missed Music, Camera album, Pictures, Videos, Other New contact Write new, Inbox, Email, Drafts, Outbox, Sent messages, Call voicemail, Templates, Settings Homepage, Enter address, Bookmarks, History, Saved pages, InternetSettings Online services*, Games, TrackID™, Video player, Record sound All Dialed Alarm, Applications, Calendar, Tasks, Synchronisation*, Timer, Stopwatch, Light, Calculator 12 This is the Internet version of the User guide. © Print only for private use. Settings** General Profiles Time & date Phone language Shortcuts Flight mode Security Phone status Reset all Sounds & alerts Ring volume Ringtone Silent mode Vibrating alert Message alert Key sound Display Wallpaper Themes Startup screen Screen saver Brightness Calls Speed dial Divert calls Manage calls Time & cost* Show/hide no.

Handsfree Connectivity Bluetooth USB Synchronisation* Mobile networks InternetSettings * Some menus are operator-, network- and subscription-dependent. ** You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 11. 13 This is the Internet version of the User guide. © Print only for private use.

Entertainment Music player To play music 1 From standby select Menu > Music player > Options > My music > Tracks. 2 Scroll to a title and select Play. There are several ways to control the Music player: · Press to stop playing music. · Press or to move between tracks. · Press and hold down or to fast forward or rewind. · Press or to scroll through tracks in the current playlist. · Select Back to go to the main menu. · Press to exit. Playlists You can create playlists to organise your music. To create a playlist 1 From standby select Menu > Music player > Options > My music > My playlists > New playlist > Add.



[You're reading an excerpt. Click here to read official SONY ERICSSON S312 user guide](http://yourpdfguides.com/dref/2738573)
<http://yourpdfguides.com/dref/2738573>

2 Enter a name and select OK. 3 Scroll to a track and select OK. To add a track to a playlist 1 From standby select Menu > Music player > Options > My music > My playlists. 2 Scroll to a playlist and select Open > Options > Add media. 3 Scroll to a track and select OK. 14 This is the Internet version of the User guide. © Print only for private use. To remove a track from a playlist 1 From standby select Menu > Music player > Options > My music > My playlists. 2 Scroll to a playlist and select Open. 3 Scroll to a track and select Options > Delete > Yes.

PlayNow™ With PlayNow™ you can preview, buy and download music using the Internet. You can find PlayNow™ in Menu > PlayNow™. You need the correct Internet settings in your phone to use this function. See Ringtones and themes on page 32. TrackID™ TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio. You need the correct Internet settings in your phone to use this function. See Ringtones and themes on page 32. For cost information contact your service provider. To search for song information ·

When you hear a song through a loudspeaker, from standby select Menu > Entertainment > TrackID™ > Start.

· When the radio is playing, select Options > TrackID™. 15 This is the Internet version of the User guide. © Print only for private use. To transfer files in Mass storage mode Devices with removable storage DVD/CD-RW Drive (D:) DVD Drive (E:) Phone (F:) Phone memory Removable Disk (G:) Memory card 1 Connect the USB cable to the phone and the computer. 2 Phone: From standby select Menu > Settings > the Connectivity tab > USB > Mass storage. 3 Computer: Wait until the phone memory and memory card appear as external disks in Microsoft Windows Explorer. 4 Computer: On the computer desktop, double-click the My Computer icon. 5 Computer: In the My Computer window, double-click the icon representing your phone under Devices with removable storage to view the phone memory and memory stick folders. 6 Computer: Copy and paste your file, or drag and drop it, into a folder on your computer, in your phone memory or on your memory card. 16 This is the Internet version of the User guide.

© Print only for private use. Do not remove the USB cable from the phone or computer during transfer, as this may corrupt the memory card and the phone memory. You cannot view the transferred files in your phone until you have removed the USB cable from the phone. To safely disconnect the USB cable, right-click the Removable Disk icon in Windows Explorer and select Eject. Video player To play a video 1 From standby select Menu > File manager > Camera album. 2 Scroll to a video and select View. To stop playing a video · Press . To resume playing a video · Press . @@@@Your phone has a radio and the handsfree works as an antenna. To listen to the radio 1 Connect the handsfree to the phone.

2 From standby select Menu > FM radio. @@2 Select a position. @@2 Select a radio channel. To exit the FM radio 1 Select Back or press . 2 Minimise radio? appears.

Select No. To turn off the FM radio when minimised 1 Select Menu > FM radio. 2 Select Back or press . 3 Minimise radio? appears. Select No.

@@@18 This is the Internet version of the User guide. @@@@If not, they are saved in the phone memory. @@@@In some countries, other emergency numbers may also be promoted. @@24 This is the Internet version of the User guide. © Print only for private use. Messaging Text messages (SMS) You must have a valid service centre number in your phone. This is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself. To write and send a text message 1 From standby select Menu >em, follow the instructions that appear. @@@@To select an Internet profile 1 From standby select Menu > Internet > InternetSettings > Accounts.

2 Select an account. To start browsing 1 From standby select Menu > Internet. 2 Select an option. 31 This is the Internet version of the User guide. © Print only for private use. To stop browsing · When browsing, press . Ringtones and themes You can change the appearance of your screen by selecting from themes. To select a ringtone · From standby select Menu > Settings > the Sounds & alerts tab > Ringtone and select a ringtone. To select a theme · From standby select Menu > Settings > the Display tab > Themes and select a theme. File manager You can handle files saved in the phone memory or on a memory card.

You can create subfolders to move files to. To move a file in the file manager 1 From standby select Menu > File manager. 2 Scroll to a file and select Options > Move to folder. 3 Open a folder and select Options > Paste. Entering text · There are two methods you can use to enter text: multitap or predictive text input.

32 This is the Internet version of the User guide. © Print only for private use. By using predictive text input you only have to press each key once. Continue writing a word even if it appears to be wrong. The phone uses the dictionary to recognise the word when all letters are entered.

To enter text using predictive text input 1 For example, to write the word "Jane", press , , , . 2 You now have several options: · If the word shown is the one you want, press to accept and add a space. To accept a word without adding a space, press . · If the word shown is not the one you want, press or repeatedly to view alternative words. · To enter full stops and commas, press and then or repeatedly. To enter text using multitap · Press until the character you want appears. · Press to add a space. · Press to enter full stops and commas. · Press to shift between upper-case letters, lower-case letters and numbers. · Press and hold down to enter numbers.

To change text input methods · When writing the message, press and hold down To delete characters · Press . . 33 This is the Internet version of the User guide. © Print only for private use. To change writing language · When writing the message, press and hold down . Voicemail Callers can leave a voicemail message when you cannot answer. You can get your voicemail number from your network operator. To enter your voicemail number 1 From standby select Menu > Messaging > Settings > Voicemail no. 2 Scroll to the voicemail number and select OK. 3 Enter the voicemail number and select OK.

To call your voicemail service · From standby press and hold down . Flight mode In Flight mode, the network and radio transceivers are turned off to prevent disturbance to sensitive equipment. When the flight mode menu is activated, you are asked to select a mode the next time you turn on your phone: · Normal full functionality · Flight mode limited functionality You can use Music player in Flight mode.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2738573)

[ERICSSON S312 user guide](http://yourpdfguides.com/dref/2738573)

<http://yourpdfguides.com/dref/2738573>

To activate the flight mode menu · From standby select Menu > Settings > the General tab > Flight mode > Show at startup. 34 This is the Internet version of the User guide.

© Print only for private use. Locks SIM card lock Your PIN and PUK (Personal Unblocking Key) are supplied by your network operator. @@@@2 Enter your PUK and select OK. 3 Enter a new PIN and select OK. 4 Re-enter the new PIN and select OK.

@@@2 Enter your PIN and select OK. 3 Select On. @@2 Enter your PIN and select OK. 3 Enter a new PIN and select OK. @@@@2 Enter the phone lock code and select OK. 3 Select On. @@2 Enter the current code and select OK. 3 Enter a new code and select OK. 4 Re-enter the new code and select OK. @@@@2 Enter your phone lock code and select OK.

3 Select Off. 36 This is the Internet version of the User guide. © Print only for private use. Troubleshooting Some problems require you to call your network operator. For more support go to www.sonyericsson.com/support. Master reset If you experience problems with your phone, such as screen flickering, screen freezing or navigation problems, you should reset the phone. If you select Reset all, all user data such as contacts, messages, pictures and sounds are deleted.

To reset all settings · From standby select Menu > Settings > the General tab > Reset all > Cont.

> Cont. Error messages PIN blocked You have entered your PIN code incorrectly three times in a row. Your SIM is now locked. Unlock your SIM with your PUK code, which is provided together with your PIN code by your network operator. To unlock the SIM card 1 Enter your PUK code and select OK.

2 Enter a new PIN and select OK. 3 Re-enter the new PIN and select OK. Insert SIM There is no SIM card in your phone or you may have inserted it incorrectly. Try one or more of the following: · Remove the SIM card and insert it correctly. · Clean the connectors on the SIM card and phone with a soft brush, a cloth or a cotton bud.

37 This is the Internet version of the User guide. © Print only for private use. · Check if the SIM card is damaged. · Contact your network operator to get a new SIM card. Common questions I cannot turn on the phone Try charging the phone until it has finished charging. Attach the charger (make sure the power icon on the charger is facing upwards) and charge the phone for 3.5 hours. The battery icon on the screen may not appear until the phone has charged for 30 minutes. I cannot use Internet or MMS Make sure you have a phone subscription that supports data transmission, and also the correct settings in your phone.

I cannot send text messages (SMS) Make sure you have a valid service centre number in your phone.

The phone cannot be detected by other devices using Bluetooth wireless technology You have not turned the Bluetooth function on. Make sure that the visibility is set to Show phone. See To turn on the Bluetooth function on page 30. How do I change phone language? 1 From standby select Menu > Settings > the General tab > Phone language. 2 Select an option. 38 This is the Internet version of the User guide. © Print only for private use. Legal information

Declaration of conformity for S312 We, Sony Ericsson Mobile Communications AB of Nya Vattentornet SE-221 88 Lund, Sweden declare under our sole responsibility that our product Sony Ericsson type AAB-1880013-BV and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 300 328:V1.

7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.2.

I and EN 60 950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC. Lund, January 2009 Rikko Sakaguchi, Head of Creation & Development We fulfil the requirements of the R&TTE Directive (1999/5/EC). 39 This is the Internet version of the User guide. © Print only for private use. Sony Ericsson S312 GSM 900/1800 This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty.

Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved. © Sony Ericsson Mobile Communications AB, 2008 Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. @@@@2@ringtones. @@You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

@@@@@and any use of such mark by Sony Ericsson is under license. The Liquid Identity logo, PlayNow and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. PlayNow is not available or supported in all markets or regions. TrackIDTM music is powered by Gracenote Mobile. 40 This is the Internet version of the User guide. © Print only for private use. Microsoft, Windows and Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Other product and company names mentioned herein may be the trademarks of their respective owners. Note: Sony Ericsson advises users to backup their personal data information. This product is protected by certain intellectual property rights of Microsoft.

Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRMprotected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content.

When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade. Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to U.



[You're reading an excerpt. Click here to read official SONY ERICSSON S312 user guide](http://yourpdfguides.com/dref/2738573)
<http://yourpdfguides.com/dref/2738573>

S.

export control laws, including the U.S. Export Administration Act and its associated regulations and the U.S. sanctions programs administered by the U.S. Treasury Department's Office of Foreign Assets Control, and may be additionally subject to export or import regulations in other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limitation this product, including any software contained therein, may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, or an entity in, Cuba, Iraq, Iran, North Korea, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S.

has embargoed goods; or (ii) to any person or entity on the U.S. Treasury Department's list of Specially Designated Nationals or (iii) any person or entity on any other export prohibition list that may be maintained from time to time by the United States Government, including but not limited to the U.S. Commerce Department's Denied Persons List or Entity List, or the U.S. State Department's Nonproliferation Sanctions List. Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.22719(c) (2) as applicable.

41 This is the Internet version of the User guide. © Print only for private use. 1224-5884.1 printed in XXXX Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden www.sonyericsson.

com This is the Internet version of the User guide. © Print only for private use. .



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON S312 user guide](#)

<http://yourpdfguides.com/dref/2738573>