



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON T28S WORLD. You'll find the answers to all your questions on the SONY ERICSSON T28S WORLD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON T28S WORLD
User guide SONY ERICSSON T28S WORLD
Operating instructions SONY ERICSSON T28S WORLD
Instructions for use SONY ERICSSON T28S WORLD
Instruction manual SONY ERICSSON T28S WORLD

Contents at a Glance

Getting Started 3

Preparing Your Phone for Use 4
Turning Your Phone On and Off 9
Display Information and Key Functions 11
Making and Receiving Calls 14
During a Call 17

Functions and Settings 19

T28 WORLD Features 20
Using the Menus 21
Your Personal Phone Book 27
Using the Call Log 35
Your Voice Mail Service 37
Personalizing Your Phone 39
Sending and Receiving Text Messages (SMS) 46
Diverting Incoming Calls 56
Security for Your Phone and Subscription 58
Handling More than One Call Simultaneously 65
Setting Network Preferences 70
Knowing the Call Time/Call Cost 73
Using Two Voice Lines 75
Voice Control 76
Calling Card Calls 79
Sending and Receiving Fax and Data Calls 81
Extras 83
The Profile Concept 87
Accessories 90
Online Services 98

Additional Information 101

Quick Keys 102
Troubleshooting 104
Ericsson Mobile Internet 106
Technical Data 107
Glossary 108
Guidelines for Safe and Efficient Use 113
Limited Warranty 119
Declaration of Conformity 121
Index 123

Ericsson T28S WORLD
First edition, September 2005
The information in this publication is published by
Ericsson Mobile Communications AB, without any liability for errors and
changes. The information is subject to
typographical errors, omissions of
current information, movements in
programs and/or other changes. Such
changes will be incorporated into
new editions of this manual.
©Ericsson Mobile Communications AB,
1999
Publications HELZT 108 3028 R1A
Printed in Sweden
PATENT PENDING



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)
<http://yourpdfguides.com/dref/2737977>

Manual abstract:

@@ You should read the Guidelines for Safe and Efficient Use and the Limited Warranty chapters before using your mobile phone. Note! This manual is also available in multiple languages on a CD-ROM that is part of the box contents you have received. The symbol on our products signifies that they have been certified according to the EMC directive 89/336/EEC, the Telecommunications directive 91/263/EEC, and the Low Voltage directive 73/23/EEC when applicable. The products fulfil the requirements according to the following standards: Mobile Phones and Accessories in Combination: ETS 300 342-1 EMC for European digital cellular telecommunications. @@@@ your phone, you must insert the SIM card as shown below. Inserting and Removing the SIM Card 1. Remove the battery if attached. @@@@ find your PIN in the information from your operator. unauthorized use of your subscription. Preparing Your Phone for Use When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card.

The SIM card contains a computer chip SIM cards come in two sizes. One is the size of a credit card and the other is smaller. Your phone uses the smaller card. Many credit card-sized SIM cards have a perforated smaller card that you can take out easily. Before you can use 2.

Raise the edge of the SIM card and slide it out. Most SIM cards are supplied with a security code, also known as PIN Every time you turn on your phone, you are asked to enter your PIN. You will Some operators may have services that require a second PIN, your PIN2. You should be careful with your PIN, since it is your protection against AB 5 If your PIN is entered incorrectly three times in a row, the SIM card is Unblocking Key code), which you also get from your operator. The Battery Your T28 WORLD comes with a lithium battery.

The battery is not charged Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns you use the phone for the first time. Attaching the Battery to Your Phone · When to Charge the Battery phone is off. a charged one: · appears in the display · the indicator light on top of the phone starts flashing red satisfactorily. 6 Preparing Your Phone for Use when you buy your phone, but there may be enough power to switch the phone on. We recommend that you charge the battery up to three hours before Place the battery on the back of the phone and push until you hear a click. The battery that comes with your phone can be charged whenever you wish without affecting its performance. You can also charge the battery when the To remind you that you will soon need to charge the battery or replace it with an alarm signal (a short beep) sounds and the message Attention! Battery low If you have an Ericsson-approved battery, you can check the remaining talk and standby times in the Status menu by sliding the volume key upwards or downwards in standby mode. You can move downwards in the menu by pressing d. The remaining standby and talk times depend on the type of battery you use and your position in the network. Please note that these times are approximate and you may have 20% less time than is shown in the display.

Note! The phone turns itself off when the battery can no longer power it AB blocked. If this happens, you can unlock it by using your PUK (Personal Charging the Battery Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1. Make sure that the battery is attached to the phone. 2. Connect the charger to the electrical outlet. into the electrical outlet. To indicate charging: · · if the phone is switched on) the message Charging only is shown in the display · the battery meter in the display pulses continuously charging in the display. only Ericsson-approved batteries with your phone. battery when the phone is switched on. lengthens the charging time.

Preparing Your Phone for Use 3. Connect the charger to the phone as shown. The flash symbol on the plug must face upwards. Note! The electrical plug may look different depending on the electrical outlet in your country. Do not connect it to any other item than your Ericsson Travel Charger CTR-10.

It must not be disconnected from the charger when plugged the indicator on the top of the phone shows a steady red light (or green, Note! If you charge a new battery that is empty, or a battery that has not been used for a long time, it may take a while until you get an indication of An Ericsson-approved battery is indicated by Ericsson Optimized charging each time you start charging the battery when the phone is switched on. For the best charging, talk and standby times in the long run, we recommend that you use Batteries that are not Ericsson-approved are charged slowly for safety reasons. These are indicated by Charging alien battery each time you start charging the Tip! You can use the phone while the battery is being charged. However, this AB 7 When the battery is fully charged, the battery meter in the display is full and Disconnecting the Charger · Disconnect the charger from the phone by moving the plug upwards.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Removing the Battery 1.

Slide the release catch upwards. 8 Preparing Your Phone for Use 2. Lift the battery away from the phone. AB the indicator on the top of the phone shows a steady green light. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Turning your Phone on If "PIN:" Appears in the Display after you have turned on the phone: wrong number by pressing the C key. 2. Press Y E S . page 58. Phone Lock" on page 59. Network Search searches for a network.

name (in most cases abbreviated) appears in the display. This is called standby mode. You can now make and receive calls. 1. Open the flip by pressing the flip release button on the right side of the phone. 2. Press and hold the N O key until you hear a tone. Some SIM cards are protected with a PIN code. If PIN: appears in the display 1. Enter your PIN.

If you make a mistake while entering your PIN, delete the Note! If your PIN is entered incorrectly three times in a row, the SIM card is blocked. You can unblock it by using your PUK. See "The SIM Card Lock" on If Phone locked appears in the display, enter your phone lock code. See "The After you have turned on the phone (and entered your PIN), the phone When a network is found, the phone beeps three times. The indicator light on top of the phone flashes green once every second and your network operator's Note! See "Error Messages" on page 104, if you do not reach standby.

Initial Settings The first time you turn on your phone, you may want to choose the ring signal type and set the clock and date. For more information about these and other Turning Your Phone On and Off AB 9 Turning Your Phone On and Off settings, see "Personalizing Your Phone" on page 39.



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)
<http://yourpdfguides.com/dref/2737977>

Display Language Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card, (Automatic). If this is not the case, the preset language is English (US). To change the display Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns to Automatic, or English (US), in the following ways: To change the display language to Automatic 2. Press the u arrow key. 3. Enter 8888. 4. Press the d arrow key. To change the display language to English (US) 2. Press the u arrow key. 3. Enter 0000. 4.

Press the d arrow key. language, see "Display Language" on page 43. If your phone shows a language that you do not understand, you can change it 1. If not in standby mode, press and hold the N O key to go to standby. 1. If not in standby mode, press and hold the N O key to go to standby. Turning Your Phone Off · In standby mode, press and hold the N O key until you hear a tone. 10 Turning Your Phone On and Off AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns In this chapter, you will also learn about the key functions. In standby mode, the display shows the name of your operator, the time, the signal strength and the battery power. Other icons appear if you receive any messages, divert all your incoming calls, set the alarm clock and so on. Display Information The table below shows and explains each icon which may appear in standby. Icon Name Explanation Signal strength meter Battery meter Tells you the strength of the network signal. Tells you the status of the battery. You have missed an incoming call. Missed call indicator Divert indicator Accept Some/None indicator Profile indicator All incoming calls will be diverted to a defined number. No calls or only certain calls from numbers in a list are received. Another profile than Normal has been chosen. Ring signal off indicator No sound can be heard when you receive a call. Alarm indicator Silent indicator SMS indicator The alarm clock has been set and is on. All audible signals are turned off, except the alarm and timer.

You have received a text message. Voice mail indicator You have received a voice message, depending on your subscription. Indicates that voice dialing is set to Start on Open. Linng Y E S . Your phone automatically redials (up to 10 times) · · hear a ring signal. until the call is answered. When the call is successfully connected, you until you press a key or receive a call. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns ring signal. Automatic redialing is not available for fax and data calls. Note! You do not need to take the phone to your ear until you hear the Making International Calls 1.

Press and hold the 0 key until a + sign appears. you are calling. phone number. The + replaces the international prefix number of the country from which 2. Enter the country code, area code (without the leading zero) and 3. Press Y E S . Making Emergency Calls 1. Enter 112(the international emergency number, or in the Americas 911). 2. Press Y E S .

The international emergency number 112 (or 911) can normally be used in any country, with or without a SIM card inserted, if a GSM network is within range. Note! Some network operators may require that a SIM card is inserted, and in some cases that the PIN code has been entered as well. Some networks may not use the international emergency number 112 (or 911). 911 can also be used in areas that use 112 as the international emergency number, and vice versa. Receiving a Call When you receive a call, the phone rings and the display shows Answer? If your subscription includes the Calling Line Identification (CLI) service and the caller's network sends the number, you see the caller's number in the display.

If the caller's number and name are stored in the phone book, the caller's name is also shown. If the incoming call is a restricted number, the display shows Withheld. If nute Minder" on page 42. More than One Call Simultaneously Your phone is capable of handling more than one call simultaneously. You can put the current call on hold and then make or answer a second call.

You can also set up a conference call with up to five people. See "Handling More than One Call Simultaneously" on page 65. 18 During a Call AB Sending and Receiving Text Messages (SMS) Security for Your Phone and Subscription Handling More than One Call Simultaneously Setting Network Preferences Knowing the Call Time/Call Cost Sending and Receiving Fax and Data Calls The Profile Concept Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Functions and Settings T28 WORLD Features Using the Menus 20 21 27 35 37 39 46 56 58 65 70 73 75 76 79 81 83 87 90 98 Your Personal Phone Book Using the Call Log Your Voice Mail Service Personalizing Your Phone Diverting Incoming Calls Using Two Voice Lines Voice Control Calling Card Calls Extras Accessories Online Services AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Your T28 WORLD is a small new generation phone: a Dual Band and advanced technology. the name. number of settings that suit a meeting are then set automatically. WORLD in a vehicle handsfree kit and the 'In Car' profile is chosen automatically. number and so on. guide you. 20 T28 WORLD Features (GSM900/1900) phone with a lithium battery; a phone of modern design The active flip makes it possible for you to answer by just opening the flip. Or why not use the Voice Control and say 'Answer' to answer a call or 'Busy' if you wish to reject the call.

You can also call a person by simply saying The T28 WORLD has a 'Profile' feature which makes it possible for you to change a few settings by just choosing a certain Profile, since each profile includes a group of settings preset to suit a certain environment. For example, when you go to a meeting, you can just choose the 'Meeting' profile and a The Profiles are also related to intelligent accessories such as a desktop charger, a portable or vehicle handsfree. For example, you may place the T28 In the display of the T28 WORLD you can see a mixture of text and symbols, which makes it easier for you to move through the menus when you want to change a certain setting, turn on the Vibrate Mode, send a message, save a An extra feature is the numbered shortcuts, which takes you to a certain setting quickly and easily. You may also create your own favorite menu, 'My Shortcuts', by including the settings you use most often. If you should need help using the menus, the T28 WORLD is equipped with help texts to AB T28 WORLD Features Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns clock, send text messages, save important phone numbers, etc. of options. Some menus have sub-menus with additional options.



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)
<http://yourpdfguides.com/dref/2737977>

You can find all your phone functions in the menus. You use the menus every time you want to change a setting in your phone, such as the ring signal. You also use the menus to get the most out of your phone: to set the alarm. The menus are arranged in a loop, which you enter and move (scroll) through with the u and d keys or by using shortcuts.

Each menu contains a list Menu Graphics You enter the menus by pressing u or d. At the top of the display, there are icons symbolizing each menu. Besides these, there are symbols within the sub-menus indicating missed calls, help texts, voice labels etc. The table below illustrates and explains each menu icon and symbol.

Symbol	Name	Description
Phone Book menu	Messages menu	Call Info menu
Settings menu	Extras menu	Your personal phone book.

Handling of text and voice messages. Call time and call cost information. Personal settings and profiles. Games, alarm clock and other extras. Call Handling menu My Shortcuts menu Ongoing call indicator Handling of ongoing calls. A selection of your most frequently used functions. You have an ongoing call. Missed calls indicator Indicates a missed call in the Call Log, in the missed calls list and in standby. Answered call indicator Indicates an answered call in the Call Log. Indicates a dialed number in the Call Log. Indicates that a phone book entry is saved in the phone memory and the SIM memory is full. Dialed number indicator Phone memory indicator Using the Menus AB 21 Using the Menus Symbol Name Group indicator Unread SMS indicator Unchecked Voice Mail Description Indicates that a text message has not been read. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Phone book look up indicator SIM card memory indicator Voice label in car indicator Preferred network indicator Forbidden network indicator Help text indicator Lock indicator Indicates a help text. Indicates that the card lock or phone lock is on. 22 Using the Menus Indicates that a voice message has not been checked.

Indicates that you can enter the phone book by pressing u. Indicates that a phone book entry is saved in the SIM card memory. Voice label in phone Indicates that a voice label has been indicator recorded for an entry in the phone only. Indicates that voice dialing is set to Start on Open. Indicates that a voice label has been recorded for an entry in the car handsfree kit. Voice label in phone Indicates that a voice label has been and in car indicator recorded for an entry in the phone and in the car handsfree kit. Indicates that a network is preferred and can be used. Indicates that a network is forbidden and cannot be used.

Home zone indicator Indicates that you are in your home zone. Does not appear on all networks.

AB Indicates that a phone book entry is a group. Moving through the Menus There are two ways of moving through the menus: · · scrolling with u or d using shortcuts Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Press... to.

.. Scrolling by Using u or d U scroll left or up through menus or functions. D YES NO scroll right or down through menus or functions. select a menu, sub-menu or setting.

go back one level in the menu system, exit a setting or leave a setting unchanged. go back to standby mode by pressing and holding the key. delete an item from a list. C Note! For information about how to enter letters, see "Entering Letters" on page 28. Tip! Once in the menu system, you can press and hold the u or d key or slide and hold the volume key until you reach the menu or sub-menu that you want instead of pressing the u or d key repeatedly. Using Shortcuts A quicker way to move through the menus is to use the shortcuts. You simply enter the number of the menu or sub-menu to which you want to go, but you first need to enter the menus by pressing u or d. To get back to standby, you press and hold N O as normal. Tip! A quicker way to enter the Find and Call function is to press and hold d. A quicker way to enter the first sub-menu in the My Shortcuts menu is to press and hold u.

Note! Your phone may not have all the menu alternatives described in this manual since many of them are network- and subscription-dependent. Because of this, the shortcut numbers may vary between phones. How To Interpret the Instructions In the instructions in this manual we use the u and d keys to describe the functions and settings, since the shortcut numbers may vary between phones due to your subscription and network. The following instruction tells you how to set the key sound to 'Tone'. Using the Menus AB 23 To set the key sound 2. Select Tone. Interpret the instruction as follows: 2. Press Y E S to select the menu. 1. From the standby mode, use d or u to scroll to the Settings menu.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Now you are in the Settings menu. display (Settings). 3. Press Y E S to select the Sounds & Alerts sub-menu. sub-menu in the main menu Settings).

Press Y E S to select the sub-menu. 4. Use d or u to scroll to the Key Sound sub-menu. 5. Use d or u to scroll to Tone.

Press Y E S to select the Tone alternative. Now you have set the key sound to 'Tone'. To go back to standby mode, press and hold the N O key. To set the key sound 1. Press d or u to enter the menu system. 2. Press 4 to select the Settings menu. 3. Press 1 to select the Sounds & Alerts sub-menu. 4.

Press 5 to select the Key Sound sub-menu. 5. Select Tone. The name of the menu that you have chosen is shown at the top of the (You do not need to scroll with the arrow keys since this is the first This is how to interpret the same instruction as above when using shortcuts: Display Text When you move through the menu system, the display changes. The following hints can help you: · · Black text within a frame at the top indicates the menu you have chosen. Inverted text on a black layer indicates your position in the menu system. If you press Y E S you enter this menu or select this setting. · · Gray text indicates a function that is temporarily unavailable, for example due to your subscription or due to a certain setting which is not on. Text marked with a check indicates the current setting or settings selected. Text marked with a filled button indicates the current setting selected.

Note! Most sub-menus in the Call Handling menu are shown in gray text when no call is active. However, they are shown in black text during a call. 24 Using the Menus AB 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Key Sound, Y E S . My Shortcuts You can place your favorite settings in the menu My Shortcuts.

In this way, you can quickly and easily reach the settings you use most. When you buy your phone, My Shortcuts contains a few settings which you Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns My Shortcuts.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737977)

[ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)

<http://yourpdfguides.com/dref/2737977>

To add a setting to My Shortcuts 1. Scroll to My Shortcuts, Y E S , Edit Shortcuts, Y E S . 2.

Select a setting from the list by pressing * . 4. Press Y E S . 3. Enter the position number you want for your setting in this menu. If you want to add another setting, repeat steps 2 and 3. To remove a setting from My Shortcuts, repeat steps 1 and 2. 5. Press Y E S to exit the list. press and hold u.

can remove if you wish. You can also add a setting from another menu to Tip! A quicker way to enter the first sub-menu in the My Shortcuts menu is to Help texts To help you use the functions and settings of the menus, your phone includes pop-up help texts that explain the sub-menus. These help texts are set to On when you buy your phone, but you may turn them off at any time. To turn the help texts on or off 1. Scroll to Settings, Y E S , Display, Y E S , Help Functions, Y E S , Menu Help, Y E S . 2. Select On or Off. Using the Menus AB 25 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Sounds & Alerts Profiles Call Options Networks Display Language Time and Date Locks Voice Control Handsfree Master Reset Alarm Clock Timer Stopwatch Calculator Games Accessories Switch to Line 1 Next Incoming Enable Caller ID Disable Caller ID Scratchpad* Hold Call* Switch Calls* Release Active* Retrieve Call* Join Calls* Transfer Call* Extract Part* Release All* Select Profile Ring Volume Switch to Line 1 Edit Shortcuts 26 Using the Menus Find and Call Find and Send* Add Number Find and Edit Voice Labels Delete All Groups Email Addresses Calling Cards Options Memory Status Fixed Numbers Info Numbers ServiceNumbers Call Voicemail Inbox Send New Unsent Templates Sent Items Options Missed Calls Call Log Last Call Credit Total Cost Price Total Time Outgoing Time Clear Call Log Reset Counters Options Note! The default display language is English. Please note that many of the menu alternatives are network- and subscription-dependent. * Only available during a call.

The English display texts may differ from the US English texts. AB Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns You can create a personal phone book by saving phone numbers and phone numbers or names saved in your phone book. accompanying names (an entry). An easy way to make calls is by recalling the Creating a Personal Phone Book Before you start creating your personal phone book, there are a few things you need to know.

You need to learn about the memories, how to save the numbers with the international (+) sign and how to enter letters.

Phone Book Memories · · You can save phone numbers and names in: the card memory on the SIM card the phone memory Your entries are first saved in the positions on your SIM card. The actual number of memory positions available depends on your SIM card. Saving your numbers in the card memory allows you to use the numbers saved on the SIM card even when you change phones, i.e. when you insert your SIM card into another phone.

By saving your numbers in the phone memory, they are always available to you in your phone, even if you change SIM cards. The phone memory holds 99 positions in which your entries are saved when all SIM positions are used. International Numbers If you intend to use your phone both at home and abroad, it is a good idea to save all phone numbers as international phone numbers, i.e. with the (+) sign, (which automatically replaces the international dialing prefix for the country you are calling from) followed by the country code, the area code and the phone number. Your Personal Phone Book AB 27 Your Personal Phone Book To enter an international phone number Exclude the leading zero in the area code. Entering Letters You can enter letters when you use the phone book and when you compose a Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns page 46. appears in the display. Press..

. 1 2 to get... Space - ? ! , . : ; ' ' < = > () _ 1 ABCÄÄÆàÇ2 DEFèÉ3 GHIi4 JKL5 3 4 5 6 MNOÑÖØø6 7 8 9 0 PQRSß7 TUVÜù8 WXYZ9 + & @ / % \$ £ ¥ § ; : 0 # * * short message (SMS). See "Sending and Receiving Text Messages (SMS)" on Press the appropriate key, 19, 0 or #, repeatedly until the character you want Example: · · · To enter an 'A', press 2 once. To enter a 'B', quickly press 2 twice. To enter lower-case letters, enter the letter, for example an 'A', until you press * again. and then press *.

An 'à' appears. Lower-case letters now appear To enter numbers, press and hold any number key. To delete letters and numbers, press the C key. · · You may also use the volume key as a shortcut to certain letters: · To enter a 'B', slide the volume key upwards and press 2. · To enter a 'C', slide the volume key downwards and press 2.

Tip! You can choose another alphabet by pressing and holding #. 28 Your Personal Phone Book AB · Press and hold 0 to enter the + sign. Saving a Number Together with a Name Every phone number that you save gets a position number. You can save the your phone numbers. To save a number together with a name phone numbers together with a name to make it easier for you to keep track of Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1.

Scroll to Phone Book, Y E S , Add Number, Y E S . A list of numbers used but not saved appears. country code) and press Y E S . 5. You now have three options: · · number, enter a new position number and press Y E S . · a number in the phone memory. label to your phone book entry. See "Voice Control" on page 76. Ask to Save To turn the Ask to Save function on or off 2. Select On or Off.

2. Select Add New? or any of the numbers from the list by pressing Y E S . 3. Enter a phone number that you wish to save (including the (+) sign and the 4. Enter a name that you want to link with the phone number and press Y E S . To save the number in the suggested first empty position, press Y E S . To save the number in another position, press C to delete the position To save the number in the phone memory, you need to know how many positions you have got on your SIM card. You can check this in Memory Status in the Phone Book menu. If, for example, you have 200 positions on your SIM, you can enter position number 201 to save If you have turned Voice Dialing on, you are asked if you want to add a voice If you wish to be asked to save any dialed or answered number that is not already saved in your phone book, you can turn on the Ask to Save option. 1.

Scroll to Settings, Y E S , Display, Y E S , Help Functions, Y E S , Ask to Save, Y E S . Note! Your subscription must support the Calling Line Identification service.



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)
<http://yourpdfguides.com/dref/2737977>

Calling a Number Saved In the Phone Book You can either call a number by using the name saved with it or you can call the number by using the position number that it was saved in. The order of searching for names and numbers depends on the sort order you have chosen, i.e. alphabetically or by position. Your Personal Phone Book AB 29 To choose a sort order 2. Select a sort order. To call a number saved in the phone book 1. Scroll to Phone Book, Y E S , Find and Call, Y E S .

linked with the number that you want to call. Er ics No so tfo nM r ob Com ile me Co rci mm al un Use ica tio ns 3. Press Y E S . find the correct name and number. 4. Press Y E S to make the call. Tip! A quicker way to enter the Find and Call function is to press and hold d. Shortcuts to Phone Book Entries · · When in standby, you can find an entry by: entering the position number followed by # . specific letter. with the letter A (or closest following).

certain entry. 2. Enter the position number or the name (or the first few letters of the name) If the name displayed is not the one you want, press u or d until you pressing and holding one of the keys 2-9 to find an entry beginning with a For example, pressing and holding 2 takes you to the first entry beginning Once you are in the list of phone book entries you can use u or d to scroll through the positions, or enter a position number or a letter to go to a Speed Dialing You can call the phone numbers that you have saved in positions 19 in the memory by entering the position number and then pressing Y E S . Example: 1. Enter the number 3. 2. Press Y E S to make the call. Keeping the Phone Book Up to Date You may need to change the names and numbers in the phone book from time to time. You may also want to change the position number of an entry. Editing a Phone Number In the Phone Book You need to find the phone book entry that you wish to edit.

You can use either the stored position or the name. See "Calling a Number Saved In the Phone Book" on page 29. 30 Your Personal Phone Book AB 1. Scroll to Phone Book, Y E S , Options, Y E S , Sort Order, Y E S . To edit an entry 2.

Enter the position number or the name of the entry that you wish to edit. Press Y E S . find the correct name and number. If the name displayed is not the one you want, press u or d until you Er ics No so tfo nM r ob Com ile me Co rci mm al un Use ica tio ns 3. Press Y E S to select the entry.

4. Select Edit. 5. Edit the number and press Y E S . 6. Edit the name and press Y E S . 7. Edit the position number and press Y E S . Use the u or d keys to move the cursor. Use the C key to delete.

Overwrite Protection If you try to save a phone number in a position which already contains a phone number, the message Replace? appears together with the name saved in that position. You now have two options: To save the number in the selected position · Press Y E S to replace the number with the new one. To save the number in a different position 1. Press N O . 2. Enter the new position number. 3. Press Y E S to save the number in the new position. When the Card Memory Is Full When all SIM card positions are full, an icon appears next to the position number, see margin. From now on your entries are stored in the phone memory.

If all positions, including the phone memory are full, you have to delete an old number by entering a position that is already used and press Y E S . To delete an entry from the memory 1. Scroll to Phone Book, Y E S , Find and Edit, Y E S . 2. Enter the position number or the name of the number that you want to delete and press Y E S .

(This depends on the sort order, i.e. alphabetically or by position.) 3. Press Y E S .

4. Select Delete. 5. Press Y E S to confirm your choice. Your Personal Phone Book AB 1. Scroll to Phone Book, Y E S , Find and Edit, Y E S . 31 To delete all entries from the phone memory 2. The question Delete all in phone memory? appears. Delete all in phone memory? Press Y E S . yourself).

3. Enter the phone lock code (0000 or another one that you have chosen Er ics No so tfo nM r ob Com ile me Co rci mm al un Use ica tio ns All entries in the phone memory are deleted. Telephone Banking Services If you use telephone banking services, you can save the phone number of your banking service together with your personal codes, or you can save your codes only. You need to add a pause (p) between the phone number and the codes. You insert a pause by pressing and holding the * key. Usually, a # is required after each code. Sometimes a pause is required, too. Talk to your bank if you are in doubt about how to use # and pause (p). Note! It may be a risk to save your codes in the phone in case it is stolen. To save a phone number with codes 1.

Scroll to Phone Book, Y E S , Add Number, Y E S , Add new?, Y E S . character p appears in the display. 2. After entering the phone number, press and hold the * key until the pause 3. Enter the code and #.

If required, enter a pause, the next code and so on. 4. Enter the name that you want to link with the phone number and code and press Y E S . 5. Press Y E S to save.

If you want to save the number in a different position than the one suggested, see "Saving a Number Together with a Name" on page 29. To make a call with tone signal codes, proceed as described in "Calling a Number Saved In the Phone Book" on page 29. When you make the call, the phone dials the number, waits until the call is answered and then sends the code. If you insert another pause and another code, it pauses again, sends the next code and so on. To save codes only 1. Scroll to Phone Book, Y E S , Add Number, Y E S , Add new?, Y E S . so on. 2. Enter the code followed by a # and if required, a pause, another code and 3. Press Y E S .

4. Enter a name that you want to link with your codes and press Y E S . 5. Press Y E S to save. 32 Your Personal Phone Book AB 1. Scroll to Phone Book, Y E S , Delete All, Y E S . During a call, you can retrieve these codes from the phone book and send them. To send the codes during a call 1. Scroll to Phone Book, Y E S , Find and Send, Y E S . press Y E S .

3. Press Y E S to send the codes. 2. Enter the name (or first few letters) or position number of your codes and Er ics No so tfo nM r ob Com ile me Co rci mm al un Use ica tio ns Groups See "Sending and Receiving Text Messages (SMS)" on page 46. To create a new group 1.

Scroll to Phone Book, Y E S , Groups, Y E S , Add new?, Y E S . 3. Scroll to Add new?, Y E S . 2. Enter a name for the group and press Y E S .

4. Select an entry in your phone book. 5. To add the next member, press Y E S at Add new?. To add a new member to an existing group 1. Scroll to Phone Book, Y E S , Groups, Y E S . 2. Select the group that you want to edit. 3. Scroll to Edit, Y E S , Add new?, Y E S .

4. Select an entry in your phone book.



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)
<http://yourpdfguides.com/dref/2737977>

To delete a member from a group 1. Scroll to Phone Book, Y E S , Groups, Y E S . 2. Select the group that you want to edit. 3. Select Edit. 4. Scroll to the member that you want to delete and press C .

5. Press Y E S to confirm your choice. To delete a group 1. Scroll to Phone Book, Y E S , Groups, Y E S . 3.

Select Delete. 2. Select the group that you want to delete. 4. Press Y E S to confirm your choice.

The T28 WORLD allows you to create groups of phone book entries. In this way you can send a text message to several recipients at the same time. E-mail addresses You can save e-mail addresses to be used when you want to send a text message as an e-mail. See "Sending and Receiving Text Messages (SMS)" on page 46. You can save 10 e-mail addresses, each consisting of 60 characters. Your Personal Phone Book AB 33 To save an e-mail address 2. Enter an e-mail address and press Y E S . 3. Enter a name and press Y E S . Tip! The @ sign is accessed by pressing the 0 key three times.

To edit an e-mail address Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1. Scroll to Phone Book, Y E S , Email Addresses, Y E S . 2.

Select the entry that you want to edit. 3. Select Edit. 4. Edit the e-mail address and press Y E S . 5. Edit the name and press Y E S .

To delete an e-mail address 1. Scroll to Phone Book, Y E S , Email Addresses, Y E S . 2. Select the entry that you want to delete. 3.

Select Delete. 4. Press Y E S to confirm your choice. Checking the Status of the Memories The Memory Status function in your phone book lets you check how many memory positions you have left in your memories. To check the status of your different phone book memories 1.

Scroll to Phone Book, Y E S , Memory Status, Y E S . 2. Use u or d to scroll through the list. 34 Your Personal Phone Book AB 1. Scroll to Phone Book, Y E S , Email Addresses, Y E S , Add new?, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns list exceeds 30 calls, the oldest one is deleted.

The Call Log is a phone number log that saves information (time, date, phone number and name) about the last 30 incoming and outgoing calls. Once your What Calls Are Saved? The numbers that you have dialed are always saved. If your subscription includes the Calling Line Identification (CLI) service and the caller's network sends the number, you will also find the numbers (together with a name if saved in your phone book) of answered and missed calls in the Call Log. If the incoming call is a restricted number, the display shows Withheld.

You can call any of the numbers in the Call Log. The Call Log saves: If the incoming call is a number without any CLI service, Unknown is shown. Dialed numbers Answered calls Missed calls All the calls are saved together in chronological order. The last call you have made is saved in the first position. If the same number is called more than once, the latest call replaces earlier ones. If you check a call within 24 hours, the time of the call is displayed. Otherwise, the time is replaced by the date. Note! If you change SIM cards or turn the Call Log off, the list is cleared. Called numbers may remain in the SIM card memory though. To call a number from the Call Log 1.

Scroll to Call Info, Y E S , Call Log, Y E S . 2. Scroll to the number that you want to call and press Y E S . Tip! Press Y E S when the phone is in standby mode to go directly to the Call Log. Using the Call Log AB 35 Using the Call Log To delete a number from the Call Log 2.

Scroll to the number you want to delete and press C . The question Delete? appears in the display. 3. Press Y E S to delete the number. To clear the Call Log Missed calls: 1 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1.

Scroll to Call Info, Y E S , Clear Call Log, Y E S . 2. Press Y E S to clear the Call Log. To turn the Call Log on or off The question Call Log Clear? appears in the display. 1. Scroll to Call Info, Y E S , Options, Y E S , Set Call Log, Y E S . 2. Select On or Off. If you select Off the question Call Log Clear? appears in the display. 3.

Press Y E S to clear the Call Log. Missed Calls where the number 1 indicates the number of missed calls. 1. Press Y E S to display the missed calls. number you want to call. Note! You can also see the Missed Calls List in the Call Info menu. Missed calls are also saved in the Call Log. To be able to see if you have missed a call, the Call Log must be on. If you have missed a call, the message Missed Calls: 1 appears in standby mode. 2. If you wish to call a number from the Missed Calls List, press Y E S at the Showing And Hiding Your Number Some operators offer subscriptions where your phone number is normally hidden. You can choose to show or hide your number for a particular call, if Calling Line Identification Restriction service (CLIR) is supported by your subscription.

To hide your phone number for a particular call 1. Enter the phone number you wish to call. 3. Press Y E S to make the call.

2. Scroll to Call Handling, Y E S , Disable caller ID, Y E S . To show your phone number for a particular call 1. Enter the phone number you wish to call. 2. Scroll to Call Handling, Y E S , Enable caller ID, Y E S . 3. Press Y E S to make the call. 36 Using the Call Log AB 1. Scroll to Call Info, Y E S , Call Log, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Note! This service depends on your subscription and operator. different ways. If this is the case, the voice mail icon appears in the display. Message" on page 50. information provided by your network operator.

The answering service of your network allows callers to leave a voice message when you cannot answer your calls. Depending on your network operator, you will be informed that you have received a voice message in Some operators inform you by sending a specific Voice Mail indication. Most operators, however, inform you by sending a text message, (i.e. an SMS), for example asking you to call your Voice Mail Service. For more information about receiving and reading text messages, see "Receiving a Note! For more information about your Voice Mail Service, please refer to the Communicating With Your Voice Mail Service If you want your phone to easily interact with your Voice Mail Service, you can store the number to your Voice Mail Service. You will get the number in the information provided by your network operator. To store your Voice Mail number 1. Scroll to Messages, Y E S , Options, Y E S , Voice Mail No., Y E S . 2. Enter your Voice Mail number and press Y E S . Note! The number to your Voice Mail Service may be different if you are calling from a network that is not your home network. Calling your Voice Mail When you receive a voice mail, an alert signal sounds and the message New voicemail appears in the display (only if you receive the specific voice mail indication). If you want to check your voice mail now, press Y E S to call your Voice Mail Service.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737977)

[ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)

<http://yourpdfguides.com/dref/2737977>

If you press **N O**, you can call your Voice Mail Service at a later time to listen to your recorded messages. Your Voice Mail Service AB 37 Your Voice Mail Service To call your Voice Mail Service Tip! You can also call your Voice Mail Service by pressing and holding **1** from standby. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns To change your Voice Mail number 1. Scroll to Messages, Y E S , Options, Y E S , Voice Mail No., Y E S . 2. Press and hold **C** to delete the existing number. 3. Enter your new Voice Mail number and press Y E S . To change the message alert signal 1. Scroll to Messages, Y E S , Options, Y E S , Message Alert, Y E S . 2. Select the signal you want. your Voice Mail and let all incoming calls on Line 2 be connected. operating instructions supplied by your network operator.

38 Your Voice Mail Service Changing Number and Signal Tip! If you subscribe to the Two Line Service, you may have different Voice Mail numbers for your two lines. You may also set different options for the two lines. For example, you can set all incoming calls on Line 1 to be diverted to Further information about your Voice Mail Service can be found in the AB · Scroll to Messages, Y E S , Call Voicemail, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Silent the alarm and timer signals are turned off. To set the phone silent 1. From standby, press and hold **C** . 2. Silent on? appears. Press Y E S . An icon appears in standby.

To cancel, repeat step 1 and press Y E S at Silent off?. You can choose to set your phone completely silent so that all signals except Ring Signal Volume You can set the volume in six steps. The first step means that two clicks are heard when you receive a call. You can also turn the ring signal off (0). An icon then appears in standby.

To set the ring signal volume 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Volume, Y E S . The level of the ring volume appears in the display. 2. Use **u** to increase the volume, **d** to decrease it.

3. Press Y E S to save the setting. The phone rings once with the actual setting as you increase the volume. Tip! Use the volume key on the side of the phone to change the volume of the ring signal silently. Increasing Ring You can choose a ring signal that rises in steps from the softest volume to the loudest, Increasing Ring. To set the ring signal to Increasing Ring 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Increasing Ring, Y E S . 2. Select On. The Increasing Ring must be Off for the ring signal volume to apply.

Note! If the phone is set to silent, the increasing ring signal is not heard. Personalizing Your Phone AB 39 Personalizing Your Phone Ring Signal Type You can choose a ring signal from a list of different sounds and melodies. the keypad. See "Composing Ring Signals" on page 41. To choose one of the ring signal types You can also compose up to four melodies of your own by entering notes with Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Signals, Y E S , Voice Calls, Y E S . 2. Select the ring signal type that you want. Tip! If you do not wish to disturb other people, use the volume key on the side of the phone to scroll silently. Different Ring Signals for Line 1 and Line 2 If you subscribe to the Two Line Service, you can set different ring signals for the two lines.

L1 and L2 are displayed instead of Voice. Different Ring Signals for Voice, Data and Fax Calls Provided your SIM subscription supports Fax and Data calls, you can set different ring signals for voice, fax and data calls respectively. Specific Ring Signals for Personal Calls If your subscription includes the Calling Line Identification (CLI) service, you can assign a personal ring signal to up to ten callers. You can, for example, have one ring signal for your friend and another one for your colleague. If the last seven digits of a caller's number correspond to a number you have specified, then that caller's ring signal is used. You can include question marks (?) in a phone number. For example, 012345??? means that calls from phone numbers between 012345000 and 012345999 will have the same personal ring signal. You get a question mark by pressing and holding **#**. To specify a caller's number and the accompanying ring signal Y E S , Add new?, Y E S . 1.

Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Signals, Y E S , Personal Rings, 2. Enter the caller's number and press Y E S . You can also recall it from the Phone Book by pressing **u**. 3. Select the ring signal type you want. 40 Personalizing Your Phone AB To delete a caller's number Personal Rings, Y E S . 2. Scroll to the number you wish to delete and press Y E S . 3. Select Delete.

B Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Composing Ring Signals You can compose four different ring signals. To compose a ring signal 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Signals, Y E S , Custom rings, Y E S . 2. Select My ring 1, My ring 2, My ring 3 or My ring 4. 3. Press **C** to clear the display. 4. Use the keypad to enter notes. · The keypad now works as a keyboard (see figure in margin above): Press and hold a key to enter a long note.

Press **0** to raise the note one octave. · Press **#** once to raise the note one half-tone. · Press **#** twice to lower the note one semitone. 5. To listen to your melody, press Y E S .

6. Press Y E S again to save it or press **N O** to continue editing. Vibrate Mode You can choose to be notified of an incoming call by the buzzing of the Vibrate Mode. You can set the phone's Vibrate Mode to one of the following: · · · On (all the time) On If Silent (on when the ring volume is turned off or when you have set the phone to silent) Off (all the time) Note! When your phone is placed in a desktop charger or a handsfree car kit, the Vibrate Mode is turned off automatically. To set the Vibrate Mode 1.

Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Vibrate Mode, Y E S . 2. Select the setting you want. Personalizing Your Phone AB 41 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Signals, Y E S , Message Signal You can choose whether to hear clicks, tones or nothing (silent) when you receive a voice or text message (SMS). To set the message signal Message Alert, Y E S . Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 2. Select the signal you want. 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Signals, Y E S , You can also find the Message Alert in Options in the Messages menu.

Alarm Signal To change the alarm signal for the alarm clock Alarm Signal, Y E S . 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Ring Signals, Y E S , 2.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737977)

[ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)

<http://yourpdfguides.com/dref/2737977>

Select the signal you want. Key Sound You can choose whether to hear clicks, tones or nothing (silent) when you press the keys. To set the key sound 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Key Sound, Y E S . 2. Select the key sound you want. Minute Minder If you turn on the minute minder, you hear a beep once every minute during a call.

To turn the minute minder on or off 1. Scroll to Settings, Y E S , Sounds & Alerts, Y E S , Minute Minder, Y E S . 2. Select On or Off. You can also find the minute minder in Options in the Call Info menu.

Scratchpad If you make a note of a number during a call, you use the display as a notepad, see "The Notepad" on page 18. The person you are talking to will hear the tone signals as you press the keys. If you wish to, you may turn the tone signals off. Note! You can only turn the tones on or off during a call. 42 Personalizing Your Phone AB To turn the tone signals off during a call 2.

Select Scratchpad. To turn the tone signals on during a call 1. Scroll to Call Handling, Y E S . 2. Select DTMF Mode. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Display Light you receive a call or message. To set the display light 1. Scroll to Settings, Y E S , Display, Y E S , Light, Y E S . 2. Select the display light setting you want.

You can set the display light to automatic, off or on. In automatic mode, the display light is turned off automatically a few seconds after you have pressed the last key. It comes on again when you press a key, open the flip, or when Display Language Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card, Automatic. If this is not the case, the preset language is English. To change the display language 1. Scroll to Settings, Y E S , Language, Y E S . 2. Select the language you want. Tip! You can always choose English by pressing u, 0000, d in standby. You can always choose Automatic by pressing u, 8888, d in standby.

Greeting Text When you turn on your phone, 'Ericsson' appears in the display. Instead of this, you can write your own greeting. Note! Some operators may have their own greeting. To write a new greeting 1. Scroll to Settings, Y E S , Display, Y E S , User Greeting, Y E S .

2. Select Custom. 3. Write your new greeting, using the number keys. For information on how to enter letters, see "Entering Letters" on page 28.

You may also edit your greeting. 4. Press Y E S to confirm your setting. Personalizing Your Phone AB 43 1. Scroll to Call Handling, Y E S . To set the standard greeting 2. Select Standard. To turn the greeting off 1. Scroll to Settings, Y E S , Display, Y E S , User Greeting, Y E S . 2.

Select Off. Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Phone Number Display To enter your phone number 1. Scroll to Settings, Y E S , Display, Y E S , My Numbers, Y E S , Voice, Y E S . 2. Enter the number and then press Y E S . My Numbers allows you to check your phone number(s). If your phone number cannot be retrieved from your SIM card, you can enter it yourself. Tip! You can also enter your fax and/or data number and your different numbers for Line 1 and Line 2, if these are supported by your subscription. Time The time is always displayed when the phone is in standby mode. To set the time format 1.

Scroll to Settings, Y E S , Time and Date, Y E S , Time Format, Y E S . 2. Select the 24-hour or 12-hour (am/pm) clock. To set the clock 1. Scroll to Settings, Y E S , Time and Date, Y E S , Set Time, Y E S .

2. Enter the time in hours and minutes, and press Y E S . Move from number to number by pressing u or d. by pressing #. If you select the 12-hour clock, you can alternate between am and pm Automatic Time Zone With the Automatic Time Zone function, you will be asked whether to update the clock when you enter a new time zone.

You can choose to turn the function off, if you like. To turn the Automatic Time Zone off 1. Scroll to Settings, Y E S , Time and Date, Y E S , Auto Time Zone, Y E S . 2. Select Off. Note! This service depends on the network. 44 Personalizing Your Phone AB 1. Scroll to Settings, Y E S , Display, Y E S , User Greeting, Y E S . Date When the phone is in standby mode, you can slide the volume key upwards or downwards to see today's date in the Status menu. To set the date format 1.

Scroll to Settings, Y E S , Time and Date, Y E S , Date Format, Y E S . 2. Select the date format you want. To set the date Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1. Scroll to Settings, Y E S , Time and Date, Y E S , Set Date, Y E S . 2. Enter the year (two digits), month and day and then press Y E S . If you have chosen another date format you must enter the date differently. Master Reset You can reset the phone's settings to the way they were when you bought your phone. To reset the phone 1.

Scroll to Settings, Y E S , Master Reset, Y E S . 2. Enter the phone lock code (0000) and press Y E S . The phone lock code may be another one, in case you have changed it. Personalizing Your Phone AB 45 Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns messages consisting of up to 160 characters.

at a time, you can simply send a single group SMS. Send SMS" below. The Short Message Service (SMS) allows you to send and receive text A useful feature in your T28 WORLD is that you can send text messages to a group which you have defined in your phone book. See "Groups" on page 33. Instead of calling or sending a text message to the members of that group one If your SIM card does not contain the phone number to your network service center, you must specify the number yourself.

Otherwise you cannot reply to received messages or send your own messages. See "Enable the Phone to Note! The Short Message Service may not be available on all networks. Some network operators may only allow SMS to be sent within their own network. Enable the Phone to Send SMS If you want to send or reply to a message, you need to make sure that your network operator's Service center number is set. Most modern SIM cards already contain this information at the time of purchase. You can obtain the service center number from your network operator. To activate a service center number found in the list 1. Scroll to Messages, Y E S , Options, Y E S , Service Centers, Y E S . 2. Scroll to the number you want and press Y E S .

3. Select Activate. If no number is found in the list, you have to set the number yourself. To enter the phone number to your service center 1. Scroll to Messages, Y E S , Options, Y E S , Service Centers, Y E S , Add new?, Y E S . and press Y E S . 2. Enter the number, including the international (+) sign and country code 46 Sending and Receiving Text Messages (SMS) AB Sending and Receiving Text Messages (SMS) Composing a Text Message For more information on how to enter text and the letters, see "Entering Letters" on page 28.



[You're reading an excerpt. Click here to read official SONY ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)
<http://yourpdfguides.com/dref/2737977>

Example: · To enter an 'A', press 2 once. · To enter a 'B', quickly press 2 twice.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns To enter lower-case letters, enter the letter, for example an 'A', until you press * again. and then press *. An `à' appears. Lower-case letters now appear · To enter numbers, press and hold any number key. To delete letters and numbers, press the C key.

You may also use the volume key as a shortcut to certain letters: · To enter a 'B', slide the volume key upwards and press 2. · To enter a 'C', slide the volume key downwards and press 2. Tip! You can choose another alphabet by pressing and holding #. Sending a New Text Message 1. Scroll to Messages, Y E S , Send New, Y E S .

2. Enter your message and press Y E S . pressing u. 3. Enter the recipient's phone number or recall it from the phone book by 4. Press Y E S to send the message. 5. Sending message appears in the display followed by Message has been sent. Note! If you have turned on any of the Set On Send options (Message Type, Validity Period, Reply Request), you need to make these choices before entering the phone number. See "Customizing your Text Messages" on page 48.

Saving the Message for Later Use memory and send it later: · If you do not want to send the message now, you can save it in the phone Press N O when you are asked to enter a phone number. The message can now be recalled from the Unsent list in the Messages menu. To send the message later 1. Scroll to Messages, Y E S , Unsent, Y E S The message appears in the display. 2. Select the message you want to send. 3. Press Y E S . Sending and Receiving Text Messages (SMS) AB 47 4. Select Send.

5. Press Y E S and proceed from step 3 as described in "Sending a New Text Message" above. Note! The same procedure is used with all types of messages, for example Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns message types you can use. e-mail, fax messages etc. Check with your network operator to find out which Sending Text Messages to a Group With your T28 WORLD you can send text messages to a pre-defined group. You need to specify a group and save it in your phone book before you can send text messages to a group. For more information on how to create groups, see "Groups" on page 33. To send a text message to a group 1. Scroll to Messages, Y E S , Send New, Y E S . 2.

Enter your message and press Y E S . 3. Press u to enter the Phone Book menu. 4. Scroll to Groups and press Y E S . 5. Select the group you want and press Y E S to send the message. Note! When you send text messages to a group, you will be charged for each member included in that group. Customizing your Text Messages Before you send your message, you can set the type of message, the validity period and if you want the recipient of your message to reply to your message. Message Type Your phone can send different types of messages.

Your network operator's service center may offer the facility of converting a text message into a format (e-mail, fax, etc.) that suits the equipment that is going to receive the message. Please contact your network operator to find out which message types you can use and how. You can set a standard message type that you want to use or you can turn on a Set on Send option, which means that you are asked to select which message type you want to send, before sending it. 48 Sending and Receiving Text Messages (SMS) AB If you wish, you may now edit your message. To set a standard message type 2. Select the message type you want. The selected message type is now standard until you change it. To turn Set on Send on or off 2. Select On or Off.

Er ics No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns Validity Period message will be deleted. sending the message. To set a validity period as your standard 2. Select the validity period you want. To turn the Set on Send function on or off 2.

Select On or Off. Reply to Messages the recipient to reply, select On and press Y E S . To turn the Request Reply function on or off 1. Scroll to Messages, Y E S , Options, Y E S , Reply Request, Y E S . 2.

Select On or Off. Note! Not all network operators support these functions. Sending and Receiving Text Messages (SMS) 1. Scroll to Messages, Y E S , Options, Y E S , Message Type, Y E S , Set on Send, Y E S . If your message cannot be delivered because the recipient has turned off the phone, your service center can save the message to send it later. If the service center has not been able to reach the recipient within a certain time, the You can set a validity period as your standard or you can turn on a Set on Send option, which means that you are asked to set the validity period before 1. Scroll to Messages, Y E S , Options, Y E S , Validity Period, Y E S , Set Default, Y E S . The selected validity period is now your standard until you change it. 1. Scroll to Messages, Y E S , Options Y E S , Validity Period, Y E S , Set on Send, Y E S .

If you want the recipient of your message to reply, you can turn on the Request Reply option. When this function is on, you are asked to choose if you want the recipient to reply or not before your message is sent. If you want AB 49 1. Scroll to Messages, Y E S , Options, Y E S , Message Type, Y E S , Set Default, Y E S . Templates If you have one or more standard messages that you use often, you can save these as Templates to be reused whenever you want. You can save up to in the phone memory. To save a template 5 templates which can consist of 30 characters each. Your templates are saved New message Read now? Er ics

No so t fo nM r ob Com ile me Co rci mm al un Use ica tio ns 1. Scroll to Messages, Y E S , Templates, Y E S , Add new?, Y E S . 2.

Enter the message and press Y E S . Message" on page 47. saved as a template for later use. To send a template 1. Scroll to Messages, Y E S , Templates, Y E S .

2. Select the template you want to send. Message" on page 47. 3. When you have completed the message, press Y E S .

4. Enter the recipient's phone number. 5. Press Y E S to send the template. To delete a template 1. Scroll to Messages, Y E S , Templates, Y E S . 2. Select the message you want to delete and then press C . The message Delete? appears in the display. 3.

Press Y E S to delete the message. For more information on how to enter text, See "Composing a Text 3. If you want to send the message now, press Y E S when Send message now? appears in the display, and proceed as described in "Sending a New Text Message" on page 47. The message is saved in the list of templates. 4. If you do not want to send the message now, press N O . The message is You may edit the message before sending it. See "Sending a New Text Receiving a Message When you receive a message, you hear a signal, the indicator light on the top of the phone rapidly flashes green and the message New message Read now? appears in the display.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2737977)

[ERICSSON T28S WORLD user guide](http://yourpdfguides.com/dref/2737977)

<http://yourpdfguides.com/dref/2737977>