



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON TXT PRO. You'll find the answers to all your questions on the SONY ERICSSON TXT PRO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON TXT PRO
User guide SONY ERICSSON TXT PRO
Operating instructions SONY ERICSSON TXT PRO
Instructions for use SONY ERICSSON TXT PRO
Instruction manual SONY ERICSSON TXT PRO



Sony Ericsson
txt pro™
Extended User guide

Sony Ericsson
make.believe



[You're reading an excerpt. Click here to read official SONY ERICSSON TXT PRO user guide](http://yourpdfguides.com/dref/3961130)
<http://yourpdfguides.com/dref/3961130>

Manual abstract:

@@Contact operator.

.....

.....

.....

.....

.....

.....

.....32 Legal information.....

.....

.....

.....

.....

.....

.....

.....

.....

.....33 Index.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....34 3 This is an Internet version of this publication. © Print only for private use.

Important information Please read the Important information leaflet before you use your mobile phone. Some of the services and features described in this User guide are not supported in all countries/ regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

4 This is an Internet version of this publication. © Print only for private use. Experience more. Discover how. Visit www.sonyericsson.com/support to get the most from your phone.

5 This is an Internet version of this publication. © Print only for private use. Getting started Some basic getting started instructions are printed on the box supplied with your phone. Below you will also find information to help get you started. To insert or remove a memory card You may have to purchase a memory card separately. 1 2 Insert the memory card with the gold-coloured contacts facing down. To remove the memory card, press the edge of the memory card inwards and release it immediately. To lock the screen When the screen is active, briefly press the To unlock the screen When the screen is locked, briefly press the key. . . key.

Starting your phone for the first time The first time you start your phone, a setup guide helps you enter essential phone settings and import contacts. You can also access the setup guide later from the phone settings. 1 2 · To set the phone language When you start your phone for the first time, a list of languages appears. Scroll through the list and select your language. Tap Done. To import contacts from a SIM card When you start your phone for the first time with a SIM card inserted, the setup guide prompts you to import your SIM contacts. Tap Import contacts. When you copy contacts between two phones using your SIM card, the amount and the type of information you can transfer for each contact is limited. 1 2 3 4 5 6 7 To set the time and date When you start your phone for the first time, the setup wizard prompts you to set the time and date. Tap Time & date.

Find and tap Time. Tap the hour and minute fields to adjust the time. Tap Save. Find and tap Date. Tap the day, month and year fields to adjust the date. Tap Save. While setting the time and date, you can also select your preferred time and date display formats. Tap Time format or Date format to select a desired format. 6 This is an Internet version of this publication. © Print only for private use.

Getting to know your phone Phone overview 1 2 3 4 5 6 7 3.5 mm Audio Plus connector Charging indicator Ear speaker Proximity sensor Touch screen Slideout keyboard Home key 8 9 10 11 12 13 14 Microphone Connector for charger/USB cable Power key/Screen lock Camera lens Volume key Speaker Camera key Charging the battery Your phone battery is partly charged when you buy the phone. It may take a few minutes before the battery icon appears on the screen when you connect the phone charger cable to a power source, such as a USB port or a phone charger. You can still use your phone while it is charging. The battery will start to discharge a little after it is fully charged and then charges again after a certain time. This is to extend battery life and may result in the charge status showing a level below 100 percent. 7 This is an Internet version of this publication. © Print only for private use. · To charge the phone using the power adapter Connect the phone to a power outlet using the USB cable and the power adapter. Using the home key · To go to the home screen Press the home key.

Home screen The Home screen is your gateway to the main features in your phone. You can customise it with different application icons, shortcuts, wallpaper and more. The Home screen extends beyond the regular screen display width, giving you more room to play with. Close your opened applications before going to the Home screen. Otherwise, these applications may stay running in the background and slow down your phone. 8 This is an Internet version of this publication. © Print only for private use. Application screen The Application screen gives you quick access to applications in your phone. You can also customise this screen. Remember that the Application screen extends beyond the regular screen dimensions, so you might have to flick left or right to see everything.

An indicator at the top of the screen shows which part of the Application screen you are in. For example, indicates that you are in the middle part of the screen. To open the Application screen There are two ways to open the Application screen: · · · 1 2 3 From the Home screen, drag upwards. Flick upwards from any location on the Home screen. To browse the Application screen From the Application screen, flick right or left.

To move an application to a corner of the Application screen From the Home screen, drag upwards. Touch and hold an item until application icons appear in each corner of the screen. Drag an item into one of the corners. 9 This is an Internet version of this publication. © Print only for private use.

1 2 3 To move an application on the Application screen From the Home screen, drag upwards. Touch and hold an item until application icons appear in each corner of the screen. Drag an item beyond the current screen view into another part of the Application screen. The items on the Application screen and its extensions are the actual applications, and not shortcuts. So if you move an item from one part of the Application screen to another part, you are moving the actual application, and are not creating a shortcut. Using the touch screen · · To open or highlight an item Tap the item. To mark or unmark options Tap the relevant checkbox, or in some cases tap the switch beside the option name. Marked checkbox Unmarked checkbox Switched on Switched off · To go back to the previous screen Tap , when this option is available. Scrolling Scroll by moving your finger up or down on the screen. On some web pages you can also scroll to the sides.

Dragging or flicking will not activate anything on the screen. Internet and messaging settings For most mobile phone networks and operators, messaging and Internet settings come preinstalled on your phone. In some cases the settings are downloaded the first time you turn on the phone with your SIM card inserted. You can manually add and change Internet and messaging settings in your phone at any time, or you can get the settings sent to your phone automatically. To get more help on how to manually update the Internet and messaging settings in your phone, go to www.ericsson.com.



[You're reading an excerpt. Click here to read official SONY ERICSSON TXT PRO user guide](http://yourpdfguides.com/dref/3961130)
<http://yourpdfguides.com/dref/3961130>

sonyericsson.com/support. Contact your network operator if you need more information about your subscription settings. Phone settings overview You can customise some phone settings to suit your preferences. For example, you can adjust the Time & date and Phone language settings.

1 2 3 To change the phone language From the Home screen, drag upwards. Find and tap Settings > Language and writing > Phone language. Select an option. If you choose the wrong language and cannot read the menu texts, go to www.sonyericsson.com/support for help. 10 This is an Internet version of this publication. © Print only for private use. 1 2 3 To turn on Flight mode From the Home screen, drag upwards. Find and tap Settings > General.

Select Flight mode. 11 This is an Internet version of this publication. © Print only for private use. Friends application The Friends application collects communications with your top five friends into one view. All communications Facebook or Twitter updates, text and multimedia messages, missed calls appear on your Home screen. Jud in the Friends application are reflected in the Messaging application. 13 This is an Internet version of this publication. © Print only for private use. Instant messaging Use the IM (Instant Messaging) application to chat with other people and participate in IM groups to discuss topics that interest you. IM service providers can vary in the features they offer users.

Before you can use Instant messaging, you need to have the proper settings on your phone. In some cases, the settings may be already configured on your phone. Or you may receive the settings in the form of a configuration message from an IM service provider. To set up Google Talk™ If you have already set up a Google™ account in your phone, you do not have to set up Google Talk™ separately. 1 2 3 4 1 2 From your Home screen, drag upwards. Find and tap Talk. Follow the registration wizard to create a Google™ account, or sign in if you already have an account. Your phone is now ready to use with Gmail™ and Google Talk™. Your phone is now ready to use with Gmail™ and Google Talk™. To start Google Talk™ From your Home screen, drag upwards. Find and tap Talk.

14 This is an Internet version of this publication. © Print only for private use. Entering text You can enter letters, numbers and special characters using either the slideout QWERTY keyboard or the on-screen keypad. Using the slideout keyboard Slide open your phone and start entering text with the QWERTY keyboard.

When using the slideout keyboard, you can switch to using the on-screen keypad at any time. · To enter an upper-case letter Press briefly, then enter the letter. The keyboard reverts to lower-case input after you enter the letter. To turn on the caps lock Before you enter text, press until appears on the screen. · To enter a character using the mode toggle key () Press and then press a key featuring characters of the same colour.

For example, press this key once and then press the "T" key to enter "T". To enter characters with the mode toggle key locked Press twice to lock the mode toggle key, and then press associated keys featuring characters of the same colour. To unlock the mode toggle key, press it again. To insert symbols When you enter text, press . A keypad with symbols appears on the phone screen. Tap the desired symbols on the screen. To change the writing language When you enter text, press . Select an option on the screen. 1 2 1 2 1 2 Using the on-screen keypad When you start a program or select a field that requires text or numbers, the on-screen keypad appears by default. You can use the multitap text input method or quick text input method to enter text.

· To display the keypad and enter text Tap a text field to display the keypad, then enter your text. To shift between upper-case and lower-case letters to switch to upper-case Before you enter a letter, tap To turn on the caps lock Before you type a word, tap , or vice versa. · or until appears. · To enter numbers using the keypad . A keypad with numbers appears. When you enter text, tap To insert symbols When you enter text, tap . A keypad with symbols appears. 15 This is an Internet version of this publication. © Print only for private use. 1 2 1 2 3 To change the writing language When you enter text, tap the language icon, for example, Select an option.

· To enter text using multitap text input When you enter text, tap the language icon, for example, . Tap Multitap to change to multitap input. To write a word, tap the character key as many times as needed to show the letter you want. To enter text using quick text input When you enter text, tap the language icon, for example, .

Tap Quick text to change to quick text input. To write a word, tap each character key only once, even if the letter you want is not the first letter on the key. Tap the word that appears or tap to select a word from the list. If the word you want is not in the list, tap Spell, make any necessary changes, and tap Save. 1 2 3 4 5 16 This is an Internet version of this publication.

© Print only for private use. Contacts Use the Contacts application to save information about the people you know. Enter their phone numbers, email addresses, birthdays and other details. You can keep track of all communication with a particular contact. 1 2 3 1 2 3 4 5 To call a contact From the Home screen, tap . Tap the contact. Tap the desired phone number for the contact. To add a contact From your Home screen, drag upwards and then tap . Tap Add contact. Tap Name, then enter the contact's name and tap Done.

Tap Phone number, then enter the number and tap Done. Add any additional information you want to add for the contact, then scroll up and tap Save. To add additional information fields, tap Add more. You can also add contacts from numbers in your call log. 1 2 1 2 To back up contacts on a memory card From the Home screen, drag upwards. Tap Settings > Contacts > Back up to memory card. To restore contacts from a memory card From the Home screen, drag upwards. Tap Settings > Contacts > Restore from memory card. 17 This is an Internet version of this publication. © Print only for private use.

Calling 1 2 To make an emergency call From the Home screen, tap . Enter the emergency number and tap . To delete a number, tap . You can make emergency calls when no SIM card is inserted. 1 2 3 To make a call From the Home screen, tap .

If the call log appears, tap to enter the dial pad view. Enter the number you want to call and tap . To delete a number, tap To answer a call . · Drag to the left until it touches . · To decline a call Drag to the right until it touches To end a call Tap .

· 18 This is an Internet version of this publication.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/3961130)

[ERICSSON TXT PRO user guide](http://yourpdfguides.com/dref/3961130)

<http://yourpdfguides.com/dref/3961130>

© Print only for private use. Music Get the most out of your music player. Listen to music, audio books and podcasts. Manage your own playlists, and send your favourite tunes to friends. Install the Media GoTM application on your computer and transfer content to and from the memory card in your phone. Media GoTM can be downloaded from www.sonyericsson.com/support.

Music player overview 1 2 3 4 5 6 7 8 View the current play queue Cover art (if available) Play/Pause button Go to the next track in the current play queue, or fast forward Elapsed time of current track Progress indicator: fast forward or rewind by dragging or tapping Go to the previous track in the current play queue, or rewind Browse the music on your memory card · To change tracks In the music player, tap To pause a track In the music player, tap or . . . To fast forward and rewind music In the music player, touch and hold or . You can also drag the progress indicator marker right or left. · To adjust the audio volume Press the volume key. 19 This is an Internet version of this publication. @@@@For example, put your music files in the Music folder. Java application files are an exception. @@Phone: Select Mass storage. @@Computer: On the computer desktop, double-click the My Computer icon. @@@@Press to take a photo or record a video clip. @@@@You can also purchase tracks identified by TrackIDTM. For best results, use TrackIDTM technology in a quiet area. @@Hold your phone towards the music source. The results are shown in the result screen. @@@@Tap New message > Write message. Enter your message text and tap . To add a recipient, select a contact from the list that appears. @@and select an option. @@To read a received message From the Home screen, tap . Tap a message thread. To download a message that is not downloaded yet, tap the message. @@@@See Internet and messaging settings on page 10. @@Find and tap Email. Select an email account. If the account you want to use is not in the list, tap Other. Enter your Email address and password, then tap Continue. If the phone cannot download your email account settings automatically, enter them manually. If you need to enter the settings manually, contact your email service provider for the correct email account settings. For example, you need to know if the account type is POP3 or IMAP.

1 2 3 4 5 6 7 8 To create and send an email message From the Home screen, drag upwards. Find and tap Email. Tap Write new. Tap Add recipient and enter the recipient's address, then tap Done. You can add more recipients the same way, or delete a recipient by tapping . Tap Subject and enter the email subject. Tap Write email, then enter your message text. To attach a file, tap Attach, select the file type, and then select the file you want to send. Tap Send. 25 This is an Internet version of this publication.

© Print only for private use. Bluetooth™ wireless technology Turn on the Bluetooth™ function in your phone and create wireless connections to other Bluetooth™ compatible devices such as computers, handsfree accessories, and phones. Bluetooth™ connections work better within a 10 metre (33 feet) range, with no solid objects in between. In some cases you have to manually pair your phone with other Bluetooth™ devices. Remember to set your phone to visible if you want other Bluetooth™ devices to detect it.

1 2 3 4 To turn on the Bluetooth™ function and make your phone visible From the Home screen, drag upwards. Find and tap Settings > Connectivity > Bluetooth. Tap Bluetooth and tap the on/off button to turn on Bluetooth. appears in the status bar. Tap Visibility and tap the on/off button to make your phone visible.

26 This is an Internet version of this publication. © Print only for private use. Wi-Fi® Using Wi-Fi® technology you can access the Internet wirelessly with your phone. To access the Internet using a Wi-Fi® connection, you first need to search for and connect to an available Wi-Fi® network. The signal strength of the Wi-Fi® network may differ depending on your phone's location. Moving closer to the Wi-Fi® access point may increase the signal strength. 1 2 3 To turn on Wi-Fi® From the Home screen, drag upwards. Find and tap Settings > Connectivity > Wi-Fi. Tap Wi-Fi or tap the on/off button to turn on the Wi-Fi function. It may take a few seconds before Wi-Fi® is enabled.

1 2 3 4 To enable Wi-Fi® network notifications Make sure Wi-Fi® is turned on. From the Home screen, drag upwards. Find and tap Settings > Connectivity > Wi-Fi. Tap Network notification or tap the on/off button accordingly to enable Wi-Fi® notifications. You can now get notifications when new Wi-Fi® networks are within reach. To connect to a Wi-Fi® network From the Home screen, drag upwards. Find and tap Settings > Connectivity > Wi-Fi. Available Wi-Fi® networks are displayed under Wi-Fi networks. The available networks may be open or secured. Open networks are indicated by and secured networks are indicated by next to the Wi-Fi® network name.

Tap a Wi-Fi® network to connect to it. If you are trying to connect to a secure Wi-Fi® network, you are asked to enter a password. is displayed in the status bar once you are connected. In some locations, open Wi-Fi® networks require you to log in to a web page before you can get access to the network. Contact the relevant Wi-Fi® network administrator for more information.

1 2 3 4 1 2 3 4 5 6 To upload photos From the Home screen, drag upwards. Find and tap Album . Tap a photo thumbnail. Tap the screen to display the controls. Tap .

Select To Picasa. 27 This is an Internet version of this publication. © Print only for private use. Web browser Browsing the web View and navigate web pages, bookmark your favourites, create shortcuts, and browse with several windows open at the same time all with your web browser. 1 2 3 4 To go to a web page Tap . Tap the text field to activate the keypad. Enter a web address. Tap Go. 28 This is an Internet version of this publication. © Print only for private use.

More features Alarms Customise your alarm and wake up to your preferred alarm tone or radio station. Activated alarms sound even if your phone is turned off. 1 2 3 4 To set a new alarm From the Home screen, drag upwards. Find and tap Alarm. Tap Add new. Set an alarm time and enter the relevant details in the Alarm text, Recurrence and Alarm signal fields, then tap Done. To delete an alarm From the Home screen, drag upwards. Find and tap Alarm. Scroll to the alarm you have set and want to delete, and tap it. Scroll down and Tap Delete.

To silence the alarm When the alarm sounds, drag Slide to turn off to the right to turn off the alarm. To repeat the alarm, select Snooze. 1 2 3 4 1 2 Voicemail If your subscription includes a voicemail service, callers can leave voice messages for you when you can't answer calls.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/3961130)

[ERICSSON TXT PRO user guide](http://yourpdfguides.com/dref/3961130)

<http://yourpdfguides.com/dref/3961130>

Your voicemail service number is normally saved on your SIM card. If not, you can get the number from your service provider and enter it manually. 1 2 3 1 2 To enter your voicemail service number From the Home screen, drag upwards. Select Settings > Calls > Voicemail. Enter your voicemail number and tap Done. To call your voicemail service From the Home screen, drag upwards. Tap Voicemail.

29 This is an Internet version of this publication. © Print only for private use. Locking and protecting your phone IMEI number Every phone has a unique IMEI (International Mobile Equipment Identity) number. You should keep a copy of this number. If your phone is stolen, your network provider can use your IMEI number to stop the phone from accessing the network in your country. 1 2 1 2 To view the IMEI number in your phone From the Home screen, drag upwards. Find and tap Settings > General > About phone. To change your SIM card PIN From the Home screen, drag upwards. Find and tap Settings > General > Security > Change PIN, then follow the instructions. 30 This is an Internet version of this publication.

© Print only for private use. Troubleshooting My phone is not working as expected If you experience problems with your phone, check these tips before you try anything else: Restart your phone. Remove and re-insert the battery and SIM card. Then restart your phone. Update your phone. Even if you have the latest software, updating your phone can improve software stability and solve other problems. By running the latest update on your phone, you also ensure optimal performance and get the latest enhancements. Reset your phone. Be patient while resetting your phone. Restarting the phone during a reset procedure may damage the phone permanently.

Resetting the phone When you reset your phone, you delete all data, including downloaded applications. You are basically resetting the phone to the state it was in before you first turned it on. So before you perform a reset, make sure to back up any important data saved on your phone. 1 2 3 To reset the phone From the Home screen, drag upwards. Find and tap Settings > General > Master reset > Reset all .

Tap Reset. No battery charging icon appears when I start charging the phone It may take a few minutes before the battery icon appears on the screen. I cannot use Internet-based services Make sure your subscription covers data downloads and that the Internet settings in your phone are correct. Contact your network operator for more information about your subscription settings. No network coverage . . . Your phone is in flight mode.

Make sure flight mode is off. Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are. The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. In this case, contact the nearest Sony Ericsson service center. Emergency calls only You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. SIM locked You have entered your PIN incorrectly three times in a row.

To unlock the phone, you need the PUK (Personal Unblocking Key) provided by your operator. 31 This is an Internet version of this publication. © Print only for private use. PUK blocked. Contact operator. You have entered your PUK code incorrectly 10 times in a row. Please contact your service provider. 32 This is an Internet version of this publication. © Print only for private use. Legal information Sony Ericsson txt proTM CK15i/CK15a This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty.

Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved. ©Sony Ericsson Mobile Communications AB, 2010 Publication number: 1244-7351.1 Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas.

Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply. @ @ringtones. @ @ @ @ @ Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guarantee the availability or performance of any thirdparty websites or offered services. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

All illustrations are for illustration only and may not accurately depict the actual phone. Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. "Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to import and export regulations of the European Union, the United States and other countries.

The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limiting the foregoing, and as an example, the user and any possessor of the product: (1) must not knowingly export or re-export Products to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 428/2009; (2), must comply with U.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/3961130)

[ERICSSON TXT PRO user guide](http://yourpdfguides.com/dref/3961130)

<http://yourpdfguides.com/dref/3961130>

S. government Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) administered by Department of Commerce, Bureau of Industry and Security; and (3) must comply with economic sanctions regulations (30 C.F.R. §§ 500 et. seq.,, <http://www.treas.gov/offices/enforcement/ofac/>) administered by the U.S. Department of Treasury, Office of Foreign Assets Control. The user and any possessor of the product may not transport or deliver the product, its accessories or separate software to any country, region, entity or person prohibited by these regulations." 33 This is an Internet version of this publication. © Print only for private use. Index adjusting volume

.....
.....
.....
.....

.....
.....
....19 answering service .
.....

.....
.....
.....
.....

.....
..29 applications
.....
.....

.....
.....
.....
.....

.....
..23 audio adjusting volume ...
.....
.....

.....
.....
.....
.....

.....19 A SIM ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
..30 SMS
.....
.....

.....
.....
.....
.....

.....
.....
.....
....24 telephony See calls text messages

.....
.....
.....
.....

.....
.....
.....

.24 TrackID™ technology

.....
.....
.....
.....

.....22 searching for track information ...

.....
.....
.....

22 troubleshooting

.....
.....
.....

.....
.....
.....

.....31 T B battery

.....
.....
.....
.....

.....
.....
.....
.....

.....7 Bluetooth™ wireless technology ...

.....
.....
.....

.....26 browsing - see web browser calls

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...18 changing tracks ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

...19 charging ..

.....
.....

.....
.....
.....

.....
.....
.....

..7 contacts

.....
.....
.....

.....
.....
.....

.....17 games .

.....
.....
.....

.....
.....
.....

.....23 U V C USB connection .

.....
.....
.....

.....
.....
.....

...20 voicemail

.....
.....
.....

.....
.....
.....

.....29 web browser ..

.....
.....
.....

.....
.....
.....

.....28 Wi-Fi® ..

.....
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
..27 W G H I Home screen ...
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
...8 Internet web browser ..
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
28 M messages multimedia
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....24 picture
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....24 text
.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
..24 MMS ...
.....

.....
.....
.....
.....
.....

.....
.....
.....
....24 multimedia messages

.....
.....
.....
.....

.....
24 music

.....
.....

.....
.....
.....
.....

.....
.....
.....

.19 adjusting volume

.....
.....
.....
.....

.....19 audiobooks

.....
.....
.....

.....
.....
.....
.....

19 changing tracks

.....
.....
.....

.....
..19 downloading ...

.....
.....
.....
.....

.....23 pausing a track .

.....
.....
.....

.....
.....
.....

.....19 player overview ...

.....
.....

.....
.....

.....
.....19 podcast .

.....
.....

.....
.....
.....
.....

.....
.....19 N P navigation ..

.....
.....

.....
.....
.....
.....

.....
.....10 pausing a track ...

.....
.....

.....
.....
.....
.....

.....
.....19 personal information ..

.....
.....

.....
.....
.....
.....

.....
.....17 phonebook

.....
.....

.....
.....
.....
.....

.....
.....17 photo sharing services uploading to

.....
.....
.....

.....
.....
.....

.....27 photos uploading to a web album

.....
.....
.....

.....27 picture messages

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
...24 PIN ..

.....
.....
.....
.....

.....
.....
.....
.....

...30 PlayNowTM

.....
.....
.....

.....
.....
.....
.....

.....23 PUK

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....30 R S reset .

.....

.....
.....
.....
.....

.....
.....
.....
.....

..31 screen lock

.....
.....
.....

.....
.....
.....
.....

....30 screen lock pattern

.....
.....
.....

.....
.....
.....

.....30 searching music using TrackIDTM technology

.....
.22 track information

.....
.....

.....
.....
.....

.....22 setup guide

.....
.....
.....
.....

.....
.....
.....
.....

6 34 This is an Internet version of this publication. © Print only for private use. .



[You're reading an excerpt. Click here to read official SONY
ERICSSON TXT PRO user guide
http://yourpdfguides.com/dref/3961130](http://yourpdfguides.com/dref/3961130)