



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON TXT. You'll find the answers to all your questions on the SONY ERICSSON TXT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON TXT
User guide SONY ERICSSON TXT
Operating instructions SONY ERICSSON TXT
Instructions for use SONY ERICSSON TXT
Instruction manual SONY ERICSSON TXT



Sony Ericsson
txt

Extended User guide

Sony Ericsson
make.believe



[You're reading an excerpt. Click here to read official SONY ERICSSON TXT user guide](http://yourpdfguides.com/dref/3988426)
<http://yourpdfguides.com/dref/3988426>

Manual abstract:

© Print only for private use. Important information Please read the Important information leaflet before you use your mobile phone. Some of the services and features described in this User guide are not supported in all countries/ regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply. 4 This is an Internet version of this publication. © Print only for private use. Experience more. Discover how. Visit www.sonyericsson.com/support to get the most from your phone. 5 This is an Internet version of this publication. © Print only for private use. Getting started Some basic getting started instructions are printed on the box supplied with your phone.

Below you will also find information to help get you started. To insert the SIM card · Open the cover and insert the SIM card with the gold-colored contacts facing down. To insert or remove a memory card You may have to purchase a memory card separately. 1 2 Remove the battery cover and insert the memory card with the gold-colored contacts facing down. To remove the memory card, first remove the battery cover, then press the hook and draw the memory card outward.

To insert the battery 1 2 Insert the battery with the label side up and the connectors facing each other. Put the battery cover into place. 6 This is an Internet version of this publication. © Print only for private use. 1 2 3 4 5 To turn on the phone Press and hold down the key. Enter your PIN, if requested. Select OK. Select a language. Select Yes to start the setup wizard. If you make a mistake when you enter your PIN, you can press to delete numbers.

Standby After you have turned on the phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use. · To turn off the phone Press and hold down . Before turning off the phone, you must return to standby. Starting your phone for the first time The first time you start your phone, a setup guide helps you enter essential phone settings and import contacts. You can also access the setup guide later from the phone settings. · To set the phone language on startup When you start your phone for the first time, a list of languages appears. Scroll through the list and select a language. To set the time and date at startup When the setup guide prompts you to set the time and date at startup, select Yes. Enter the hour and minute fields to adjust the time. When you're done, select Save. Enter the year, month, and day fields to adjust the date. When you're done, select Save. To import contacts from a SIM card When you start your phone for the first time with a SIM card inserted, the setup guide prompts you to import your SIM contacts.

Select Yes. 1 2 3 4 5 · 7 This is an Internet version of this publication. © Print only for private use. Getting to know your phone Phone overview 1 2 3 4 5 6 7 8 9 Ear speaker Screen Navigation key Selection key Call key Shortcut key Keypad Clear key End key, On/off key 10 11 12 13 14 Handset connector Camera lens Speaker Volume key Connector for charger and USB cable Charging the battery Your phone battery is partly charged when you buy the phone. It may take a few minutes before the battery icon appears on the screen when you connect the phone charger cable to a power source, such as a USB port or a phone charger.

You can still use your phone while it is charging. The battery will start to discharge a little after it is fully charged and then it charges again after a certain time when the phone charger is connected. This is to extend battery life and may result in the charge status showing a level below 100 percent. 8 This is an Internet version of this publication. © Print only for private use. · To charge the phone using the power adapter Connect the phone to a power outlet using the USB cable and the power adapter. 9 This is an Internet version of this publication. © Print only for private use. Screen icons The following icons may appear on the screen: Icon Description Missed call Handsfree connected Ongoing call Text message received Multimedia message received Phone set to silent Radio playing Alarm activated Bluetooth™ function activated Key lock 10 This is an Internet version of this publication. © Print only for private use.

Menu overview Media Facebook Contacts Opera Mini Messaging Write new Inbox/Conversations Messages Email Call voicemail Facebook Picasa™ Google Talk™ TrackID™ Timer Stopwatch Calculator GreenHeart™ Entertainment Online services* PlayNow™ Internet Radio Games TrackID™ Record sound Camera Friends Settings** General Sounds & alerts Display Calls Connectivity * Some menus are operator-, network-, and subscriptiondependent. ** You can use the navigation key to scroll between tabs in submenus. Multiple IM Organizer File manager** Calendar Alarms Tasks Notes Applications** Orkut Twitter Yahoo! mail Gmail YouTube Opera Mini 11 This is an Internet version of this publication. © Print only for private use.

Navigation The main menus are shown as icons. Some submenus include tabs. · · To access the main menu When Menu appears on the screen, press the center selection key. When Menu does not appear on the screen, press the End key, then press the center selection key. To navigate the phone menus Press the center selection key to select Menu. Press the navigation key upwards, downwards, left or right to move through the menus. 1 2 · · · · To select an item Scroll to the item and press the center selection key To scroll between tabs Press the navigation key left or right. To go back one step in a menu Select Back. To end a function Press . To return to standby Press . To delete an item Scroll to the item and press · · · . 12 This is an Internet version of this publication. © Print only for private use. Friends application The Friends application collects communications with your top five friends into one view. All communications Facebook™ or Twitter™ updates, text, and multimedia messages, missed calls appear in standby. This application may not be available in all countries or regions.

1 2 3 4 5 1 2 3 To add a friend to the Friends application From standby, select Friends. Select Add. All contacts in your phone are displayed. Select a contact to add it as one of your five closest friends. You can add one friend at a time. To add another friend, press the navigation key left or right to scroll to another icon. Select Add and press the navigation key up or down to select a contact. To call a friend from the Friends application From standby, select Friends.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/3988426)

[ERICSSON TXT user guide](http://yourpdfguides.com/dref/3988426)

<http://yourpdfguides.com/dref/3988426>

Press the navigation key left or right to select a friend. Scroll to and select Call.

To view a received message in the Friends application When a messaging notification appears, select Friends. Press the navigation key left or right to select the friend who sent the message. Scroll to , then select Open > View. To reply to a message using the Friends application From standby, select Friends. Press the navigation key left or right to select a friend. Scroll to . Select Open > View and scroll to the message you want to reply to. Select Reply to reply to the message. To access Facebook via the Friends application From standby, select Friends. Press the navigation key left or right to select a friend.

and select Open. Scroll to You can also manage Twitter™ events in a similar way. 1 2 3 1 2 3 4 5 1 2 3 1 2 3 1 2 3 To adjust the Friends update frequency From standby, select Frienciipient by selecting a send option. When you're done, select Send. Conversations You can choose whether to view your messages in Conversations or the Inbox.

A messaging conversation shows all messaging communication between you and one of your contacts. 1 2 3 4 · · To send a message from Conversations Select Menu > Messaging. Select Conversations, or select Inbox and then select the Conversations tab. Select a conversation. Write a message and select Send.

To view messages in Conversations Select Menu > Messaging > Inbox > the Conversations tab and select a conversation. Select Menu > Messaging > Conversations and select a conversation. Email Use your phone to send and receive emails through your regular email account. Before you get started, you need the correct Internet settings in your phone. See Internet on page 28. For more information on entering text, see Entering text on page 15. 16 This is an Internet version of this publication. © Print only for private use. 1 2 3 4 5 6 To set up an email account in your phone From standby, select Menu > Messaging > Email. Select an email account.

If the account you want to use is not in the list, select Other. Enter the relevant information under the Display name and Username fields, then select Continue. Enter a password, then select Continue. Select POP3 or IMAP4, then select Continue. Enter the details for the incoming server and the outgoing server, then select Continue. To create and send an email message From standby, select Menu > Messaging > Email. Select Write new. To add a recipient, scroll to the To: field and select Enter email address. Enter the email address and select OK. To enter a subject, scroll to the Subject: field, then enter the subject, and select OK.

To enter your message text, scroll to the Text: field, enter the text, and select OK. Select Continue > Send. 1 2 3 4 5 6 7 17 This is an Internet version of this publication. © Print only for private use. Calling You must turn on the phone and be within range of a network.

1 2 To make a call Enter a phone number (with international country code and area code, if applicable). Press . You can call numbers from the Contacts application and from the call list. · To end a call Press . To answer a call Press .

To reject a call Press . To change the ear speaker volume during a call Press the volume key up or down. To turn off the ringtone without answering a call Press the volume key up or down. To turn on the loudspeaker during a call Select Spkr on. Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing. · · · · · 1 2 3 To make an international call to make a "+" symbol appear. From standby, press Enter the country code, area code (without the first zero) and phone number. Press . Call list You can view information about recent calls.

1 2 To call a number from the call list Press . Scroll to a name or a number and press To clear the call list Press . In the All tab, select Options > Delete all. To confirm, select Yes. · 1 2 3 Emergency calls Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network. 18 This is an Internet version of this publication. © Print only for private use. · To make an emergency call Enter 112 (the international emergency number) and press .

In some countries, other local emergency numbers may also be promoted. Your network operator may have saved these numbers on the SIM card. 19 This is an Internet version of this publication. © Print only for private use. Contacts You can save names, phone numbers and personal information in Contacts. Information can be saved in the phone memory or on the SIM card. 1 2 3 4 5 6 7 8 1 2 3 To add a phone contact Select Menu > Contacts. Scroll to New contact and select Add. Enter the contact's name and select OK. Scroll to New number: and select Add.

Enter the number and select OK. Select a number option. Scroll between the tabs and add other information, if desired, in the relevant fields. Select Save. To edit a phone contact Select Contacts. Scroll to a contact and select Options > Edit contact. Scroll between the tabs, edit information and select Save. Calling contacts 1 2 1 2 To make a call using the Smart search feature Using the keypad, enter a series of digits or letters. All entries that match the sequence of digits or corresponding letters are shown in a list. Scroll to a contact or a phone number in the list and press the Call key.

To turn the Smart search feature on or off Select Menu > Settings > the Calls tab > Smart search. Select an option. 20 This is an Internet version of this publication. © Print only for private use. Music Get the most out of your music player. Listen to and organize music, audio books and podcasts you have transferred to your memory card from a computer, or purchased and downloaded from online stores. Install the Media Go™ application on your computer and transfer content to and from the memory card in your phone. Media Go™ can be downloaded from www.sonyericsson.com/support.

For more information, see Connecting your phone to a computer on page 25. 1 2 3 · To play a track Select Menu > Media > Music. Browse by artist, album, track or my playlists. Scroll to an option and press Select to open it. Scroll to a track and select Play.

To pause a track When a track is playing, press To change tracks When a track is playing, select . · or . · To fast forward and rewind music When a track is playing, press and hold or . · To adjust the audio volume When the music player is playing a track, press the volume key. 21 This is an Internet version of this publication.

© Print only for private use. TrackID™ TrackID™ is a music recognition service. You can search the title, artist and album name for a track you hear playing through a loudspeaker or on the radio.



[You're reading an excerpt. Click here to read official SONY ERICSSON TXT user guide](http://yourpdfguides.com/dref/3988426)
<http://yourpdfguides.com/dref/3988426>

You need the correct Java™ software and Internet settings in your phone to use this function. See Internet on page 28.

@@@ For example, put your music files in the Music folder. Java application files are an exception. @Phone: Select Yes to confirm the mass storage connection. @Computer: On the computer desktop, double-click the My Computer icon. @Select Menu > Settings > Connectivity > Wi-Fi.

Available Wi-Fi® networks are displayed on the screen. Tap a Wi-Fi® network to connect to it. @The next time you come within reach of a previously connected Wi-Fi® network, your phone automatically connects to it. In some locations, open Wi-Fi® networks require you to log in to a web page before you can get access to the network. Contact the relevant Wi-Fi® network administrator for more information. 26 This is an Internet version of this publication. © Print only for private use. Bluetooth™ wireless technology Bluetooth™ wireless technology facilitates wireless connections to other Bluetooth™ devices, for example, a Bluetooth™ headset. You can connect to several devices at the same time or exchange items. A range within 10 meters (33 feet), with no solid objects in between, is recommended for Bluetooth™ communication.

To turn on the Bluetooth™ function Select Menu > Settings > Connectivity > Bluetooth > Turn on. Some countries do not allow you to use Bluetooth™ wireless technology. To show or hide your phone Select Menu > Settings > Connectivity > Bluetooth > Visibility > Show phone or Hide phone. If you select Hide phone, other devices will not be able to identify your phone using Bluetooth™ wireless technology. 1 2 3 To pair the phone with a device To search for available devices, select Menu > Settings > Connectivity > Bluetooth > My devices > New device.

Select a device from the list. Enter a passcode, if required. Make sure that the device you want to pair your phone with has the Bluetooth™ function activated and Bluetooth™ visibility set to Show phone. 1 2 To pair the phone with a Bluetooth™ handsfree Select Menu > Settings. Press the navigation key right to scroll to the Connectivity tab and select Bluetooth > Handsfree > My handsfree > New handsfree.

To receive an item Turn on the Bluetooth™ function and set the Visibility to Show phone. When you receive an item, follow the instructions that appear. To send an item using the Bluetooth™ function Select, for example, Menu > Organizer > File manager > Camera album. Scroll to an item and select Options > Send > Via Bluetooth. 1 2 1 2 27 This is an Internet version of this publication. © Print only for private use. Internet You need the correct Internet settings in your phone. If the settings are not in your phone, you can go to www.sonyericsson.com/support or ask your service provider for more information.

Make sure you have a phone subscription that supports data transmission. 1 2 1 2 To select an Internet profile Select Menu > Settings > Connectivity > Internet settings > Internet profiles > Connect using:. Select an account. To use the browser Select Menu > Entertainment > Internet > Options > Go to. Select an option. To exit the browser When you are browsing, press . 28 This is an Internet version of this publication. © Print only for private use. More features Alarms You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off.

1 2 3 4 To set an alarm Select Menu > Organizer > Alarms. Scroll to an alarm and select Edit. Switch among the tabs and set the time, the alarm signal and other information, if desired. Select Save. If you select the radio as your alarm signal, remember to keep a handsfree device attached to the phone.

The radio uses the handsfree as an antenna. Ringtones and wallpapers Wallpapers are used to change the appearance of the screen. 1 2 3 1 2 1 2 To set the ringtone volume Select Menu > Settings > Sounds & alerts > Ring volume. Press the navigation key left or right to change the volume. Select Save.

To set a ringtone Select Menu > Settings > Sounds & alerts > Ringtone. Find and select a ringtone. To set the vibrating alert Select Menu > Settings > Sounds & alerts > Vibrating alert. Select an option. To use a photo as wallpaper Select Menu > Organizer > File manager > Camera album. Scroll to the photo and select Options > Use as > Wallpaper. Keypad lock You can use the keypad lock to avoid accidental dialling. Incoming calls can be answered without unlocking the keypad. Calls to the international emergency number 112 can still be made. 1 2 To activate the automatic keylock Select Menu > Settings > General > Security > Automatic keylock.

Select an option. SIM card lock This lock only protects your subscription. Your phone will work with a new SIM card. If the SIM card lock is on, you have to enter a PIN when the phone starts up. If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your service provider. 29 This is an Internet version of this publication. © Print only for private use. 1 2 1 2 3 4 To activate the SIM card lock Select Menu > Settings > General > Security > SIM protection > Protection > On. Enter your PIN and select OK.

To edit the SIM card PIN Select Menu > Settings > General > Security > SIM protection > Change PIN. Enter your PIN and select OK. Enter a new PIN and select OK. To confirm, re-enter the new PIN and select OK. Phone lock The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged.

You can change the phone lock code (which is 0000 by default) to any four-to-eight-digit personal code. If the phone lock is set to Automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone. If the phone lock is on and the keylock is also active, you will be asked to input the phone lock code before you can use the phone. If the phone lock is off, you only need to unlock the keylock to use the phone. 1 2 3 1 2 3 4 1 2 To set the phone lock Select Menu > Settings > General > Security > Phone protection > Protection.

Select an option. Enter the phone lock code and select OK. To change the phone lock code Select Menu > Settings > General > Security > Phone protection > Change code. Enter the old code and select OK. Enter the new code and select OK. Enter the new code again and select OK. To turn off the phone lock Select Menu > Settings > General > Security > Phone protection > Protection > Off. Enter your phone lock code and select OK. 30 This is an Internet version of this publication.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/3988426)

[ERICSSON TXT user guide](http://yourpdfguides.com/dref/3988426)

<http://yourpdfguides.com/dref/3988426>

Troubleshooting Some problems require you to call your network operator, but you can correct most problems yourself. Remove the SIM card before handing your phone in for repair. For more support, go to www.sonyericsson.com/support. Restart your phone every day to free memory. Do a Master reset if you are having problems with memory capacity or if the phone is working slowly. My phone is not working as expected If you experience problems with your phone, check these tips before you try anything else: Restart your phone. Remove and re-insert the SIM card. Then restart your phone.

Force a restart of the phone if the phone hangs and can't be restarted normally. Update your phone software. Updating your phone ensures optimal performance and provides the latest enhancements. Reset your phone. Be patient while resetting your phone.

Restarting the phone during a reset procedure may damage the phone permanently. Master reset If you experience problems with your phone, such as screen flickering, screen freezing or navigation problems, you should reset the phone. To reset the phone Select Menu > Settings > General > Master reset and select an option. Reset settings resets all changes that you have made in your phone to default. Reset all deletes all user data such as contacts, messages, pictures and sounds in your phone.

No battery charging icon appears when phone starts charging It may take a few minutes before the battery icon appears on the screen. No network coverage . . . Your phone is in Flight mode. Make sure Flight mode is turned off. Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are. The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. In this case, contact the nearest Sony Ericsson service center. Emergency calls only You are within range of a network, but you are not allowed to use it.

However, in an emergency, some network operators allow you to call the international emergency number 112. See Emergency calls on page 18 for more information. SIM locked You have entered your PIN incorrectly three times in a row. To unlock the phone, you need the PUK (Personal Unblocking Key) provided by your operator. 31 This is an Internet version of this publication. © Print only for private use. PUK blocked. Contact service provider. You have entered your PUK code incorrectly 10 times in a row. Please contact your service provider.

32 This is an Internet version of this publication. © Print only for private use. Legal information Sony Ericsson txt CK13i This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved. ©Sony Ericsson Mobile Communications AB, 2011 Publication number: 1253-3561.1 Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

@@ringtones. @@@@@@Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guarantee the availability or performance of any thirdparty websites or offered services. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved.

All other trademarks are property of their respective owners. All illustrations are for illustration only and may not accurately depict the actual phone.

Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. "Export

Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to import and export regulations of the European Union, the United States and other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limiting the foregoing, and as an example, the user and any possessor of the product: (1) must not knowingly export or re-export Products to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 428/2009; (2), must comply with U.S. government Export Administration Regulations ("EAR", 15 C.

F.R. §§ 730-774, [http:// www.bis.doc](http://www.bis.doc).

gov/) administered by Department of Commerce, Bureau of Industry and Security; and (3) must comply with economic sanctions regulations (30 C.F.R. §§ 500 et. seq.

., <http://www.treas.gov/offices/enforcement/ofac/>) administered by the U.S. Department of Treasury, Office of Foreign Assets Control. The user and any possessor of the product may not transport or deliver the product, its accessories or separate software to any country, region, entity or person prohibited by these regulations." 33 This is an Internet version of this publication. © Print only for private use. Index adjusting volume .

.....

....

....

.....

.....

....

....

..21 audio adjusting volume

.....

....

.....
.....

.....21 audio books ...

.....
.....
.....

.....
.....
.....
.....

.....21 battery ..

.....
.....
.....

.....
.....
.....
.....

.....
.....

....8 inserting .

.....

.....
.....
.....
.....

.....
.....
.....

6 changing music tracks

.....
.....
.....
.....

...21 charging

.....
.....
.....

.....
.....
.....
.....

...8 contacts adding phone contacts ..

.....
.....
.....

.....
.....

...20 Smart search ..

.....

.....
.....
.....
.....

.....20 conversations .

.....
.....
.....
.....
.....
.....
.....

.....16 A B C M music ...

.....
.....
.....
.....
.....
.....

...21 adjusting volume ..

.....
.....
.....
.....

...21 audio books .



[You're reading an excerpt. Click here to read official SONY
ERICSSON TXT user guide
http://yourpdfguides.com/dref/3988426](http://yourpdfguides.com/dref/3988426)

.....
.....
.....
.....

.....
.....
.....
.....
.....21 changing music tracks

.....
.....
.....
.....

.....21 podcasts

.....
.....
.....
.....

21 PlayNow™

.....
.....
.....
.....
.....
.....

...23 P S setup guide

.....
.....
.....
.....
.....
.....

.....7 SIM card inserting ...

.....
.....
.....
.....
.....
.....

.....6 U USB connection ..

.....
.....
.....
.....
.....
.....

..25 W Wi-Fi®

.....

.....
.....
.....
.....
.....
.....

.26 34 This is an Internet version of this publication. © Print only for private use. .



[You're reading an excerpt. Click here to read official SONY
ERICSSON TXT user guide
http://yourpdfguides.com/dref/3988426](http://yourpdfguides.com/dref/3988426)