




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON U1I. You'll find the answers to all your questions on the SONY ERICSSON U1I in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON U1I
User guide SONY ERICSSON U1I
Operating instructions SONY ERICSSON U1I
Instructions for use SONY ERICSSON U1I
Instruction manual SONY ERICSSON U1I

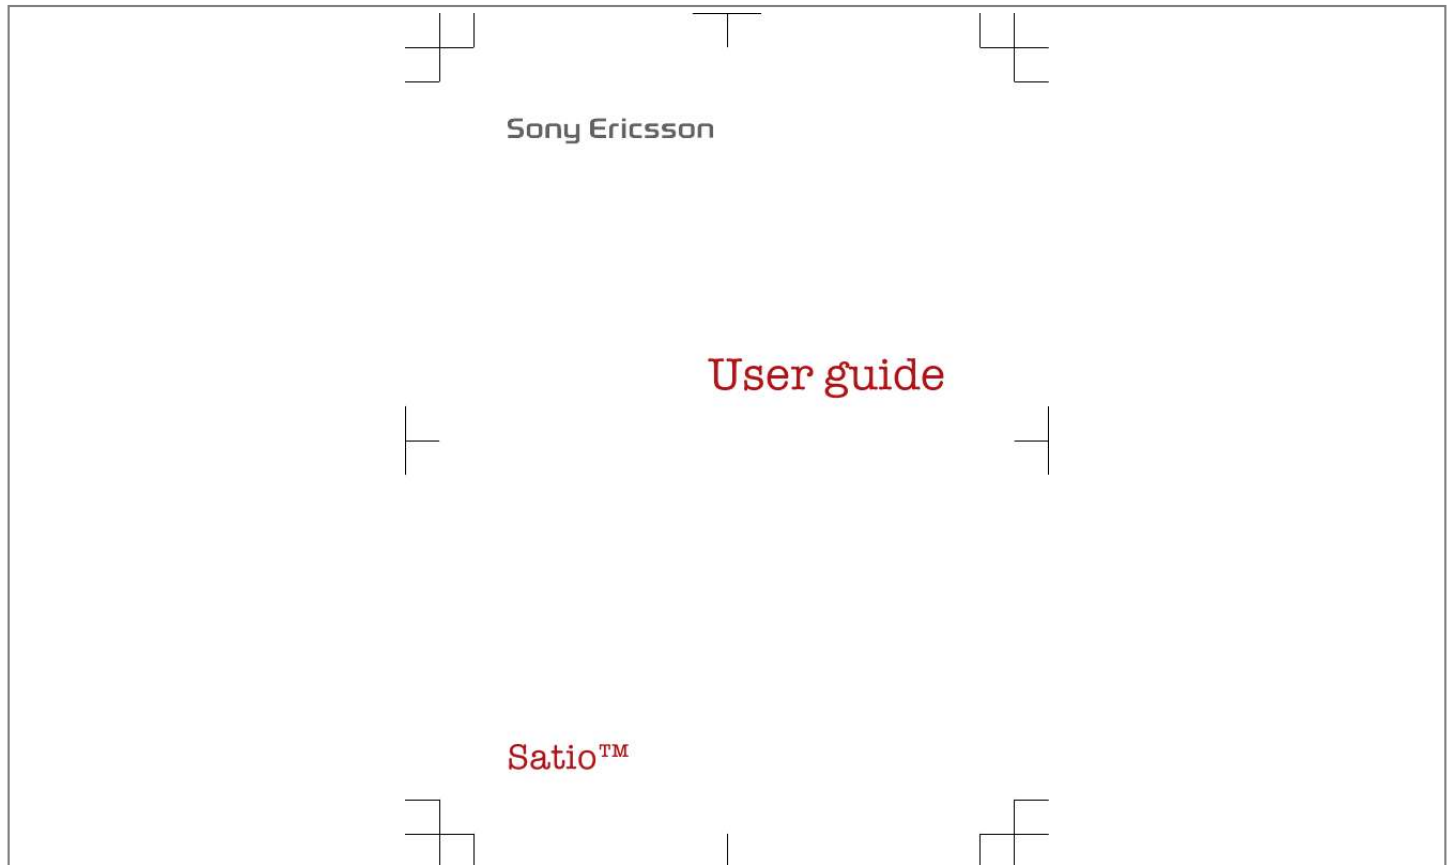

[You're reading an excerpt. Click here to read official SONY ERICSSON U1I user guide](http://yourpdfguides.com/dref/2712702)
<http://yourpdfguides.com/dref/2712702>

Manual abstract:

@@Fill it with pop and let it rock. Share your life in pictures. Or why not go online for the latest updates? Your new phone is the key to a wider world. And it's just around the corner. Get started with this User guide. And join us online to get the full picture. Music, games, apps, updates, downloads, support and more. @@@@To insert the SIM card 1 Remove the battery cover. 2 Pull out the SIM card holder. @@4 Push the holder back into place.

3 To insert the battery 1 Insert the battery with the label side up and the connectors facing each other. 2 Put the battery cover into place. Turning on the phone To turn on the phone 4 1 Press and hold down . 2 Enter your SIM card PIN, if requested, and select OK. 3 The first time you turn on the phone, follow the instructions to use the setup wizard for basic settings and useful tips.

You can find Help on most applications in Organiser or you can access Help from within a specific application by selecting Options. To access the general Help in your phone · Select Menu > Organiser > Help. To view Help when you are in an application · Select Options > Help. Help Updating your phone You can view your phone software version, phone model name, or update your software from a server. To check for updates 1 Select Menu > Settings > Phone > Phone management > Device updates.

2 Select Options > Check for updates. 5 Phone overview 1 On/off key 2 Loud speaker 3 Charging/message indicator 4 Proximity sensor 5 Ear speaker 6 Video call camera 7 Brightness sensor 8 Keylock key 9 Screen 10 Connector for charger, handsfree and USB cable 11 Memory card cover 12 Call key 13 Main menu key 14 End key 10 1 2 3 4 5 6 7 8 9 11 12 13 14 6 15 Main camera 16 Xenon flash 17 Volume, digital zoom keys 18 LED light/AF assisting light 19 Video recording indicator 20 Camera brightness sensor 21 Camera view key 22 Camera mode key 23 Camera lens cover 24 Camera key 25 Strap holder 15 16 17 18 19 20 21 22 23 24 25 7 Menu overview* Messaging Internet Camera Adobe PDF, Quickoffice, Help Settings Personal Photo, Music, Video Contacts PlayNow™ Media Profiles, Themes, Standby Phone Radio, TrackID™, Chat, Record sound Google maps, Location, Wisepilot Calendar Calls** Location services Entertainment Date and time, Language, Display, Download settings, Sensor settings, Touch input, Accessories, Application sett., Phone mgmt. Application mgr Installed apps., Installation files, Install settings Calling File manager, My applications, Clock, RoadSync, Google, Search, Notes, Converter, Calculator, Organiser Call, Speed dialling, Voicemail, Divert calls, Call barring Connectivity Network, Wi-Fi, Bluetooth, USB, Destinations, 8 Connection mgr, Data transfer, Remote drives, Video sharing, Admin. settings * Some menus are operator-, network- and subscription-dependent. ** You can use touch functionality to scroll between tabs in submenus. For more information, see Navigation on page 11. 9 Status icons Status icons appear at the top of the screen. You can tap status icons to view more information or change settings.

Battery fully charged Network signal strength Messages in the outbox GSM available Missed call Handsfree connected Call diverted Text message received New email received Headphone inserted GPS connected Alarm activated Bluetooth™ connected Keylock activated USB data transferring Data synchronising Flight mode activated Secure Wi-Fi™ network connected Wi-Fi™ network connected 10 3G available HSDPA available EGPRS available Navigation You can move through menus with your fingertips or with a stylus. Tap or double-tap an item to select or open it. You can also switch between running applications. To access the main menu · Press the main menu key. To lock or unlock the phone · Slide the keylock key. To view running applications 1 Press and hold down the main menu key. 2 To switch to a running application, tap it. Leaving applications running in the background increases the demand on battery power and reduces the battery life. To end a function · In most cases, select Options > Exit. To delete items · In most applications, to delete items such as files, folders, messages, or media files, select an item, and then select Options > Delete.

11 Standby After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready to use. @@@@The standby music player is activated when you play music in Media. The touchbar provides quick access to four applications: 12 Number entry make calls Media go to Media Messaging send and receive messages Search search the phone Favourites view The Favourites view provides quick access to your favourite contacts.

To add contacts to Favourites 1 Tap . 2 Tap and select the contacts you wish to add. To call a favourite contact 1 Tap . 2 Tap a contact and select Call. Bookmarks view The Bookmarks view provides quick access to your favourite websites.

You can add and remove bookmarks. You need the correct Internet settings to visit websites. For cost information, contact your service provider. To add bookmarks 1 Tap . 2 Tap and select the bookmarks you wish to add. Photos view The Photos view provides quick access to your 200 most recently taken photos. The most recently taken photo is displayed in the centre of the screen. All photos are reduced and then cropped to 360x360 pixels. 13 To set a photo as wallpaper 1 Tap . 2 Tap a photo and select Set as wallpaper.

Shortcuts view The Shortcuts view provides a list of shortcuts to different applications and bookmarks. You can personalise the shortcuts you wish to show. To change shortcut settings 1 Tap . 2 Tap . 3 Select a shortcut and tap Options > Change. 4 When Shortcut type: appears, select Application or Bookmark. 5 Double-tap an item. 6 To save your settings, select Back. To charge the battery 14 1 Connect the charger to the phone. It takes approximately 2. 5 hours to fully charge the battery. Activate the screen with a tap to view the charge status. 2 Remove the charger by tilting the plug upwards. You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.

5 hours. You can interrupt the charging without damaging the battery. Memory card You may have to purchase a memory card separately. Your phone supports memory cards, adding more storage space to your phone. The memory card can also be used with other compatible devices.

You can move content between the memory card and the phone memory. To insert or remove a memory card 1 Open the memory card cover. 2 Insert the memory card with the gold-coloured contacts facing down. 15 3 To remove the memory card, press and select Remove memory card, and then press the edge of the memory card to release and remove it. Entering text You can enter letters, numbers and special characters using the on-screen keyboard, alphanumeric keypad or handwriting recognition.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2712702)

[ERICSSON UII user guide](http://yourpdfguides.com/dref/2712702)

<http://yourpdfguides.com/dref/2712702>

You can switch between these input methods. Text input icons These icons may appear in the text input window. Tap to accept the text in the input window and close the on-screen keyboard view Tap to open the input options menu to change, for example, the Writing language, or view Help Tap to switch character cases Tap to display numbers and symbols , Tap to move the cursor left or right Tap to delete a character Tap to enter a space Tap to insert a carriage return Tap to change to another input method: Mini QWERTY keyboard, Fullscr. QWERTY keyboard, Alphanumeric keypad or Handwriting 16 When using Mini QWERTY keyboard, tap and hold to move the input window around the screen When using handwriting recognition, tap to open the symbol table When using handwriting recognition, tap to switch to number input mode Tap to turn predictive text input modes on or off, change the character case, and switch between letter and number modes When using handwriting recognition, tap to switch character case To copy and paste text 1 Tap to place the cursor at the beginning of the text you want to select for copying. Then drag your fingertip or stylus to the end of the text.

2 To copy the selected text, tap and select Copy. @@@@You can also manage photos in albums on the web. @@@@To get tips for an icon in the bars, touch and hold the icon. To update media libraries manually · Tap in the touchbar. @@To go to the play view · Tap at the top of the screen. @@@@2 Tap the files to highlight them as marked. 3 To exit mark mode, tap . 18 Photo You can view, send and manage photos in your phone. You can also edit and arrange your online photo albums. To view a photo in full screen 1 Select Menu > Media > Photo.

2 Select a view option and tap a thumbnail to view the photo. 3 To view the next or previous photo, flick left or right. To edit a photo 1 When viewing a photo, tap > . 2 Select Options and select an item. Photo tags You can manage your photos easily by creating tags for them.

Only photos with EXIF info can be tagged. To create a tag 1 When viewing a photo, tap > . 2 Tap , enter a new name and select OK. 3 Select a tag icon. 4 Select the created tag to add it to your photo.

To tag a photo 1 When in play view or mark mode, tap 2 Select a tag. > . Music You can listen to music, audiobooks, podcasts and your recordings. 19 Playback controls The following playback controls may appear in your music player and video player: Pause Play Touch and hold to rewind. Tap to go to the previous track or video clip Touch and hold to fast forward. Tap to go to the next track or video clip Additional music controls The following music controls may appear in your music player: Turn on shuffle to play tracks in the current playlist in a random order Turn off shuffle Repeat all tracks in the current playlist Repeat the current track several times Disable repeating tracks To play music or other audio tracks 1 Select Menu > Media > Music. 2 Browse for tracks in Artists, Albums, Tracks, Playlists, Audiobooks, Podcasts and My recordings. 3 Tap a track. 20 To change the volume · Press the volume key up or down. To minimise the music player 1 When the music player is open, tap .

2 To restore the music player on the screen, tap may appear as the album cover of the current track. Playlists You can create playlists to organise your music. You can add tracks and folders to a playlist. It may take a few minutes for the phone to create a playlist. To create a playlist 1 gh a loudspeaker, select Menu > Entertainment > TrackIDTM > Start. For best results, use TrackIDTM in a quiet area. You get a vibrating alert when the recording is finished or if it fails.

Calls Making and receiving calls You need to turn on your phone and be within range of a network. The touch screen is disabled automatically during calls when you place your phone next to your ear. To make a call 1 Select to open picture, video clip and sound, as desired.

6 Select to send the message. When manually entering the phone numbers of multiple recipients, use a semicolon to separate their numbers. Internet To start the Internet browser 1 Select Menu > Internet. 2 Tap , and enter a web address. 3 Select Go to.

Location services Your phone has a GPS receiver that uses satellite signals to calculate your location. You can get help to find your way to a destination and save your favourite locations. With information from mobile towers near you, you may be able to view your approximate location on a map. To access location services · Select Menu > Location services, and select an application. Using GPS Your location can be found when you have a clear view of the sky.

If your location is not found after a few minutes, move to another location. @@@@Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN. @@@@Your PIN, PIN2 and PUK are supplied by your network operator. To unblock your SIM card 1 When PIN blocked. Enter PUK: appears, enter your PUK and select OK. 2 Enter a new four-to-eight-digit PIN and select OK. 3 Re-enter the new PIN and select OK. @@@@It is important that you remember your new code. If you forget it, you need to take your phone to your local Sony Ericsson retailer.

@@@@3 Enter your phone lock code and select OK. @@@@Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/ or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved. ©Sony Ericsson Mobile Communications AB, 2009 Publication number: 1227-3864.1 Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone.

Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

@@TrackIDTM is powered by Gracenote Mobile MusicIDTM. @@@@Media Go is a trademark or registered trademark of Sony Media Software and Services. Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance. GoogleTM and Google MapsTM are trademarks or registered trademarks of Google, Inc. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2712702)

[ERICSSON UII user guide](http://yourpdfguides.com/dref/2712702)

<http://yourpdfguides.com/dref/2712702>

Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. RoadSync is a trademark or registered trademark of DataViz, Inc. Quickoffice is a registered trademark of Quickoffice, Inc. Wisepilot is a registered trademark of Appello Systems AB. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone. 38 www.

sonyericsson.com Sony Ericsson Mobile Communications AB SE-221 88 Lund, Sweden 1227-3864.1 .



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON UI user guide](#)

<http://yourpdfguides.com/dref/2712702>