



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON W205. You'll find the answers to all your questions on the SONY ERICSSON W205 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY ERICSSON W205**  
**User guide SONY ERICSSON W205**  
**Operating instructions SONY ERICSSON W205**  
**Instructions for use SONY ERICSSON W205**  
**Instruction manual SONY ERICSSON W205**

Sony Ericsson

User guide

W205

This is the Internet version of the User's guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY ERICSSON W205 user guide](http://yourpdfguides.com/dref/2712731)  
<http://yourpdfguides.com/dref/2712731>

### Manual abstract:

@@@For additional phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun). @@@@© Print only for private use. 2 Preparing the phone SIM card The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger and battery (if inserted) before you insert or remove the SIM card. PIN You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

If you enter the wrong PIN three times in a row, the SIM card is blocked. See SIM card lock on page 34. @@@@Remove the battery, if inserted. 2 Press the right edge of the SIM card and slide to remove it. Do not use any sharp objects to remove the battery cover.

@@@@You can move content between a memory card and the phone memory. You may have to purchase a memory card separately. We recommend that you install Java™ applications in the phone memory. To insert a memory card 1 2 This is the Internet version of the User's guide. © Print only for private use.

4 1 Open the cover of the memory card slot. 2 Insert the memory card with the gold-coloured contacts facing down. To remove a memory card 1 Open the cover of the memory card slot. 2 Press the edge of the memory card to release and remove it. Turning on the phone To turn on the phone 1 Press and hold down . 2 Open the slider and enter your PIN, if requested. 3 Select OK. 4 Select a language. 5 Select Yes to use the setup wizard. If you make a mistake when you enter your PIN, you can press to delete numbers from the screen.

Standby After you have turned on the phone and entered your PIN, the name of the network operator appears. This view is called standby. You phone is now ready for use. To turn off the phone · Press and hold down . Before turning off the phone, you must return to standby. This is the Internet version of the User's guide. © Print only for private use. 5 Phone overview 1 2 3 4 5 6 7 Ear speaker Screen Selection keys Call key Shortcut key WALKMAN™ shortcut key Navigation key/ Walkman™ player controls Memory card slot End key, on/off key C key (Clear) Silent key 11 8 3 4 5 6 7 9 10 2 1 8 9 10 11 This is the Internet version of the User's guide. © Print only for private use. 6 12 13 14 15 Camera Strap hole Volume key Connector for charger, handsfree and USB cable Loudspeaker 12 13 14 16 16 15 This is the Internet version of the User's guide.

© Print only for private use. 7 Screen icons These icons may appear on the screen. Icon Description Missed call Handsfree connected Ongoing call Text message received Multimedia message received Predictive text input activated Phone set to silent Radio playing Alarm activated Bluetooth™ function activated This is the Internet version of the User's guide. © Print only for private use. 8 Network coverage The network bars show the strength of the GSM network in your area.

You should move to another location if you have problems calling and network coverage is poor. No network means you are not in range of a network. · = Good network coverage · = Average network coverage Battery status · · = The phone battery is fully charged = The phone battery is empty This is the Internet version of the User's guide. © Print only for private use. 9 To charge the battery 1 Connect the charger to the phone with the power icon on the charger facing upwards.

It takes approximately 3 hours to fully charge the battery. Press a key to view the screen. 2 To remove the charger, tilt the plug upwards. The phone battery is partly charged when you buy it. It may take a few minutes before the battery icon appears on the screen. You can use your phone while it is charging. You can charge the battery at any time and for more or less than 3 hours. You can interrupt the charging without damaging the battery. This is the Internet version of the User's guide. © Print only for private use.

10 Menu overview\* Organiser File manager\*\*, Alarms, Calendar, Torch, Tasks, Notes, Timer, Stopwatch, Calculator Camera Calls\*\* All, Answered, Dialed, Missed Internet Messaging Write new, Inbox, Call voicemail, Drafts, Outbox, Sent messages, Saved msgs, Templates, Settings Contacts Normal Myself, New contact Multi phonebook \*\*\* Shared ph. book, Phonebook 1, Phonebook 2, Phonebook 3, Phonebook 4, Myself, New contact Entertainment Online services\*, Video player, TrackID™, My Games, Radio, Record sound WALKMAN Settings\*\* General, Sounds & alerts, Display, Calls, Connectivity \* Some menus are operator-, network- and subscription-dependent. \*\* You can use the navigation key to scroll between tabs in submenus. \*\*\* Multiple phonebook mode with tabs. This is the Internet version of the User's guide. © Print only for private use. 11 Navigation The main menus are shown as icons. Some submenus include tabs. To access the main menu · When Menu appears on the screen, press the centre selection key to select Menu. · When Menu does not appear on the screen, press the end key and then press the centre selection key to select Menu.

To navigate the phone menus 1 Press to select Menu. 2 Press , , or to move through the menus. To select an item · Scroll to the item and press To scroll between tabs · Press or to go to a tab. . This is the Internet version of the User's guide.

© Print only for private use. 12 To go back one step in the menu · Select Back. To end a function · Press . To return to standby · Press . To delete an item · Scroll to the item and press .

Shortcuts You can use the navigation key shortcuts from standby or use the shortcut menu to get quick access to certain functions. To use navigation key shortcuts · Press , , or to go directly to a function. To edit a navigation key shortcut · Select Menu > Settings > General > Shortcuts. The WALKMAN shortcut cannot be changed. To open the shortcut menu · Press . To add a shortcut 1 Press . 2 Scroll to New shortcut and select Add. To delete or move a shortcut 1 Press . 2 Scroll to a shortcut and select Options. 3 Select an option.

This is the Internet version of the User's guide. © Print only for private use. 13 To set the phone to silent · Press and hold down . Entering text You can use multitap text input or Zi™ text input to enter text. The Zi text input method uses a built-in dictionary. By using the Zi text input you only have to press each key once. Continue writing a word even if it appears to be wrong. To enter text using Zi text input 1 For example, to write the word "Jane", press , , .



[You're reading an excerpt. Click here to read official SONY ERICSSON W205 user guide](http://yourpdfguides.com/dref/2712731)  
<http://yourpdfguides.com/dref/2712731>

2 You now have several options: · If the word shown is the one you want, press to accept and add a space. To accept a word without adding a space, press . · If the word shown is not the one you want, press or repeatedly to view alternative words. To accept a word and add a space, press . · To enter full stops and commas, press and then or repeatedly. To enter text using multitap · Press until the character you want appears. · Press to add a space. · Press to enter punctuation marks. To use the keys when entering text · To change text input method, press and hold down . · To change writing language, press and hold down . 14 This is the Internet version of the User's guide. © Print only for private use. · To shift between upper-case letters, lower-case letters and numbers, press . · To delete characters, press . · To delete a whole word, press and hold down . · To enter numbers, press and hold down . To add a word to the dictionary 1 When you enter text using Zi text input, select Options > Spell word. 2 Enter the word using multitap and select Save. Calling You must turn on the phone and be within range of a network. To make a call 1 Enter a phone number (with international country code and area code, if applicable). 2 Press . You can call numbers from your contacts and call list.

See Contacts on page 17, and Call list on page 16. To end a call · Press . To answer a call · Press . To reject a call · Press . This is the Internet version of the User's guide. © Print only for private use. 15 To change the ear speaker volume during a call · Press the volume key up or down. To turn off the ringtone without answering a call · Press the volume key up or down. To turn on the loudspeaker during a call · Select SpkrOn. Do not hold the phone to your ear when using the loudspeaker.

This could damage your hearing. To make an international call 1 Press and hold down until a "+" sign appears. 2 Enter the country code, area code (without the first zero) and phone number. 3 Press . Call list You can view information about recent calls.

To call a number from the call list 1 Press . 2 Scroll to a name or a number and press To clear the call list 1 Press . 2 In the All tab, select Options > Delete all. 3 To confirm, select Yes. .

Emergency calls Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network. 16 This is the Internet version of the User's guide. © Print only for private use. To make an emergency call · Enter 112 (the international emergency number) and press . @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ 17 This is the Internet version of the User's guide. @@ You can select this mode if the phone is used by one person only. @@ These appear as tabs. @@ Contacts in an individual phonebook can be shown in only one or in several individual phonebooks. You can select this mode if the phone is used by more than one person.

See the phonebook setup wizard for first time use. The setup wizard will appear as multimedia message before sending it, press and select . 4 When the message is ready, select Cont.. If the message consists of more than one slide, select Yes to preview or select No to skip the preview. 5 Select Contacts look-up and select a recipient. 6 Select Send. Sending and receiving phones must have subscriptions that support multimedia messaging. This is the Internet version of the User's guide. © Print only for private use.

21 Walkman™ To play music 1 Press and select Options > My music. 2 Browse by artist, album, track or playlist. Scroll to a list and select Open. 3 Scroll to a title and select Play. To stop playing music · When in Play view, press .

Transferring music You can transfer album. 2 Scroll to a photo and select Options > Send. 3 Select an option. See To send an item using the Bluetooth function on page 30. See To create and send a multimedia message on page 21.

To record a video clip 1 Select Camera and scroll to . 2 Select Record to start recording. 3 To stop recording, select Stop. The video clip is automatically saved. Do not record with a strong light source in the background. To view video clips 1 Select Menu > Organiser > File manager > Videos. 2 Scroll to a video clip and select Play. You can also find video clips in Entertainment > Video player. Scroll to a video clip and select Play to view it. 28 This is the Internet version of the User's guide.

© Print only for private use. Transferring photos and video clips You can use Bluetooth™ wireless technology and the USB cable to transfer photos and video clips between your computer and phone. For more information, see Bluetooth™ wireless technology on page 29 and To transfer files in file transfer mode using a USB cable on page 23. Bluetooth™ wireless technology Bluetooth™ wireless technology makes wireless connection to other Bluetooth™ devices possible, for example, a Bluetooth™ headset. You can connect to several devices at the same time or exchange items. A range within 10 metres (33 feet), with no solid objects in between, is recommended for Bluetooth™ communication. To turn on the Bluetooth™ function · Select Menu > Settings > Connectivity > Bluetooth > Turn on. Some countries do not allow you to use Bluetooth™ wireless technology. To show or hide your phone · Select Menu > Settings > Connectivity > Bluetooth > Visibility > Show phone or Hide phone. If set to hide, other devices will not be able to identify your phone using Bluetooth™ wireless technology.

29 This is the Internet version of the User's guide. © Print only for private use. To pair the phone with a device 1 To search for available devices, select Menu > Settings > Connectivity > Bluetooth > My devices > New device. 2 Select a device from the list. 3 Enter a passcode, if required.

Make sure that the device you want to pair your phone with has the Bluetooth™ function activated and Bluetooth™ visibility set to Show phone. To pair the phone with a Bluetooth handsfree 1 Select Menu > Settings > Connectivity > Bluetooth > Handsfree > My handsfree > New handsfree. 2 Scroll to a device and select Add. To receive an item 1 Turn on the Bluetooth function and set the Visibility to Show phone. 2 When you receive an item, follow the instructions that appear.

To send an item using the Bluetooth function 1 Select, for example, Menu > Organiser > File manager > Camera album. 2 Scroll to an item and select Options > Send > Via Bluetooth. Internet You need the correct Internet settings in your phone. If the settings are not in your phone, you can go to This is the Internet version of the User's guide.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/2712731)

[ERICSSON W205 user guide](http://yourpdfguides.com/dref/2712731)

<http://yourpdfguides.com/dref/2712731>

@@@ Select an account. @@ Select an option. @@ You can create subfolders where you can save your files. @@ Find a file in a folder and select Options > Information. @@ Find a file in a folder and select Options > Manage file. @@@@ To call your voicemail service · Press and hold down .

Alarms You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. To set the alarm 1 Select Menu > Organiser > Alarms. 2 Scroll to an alarm and select Edit. 3 Scroll between the tabs, set the time, the alarm signal and other information if needed. 4 Select Save. Keep the handsfree inserted when you select radio as alarm signal. The radio signal sounds through the loudspeaker. To silence the alarm 1 When the alarm sounds, press any key. This is the Internet version of the User's guide.

© Print only for private use. 32 2 To repeat the alarm, select Snooze. Torch To use the torch · To turn on the torch, select Menu > Organiser > Torch. · To turn off the torch, select Back. Ringtones and themes Themes are used to change the appearance of the screen.

To set the ringtone volume 1 Select Menu > Settings > Sounds & alerts > Ring volume. 2 Press or to change the volume. 3 Select Save. To set a ringtone 1 Select Menu > Settings > Sounds & alerts > Ringtone. 2 Find and select a ringtone.

To set the vibrating alert 1 Select Menu > Settings > Sounds & alerts > Vibrating alert. 2 Select an option. To set a theme 1 Select Menu > Settings > Display > Themes. 2 Scroll to a theme and select Set. To use a photo as wallpaper 1 Select Menu > Organiser > File manager > Camera album. This is the Internet version of the User's guide. © Print only for private use. 33 2 Scroll to a picture and select Options > Use as > Wallpaper. Keypad lock You can set this lock to avoid accidental dialling. Incoming calls can be answered without unlocking the keypad.

Calls to the international emergency number 112 can still be made. To use the automatic keylock 1 Select Menu > Settings > General > Security > Auto keylock. 2 Select an option. SIM card lock This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN. If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator. To unblock the SIM card 1 When PIN blocked. To unblock, enter your PUK code provided by your network operator.

is displayed, enter your PUK and select OK. 2 Enter a new PIN and select OK. 3 To confirm, re-enter the new PIN and select OK. To use the SIM card lock 1 Select Menu > Settings > General > Security > PIN codes > SIM protection > Protection > On. 2 Enter your PIN and select OK.

34 This is the Internet version of the User's guide. © Print only for private use. To edit the PIN 1 Select Menu > Settings > General > Security > PIN codes > SIM protection > Change PIN. 2 Enter your PIN and select OK. 3 Enter a new PIN and select OK.

4 To confirm, re-enter the new PIN and select OK. Phone lock The phone lock protects the phone against unauthorised use if it is stolen and the SIM card is exchanged. You can change the phone lock code (which is 0000 by default) to any four-to-eight-digit personal code. If the phone lock is set to Automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone. To use the phone lock 1 Select Menu > Settings > General > Security > PIN codes > Phone protection > Protection. 2 Select an option. 3 Enter the phone lock code and select OK. To change the phone lock code 1 Select Menu > Settings > General > Security > PIN codes > Phone protection > Change code. 2 Enter the old code and select OK. 3 Enter the new code and select OK.

4 Repeat the code and select OK. To unlock the phone 1 Select Menu > Settings > General > Security > PIN codes > Phone protection > Protection > Off. 2 Enter your phone lock code and select OK. This is the Internet version of the User's guide. © Print only for private use. 35 Troubleshooting Some problems require you to call your network operator, but you can correct most problems yourself. Remove the SIM card before handing your phone in for repair. For more support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Restart your phone every day to free memory. Do a Master reset if you are having problems with memory capacity or if the phone is working slowly. Master reset If you experience problems with your phone, such as screen flickering, screen freezing or navigation problems, you should reset the phone. To reset the phone · Select Menu > Settings > General > Master reset and select an option. Reset settings resets all changes that you have made in your phone to default. Reset all deletes all user data such as contacts, messages, pictures and sounds in your phone. This is the Internet version of the User's guide. © Print only for private use. 36 Legal information Sony Ericsson W205 Walkman™ This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/ or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice.

© All rights reserved. @@@@ Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. @@@@ and any use of such mark by Sony Ericsson is under license.

© TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

This is the Internet version of the User's guide. © Print only for private use. 37 WALKMAN, WALKMAN logo, Sony, Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Zi™ predictive text input technology is used under license from Zi Corporation. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc.



[You're reading an excerpt. Click here to read official SONY ERICSSON W205 user guide](http://yourpdfguides.com/dref/2712731)  
<http://yourpdfguides.com/dref/2712731>

in the U.S. and other countries.

*End-user license agreement for Sun Java™ J2METM. 1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.*

*2. Export Regulations: Software including technical data, is subject to U.S. export control laws, including the U.S.*

*Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. 3.*

*Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) and FAR 52.227-19(c) (2) as applicable. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone. This is the Internet version of the User's guide. © Print only for private use.*

*38 www.sonyericsson.com Sony Ericsson Mobile Communications AB SE-221 88 Lund, Sweden 1224-6945.1 This is the Internet version of the User's guide.*

*© Print only for private use.*



[You're reading an excerpt. Click here to read official SONY ERICSSON W205 user guide](http://yourpdfguides.com/dref/2712731)  
<http://yourpdfguides.com/dref/2712731>