



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON W595. You'll find the answers to all your questions on the SONY ERICSSON W595 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON W595
User guide SONY ERICSSON W595
Operating instructions SONY ERICSSON W595
Instructions for use SONY ERICSSON W595
Instruction manual SONY ERICSSON W595

Thank you for purchasing a Sony Ericsson W595 Walkman™ phone. A slim slider phone made for you and others to enjoy your music.

For additional phone content, go to www.sonyericsson.com/fun.

Register now to get a suite of tools, free online storage, special offers, news and competitions at www.sonyericsson.com/myphone.

For product support, go to www.sonyericsson.com/support.

This is the Internet version of the User guide. © Print only for private use.



[You're reading an excerpt. Click here to read official SONY ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)
<http://yourpdfguides.com/dref/818701>

Manual abstract:

A slim slider phone made for you and others to enjoy your music. For additional phone content, go to www.sonyericsson.com/fun. @@@@© Print only for private use. Contents Getting started

.....
.....
.... 6 Assembly

.....
.....
.....

.... 6 Turning on the phone

.....
.....
..... 7 Help

.....
.....
.....

... 8 Charging the battery ..

.....
.....

..... 8 Phone overview

.....
.....
.....

..... 9 Menu overview

.....
.....
.....

..... 11 Navigation

.....
.....
.....

... 13 Memory ..

.....
.....
.....

.... 14 Phone language

.....
.....
.....

.. 15 Entering text

.....
.....
.....

..... 16 Transferring and handling content

.....
.....
.....

..... 23 Handling content within the phone .. Sending content to another phone .. Transferring content to and from a computer .

.....
.....
.....
..... Using the USB cable

.....
.....
..... . Phone name

.....
.....
.....
..... Using Bluetooth™ wireless technology

.....
.....
.....
..... Backing up and restoring

..... 23 23 24 25 26 26 27 Walkman™ .
.....
.....
.....

... 17 Stereo portable handsfree

.....
..... Walkman™ player

.....
..... PlayNow™

.....
..... TrackID™

.....
.....
.....
... Online music and video clips

.....
.....
.....
..... . Video player

.....
.....
.....
..... Radio

.....
.....
.....
..... MusicDJ™ .

.....
.....
.....
..... Record sound

.....

.....
.....
..... 17 17 20 21 21 21 21 22 22 Calling

.....
.....
.....
..... 29 Making and receiving calls ...

..... Contacts ..

.....
.....
.....

.....
.....
.....
.. Call list ...

.....
.....
.....
..... Speed dial .

.....
.....
.....
..... Voicemail

.....
.....
.....
..... Voice control .

.....
.....
.....
.. More than one call ...

.....
.....
.....
. Restricted dialling

.....
.....
.....
..... Call time and cost

.....
.....
.....
. Showing or hiding your phone number

.....
.....
.....
. @@@@40 Text messages

.....
.....
.....
. Picture messages

.....
.....

..... *Message options*

.....

.....

.....

.. *Templates*

.....

.....

.....

..... *Voice messages* .

.....

.....

.....

..... *Email* ...

.....

.....

.....

.....

.....

.. *My friends* ...

.....

.....

.....

.....

... *Area and cell information* .

.....

... *@@55 More features*.....

.....

.....

... *57 Flight mode*

.....

.....

.....

..... *Update service* ..

.....

.....

.....

..... *Location services* ..

.....

.....

.....

... *Alarms*

.....

.....

.....

.....

..... *Calendar* ...

.....

.....

.....

.....

.....

. *Notes*

.....

.....
.....
.....
... @@46 Viewfinder and camera keys .

.....
... Using the camera

.....
.....
.... More camera features .
.....

..... Viewing and tagging pictures ..
.....
PhotoDJTM and VideoDJTM

..... Blogging

.....
.....
.....
.....

..... Printing photos

.....
.....
.....

..... 46 46 47 48 49 50 50 Internet.....

.....
.....
.....

..... 51 Bookmarks

.....
.....
.....

.....
.. History pages ...

.....
.....

.....
.... More browser features .

.....
.....

.. Internet security and certificates .. Web feeds

.....
.....
.....

.....
. 51 52 52 53 53 Troubleshooting....

.....
..... 67 Common questions ...

.....
.....
.... 67 Error messages .

.....
.....

... 70 Synchronizing ..

.....

..... 55 Synchronizing using a computer ...
55 2 Important information.....
.. 71 Index ...
.....
.....
.....
.....

81 Contents This is the Internet version of the User guide. © Print only for private use. Sony Ericsson W595 UMTS HSDPA 2100 GSM EDGE 850/900/1800/1900 This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved. ©Sony Ericsson Mobile Communications AB, 2008 Publication number: 1215-1239.1 Please note: Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the Important information chapters before you use your mobile phone. Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co.

, Ltd. Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license. The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. TrackIDTM is powered by Gracenote Mobile MusicIDTM.

Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc. WALKMAN is a trademark or a registered trademark of Sony Corporation. Lotus Notes is a trademark or a registered trademark of International Business Machines Corporation. Sony, Memory Stick MicroTM and M2TM are trademarks or registered trademarks of Sony Corporation. GoogleTM and Google MapsTM are trademarks or registered trademarks of Google, Inc.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries. Microsoft, ActiveSync, Windows, Outlook, and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. 3 This is the Internet version of the User guide. © Print only for private use. T9TM Text Input is a trademark or a registered trademark of Tegic Communications. T9TM Text Input is licensed under one or more of the following: U.S. Pat.

Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide. This product is protected by certain intellectual property rights of Microsoft.

Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRMprotected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content.

When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. End-user license agreement for SunTM JavaTM J2METM. This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video.



[You're reading an excerpt. Click here to read official SONY ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)
<http://yourpdfguides.com/dref/818701>

No license is granted or shall be implied for any other use.

Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations and the U.

S. sanctions programs administered by the U.S. Treasury Department's Office of Foreign Assets Control, and may be additionally subject to export or import regulations in other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product.

Without limitation this product, including any software contained therein, may not be downloaded, or otherwise exported or reexported (i) into, or to a national or resident of, or an entity in, Cuba, Iraq, Iran, North Korea, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to any person or entity on the U.S. Treasury Department's list of Specially Designated Nationals or (iii) any person or entity on 4 This is the Internet version of the User guide. © Print only for private use. any other export prohibition list that may be maintained from time to time by the United States Government, including but not limited to the U.S. Commerce Department's Denied Persons List or Entity List, or the U.S.

State Departm Getting started This is the Internet version of the User guide. © Print only for private use. Phone overview 1 2 3 4 5 6 7 8 9 10 11 12 Ear speaker Screen Selection keys Call key Activity menu key Selection key, Walkman™ player control Volume key Walkman™ key End key, On/off key C key (Clear) Navigation key, Walkman™ player control Silent key Getting started This is the Internet version of the User guide. © Print only for private use. 9 13 14 15 16 Camera lens Speaker Connector for charger, handsfree and USB cable Strap holder 10 Getting started This is the Internet version of the User guide. © Print only for private use. Menu overview PlayNow™* Internet* Entertainment Online services* TrackID™ Location services Games Vidents missed calls and new messages. · Running apps applications that are running in the background. · My shortcuts add your favourite functions to access them quickly. · Internet quick access to the Internet.

14 Getting started This is the Internet version of the User guide. © Print only for private use. To insert a memory card To remove a memory card · Open the cover and insert the memory card with the gold-coloured contacts facing down. · Open the cover and remove the memory card. To view memory card options 1 From standby select Menu > Organizer > File manager > the On memory card tab.

2 Select Options. Phone language You can select a language to use in your phone. Getting started 15 This is the Internet version of the User guide. © Print only for private use. To change the phone language 1 From standby select Menu > Settings > the General tab > Language > Phone language.

2 Select an option. Entering text You can use multitap text input or T9™ Text Input to enter text. The T9 Text Input method uses a built-in dictionary. To change text input method · When you enter text, press and hold down . To shift between capitals and lowercase letters · When you enter text, press . To enter numbers · When you enter text, press and hold down . To enter full stops and commas · When you enter text, press . To enter a symbol 1 When you enter text, select Options > Add symbol. 2 Scroll to a symbol and select Insert. To enter text using T9™ Text Input 1 From standby select, for example, Menu > Messaging > Write new > Text message.

2 If is not displayed, press and hold down to change to T9 Text Input. 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word "Jane", press , , , . Write the whole word before looking at the suggestions. 4 Use or to view suggestions. 5 Press to accept a suggestion. To enter text using multitap 1 From standby select, for example, Menu > Messaging > Write new > Text message. 2 If is displayed, press and hold down to change to multitap text input. 3 Press repeatedly until the desired letter appears. 4 When a word is written, press to add a space.

To add words to the built-in dictionary 1 When you enter text using T9 Text Input, select Options > Spell word. 2 Write the word using multitap input and select Insert. 16 Getting started This is the Internet version of the User guide. © Print only for private use. Walkman™ You can listen to music, audio books and podcasts.

Use Sony Ericsson Media Manager to transfer content to and from your phone. See Transferring content to and from a computer on page 24 for more information. Walkman™ player To play music 1 From standby select Menu > Media > Music. 2 Browse by category using the navigation key. 3 Scroll to a track and select Play.

To stop playing music · Press the centre navigation key. To fast forward and rewind · Press and hold down or . To move between tracks · Press or . To minimize the player · When music is playing, press To return to the player · Press . Stereo portable handsfree To use the handsfree · Connect the portable handsfree. Music stops when you receive a call and resumes when the call has ended. Walkman™ 17 This is the Internet version of the User guide. © Print only for private use. Shake control To switch track To shuffle tracks · When music is playing, press and hold down and move the phone to the right with a flick of your wrist to go to the next track.

To go to the previous track, use the same action to the left. · When music is playing, press and hold down and shake your phone. To change the volume 1 When music is playing, hold the phone out in front of you facing upwards. 18 Walkman™ This is the Internet version of the User guide. © Print only for private use. 2 Press and hold down and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/818701)

[ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)

<http://yourpdfguides.com/dref/818701>

Playlists You can create playlists to organize your music. Tracks can be added to more than one playlist. Deleting a playlist, or a track from a playlist, does not delete the track from the memory, just the reference to the track.

It may take a few minutes for the phone to create a playlist. To add tracks to a playlist 1 From standby select Menu > Media > Music > Playlists. 2 Select a playlist. 3 Scroll to Add music and select Add. 4 For each track you want to add, scroll to the track and select Mark.

5 Select Add to add the tracks to the playlist. To remove tracks from a playlist 1 From standby select Menu > Media > Music > Playlists. 2 Select a playlist. 3 Scroll to the track and press . SensMeTM 1 2 3 4 5 To create a playlist From standby select Menu > Media > Music > Playlists.

Scroll to New playlist and select Add. Enter a name and select OK. For each track you want to add, scroll to the track and select Mark. Select Add to add the tracks to the playlist. You can add folders to a playlist. All tracks in a folder are added to the playlist. With SensMeTM you can create playlists by mood. By using Sony Ericsson Media Manager to analyze and transfer music to your WalkmanTM 19 This is the Internet version of the User guide. © Print only for private use. phone, information such as mood, tempo and chords is added to your tracks.

The tracks are displayed as dots on a map with two axes. You can create a playlist by selecting an area of tracks. For information on how to analyze your music, see Sony Ericsson Media Manager Online Help. To access audio books · From standby select Menu > Media > Music > Audio books. You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the Tracks folder. PlayNowTM You can connect to PlayNowTM to download ringtones, games, music, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone. If you cannot use PlayNowTM, see Troubleshooting on page 67. This service is not available in all countries. To create a playlist by mood 1 From standby select Menu > Media > Music.

2 Scroll to SensMeTM and select Open. 3 Press , , or to preview different tracks. 4 Select Add and press or to choose an area of tracks. 5 Select Create to play the playlist in the WalkmanTM player. 6 Select Options > Save playlist and enter a name and select OK.

Audio books You can listen to audio books that you have transferred to your phone from a computer using Sony Ericsson Media Manager. It may take a few minutes before a transferred audio book appears in the list of available audio books. To use PlayNowTM 1 From standby select Menu > PlayNowTM. 2 Scroll the PlayNowTM Web site and follow the instructions to preview and purchase content. 20 WalkmanTM This is the Internet version of the User guide.

© Print only for private use. TrackIDTM TrackIDTM is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio. If you cannot use TrackIDTM, see Troubleshooting on page 67. For cost information contact your service provider. To select a data account for streaming 1 From standby select Menu > Settings > the Connectivity tab > Streaming settings > Connect using:. 2 Select the data account to use. 3 Select Save. To stream music and video clips 1 From standby select Menu > Internet. 2 Select Options > Go to > Bookmarks.

3 Select a link to stream from. To search for track information 1 When you hear a track through a loudspeaker, from standby select Menu > Entertainment > TrackIDTM > Start. 2 When the radio is playing select Options > TrackIDTM. For best results, use TrackIDTM in a quiet area. Video player To play videos 1 From standby select Menu > Media > Video > Videos. 2 Scroll to a title and select Play. To stop playing videos · Press the centre selection key. Online music and video clips You can view video clips and listen to music by streaming them to your phone from the Internet. If you cannot use the Internet, see Troubleshooting on page 67. Radio To listen to the radio 1 Connect the handsfree to the phone.

2 From standby select Menu > Radio. To search for channels automatically · Select Search. WalkmanTM 21 This is the Internet version of the User guide. © Print only for private use. To search for channels manually · Press or .

To change the volume · Press the volume keys up or down. To minimize the radio · When the radio is playing, select Options > Minimize. To return to the radio · From standby select Menu > Radio. Saving channels You can save up to 20 preset channels. To save channels 1 When you have found a radio channel select Options > Save.

2 Scroll to a position and select Insert. To select saved channels 1 Select Options > Channels. 2 Select a radio channel. To switch between saved channels · Press or . To compose a melody 1 From standby select Menu > Entertainment > MusicDJTM. 2 Select to Insert, Copy or Paste sounds. 3 Use , , or to scroll between the sounds. 4 Select Options > Save melody. Record sound You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

In some countries or states it is required by law that you inform the other person before recording the call. To record a sound · From standby select Menu > Entertainment > Record sound > Record. To record a call 1 During an ongoing call, select Options > Record. 2 Select Save to save the recording. To listen to a recording 1 From standby select Menu > Organizer > File manager. 2 Scroll to Music and select Open. 3 Scroll to a recording and select Play.

MusicDJTM You can compose and edit your own melodies to use as ringtones. Prearranged sounds with different characteristics are available. 22

WalkmanTM This is the Internet version of the User guide.

© Print only for private use. Transferring and handling content You can transfer and handle content such as pictures and music. You are not allowed to exchange some copyright-protected material. identifies a protected file. 1 2 3 4 5 To move items between the phone memory and the memory card From standby select Menu > Organizer > File manager.

Find an item and select Options > Manage file > Move. Select Memory card or Phone. Scroll to a folder and select Open. Select Paste. Handling content within the phone You can use File manager to handle content saved in the phone memory or on a memory card.

Tabs and icons in File manager show where the content is saved. If the memory is full, delete some content to create space. To view memory status 1 From standby select Menu > Organizer > File manager. 2 Select Options > Memory status. 3 Select Memory card or Phone. To select more than one item in a folder From standby select Menu > Organizer > File manager.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/818701)

[ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)

<http://yourpdfguides.com/dref/818701>

Scroll to a folder and select Open. Select Options > Mark > Mark several. For each item you want to mark, scroll to the item and select Mark. To view information about content 1 From standby select Menu > Organizer > File manager.

2 Find an item and select Options > Information. Sending content to another phone You can send content, for example, in messages or using Bluetooth™ wireless technology. To send content 1 Scroll to an item and select Options > Send. 2 Select a transfer method. Make sure the receiving device supports the transfer method you select. 1 2 3 4 Transferring and handling content 23 This is the Internet version of the User guide. © Print only for private use.

Transferring content to and from a computer You can use Sony Ericsson Media Manager to transfer content between your phone and a computer. Sony Ericsson Media Manager software is included on the CD that comes with your phone and available for download at www.sonyericsson.com/support. 2 Select a language and click OK. 3 Click Install Sony Ericsson Media Manager and follow the instructions. To transfer content using Sony Ericsson Media Manager Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the phone memory. When you move or copy content from a computer to your phone unrecognized content is saved in the Other folder in the file manager.

Required operating systems You need one of these operating systems to use the software included on the CD: · Microsoft® Windows Vista™ 32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium or Home Basic · Microsoft® Windows XP (Pro or Home), Service Pack 2 or higher To install Sony Ericsson Media Manager 1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens. 24 1 Connect the phone to a computer with a USB cable supported by your phone. 2 Computer: Start/Programs/ Sony Ericsson/Media Manager. 3 Phone: Select Media transfer.

4 Computer: Wait until the phone appears in Sony Ericsson Media Manager. 5 Move files between your phone and the computer in Sony Ericsson Media Manager. 6 For safe disconnection of the USB cable, right-click the removable disk icon in Windows Explorer and select Eject. For details on transferring music, refer to Media Manager Help. Click in the top right corner of the Sony Ericsson Media Manager window. You can also go to www.sonyericsson.com/support to read Getting started guides. Transferring and handling content This is the Internet version of the User guide. © Print only for private use.

Using the USB cable You can connect your phone to a computer with the USB cable to synchronize, transfer and back up phone content and use your phone as a modem. For more information, go to www.sonyericsson.com/support to read Getting started guides. To disconnect the USB cable safely 1 Right-click the removable disk icon in Windows Explorer. 2 Select Eject. 3 Disconnect the USB cable when there is a message saying it is safe to do so in the phone. Do not copy the files immediately if you formatted the phone drive on the PC. In that case, remove the USB cable and restart the phone first. Drag and drop content You can drag and drop content between your phone memory and a computer in Microsoft Windows Explorer.

To drag and drop content 1 Connect your phone to a computer using the USB cable. 2 Phone: Select Media transfer. 3 Computer: Wait until the phone memory appear as external disks in Windows Explorer. 4 Drag and drop selected files between the phone and the computer. Before you use the USB cable · See Required operating systems on page 24.

Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the phone memory. Transferring and handling content 25 This is the Internet version of the User guide. © Print only for private use. Phone name You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

To enter a phone name 1 From standby select Menu > Settings > the Connectivity tab > Phone name. 2 Enter the phone name and select OK. Before you use Bluetooth wireless technology You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices. To turn the Bluetooth function on · From standby select Menu > Settings > the Connectivity tab > Bluetooth > Turn on. Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility set to on. Using Bluetooth™ wireless technology The Bluetooth function makes wireless connection to other Bluetooth devices possible. You can, for example: · Connect to handsfree devices. · Connect to several devices at the same time. · Connect to computers and access the Internet.

· Exchange items. · Play multiplayer games. A range within 10 metres (33 feet), with no solid objects in between, is recommended for Bluetooth communication. To pair the phone with a device 1 From standby select Menu > Settings > the Connectivity tab > Bluetooth > My devices. 2 Scroll to New device and select Add to search for available devices. 3 Select a device. 4 Enter a passcode, if required. To allow connection to the phone 1 From standby select Menu > Settings > the Connectivity tab > Bluetooth > My devices. 2 Select a device from the list. 3 Select Options > Allow connection.

4 Select Always ask or Always allow. 26 Transferring and handling content This is the Internet version of the User guide. © Print only for private use. This is only possible with devices that require access to a secure service. To pair the phone with a Bluetooth handsfree for the first time 1 From standby select Menu > Settings > the Connectivity tab > Bluetooth > Handsfree.

2 Select a device. 3 Enter a passcode, if required. Power saving You can save battery power with the Power save function. In Power save mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

To turn powersave on · From standby select Menu > Settings > the Connectivity tab > Bluetooth > Powersave > On. Transferring sound to and from a Bluetooth handsfree You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key. To transfer sound 1 From standby select Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > Incoming call. 2 Select an option. In phone transfers sound to the phone. In handsfree transfers sound to the handsfree. To transfer sound during a call 1 During a call, select Sound. 2 Select from the list. Backing up and restoring You can backup phone content to a computer using the Sony Ericsson PC Suite and the Sony Ericsson Media Manager.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/818701)

[ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)

<http://yourpdfguides.com/dref/818701>

With Sony Ericsson PC Suite you can backup and restore contacts, calendar, tasks, notes and bookmarks.

With Sony Ericsson Media Manager you can backup and restore content such as music, pictures and video clips. Before backing up and restoring, you need to install the Sony Ericsson PC Suite and the Sony Ericsson Media Manager. Transferring and handling content 27 This is the Internet version of the User guide.

© Print only for private use. Always make a backup before having the phone upgraded, since upgrading can clear the user content. 4 Computer: Go to the backup and restore section in the Sony Ericsson PC Suite and restore your phone. To make a backup using the Sony Ericsson Media Manager 1 Connect your phone to the computer using a USB cable. You can also connect your phone to a computer using Bluetooth. 1 2 3 4 To make a backup using the Sony Ericsson PC Suite Computer: Start the Sony Ericsson PC Suite from Start/Programs/ Sony Ericsson/PC Suite. Follow the instructions in the Sony Ericsson PC Suite for how to connect.

Phone: Select Phone mode. Computer: Go to the backup and restore section in the Sony Ericsson PC Suite and make a backup. The Sony Ericsson PC Suite will overwrite all the phone content during the restore process. You may damage your phone if you interrupt the process. 2 Phone: Select Media transfer mode.

3 Computer: Start Sony Ericsson Media Manager from Start/Programs/ Sony Ericsson/Media Manager. 4 Go to the backup section in the Sony Ericsson Media Manager. 5 Select the files you want to backup and make a back up. The Sony Ericsson Media Manager will compare your phone content with your computer backup and then restore files missing in your phone. You may damage your phone if you interrupt the process.

To restore phone content using the Sony Ericsson PC Suite 1 Computer: Start the Sony Ericsson PC Suite from Start/Programs/ Sony Ericsson/PC Suite. 2 Follow the instructions in the Sony Ericsson PC Suite for how to connect. 3 Phone: Select Phone mode. To restore phone content using the Sony Ericsson Media Manager 1 Connect your phone to the computer. 2 Phone: Select Media transfer mode. 3 Computer: Start Sony Ericsson Media Manager from Start/Programs/ Sony Ericsson/Media Manager. 28 Transferring and handling content This is the Internet version of the User guide. © Print only for private use. 4 Go to the backup section in the Sony Ericsson Media Manager. 5 Select the files you want to restore and restore them.

For more information on backing up and restoring in Sony Ericsson Media Manager see the Sony Ericsson Media Manager Getting started guide at www.sonyericsson.com/support. Calling Making and receiving calls You need to turn on your phone and be within range of a network. To make a call 1 From standby enter a phone number (with international country code and area code, if applicable). 2 Press . You can call numbers from your contacts and call list.

See Contacts on page 31, and Call list on page 34. You can also use your voice to make calls. See Voice control on page 35.

To end a call · Press . To make international calls 1 From standby press and hold down until a "+" sign appears. 2 Enter the country code, area code (without the first zero) and phone number. 3 Press . Calling 29 This is the Internet version of the User guide.

© Print only for private use · When Retry? appears select Yes. Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal. Networks Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually. To switch networks manually 1 From standby select Menu > Settings > the Connectivity tab > Mobile networks > GSM/3G networks. 2 Select an option. Emergency calls Your phone supports international emergency numbers, for example, 112 and 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are in range of a network. In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card. To answer a call · Press . To reject a call · Press . To change the ear speaker volume during a call · Press the volume key up or down.

To mute the microphone during a call 1 Press and hold down . 2 Press and hold down again to resume. To turn the loudspeaker on during a call · Select SpkrOn. Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing. To view missed calls from standby · Press to open the call list. To make an emergency call · From standby enter 112 (the international emergency number) and press . 30 Calling This is the Internet version of the User guide. © Print only for private use. To view your local emergency numbers 1 From standby select Menu > Contacts.

2 Scroll to New contact and select Options > Special numbers > Emergency nos. Video call You can see a person on the screen during calls. Both parties need a subscription that supports the 3G (UMTS) service, and you need to be within range of a 3G (UMTS) network. 3G (UMTS) service is available when appears. To make a video call 1 From standby enter a phone number (with international country code and area code if applicable).

2 Select Options > Make video call. To use the zoom with an outgoing video call · Press or . To view video call options · During the call, select Options. Contacts You can save names, phone numbers and personal information in Contacts. Information can be saved in the phone memory or on the SIM card. You can synchronize your contacts using the Sony Ericsson PC Suite. Default contacts You can choose which contact information is shown as default. If Phone contacts is selected as default, your contacts show all the information saved in Contacts. If you select SIM contacts as default, your contacts show names and numbers saved on the SIM card. To select default contacts 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Advanced > Default contacts. 3 Select an option. Phone contacts Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory. Calling 31 This is the Internet version of the User guide.

© Print only for private use. To add a phone contact From standby select Menu > Contacts. Scroll to New contact and select Add. Enter the name and select OK. Scroll to New number: and select Add. Enter the number and select OK. Select a number option. Scroll between the tabs and add information to the fields. 8 Select Save. 1 2 3 4 5 6 7 Calling contacts To call a phone contact 1 From standby select Menu > Contacts.

2 Scroll to a contact and press . To go directly to the contacts list · From standby press and hold down .



[You're reading an excerpt. Click here to read official SONY](#)

[ERICSSON W595 user guide](#)

<http://yourpdfguides.com/dref/818701>

To call with Smart search 1 From standby press to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list. 2 Scroll to a contact or a phone number and press .

To turn Smart search on or off 1 From standby select Menu > Settings > the Calls tab > Smart search. 2 Select an option. 3 Editing contacts To add information to a phone contact From standby select Menu > Contacts. Scroll to a contact and select Options > Edit contact. Scroll between the tabs and select Add or Edit.

Select an option and an item to add or edit. Select Save. If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts. 1 2 3 4 5 To copy names and numbers to phone contacts 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Advanced > Copy from SIM. 3 Select an option. To copy names and numbers to the SIM card 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Advanced > Copy to SIM. 3 Select an option. Calling This is the Internet version of the User guide.

© Print only for private use. When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced. Deleting contacts To delete all contacts 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Advanced > Delete all contacts. 3 Select an option. Contact memory status The number of contacts you can save in your phone or on the SIM card depends on available memory. To view contact memory status 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Advanced > Memory status. Myself You can enter information about yourself and, for example, send your business card. To enter Myself information 1 From standby select Menu > Contacts.

2 Scroll to Myself and select Open. 3 Scroll to an option and edit the information. 4 Select Save. To automatically save names and phone numbers on the SIM card 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Advanced > Auto save on SIM.

3 Select an option. SIM contacts SIM contacts can contain names and numbers only. They are saved on the SIM card. 1 2 3 4 5 To add a SIM contact From standby select Menu > Contacts. Scroll to New contact and select Add.

Enter the name and select OK. Enter the number and select OK. Select a number option and add more information, if available. 6 Select Save. To call a SIM contact 1 From standby select Menu > Contacts. 2 Scroll to a contact and press . Calling 33 This is the Internet version of the User guide. © Print only for private use. To add your own business card 1 From standby select Menu > Contacts. 2 Scroll to Myself and select Open.

3 Scroll to My contact info and select Add > Create new. 4 Scroll between the tabs and add information to the fields. 5 Enter the information and select Save. Groups You can create a group of phone numbers and email addresses from Phone contacts to send messages to. See Messaging on page 40. You can also use groups (with phone numbers) when you create accepted callers lists. See Accept calls on page 38. To create a group of numbers and email addresses From standby select Menu > Contacts. Scroll to New contact and select Options > Groups. Scroll to New group and select Add.

Enter a name for the group and select Continue. Scroll to New and select Add. For each contact phone number or email address you want to mark, scroll to it and select Mark. Select Continue > Done. Call list You can view information about recent calls.

To call a number from the call list 1 From standby press and scroll to a tab. 2 Scroll to a name or a number and press . To add a call list number to contacts 1 From standby press and scroll to a tab. 2 Scroll to the number and select Save. 3 Select New contact to create a new contact or select an existing contact to add the number to.

Speed dial Speed dialling lets you select nine contacts you can dial quickly. The contacts can be saved in positions 1-9. To add contacts to speed dial numbers From standby select Menu > Contacts. Scroll to New contact and select Options > Speed dial. Scroll to a position number and select Add. Select a contact. 1 2 3 4 5 6 1 2 3 4 7 34 Calling This is the Internet version of the User guide. © Print only for private use. To speed dial · From standby enter the position number and press . Voicemail If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number 1 From standby select Menu > Messaging > Settings > Voicemail number. 2 Enter the number and select OK. To call your voicemail service · From standby press and hold down . 2 Select Yes > New voice command and select a contact. If the contact has more than one number, select the number to add the voice command to. 3 Record a voice command such as "John mobile." 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you. 5 If the recording sounds OK, select Yes.

If not, select No and repeat steps 3 and 4. Voice commands are saved in the phone memory only. They cannot be used in another phone. Voice control By creating voice commands you can: · Voice dial call someone by saying their name · Answer and reject calls when you use a handsfree To record a voice command using voice dialling 1 From standby select Menu > Settings > the General tab > Voice control > Voice dialling > Activate. To voice dial 1 From standby press and hold down a volume key.

2 Wait for the tone and say a recorded name, for example "John mobile." The phone plays the name back to you and connects the call. Voice answering When you use a handsfree, you can answer or reject incoming calls with your voice. Calling 35 This is the Internet version of the User guide. © Print only for private use.

1 2 3 4 5 6 7 To activate voice answering and record voice answer commands From standby select Menu > Settings > the General tab > Voice control > Voice answer > Activate. Follow the instructions that appear and select Cont. Wait for the tone and say "Answer", or say any other word of your choosing. Select Yes to accept or No for a new recording. Follow the instructions that appear and select Cont. Wait for the tone and say "Busy", or say any other word of your choosing. Select Yes to accept or No for a new recording. Follow the instructions that appear and select Cont. Select the environments in which you want to activate voice answering. Diverting calls You can divert calls, for example, to an answering service.

When Restrict calls is used, some divert call options are not available. See Restricted dialling on page 38.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/818701)

[ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)

<http://yourpdfguides.com/dref/818701>

To divert calls 1 From standby select Menu > Settings > the Calls tab > Divert calls. 2 Select a call type and a divert option. 3 Select Activate. 4 Enter the number to divert calls to and select OK. More than one call You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls. You can also join two calls. Call waiting You will hear a beep if you receive a second call while call waiting is active. To answer a call using voice commands · Say "Answer". To reject a call using voice commands · Say "Busy". 36 Calling This is the Internet version of the User guide.

© Print only for private use. To activate call waiting · From standby select Menu > Settings > the Calls tab > Manage calls > Call waiting > Activate. To make a second call 1 During the call, select press puts the ongoing call on hold. 2 Select Options > Add call. 3 Enter the number to call and press . . This To join two calls · During the call, select Options > Join calls. To connect two calls · During the call, select Options > Transfer call. You are disconnected from both calls. To end an ongoing call and return to the call on hold · First press and then . Conference calls With a conference call, you can have a joint conversation with up to five people. To add a new participant 1 During the call, press . This puts the joined calls on hold. 2 Select Options > Add call. 3 Enter the number to call and press .

4 Select Options > Join calls to add the new participant. 5 Repeat this task to add more participants. To release a participant 1 Select Options > Release party. 2 Select the participant to release. To answer a second call · During the call, press . This puts the ongoing call on hold. To reject a second call · During the call, press and continue with the ongoing call. To end an ongoing call and answer a second call · During the call, select Replace active call. Handling two voice calls You can have calls ongoing and on hold at the same time. To switch between two calls · During the call, press .

Calling 37 This is the Internet version of the User guide. © Print only for private use. To have a private conversation 1 During the call, select Options > Talk to and select the participant to talk to. 2 To resume the conference call, select Options > Join calls. My numbers You can view, add and edit your own phone numbers.

To check your phone numbers 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Special numbers > My numbers. 3 Select an option. Accept calls You can choose to receive calls from certain phone numbers only. To add numbers to the accepted callers list 1 From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > Only from list.

2 Scroll to New and select Add. 3 Select a contact or Groups. See Groups on page 34. To accept all calls · From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > All callers. Restricted dialling You can restrict outgoing and incoming calls. A password from your service provider is required. If you divert incoming calls, you cannot use some restrict calls options. Restrict calls options Standard options are: · All outgoing all outgoing calls. · Outgoing intl all outgoing international calls. · Outgoing intl roam.

all outgoing international calls except to your home country. · All incoming all incoming calls. · Inc. when roaming all incoming calls when you are abroad. To restrict calls 1 From standby select Menu > Settings > the Calls tab > Manage calls > Restrict calls. 2 Select an option. 3 Select Activate. 4 Enter your password and select OK. 38 Calling This is the Internet version of the User guide. © Print only for private use.

Fixed dialling Fixed dialling allows calls to be made only to certain numbers saved on the SIM card. The fixed numbers are protected by your PIN2. Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456. When fixed dialling is used, you cannot view or manage any phone numbers saved on the SIM card, but you can still call the international emergency number, 112.

Call time and cost During a call, the phone shows how long you have been talking. You can also check on the duration of your last call, your outgoing calls and the total time of all your calls. To check the call time · From standby select Menu > Settings > the Calls tab > Time & cost > Call timers. Showing or hiding your phone number You can decide to show or hide your phone number when you make a call. To hide your phone number 1 From standby select Menu > Settings > the Calls tab > Show/hide my no.

2 Select Hide number. 1 2 3 4 To use fixed dialling From standby select Menu > Contacts. Scroll to New contact and select Options > Special numbers > Fixed dialling > Activate. Enter your PIN2 and select OK. Select OK again to confirm. To save a fixed number 1 From standby select Menu > Contacts. 2 Scroll to New contact and select Options > Special numbers > Fixed dialling > Fixed numbers > New number. 3 Enter the information and select Save. Calling 39 This is the Internet version of the User guide. © Print only for private use.

Messaging Receiving and saving messages You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on the SIM card. To save a message on a memory card · From standby select Menu > Messaging > Settings > General > Save to > Memory card. To save a message on the SIM card 1 From standby select Menu > Messaging and select a folder. 2 Scroll to a message and select Options > Save message. To view a message from the inbox 1 From standby select Menu > Messaging > Inbox. 2 Scroll to the message and select View. To write and send a text message 1 From standby select Menu > Messaging > Write new > Text message. 2 Write the message and select Continue > Contacts look-up.

3 Select a recipient and select Send. If you send a text message to a group, you will be charged for each member. See Groups on page 34. To copy and paste text in a text message 1 When you write the message, select Options > Copy & paste. 2 Select Copy all or Mark & copy.

Scroll to and mark text in the message. 3 Select Options > Copy & paste > Paste. To add an item to a text message 1 When you write the message, select Options > Add item. 2 Select an option and then an item. To call a number in a text message · When you view the message, scroll to the phone number and press .



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/818701)

[ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)

<http://yourpdfguides.com/dref/818701>

To turn long messages on 1 From standby select Menu > Messaging > Settings > Text message. 2 Select Max. msg length > Max. available. Text messages
Text messages can contain simple pictures, sound effects, animations, and melodies. 40 Messaging This is the Internet version of the User guide. © Print only
for private use. Picture messages Picture messages can contain text, pictures, slides, sound recordings, video clips, signatures and attachments. You can send
picture messages to a mobile phone or an email address. You must have the correct settings to send a picture message.

If you cannot use picture messages, see Troubleshooting on page 67. · Not in roaming do not download when not in home network. · Always ask ask to
download. · Off new messages appear in the Inbox. To set automatic download 1 From standby select Menu > Messaging > Settings > Picture message >
Auto download. 2 Select an option. 1 2 3 4 To create and send a picture message From standby select Menu > Messaging > Write new > Picture msg. Enter
text. To add items to the message, press , scroll and select an item. Select Continue > Contacts look-up.

Select a recipient and select Send. Receiving picture messages You can select how to download your picture messages. Standard options when you download
picture messages are: · Always automatic download. · Ask in roaming ask to download when not in home network. Message options You can set standard
options for all messages or choose specific settings each time you send a message.

To set text message options 1 From standby select Menu > Messaging > Settings > Text message. 2 Scroll to an option and select Edit. To set picture message
options 1 From standby select Menu > Messaging > Settings > Picture message. 2 Scroll to an option and select Edit. To set options for a specific message 1
When the message is ready and a recipient is selected, select Options > Advanced.

2 Scroll to an option and select Edit. Messaging 41 This is the Internet version of the User guide. © Print only for private use. Templates If you often use the
same phrases and pictures in a message, you can save the message as a template. To add a text message template 1 From standby select Menu > Messaging >
Templates > New template > Text. 2 Insert text or select Options to add items. Select OK. 3 Enter a title and select OK. To add a picture message template 1
From standby select Menu > Messaging > Templates > New template > Picture msg. 2 Enter text.

To add items to the message, press , scroll and select an item. 3 Select Save, enter a title and select OK. To save a message as a template 1 From standby
select Menu > Messaging > Inbox. 2 Scroll to the message and select View > Options > Save as template. Voice messages You can send and receive a sound
recording as a voice message. The sender and recipient must have a subscription supporting picture messaging. To record and send a voice message 1 From
standby select Menu > Messaging > Write new > Voice message. 2 Record the message and select Stop > Send > Contacts look-up. 3 Select a recipient and
select Send. Email You can use standard email functions and your computer email address in your phone.

You can synchronize your email using Microsoft® Exchange ActiveSync. Before you use email You can use the setup wizard to check if settings are available
for your email account or you can enter them manually. You can also receive settings at www.sonyericsson.com/support.

42 Messaging This is the Internet version of the User guide. © Print only for private use. To create an email account 1 From standby select Menu >
Messaging > Email > Accounts. 2 Scroll to New account and select Add. If you enter settings manually, you can contact your email provider for more
information.

An email provider could be the company that supplied your email address. To receive and read an email message 1 From standby select Menu > Messaging >
Email > Inbox > Options > Check new email. 2 Scroll to the message and select View. To save an email message 1 From standby select Menu > Messaging >
Email > Inbox. 2 Scroll to the message and select View > Options > Save message. To reply to an email message 1 From standby select Menu > Messaging >
Email > Inbox. 2 Scroll to the message and select Options > Reply. 3 Write the reply and select OK. 4 Select Continue > Send. To view an attachment in an
email message · When you view the message, select Options > Attachments > Use > View.

To save an attachment in an email message · When you view the message, select Options > Attachments > Use > Save. To write and send an email message 1
From standby select Menu > Messaging > Email > Write new. 2 Select Add > Enter email address. Enter the email address and select OK. 3 To add more
recipients, scroll to To: and select Edit. 4 Scroll to an option and select Add > Enter email address. Enter the email address and select OK. When you are
ready, select Done. 5 Select Edit and enter a subject. Select OK.

6 Select Edit and enter the text. Select OK. 7 Select Add and choose a file to attach. 8 Select Continue > Send. Messaging 43 This is the Internet version of the
User guide.

@@@2 Select an account. @@@2 Scroll to a setting and select Add. @@@@2 Select Options > Add contact. @@2 Scroll to a contact and select
Chat. @@ If you cannot use My friends, see Troubleshooting on page 67.

@@@© Print only for private use. Status You can show your status, for example, Happy or Busy, to your contacts only. You can also show your status to
all users on the My friends server. @@2 Select an option. @@2 Edit the information. 3 Select Options > Save. @@@2 Select Options > Add chat group >
New chat group. 3 Select who to invite from your contacts list and select Continue. 4 Enter a short invitation text and select Continue > Send. @@@2
Enter a conversation.

@@@@@@2 Press the navigation key to take a picture. 3 The picture is automatically saved. @@2 Press the navigation key to start
recording. 3 To stop recording, press the navigation key. @@@@ More camera settings are available in Options. @@@@. Imaging 47 This is the
Internet version of the User guide. @@@2 Select a month. 3 Scroll to a picture and select View. 4 Select Options > Slide show.

5 Select a mood. @@ This is called geo tagging, and it shows the approximate location of where a picture was taken. To view pictures on a map 1 From
standby select Menu > Media > Photo > Camera album. 2 Select a month. 3 Scroll to a picture and select View.
4 Select Options > View on map. To change the geo tagging setting 1 Activate the camera and select . 2 Scroll to Settings > Add position. Photo tags You can
tag pictures to categorize them in Photo tags. For example, you can create a vacation tag and add it to all your vacation photos.



[You're reading an excerpt. Click here to read official SONY
ERICSSON W595 user guide
http://yourpdfguides.com/dref/818701](http://yourpdfguides.com/dref/818701)

To create a new photo tag 1 From standby select Menu > Media > Photo > Camera album. 2 Select a month. 3 Scroll to a picture and select View. 4 Press and select Options > New tag. 5 Enter a name and select OK. 6 Select an icon. 7 To tag the picture, press the centre selection key. To tag pictures 1 From standby select Menu > Media > Photo > Camera album. 2 Select a month. 3 Scroll to a picture and select View.

4 Press and scroll to a tag. 5 Press the centre selection key. 6 For each picture you want to tag, scroll to the picture and press the centre selection key. 48 Imaging This is the Internet version of the User guide. © Print only for private use. Using pictures You can add a picture to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver. To use pictures 1 From standby select Menu > Media > Photo > Camera album. 2 Select a month. 3 Scroll to a picture and select View. 4 Select Options > Use as.

5 Select an option. To set a Java™ application as a wallpaper 1 From standby select Menu > Settings > the Display tab. 2 Select Wallpaper > Application. 3 Select a Java application. You can only see the Java™ applications that have support for wallpaper.

Use Sony Ericsson Media Manager to transfer content to and from your phone. See Transferring content to and from a computer on page 24 for more information. PhotoDJ™ and VideoDJ™ You can edit pictures and video clips. To edit and save a picture 1 From standby select Menu > Media > Photo > Camera album. 2 Select a month.

3 Scroll to a picture and select View. 4 Select Options > Edit in PhotoDJ™. 5 Edit the picture. 6 Select Options > Save picture. To edit and save a video clip 1 From standby select Menu > Organizer > File manager > Camera album. 2 Scroll to a video clip and select Options > Edit in VideoDJ™. 3 Edit the video clip. 4 Select Options > Save. To trim a video clip 1 From standby select Menu > Organizer > File manager > Camera album. 2 Scroll to a video clip and select Options > Edit in VideoDJ™ > Edit > Trim.

Working with pictures You can view, enhance and organize your pictures and video clips on your computer by installing the Adobe™ Photoshop™ Album Starter Edition. It is included on the CD that comes with your phone and available for download at www.sonyericsson.com/support. Imaging 49 This is the Internet version of the User guide. © Print only for private use. 3 Select Set to set the starting point and select Start. 4 Select Set to set the ending point and select End. 5 Select Trim > Options > Save. You can also send a photo to a blog just after you have taken it by selecting Send > To blog.

Blogging A blog is a personal Web page that you can send pictures and video clips to share with others. If your subscription supports this service, you can send pictures or video clips to a blog. If you cannot use picture or video blog, see Troubleshooting on page 67. Web services may require a separate license agreement between you and the service provider. Additional regulations and charges may apply.

@@2 Scroll to a video clip and select Options > Send > To blog. 3 Enter a title and text and select OK. @@2 Select a month. 3 Scroll to a picture and select View. 4 Select Options > Send > To blog.

5 Enter a title and text and select OK. @@2 Scroll to a contact and select a Web address. @@@@ Connect the USB cable to the printer. Wait for feedback in the phone and select OK. Enter printer settings (if required) and select Print. From standby select Menu > Media > Photo > Camera album. Select a month. @@To start browsing 1 From standby select Menu > Internet. 2 Select Options > Go to. 3 Select an option.

@@@@ Enter a title and an address. Select Save. To select a bookmark 1 From standby select Menu > Internet. 2 Select Options > Go to > Bookmarks.

@@@@@ Select a transfer method. Make sure the receiving device supports the transfer method you select. More browser features To use pan and zoom on a Web page 1 When you browse the Internet, press . 2 Use the navigation key to move the frame. 3 Press Zoom. 4 To switch back to pan, press .

To use pan and zoom, you need to turn off Smart-fit: Options > Advanced > Smart-Fit > Off. Internet keypad shortcuts You can use the keypad to go directly to an Internet browser function. To select Internet keypad shortcuts 1 From standby select Menu > Internet. 2 Select Options > Advanced > Keypad mode > Shortcuts. Key Shortcut Bookmarks Enter text to Enter address, Search Internet or search in Bookmarks Fullscreen or Landscape or Normal screen Zoom Pan & zoom (when Smart-Fit is off) To make a call when you browse · Press .

To save a picture from a Web page 1 When you browse the Internet, select Options > Tools > Save picture. 2 Select a picture. To find text on a Web page 1 When you browse the Internet, select Options > Tools > Find on page. 2 Enter text and press Find. 52 Internet This is the Internet version of the User guide.

© Print only for private use. Internet security and certificates Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates. To view certificates in the phone · From standby select Menu > Settings > the General tab > Security > Certificates. 3 Select a heading to expand. 4 Select an icon depending on content, to open a Web page, to download an audio podcast, to download a video podcast or to download a photo. You can also subscribe to and download content to a computer via feeds using Sony Ericsson Media Manager. You can then transfer the content to your phone. See Transferring content to and from a computer on page 24.

Web feeds You can subscribe to and download frequently updated content, such as news, podcasts or photos, using Web feeds. To add new feeds for a Web page 1 When you browse a page on the Internet that has Web feeds, indicated by , select Options > Web feeds. 2 For each feed you want to add, scroll to the feed and select Mark. 3 Select Options > Continue. To download content via feeds 1 From standby select Menu > Media > Web feeds. 2 Scroll to an updated feed and select View or . Updating Web feeds You can manually update your feeds, or schedule updates. When there are updates, appears on the screen. To schedule Web feed updates 1 From standby select Menu > Media > Web feeds. 2 Scroll to a feed and select Options > Schedule update.

3 Select an option. Frequent updates may be costly. To update Web feeds manually 1 From standby select Menu > Media > Web feeds. 2 Scroll to a feed and select Options > Update. 3 Select an option.

Internet 53 This is the Internet version of the User guide. © Print only for private use. Web feeds in standby You can show news updates on the standby screen.



[You're reading an excerpt. Click here to read official SONY ERICSSON W595 user guide](http://yourpdfguides.com/dref/818701)
<http://yourpdfguides.com/dref/818701>