




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON X10I. You'll find the answers to all your questions on the SONY ERICSSON X10I in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SONY ERICSSON X10I User guide SONY ERICSSON X10I Operating instructions SONY ERICSSON X10I Instructions for use SONY ERICSSON X10I Instruction manual SONY ERICSSON X10I

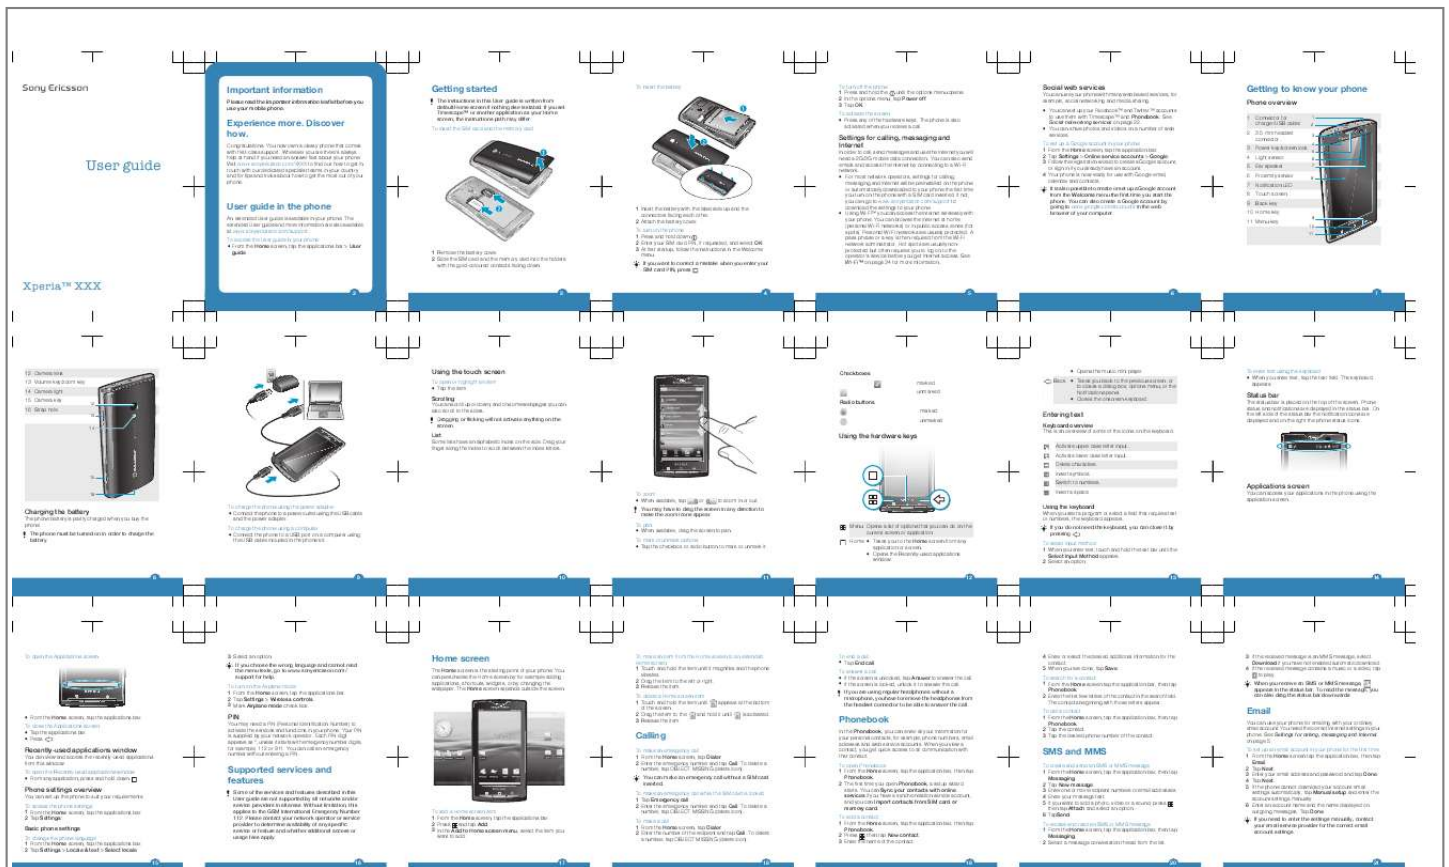

You're reading an excerpt. Click here to read official SONY ERICSSON X10I user guide  
<http://yourpdfguides.com/dref/2712752>

### Manual abstract:

3 Tap OK. To activate the screen · Press any of the hardware keys. @ · You can set up your Facebook™ and Twitter™ accounts to use them with Timescape™ and Phonebook. See Social networking services on page 22. · You can share photos and videos on a number of web services. To set up a Google account in your phone 1 From the Home screen, tap the applications bar. 2 Tap Settings > Online service accounts > Google. 3 Follow the registration wizard to create a Google account, or sign in if you already have an account. 4 Your phone is now ready for use with Google email, calendar and contacts. It is also possible to create or set up a Google account from the Welcome menu the first time you start the phone.

You can also create a Google account by going to [www.google.com/accounts](http://www.google.com/accounts) in the web browser of your computer. Getting to know your phone Phone overview 1 2 3 4 5 6 7 8 9 Connector for charger/USB cable 3.5 mm headset connector Power key/screen lock Light sensor Ear speaker Proximity sensor Notification LED Touch screen Back key 9 10 11 1 2 3 4 5 6 7 8 Experience more. Discover how. User guide Congratulations. You now own a classy phone that comes with first-class support. Wherever you are there's always help at hand if you need an answer fast about your phone. Visit [www.sonyericsson.com/XXXX](http://www.sonyericsson.com/XXXX)

to find out how to get in touch with our dedicated specialist teams in your country and for tips and tricks about how to get the most out of your phone. Settings for calling, messaging and Internet User guide in the phone An extended User guide is available in your phone. The extended User guide and more information are also available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support). To access the User guide in your phone · From the Home screen, tap the applications bar > User guide. 1 Insert the battery with the label side up and the connectors facing each other. 2 Attach the battery cover. To turn on the phone 1 Press and hold down .

2 Enter your SIM card PIN, if requested, and select OK. 3 At first startup, follow the instructions in the Welcome menu. If you want to correct a mistake when you enter your SIM card PIN, press . 1 Remove the battery cover. 2 Slide the SIM card and the memory card into the holders with the gold-coloured contacts facing down. In order to call, send messages and use the Internet you will need a 2G/3G mobile data connection. You can also send emails and access the Internet by connecting to a Wi-Fi network. · For most network operators, settings for calling, messaging and Internet will be preinstalled on the phone or automatically downloaded to your phone the first time you turn on the phone with a SIM card inserted. @@@@ Personal Wi-Fi networks are usually protected. @@ Hot spots are usually nonprotected but often requires you to log on to the operator's service before you get Internet access.

See Wi-Fi™ on page 34 for more information. 10 Home key 11 Menu key Xperia™ XXX 2 3 4 5 6 7 12 Camera lens 13 Volume key/zoom key 14 Camera light 15 Camera key 16 Strap hole 12 13 14 Using the touch screen To open or highlight an item · Tap the item. Checkboxes marked unmarked Radio buttons marked unmarked · Opens the music mini player. Back · Takes you back to the previous screen. or to closes a dialog box, options menu, or the Notifications panel.

· Closes the onscreen keyboard. To enter text using the keyboard · When you enter text, tap the text field. The keyboard appears. Scrolling Status bar You can scroll up or down, and on some webpages you can also scroll to the sides. Dragging or flicking will not activate anything on the screen. Entering text Keyboard overview This is an overview of some of the icons on the keyboard. Activate upper case letter input. Activate lower case letter input. Delete characters. Insert symbols. Switch to numbers. Insert a space. The status bar is placed on the top of the screen. Phone status and notifications are displayed in the status bar. On the left side of the status bar the notification icons are displayed and on the right the phone status icons.

List Some lists have an alphabetic index on the side. Drag your finger along the index to scroll between the index letters. Using the hardware keys 15 Applications screen 16 To zoom · When available, tap To charge the phone using the power adapter · Connect the phone to a power outlet using the USB cable and the power adapter. To charge the phone using a computer · Connect the phone to a USB port on a computer using the USB cable included in the phone kit. or to zoom in or out. You can access your applications in the phone using the application screen. Charging the battery The phone battery is partly charged when you buy the phone. The phone must be turned on in order to charge the battery. You may have to drag the screen in any direction to make the zoom icons appear. To pan · When available, drag the screen to pan.

To mark or unmark options · Tap the checkbox or radio button to mark or unmark it. Menu Opens a list of options that you can do on the current screen or application. Home · Takes you to the Home screen from any application or screen. · Opens the Recently-used applications window. 12 Using the keyboard When you start a program or select a field that requires text or numbers, the keyboard appears.

If you do not need the keyboard, you can close it by · pressing To select input method 1 When you enter text, touch and hold the text bar until the Select Input Method appears. @@@@ 2 Tap Settings > Wireless controls. @@@@ 2 Drag the item to the left or right. 3 Release the item.

@@ 2 Drag the item to the and hold it until is activated. 3 Release the item. To end a call · Tap End call. @@ · If the screen is locked, unlock it to answer the call. @ 5 When you are done, tap Save. @@ 2 Enter the first few letters of the contact in the search field. The contacts beginning with those letters appear. @@ 2 Tap the contact. 3 Tap the desired phone number of the contact. 3 If the received message is an MMS message, select Download if you have not enabled automatic download.

4 If the received message contains a music or a video, tap to play. When you receive an SMS or MMS message, appears in the status bar. To read the message, you can also drag the status bar downwards. · From the Home screen, tap the applications bar. To close the Applications screen · Tap the applications bar. · Press . PIN Recently-used applications window You can view and access the recently-used applications from this window. To open the Recently-used applications window · From any application, press and hold down . You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by your network operator.

Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911.



[You're reading an excerpt. Click here to read official SONY ERICSSON X10I user guide](http://yourpdfguides.com/dref/2712752)  
<http://yourpdfguides.com/dref/2712752>



*Microsoft, Windows, Outlook, Windows Vista, Windows Server and ActiveSync are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.*

*www.sonyericsson.com Sony Ericsson Mobile Communications AB SE-221 88 Lund, Sweden 1229-8032.1 36 39 40 .*



[You're reading an excerpt. Click here to read official SONY  
ERICSSON X10I user guide  
http://yourpdfguides.com/dref/2712752](http://yourpdfguides.com/dref/2712752)