



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY ERICSSON YENDO. You'll find the answers to all your questions on the SONY ERICSSON YENDO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY ERICSSON YENDO
User guide SONY ERICSSON YENDO
Operating instructions SONY ERICSSON YENDO
Instructions for use SONY ERICSSON YENDO
Instruction manual SONY ERICSSON YENDO



Sony Ericsson
Yendo™ with Walkman™
Extended User guide

Sony Ericsson
make.believe



[You're reading an excerpt. Click here to read official SONY ERICSSON YENDO user guide](http://yourpdfguides.com/dref/3463942)
<http://yourpdfguides.com/dref/3463942>

Manual abstract:

Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply. 4 This is an Internet version of this publication. © Print only for private use. Experience more. Discover how. Visit www.sonyericsson.com/support to get the most from your phone. 5 This is an Internet version of this publication. © Print only for private use.

Getting started To insert the SIM card 1 2 1 2 Remove the battery cover. Slide the SIM card into its holder with the gold-coloured contacts facing down. To insert or remove a memory card You may have to purchase a memory card separately. 1 2 Insert the memory card with the gold-coloured contacts facing down. To remove the memory card, press the edge of the memory card inwards and release it immediately.

6 This is an Internet version of this publication. © Print only for private use. To insert the battery 1 2 1 2 1 2 3 Insert the battery with connectors facing each other. Attach the battery cover. To turn on the phone key on the top of your phone.

Press and hold down the Enter your SIM card PIN, if requested, and select Done. At first startup, follow the setup instructions that appear. Your PIN is supplied by your network operator. If you want to correct a mistake made while entering your SIM card PIN, press . To turn off the phone Press and hold the key on the top of the phone until the phone turns off. To lock the screen When the screen is active, briefly press the key. To unlock the screen When the screen is locked, briefly press the key. Starting your phone for the first time The first time you start your phone, a setup wizard helps you enter essential phone settings. Follow the steps to select your language, import your SIM contacts, and set the time and date, respectively. If you prefer, you can skip some steps and access the setup wizard later from the phone settings menu.

1 2 To set the phone language When you start your phone for the first time, a list of languages appears. Scroll through the list and select your language. Tap Done. To import contacts from a SIM card When you start your phone for the first time with a SIM card inserted, the setup wizard prompts you to import your SIM contacts. Tap Import contacts. When you copy contacts between two phones using your SIM card, the amount and the type of information you can transfer for each contact is limited. To get more help on how to copy contacts between two phones, go to www.sonyericsson.com/support. 7 This is an Internet version of this publication.

© Print only for private use. 1 2 3 4 5 6 7 To set the time and date When you start your phone for the first time, the setup wizard prompts you to set the time and date. Tap Time & date. Find and tap Time. Tap the hour and minute fields to adjust the time.

Tap Save. Find and tap Date. Tap the day, month and year fields to adjust the date. Tap Save. While setting the time and date, you can also select your preferred time and date display formats.

Tap Time format or Date format to select a desired format. 8 This is an Internet version of this publication. © Print only for private use. Getting to know your phone Phone overview 1 2 3 4 5 6 7 8 3.5 mm Audio Video Plus connector Power key/screen lock Ear speaker Strap hole Connector for charger/USB cable Touch screen Home key Microphone 6 1 2 3 4 5 7 8 9 10 11 Volume key Camera lens Speaker 9 10 11 Charging the battery Your phone battery is partly charged when you buy the phone. It may take a few minutes before the battery icon appears on the screen when you connect the phone charger cable to a power source, such as a USB port or a phone charger. You can still use your phone while it is charging. The battery will start to discharge a little after it is fully charged and then charges again after a certain time. This is to extend battery life and may result in the charge status showing a level below 100 percent. 9 This is an Internet version of this publication.

© Print only for private use. 2 1 To charge the phone using the power adapter Connect the phone to a power outlet using the USB cable and the power adapter. Using the home key To go to the home screen Press the home key. Home screen The Home screen is your gateway to the main features in your phone. You can customise it with different application icons, shortcuts, wallpaper and more. The Home screen extends beyond the regular screen display width, giving you more room to play with. Close your opened applications before going to the Home screen. Otherwise, these applications may stay running in the background and slow down your phone. 10 This is an Internet version of this publication. © Print only for private use.

January, 2010 0 Applications panes Use the applications panes to get quick access to applications in your phone. You can also customise your panes. Remember that applications panes extend beyond the regular screen dimensions, so you might have to flick left or right to see everything. An indicator at the top of the screen shows which of the applications panes you are in. For indicates you are in the middle applications pane. example, To open the applications panes There are two ways to open the applications panes: 1 2 3 From the Home screen, drag upwards. Flick upwards from any location on the Home screen. To browse the applications panes From the applications panes, flick right or left. To move an application From the Home screen, drag upwards. Touch and hold an item until application icons appear in four corners of the screen.

Drag the item into one of the corners, or into another applications pane. The items in the applications panes are the actual applications, and are not shortcuts. So if you move an item from one applications pane to another location, you are moving the actual application, and not creating a shortcut. 11 This is an Internet version of this publication. © Print only for private use. Using the touch screen To open or highlight an item Tap the item. To mark or unmark options Tap the relevant checkbox, or in some cases tap the switch beside the option name. Marked checkbox Unmarked checkbox Switched on Switched off To go back to the previous screen Tap , when this option is available. Scrolling Scroll by moving your finger up or down on the screen. On some web pages you can also scroll to the sides.

Dragging or flicking will not activate anything on the screen. Internet and messaging settings For most mobile phone networks and operators, messaging and Internet settings come preinstalled on your phone. In some cases the settings are downloaded the first time you turn on the phone with your SIM card inserted. You can manually add and change Internet and network settings in your phone at any time, or you can get the settings sent to your phone automatically.



[You're reading an excerpt. Click here to read official SONY ERICSSON YENDO user guide](http://yourpdfguides.com/dref/3463942)
<http://yourpdfguides.com/dref/3463942>

Contact your network operator if you need more information about your subscription settings. Phone settings overview You can customise some phone settings to suit your preferences. For example, you can adjust the Time & date and Phone language settings. 1 2 3 To change the phone language From the Home screen, drag upwards. Find and tap Settings > Language and writing > Phone language. Select an option.

If you choose the wrong language and cannot read the menu texts, go to www.sonyericsson.com/support for help. 1 2 3 To turn on Flight mode From the Home screen, drag upwards. Find and tap Settings > General. Select Flight mode. Entering text There are two text input methods: multitap and quick text phone dictionary to help you spell words. . Quick text input uses the in- 12 This is an Internet version of this publication. © Print only for private use.

· · To display the keypad and enter text Tap a text field to display the keypad, then enter your text. To shift between upper-case and lower-case letters Before you enter a letter, tap . To turn on the caps lock Before you type a word, tap . until appears. · To enter numbers using the keypad When you enter text, tap . n Internet version of this publication. © Print only for private use. 1 2 1 2 3 4 · To send or delete a track In the Walkman™ player, tap the cover art for a particular track. Selete an option. To play smart playlists In the Walkman™ player, tap . Tap .

Under Smart playlists, tap a playlist. Tap a track to play it. To adjust the audio volume Press the volume key. Walkman™ player widget The Walkman™ player widget appears on your Home screen when you minimise the Walkman™ player, but you might have to flick left or right to find it. Walkman™ mini-player Use the Walkman™ mini-player to control music playback features when the screen is locked. 1 2 To use the mini-player when the screen is locked Press the volume key to activate the mini-player. Tap , or to control the playback. 17 This is an Internet version of this publication. © Print only for private use. Connecting your phone to a computer Connect your phone to a computer and start transferring pictures, music and other file types.

You might not be able to transfer some copyright-protected material between your phone and computer. Transferring and handling content using a USB cable The most common way to transfer files between your phone and a computer is using a USB cable. Once the phone and computer are connected, you can drag and drop content from one to the other using your computer's file explorer. Make sure you place files in the corresponding folder types. For example, put your music files in the Music folder.

Java application files are an exception. You should place them in the Other folder. 1 2 3 4 5 6 To drag and drop content between your phone and a computer Connect the USB cable to the phone and the computer. Phone: Select Mass storage. Computer: Wait until the phone memory and memory card appear as external disks in the file explorer.

Computer: On the computer desktop, double-click the My Computer icon. Computer: To view the phone memory and memory card folders, double-click the icon representing your phone. Computer: Copy and paste your file, or drag and drop it, into a corresponding folder on your computer, in your phone memory, or on your memory card. You cannot use your phone while transferring files. To disconnect the USB cable safely Do not disconnect the USB cable while you are transferring content as this may corrupt the content. 1 2 Computer: Use the Safely Remove Hardware function to select the device you want to unplug, then click Stop. Disconnect the USB cable. Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information. 18 This is an Internet version of this publication.

© Print only for private use. Camera Take photos, record videos, view albums and share your favourite clips and pictures with friends all with your camera application. 1 2 1 2 3 4 To activate the camera From the Home screen, drag Find and tap Camera. upwards. To take a photo Activate the camera. If the still camera is not selected, tap . Point the camera towards the subject and tap review mode. To return to the camera viewfinder, tap . . A photo is taken and appears in Viewfinder and camera controls 1 2 3 10 9 8 5 4 7 1 2 3 4 5 6 7 8 9 10 Zoom in and out (only available in video mode) Take photos Exit the camera Switch between still and video camera Record video clips Switch between still and video camera View photos and video clips Select video length View photos and video clips Number of remaining photos you can take 6 19 This is an Internet version of this publication.

© Print only for private use. TrackID™ technology Use the TrackID™ music recognition service to identify a music track you hear playing in your surroundings. Just record a short sample of the song and you'll get artist, title and album info within seconds. You can also purchase tracks identified by TrackID™. For best results, use TrackID™ technology in a quiet area.

If you have problems using this application, see I cannot use Internet-based services on page 29. The TrackID™ application and the TrackID™ service are not supported in all countries/ regions, or by all networks and/or service providers in all areas. 1 2 To open the TrackID™ application From the Home screen, drag upwards. Find and tap TrackID™ . To search for track information Open the TrackID™ application and tap Record.

Hold your phone towards the music source. The results are shown in the result screen. Flick left or right to view previous search results. 1 2 3 20 This is an Internet version of this publication. © Print only for private use. PlayNow™ Use the PlayNow™ application in your phone to browse, purchase and download the latest music, games, ringtones, applications, themes and wallpapers. PlayNow™ is not available in all countries. 1 2 To start PlayNow™ From the Home screen, drag Find and tap . upwards. 21 This is an Internet version of this publication.

© Print only for private use. Multimedia and text messaging 1 2 3 4 5 1 2 3 4 To create and send a message From the Home screen, tap . Tap New message > Write message. Enter your message text and tap . To add a recipient, select a contact from the list that appears. You can also tap the text field, enter a number manually, and then tap Done. If you want to add a photo or a video, tap and select an option. When you are finished, tap Send. To read a received message From the Home screen, tap . Tap a message thread.

To download a message that is not downloaded yet, tap the message. @ @ @ @ @ @ See Internet and messaging settings on page 12. @ @ Find and tap Email. Select an email account. If the account you want to use is not in the list, tap Other.



[You're reading an excerpt. Click here to read official SONY ERICSSON YENDO user guide](http://yourpdfguides.com/dref/3463942)
<http://yourpdfguides.com/dref/3463942>

Enter your Email address and password, then tap Continue. Find and tap Email. Tap Write new. Tap To: and enter the recipient's address, then tap Done. Tap Subject and enter the email subject.

Tap Write email, then enter your message text. Tap Send. Find and tap Email. Tap Inbox. To update the inbox with new messages, tap Find and tap Settings > Connectivity > Bluetooth. Tap Bluetooth and tap the on/off button to turn on Bluetooth. appears in the status bar. Enter your desired phone name. Tap OK.

Find and tap Settings > Connectivity > Bluetooth. Tap Add new device. The Bluetooth devices found will be shown in a list. Tap the Bluetooth device that you want to pair with your phone. Enter a passcode, if required. The phone and the Bluetooth device are now paired. In some cases, you may need create connection manually after pairing. To open the web browser From the Home screen, drag Find and tap Browser . upwards. To go to a web page Tap .

Tap the text field to activate the keypad. Enter a web address. Tap Go to. This is an Internet version of this publication. © Print only for private use. More features Alarms Customise your alarm and wake up to your preferred alarm tone or radio station. Activated alarms sound even if your phone is turned off. To set a new alarm From the Home screen, drag upwards. Find and tap Alarm. Tap Add new.

Set an alarm time and enter the relevant details in the Alarm text, Recurrence and Alarm signal fields, then tap Done. To delete an alarm From the Home screen, drag upwards. Find and tap Alarm. Scroll to the alarm you have set and want to delete, and tap it. Scroll down and Tap Delete. To silence the alarm

When the alarm sounds, drag Slide to turn off to the right to turn off the alarm. To repeat the alarm, select Snooze. Calendar Use your phone calendar to manage your schedule and appointments. To open the Calendar application From the Home screen, drag upwards. Find and tap Calendar.

When you open the Calendar application for the first time, it opens in month view. If you have previously used the application, it opens in the view you last used. To log in to Facebook From the Home screen, drag Find and tap Facebook. Enter your login details. To log in to Twitter From the Home screen, drag Find and tap Twitter. Enter your login details. upwards. Voicemail If your subscription includes a voicemail service, callers can leave voice messages for you when you can't answer calls. Your voicemail service number is normally saved on your SIM card.

If not, you can get the number from your service provider and enter it manually. To enter your voicemail service number From the Home screen, drag upwards. Select Settings > Calls > Voicemail. Enter your voicemail number and tap Done. This is an Internet version of this publication.

© Print only for private use. To call your voicemail service From the Home screen, drag upwards. Tap Voicemail. This is an Internet version of this publication. © Print only for private use.

Locking and protecting your phone IMEI number Every phone has a unique IMEI (International Mobile Equipment Identity) number. You should keep a copy of this number. If your phone is stolen, your network provider can use your IMEI number to stop the phone from accessing the network in your country. To view the IMEI number in your phone From the Home screen, drag upwards. Find and tap Settings > General > About phone. To change your SIM card PIN From the Home screen, drag upwards. Find and tap Settings > General > Security > Change PIN, then follow the instructions. This is an Internet version of this publication. © Print only for private use. Troubleshooting Common questions My phone is not working as expected If you experience problems with your phone, check these tips before you try anything else: Restart your phone.

Remove and re-insert the battery and SIM card. Then restart your phone. Update your phone. Even if you have the latest software, updating your phone can improve software stability and solve other problems. By running the latest update on your phone, you also ensure optimal performance and get the latest enhancements. Reset your phone. Be patient while resetting your phone. Restarting the phone during a reset procedure may damage the phone permanently. Resetting the phone When you reset your phone, you delete all data, including downloaded applications. You are basically resetting the phone to the state it was in before you first turned it on.

So before you perform a reset, make sure to back up any important data saved on your phone. To reset the phone From the Home screen, drag upwards. Find and tap Settings > General > Master reset > Reset all . Tap Reset. No battery charging icon appears when I start charging the phone It may take a few minutes before the battery icon appears on the screen.

I cannot use Internet-based services Make sure your subscription covers data downloads and that the Internet settings in your phone are correct. Contact your network operator for more information about your subscription settings. Error messages No network coverage Your phone is in flight mode. Make sure flight mode is off. Your phone is not receiving any network signal, or the received signal is too weak.

Contact your network operator and make sure that the network has coverage where you are. The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. In this case, contact the nearest Sony Ericsson service center. Emergency calls only You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. SIM locked You have entered your PIN incorrectly three times in a row. To unlock the phone, you need the PUK ((Personal Unblocking Key) provided by your operator. This is an Internet version of this publication.

© Print only for private use. PUK blocked. Contact operator. You have entered your PUK code incorrectly 10 times in a row. Please contact your service provider. This is an Internet version of this publication. © Print only for private use. Legal information Sony Ericsson Yendo with Walkman with W150i This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.



[You're reading an excerpt. Click here to read official SONY ERICSSON YENDO user guide](http://yourpdfguides.com/dref/3463942)
<http://yourpdfguides.com/dref/3463942>

©Sony Ericsson Mobile Communications AB, 2010 Publication number: 1239-1711.1 Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone.

Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. The Liquid Identity logo and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guarantee the availability or performance of any thirdparty websites or offered services. @@@@ and any use of such mark by Sony Ericsson is under license. Media Go is a trademark or registered trademark of Sony Electronics Inc.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. Facebook and the F logo are trademarks or registered trademarks of Facebook, Inc. Twitter and the Twitter T are trademarks or registered trademarks of Twitter, Inc. TrackID™ is powered by Gracenote Mobile MusicID™.

Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc. The Liquid Identity logo, PlayNow, TrackID, are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. WALKMAN, WALKMAN logo are trademarks or registered trademarks of Sony Corporation. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners. All illustrations are for illustration only and may not accurately depict the actual phone. Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. "Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to import and export regulations of the European Union, the United States and other countries.

The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limiting the foregoing, and as an example, the user and any possessor of the product:

(1) must not knowingly export or re-export Products to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 428/2009; (2), must comply with U.S. government Export Administration Regulations ("EAR", 15 C.F.

R. §§ 730-774, <http://www.bis.doc.gov/>) administered by Department of Commerce, Bureau of Industry and Security; and (3) must comply with economic sanctions regulations (30 C.F.R. §§ 500 et. seq.,

, <http://www.treas.gov/offices/enforcement/ofac/>) administered by the U.S. Department of Treasury, Office of Foreign Assets Control. The user and any possessor of the product may not transport or deliver the product, its accessories or separate software to any country, region, entity or person prohibited by these regulations." 31 This is an Internet version of this publication. © Print only for private use. Index adjusting volume ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....17 playing .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....16 A R S reset

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....29 B battery

.....
.....
.....
.....

.....
.....
.....
.....

.....9 Bluetooth™ wireless technology

.....
.....
.....

.....24 browsing - see web browser calls

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....15 caps lock

.....
.....

.....
.....
.....
.....

.....
.....
.....

.....12 charging

.....
.....
.....
.....

.....
.....
.....
.....

9 contacts

.....
.....
.....

.....
.....
.....
.....

.....14 games ...

.....
.....
.....

.....
.....
.....
.....

.....
.....

..21 C screen lock ...

.....

.....
.....
.....
.....

.....
.....

....28 screen lock pattern .

.....

.....
.....
.....
.....

.....28 searching music using TrackIDTM technology .

.....
.....

.....20 track information

.....
.....
.....
.....

.....
.....

.20 setup guide

.....
.....
.....
.....

.....
.....

.....
.....
7 SIM

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....28 SIM card inserting .

.....
.....
.....

.....
.....
.....

6 smart playlists playing

.....
.....
.....

.....
.....
.....

.17 SMS

.....
.....
.....

.....
.....
.....

.....
.....
.....22 symbols .

.....
.....

.....
.....
.....

.....
.....
.....

.12 telephony See calls text messages

.....
.....
.....

.....
.....
.....
...22 TrackIDTM technology ..
.....

.....
.....
.....
.....

....20 opening

.....
.....
.....
.....

...20 searching for track information

.....
.....

.....20 troubleshooting

.....
.....
.....
.....

.....
.....
.....

.29 G T H I Home screen

.....
.....
.....
.....

.....
.....
.....

10 input method

.....
.....
.....
.....

.....
.....

....12 Internet web browser .

.....
.....
.....
.....

.....
.....
.....
.....

.25 keypad
.....
.....

.....
.....
.....
.....

.....
.....
.....
12 U V USB connection

.....
.....
.....
.....

.....
....18 K voicemail .
.....
.....

.....
.....
.....
.....

.....
.....
....26 M W messages multimedia .
.....

.....
.....
.....
.....

.....
....22 picture .
.....
.....

.....
.....
.....
.....

.....
.....
22 text
.....

.....
.....
.....
.....

.....
.....
.....
.22 MMS

.....
.....
.....
.....

.....
.....

.....
.....
...22 multimedia messages

.....
.....
.....

.....
.....
...22 music .
.....

.....
.....
.....

.....
.....
.....

16 adjusting volume

.....
.....
.....

.....

17 audiobooks

.....
.....
.....
.....

.....16 downloading .

.....
.....
.....

.....
.....
.....

.21 pausing a track

.....
.....
.....

.....

....16 player overview .

.....
.....
.....
.....

.....16 playing

.....
.....
.....

.....
.....
.....
.....

.....16 podcast ...

.....
.....
.....

.....
.....
.....
.....

.....16 music player smart playlists ...

.....
.....
.....

.....
.....
.....

.....17 WalkmanTM player

.....
.....
.....
.....

.....
.....

.16 web browser

.....

.....
.....
.....
.....

.....
.....

.25 N navigation

.....

.....
.....
.....
.....

.....
.....
.....

12 O overview WalkmanTM player

.....
.....
.....
.....

...16 P pausing a track

.....
.....
.....
.....

.....
.....
.....16 personal information .

.....
.....
.....

.....
.....
.....14 phonebook ...
.....

.....
.....
.....

.....
.....
.....14 picture messages .
.....

.....
.....
.....

.....
.....22 PIN
.....

.....
.....
.....

.....
.....
.....28 playing music

.....
.....
.....

.....
.....
.....

.....16 playlists smart (auto-generated) .
.....
.....
.....

.....
.....
.....

.....17 PlayNowTM
.....
.....

.....
.....21 PUK ..
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.28 32 This is an Internet version of this publication. © Print only for private use. .



[You're reading an excerpt. Click here to read official SONY
ERICSSON YENDO user guide
http://yourpdfguides.com/dref/3463942](http://yourpdfguides.com/dref/3463942)