



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY BDV-E2100. You'll find the answers to all your questions on the SONY BDV-E2100 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY BDV-E2100
User guide SONY BDV-E2100
Operating instructions SONY BDV-E2100
Instructions for use SONY BDV-E2100
Instruction manual SONY BDV-E2100

SONY

4-449-730-11(1)

Blu-ray Disc™/
DVD Home Theatre
System

Operating Instructions

BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)

<http://yourpdfguides.com/dref/5477889>

Manual abstract:

Indoor use only. This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior. The nameplate is located on the bottom exterior. For the customers in the U.S.A. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. These following indications are located on the rear exterior. This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

@@@ This marking is located on the laser protective housing inside the enclosure. The model and serial numbers are located on the bottom exterior of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product. Model No.

_____ Serial No. _____ The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

2US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HASOI20029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\020REG.fm masterpage: Right NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna (aerial). – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. – Consult the dealer or an experienced radio/ TV technician for help. Blu-ray Disc/DVD receiver (HBD-E6100/HBD-E4100/ HBD-E3100/HBD-E2100) This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles). Important Safety Instructions 1) 2) 3) 4) 5) 6) 7) Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety.

If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11) Only use attachments/accessories specified by the manufacturer. CAUTION You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals in order to meet FCC emission limits.

3US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HASOI20029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\020REG.fm masterpage: Left 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles). Precautions 13) Unplug this apparatus during lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. On power sources • The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off. • As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet.

Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately. On watching 3D video images Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images. Sony recommends that all viewers take regular breaks while watching 3D video images. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual and/or the caution message of any other device used with, or Blu-ray Disc contents played with this product and (ii) our website (<http://esupport.sony.com/>) for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images. Adults should supervise young children to ensure they follow the recommendations listed above. For the customers in Canada To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)
<http://yourpdfguides.com/dref/5477889>

The serial number is located on the bottom exterior. Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals.

Blu-ray Disc/DVD receiver (HBD-E6100/HBD-E4100/ HBD-E3100/HBD-E2100) Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device. 4US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\020REG.fm masterpage: Right Copy Protection • Please be advised of the advanced content protection systems used in both Blu-ray Disc and DVD media. These systems, called AACS (Advanced Access Content System) and CSS (Content Scramble System), may contain some restrictions on playback, analog output, and other similar features. The operation of this product and the restrictions placed may vary depending on the date of purchase, as the governing board of the AACS may adopt or change its restriction rules after the time of purchase.

• **Cinavia Notice** This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted. More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA. **Copyrights and Trademarks** • This system incorporates with Dolby* Digital and Dolby Pro Logic adaptive matrix surround decoder and the DTS** Digital Surround System. * Manufactured under license from Dolby Laboratories.

Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories. ** Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

• This system incorporates High-Definition Multimedia Interface (HDMI™) technology. The terms HDMI and HDMI HighDefinition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • Java is a trademark of Oracle and/or its affiliates. • “DVD logo” is a trademark of DVD Format/ Logo Licensing Corporation. • “Blu-ray Disc”, “Blu-ray”, “Blu-ray 3D”, “BD-LIVE”, “BONUSVIEW”, and logos are trademarks of the Blu-ray Disc Association.

• “Blu-ray Disc”, “DVD+RW”, “DVD-RW”, “DVD+R”, “DVD-R”, “DVD VIDEO”, and “CD” logos are trademarks. • “BRAVIA” is a trademark of Sony Corporation. • “AVCHD 3D/Progressive” and the “AVCHD 3D/Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation. • “XMB”, and “cross media bar” are trademarks of Sony Corporation and Sony Computer Entertainment Inc. • “PlayStation” is a registered trademark of Sony Computer Entertainment Inc.

• “Sony Entertainment Network logo” and “Sony Entertainment Network” are trademarks of Sony Corporation. 5US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\020REG.fm masterpage: Left • Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit www.gracenote.com. CD, DVD, Blu-ray Disc, and music and video-related dServers”) and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device. You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal noncommercial use only.

You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN. You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Soft.....

.....

.....

.....

.....

.....

. 42 Controlling Your TV with the Supplied Remote Control

..... 42 Saving Power in Standby Mode ..

..... 43 Browsing Websites ...

.....

.....

.....

..... 43 20 21 Step 3: Preparing for Network Connection

.....

.....

.....

. Step 4: Performing the Easy Setup

.....

.....

.....

..... Step 5: Selecting the Playback Source ...

.....

.....

.....

.....
. Step 6: Enjoying Surround Sound
.....

.....
. 21 23 24 24 Settings and Adjustments Using the Setup Display
.....

..... 45 [Network Update] ...
.....
.....

..... 46 [Screen Settings] ...
.....
.....

..... 46 [Audio Settings] .
.....
.....

.....
.. 48 [BD/DVD Viewing Settings] ...
.....

..... 49 [Parental Control Settings]

.....
.. 49 [System Settings] ...
.....
.....

.....
... 50 [Network Settings] ..
.....
.....

.....
.. 51 [Easy Network Settings] ...
.....
.....

.. 52 [Resetting]
.....
.....

.....
.... 52 Playback Playing a Disc .
.....
.....

.....
26 Playing from a USB Device

..... 28 Enjoying music from a Bluetooth device
.....
.....

.....
.....

.. 28 Connecting to a smartphone by One-touch listening function (NFC)

..... 30 Playing via a Network

... 32 Available Options

... 35 Additional Information Precautions

.... 52 Notes about Discs

..... 55 Troubleshooting

..... 55 Playable Discs

.... 60 Playable Types of Files

..... 61 Supported Audio Formats

.... 63 Specifications

. 63 Language Code List

..... 66 Index

.... 68 Sound Adjustment Selecting the Audio Format, Multilingual Tracks, or Channel

.....
.....
.....
..... 37 Enjoying Multiplex Broadcast Sound ..

.....
.....
.....
.....

.....

38 9US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HANSO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.fm masterpage: Left Unpacking ••••• Operating Instructions Quick Setup Guide Speaker Installation Guide Remote control (1) R6 (size AA) batteries (2) FM wire antenna (aerial) (1) • Subwoofer (1) • Speaker-bottom covers (4) BDV-E6100 only • Front speakers (2) • Bases (4) • Lower parts of the front and surround speakers (4) • Surround speakers (2) • Screws (large) (4) • Screws (small) (16) • Center speaker (1) 10US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HANSO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.fm masterpage: Right BDV-E4100 only • Front speakers (2) • Lower parts of the front speakers (2) • Screws (large) (2) • Surround speakers (2) • Screws (small) (8) BDV-E3100 only • Front speakers (2) • Center speaker (1) • Subwoofer (1) • Surround speakers (2) • Center speaker (1) • Speaker-bottom covers (2) • Bases (2) 11US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HANSO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](#)

<http://yourpdfguides.com/dref/5477889>

fm masterpage: Left • Subwoofer (1) BDV-E2100 only • Front speakers (2) • Surround speakers (2) • Center speaker (1) • Subwoofer (1) 12US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.fm masterpage: Right Guide to Parts and Controls For more information, refer to the pages indicated in parentheses.

Front panel Slot BDV-E2100 only A "/1 (on/standby) Turns on the unit, or sets it to standby mode. B Disc tray (page 26) C (N-Mark) (page 31) Position the NFC-compatible device near this indication to activate the NFC function. D Play operation buttons Z (open/close) Na) b) (play) xb) (stop) VOL +/-a) ./> (previous/next) FUNCTION (page 24) Selects the playback source. a) N Note During the demonstration, the volume level may be higher than the volume level you have set.

E and VOL + buttons have a tactile dot. Use the tactile dot as a reference when operating the unit. b) Hold down N on the unit for more than 2 seconds, the built-in sound demonstration will be played back on the system. Press x to stop the demonstration. (USB) port (page 28) (BDV-E6100/BDV-E4100/BDV-E3100 only) Place your fingernail in the slot to open the cover. F (remote control sensor) G Front panel display H LED indicator White: Lights up when the unit is turned on. Blue (for Bluetooth status) – System is ready for pairing: Flashes quickly – During pairing: Flashes quickly – During connection: Flashes – Connection is established: Lights up 13US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.fm masterpage: Left Indicators in the front panel display A Lights up when stereo sound is received. (Radio only) B Lights up when repeat play is activated. C Lights up when the system is playing via the PARTY STREAMING function.

D Lights up when muting is on. E Lights up when the HDMI (OUT) jack is correctly connected to an HDCP (High-bandwidth Digital Content Protection) compliant equipment with HDMI or DVI (Digital Visual Interface) input. F Displays the system's status, such as radio frequency, etc. When you press DISPLAY, the stream information/decoding status is displayed when the function is set to "TV". The stream information/decoding status may not appear depending on the stream or item being decoded. Note When the [Main Unit illumination] is set to [Auto] in [System Settings], the front panel display lights off if you do not operate the unit for about 10 seconds. Rear panel A SPEAKERS jacks (page 18) B TV (DIGITAL IN OPTICAL) jack (page 19) C LAN (100) terminal (page 21) D HDMI (OUT) jack (page 19) E AUDIO IN (L/R) jacks (page 20) F ANTENNA (FM) terminal (page 21) 14US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.fm masterpage: Right Remote control A Z (open/close) Opens or closes the disc tray. SPEAKERS TVyAUDIO Selects whether TV sound is output from the system's speakers or the TV's speaker(s). This function works only when you set [Control for HDMI] to [On] (page 50).

TV "/1 (on/standby) (page 43) Turns on the TV or sets it to standby mode. "/1 (on/standby) (pages 23, 39) Turns on the system or sets it to standby mode. B Number buttons (pages 39, 43) Enters the title/chapter numbers, preset station number, etc. AUDIO (page 37) Selects the audio format/track. SUBTITLE Selects the subtitle language when multilingual subtitles are recorded on a BD-ROM/DVD VIDEO.

C Color buttons Short cut keys for selecting items on some BD menus (can also be used for Java interactive operations on BDs). D TOP MENU Opens or closes the BD's or DVD's Top Menu. POP UP/MENU Opens or closes the BD-ROM's Popup Menu, or the DVD's menu. OPTIONS (pages 25, 35, 44) Displays the options menu on the TV screen or in the front panel display. (The location differs depending on the selected function.)

) RETURN Returns to the previous display. Number 5, AUDIO, VOL +, and N buttons have a tactile dot. Use the tactile dot as a reference when operating the remote control. •: For TV operations (For details, see "Controlling Your TV with the Supplied Remote Control" (page 42).) The system automatically returns to standby mode If any button on the unit or remote control is not pressed within 30 minutes, the system automatically returns to standby mode. 15US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\030UNP.fm masterpage: Left B/V/v/b Moves the highlight to a displayed item. (enter) Enters the selected item. E MUSIC EQ Selects the pre-programmed equalizer when listening to music. HOME (pages 23, 40, 45) Enters or exits the system's home menu.

SOUND MODE (page 24) Selects the sound mode. NETFLIX Accesses the "NETFLIX" online service. SEN Accesses the "Sony Entertainment Network™" online service. F Playback operation buttons See "Playback" (page 26). ./> (previous/next) Selects the previous/next chapter, track, or file. m/M (fast/slow/freeze frame) Fast reverse/fast forward music during playback. Each time you press the button, the search speed changes. Activates slow-motion play when pressed for more than one second in pause mode. Plays one frame at a time when pressed in pause mode.

Note N PLAY Starts or re-starts playback (resume play). Activates One-Touch Play (page 40) when the system is on and set to the "BD/DVD" function. X PAUSE Pauses or re-starts playback. x STOP Stops playback and remembers the stop point (resume point). The resume point for a title/track is the last point you played or the last photo for a photo folder.

Stops the built-in sound demonstration. Radio operation buttons See "Tuner" (page 38). PRESET +/- TUNING +/- G MUTING Turns off the sound temporarily. VOL +/- Adjusts the volume. TV VOL +/- Adjusts the TV volume.

TV INPUT Switches the TV's input source between the TV and other input sources. H DISPLAY (pages 27, 32, 39, 44) Displays playback and web browsing information on the TV screen. Displays the preset radio station, frequency, etc., in the front panel display. I FOOTBALL Produces optimized sound for watching football match broadcasting. During Blu-ray 3D Disc playback, slowmotion reverse play and single-frame reverse play are not available. 16US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.fm masterpage: Right J BLUETOOTH Selects the "BT" function. When the blue LED indicator lights off during "BT" function, press to start pairing or connect to paired Bluetooth device. FUNCTION (page 24) Selects the playback source.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)
<http://yourpdfguides.com/dref/5477889>

K SLEEP (page 42) Sets the sleep timer. Getting Started Getting Started Step 1: Installing the Speakers Install the speakers by referring to the illustration below. A Front left speaker (L) B Front right speaker (R) C Center speaker D Surround left speaker (L) E Surround right speaker (R) F Subwoofer G TV Installing the surround speakers in rear position (Speaker layout: [Standard]) F G C A B D E 17US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.fm masterpage: Left Getting Started Installing all speakers in front position (Speaker layout: [All Front]) DA F G CBE Step 2: Connecting the System Do not connect the AC power cord (mains lead) of the unit to a wall outlet (mains) until all the other connections are made. (BDV-E6100/BDV-E4100 only) To assemble the speakers, refer to the supplied "Speaker Installation Guide". Note When you connect other equipment with a volume control, turn down the volume of the equipment to a level where sound is not distorted. Note • Be sure to select the speakers layout setting (page 41) according to your speakers placement. • Use caution when placing the speakers and/or speaker stands attached to the speakers on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result. • Do not lean or hang on a speaker, as it may fall down.

Tip Connecting the speakers Connect the speaker cords to match the color of the SPEAKERS jacks of the unit. When connecting to the unit, insert the connector until it clicks. Red (Front right speaker (R)) Gray Purple (Surround right (Subwoofer) speaker (R)) You can install the speakers on a wall. For details, refer to the supplied "Speaker Installation Guide". White Green Blue (Front left (Center (Surround left speaker (L)) speaker) speaker (L)) 18US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.

fm masterpage: Right Connecting the TV Getting Started Select one of the following connection methods according to the input jacks on your TV. A B C Video connection A HDMI cable1) (not supplied) 2) or 1) High 2) Speed HDMI cable If the HDMI IN jack of your TV is compatible with the ARC (Audio Return Channel) function, digital audio signal can be output from the TV via an HDMI cable connection. For setting the ARC function, see [Audio Return Channel] (page 50). Audio connections If you do not connect the system to the TV's HDMI jack that is compatible with the ARC function, make an appropriate audio connection for listening to TV sound via the system's speakers. B Optical digital cord (not supplied) High quality DIGITAL OUT OPTICAL C Audio cable (not supplied) L AUDIO OUTPUT R Standard quality 19US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.

fm masterpage: Left Connecting the other equipment (Set-top box, etc.) Getting Started Connect the system so that video signals from the system and other equipment are output to the TV, and audio signals from the equipment are output to the system as follows. TV Video out Equipment (Set-top box, VCR, PlayStation®, or digital satellite receiver, etc.) Audio out System Signal flow : Video signal : Audio signal Select one of the following connection methods according to the jack type of the equipment. A B A Optical digital cord (not supplied) High quality DIGITAL OUT OPTICAL B Audio cable (not supplied) L AUDIO OUTPUT R Standard quality Note • If you make either connection above, set [Control for HDMI] in [HDMI Settings] of [System Settings] to [Off] (page 50). • You can enjoy equipment sound by selecting the "AUDIO" function for connection B. 20US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.fm masterpage: Right Connecting the antenna (aerial) Step 3: Preparing for Network Connection Tip Getting Started To connect the system to your network, perform [Easy Network Settings]. For details, see "Step 4: Performing the Easy Setup" (page 23). FM wire antenna (aerial) (supplied) Note Select the method based on your LAN (Local Area Network) environment.

• If you use a wireless LAN The system has built-in Wi-Fi, and you can connect the system to the network by making the network settings. • If you use other than a wireless LAN Use a LAN cable to connect to the LAN (100) terminal on the unit. • Be sure to fully extend the FM wire antenna (aerial). • After connecting the FM wire antenna (aerial), keep it as horizontal as possible. Broadband router LAN cable (not supplied) Tip A shielded interface cable (LAN cable), straight or crossover, is recommended. 21US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.fm masterpage: Left Before performing the network settings Getting Started When your wireless LAN router (access point) is Wi-Fi Protected Setup (WPS) compatible, you can easily set the network settings with the WPS button. If not, check the following information in advance, and record it in the space provided below. • The network name (SSID*) that identifies your network**. • If security is set on your wireless network, the security key (WEP key, WPA key)**.

* SSID (Service Set Identifier) is a name that identifies a particular wireless network. ** You need to check the settings of your wireless LAN router to get the information about SSID and security key. For details: – visit the following website: <http://www.sony.com/blurrayhtsupport/> – refer to the operating instructions supplied with the wireless LAN router – consult the manufacturer of the wireless LAN router x No Security Although you can easily make settings, anyone can intercept wireless communication or intrude into your wireless network, even without any sophisticated tools.

Keep in mind that there is a risk of unauthorized access or interception of data. x WEP WEP applies security to communications to prevent outsiders from intercepting communications or intruding into your wireless network. WEP is a legacy security technology that enables older devices which do not support TKIP/AES to be connected. x WPA-PSK (TKIP), WPA2-PSK (TKIP) TKIP is a security technology developed in response to the deficiencies of WEP. TKIP assures a higher security level than WEP.

x WPA-PSK (AES), WPA2-PSK (AES) AES is a security technology that uses an advanced security method distinct from WEP and TKIP. AES assures a higher security level than WEP or TKIP. About wireless LAN security Since communication via the wireless LAN function is established by radio waves, the wireless signal may be susceptible to interception.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)
<http://yourpdfguides.com/dref/5477889>

To protect wireless communication, this system supports various security functions. Be sure to correctly configure the security settings in accordance with your network environment. 22US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.fm masterpage: Right Step 4: Performing the Easy Setup Before performing Step 4 Make sure all connections are secure, and then connect the AC power cord (mains lead). Follow the Steps below to make the basic adjustments and network settings for the system. Displayed items vary depending on the area. 5 Perform [Easy Initial Settings].

Follow the on-screen instructions to make the basic settings using B/V/v/b and . Getting Started B/V/v/b 6 1 Insert two R6 (size AA) batteries (supplied) by matching the 3 and # ends on the batteries to the markings inside the compartment. After completing the [Easy Initial Settings], press V/v to select [Easy Network Settings], then press . The [Easy Network Settings] display appears. Follow the on-screen instructions to make the network settings using B/V/v/b and . If the system cannot connect to the network, see "Network connection" (page 59) or "Wireless LAN connection" (page 59). 7 2 3 4 To recall the [Easy Network Settings] display Turn on the TV. Press [/]. Switch the input selector on your TV so that the signal from the system appears on the TV screen. The [Easy Initial Settings] for OSD language selection appears.

1 Press HOME. The home menu appears on the TV screen. 2 Press B/b to select Settings], then press [Setup]. . 3 Press V/v to select [Easy Network 23US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.

fm masterpage: Left Getting Started Step 5: Selecting the Playback Source Press FUNCTION repeatedly until the function you want appears in the front panel display. When you press FUNCTION once, the current function appears in the front panel display, then each time you press FUNCTION, the function changes cyclically as follows. "BD/DVD" t "USB" t "FM" t "TV" t "BT" t "AUDIO" Function and playback source "BD/DVD" Step 6: Enjoying Surround Sound After performing the previous Steps and starting playback, you can easily enjoy preprogrammed sound modes that are tailored to different kinds of sound sources.

They bring the exciting and powerful sound of movie theaters into your home. Selecting the sound mode Press SOUND MODE repeatedly during playback until the mode you want appears in the front panel display or on the TV screen.

Auto Disc or network device to be played by the system "USB" USB device that is connected to the port (page 13) "FM" (USB) FM radio (page 38) "TV" Equipment (TV, etc.) that is connected to the TV (DIGITAL IN OPTICAL) jack, or a TV compatible with the Audio Return Channel function that is connected to the HDMI (OUT) jack (page 19) "BT" The system automatically selects [Movie] or [Music] to produce the sound effect depending on the disc or sound stream. • 2-channel source: The system simulates surround sound from 2-channel sources and outputs sound from the 5.1 channel speakers. • Multi-channel source: The system outputs sound from the speakers as it was recorded. Movie The system provides the optimized sound for watching movies. Music Audio contents of a Bluetooth device "AUDIO" Equipment that is connected to the AUDIO IN (L/R) jacks (page 20) Tip The system provides the optimized sound for listening to music. Digital Music Enhancer [Digital Music] • Some functions may be changed via the TV screen by pressing FUNCTION, V/v, and . • You can also press BLUETOOTH on the remote control to select "BT" function. The system reproduces an enhanced sound for compressed audio.

Night Suitable for watching movies at night by reducing loud sounds while maintaining clear dialog. Demo Sound The system provides ear-catching sound, suitable for demonstration. 24US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\040GET.fm masterpage: Right To select the sound mode from the option menu 1 Press OPTIONS and V/v to select [Sound Mode], then press then press . . Selecting the football mode Press FOOTBALL during playback. [Football] appears on the TV screen. You can experience a feeling of presence in the stadium when watching a football match broadcasting. To turn off the football mode, press FOOTBALL again to select [Football Off]. The sound mode is changed to the last selected sound mode.

Note Getting Started 2 Press V/v to select the sound mode, To select the preprogrammed music equalizer Press MUSIC EQ repeatedly during playback. You can select the sound to suit your preference. Each time you press the button, the setting changes cyclically as follows. [Standard] t [Rock] t [Hiphop] t [Electronica] You can also select the music equalizer by using the option menu in [Music] sound mode. Note • Depending on the source, the football mode may not work well.

• The football mode will be turned off when you turn off the system. Tip You can also select the football mode from the option menu. The sound mode can be selected only when [Sound Effect] is set to [Sound Mode On] (page 48). When [Sound Effect] is set to other than [Sound Mode On], the sound mode setting does not apply. Tip To enjoy 2-channel source such as a CD in multichannel output, we recommend you to select [Auto].

25US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Left Playback Enjoying BONUSVIEW/BD-LIVE Some BD-ROMs with "BD-LIVE Logo*" have bonus content and other data that can be downloaded for enjoyment. * Playing a Disc For playable discs, see "Playable Discs" (page 60). 1 2 Switch the input selector on your TV so that the signal from the system appears on your TV screen. Press Z, and place a disc on the disc tray. 1 2 Connect the USB device to the (USB) port (page 28). For local storage, use a 1 GB or larger USB memory. Prepare for BD-LIVE (BD-LIVE only). • Connect the system to a network (page 21). • Set [BD Internet Connection] to [Allow] (page 49).

Insert a BD-ROM with BONUSVIEW/BD-LIVE. The operation method differs depending on the disc. Refer to the operating instructions of the disc. 3 3 Press Z to close the disc tray. Playback starts. If playback does not start automatically, select in the [Video], [Music], or [Photo] category, and press . Tip To delete data in the USB memory, select [Delete BD Data] in [Video], and press . All data stored in the buda folder will be deleted. 26US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)

<http://yourpdfguides.com/dref/5477889>

fm masterpage: Right Enjoying Blu-ray 3D You can enjoy Blu-ray 3D Discs with the 3D logo.*

** Displaying the playback information You can check the playback information, etc., by pressing DISPLAY. The displayed information differs depending on the disc type and system status. Example: when playing a BD-ROM Playback 1 Prepare for Blu-ray 3D Disc playback. • Connect the system to your 3D-compatible TV using a High Speed HDMI cable (page 19).*

• Set [3D Output Setting] and [TV Screen Size Setting for 3D] in [Screen Settings] (page 46). Insert a Blu-ray 3D Disc. The operation method differs depending on the disc. Refer to the operating instructions supplied with the disc. 2 Tip A Output resolution/Video frequency B Title number or name C The currently selected audio setting D Available functions (angle, audio, subtitle) E Playback information Displays play mode, playing status bar, disc type, video codec, bit rate, repeat type, elapsed time, total playing time F Chapter number G The currently selected angle Refer also to the operating instructions of your 3D-compatible TV.

27US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Left Playing from a USB Device You can play video/music/photo files on a connected USB device. For playable types of files, see "Playable Types of Files" (page 61). Enjoying music from a Bluetooth device About the Bluetooth wireless technology Bluetooth wireless technology is a shortrange wireless technology that enables wireless data communication between digital devices. Bluetooth wireless technology operates within a range of about 10 meters (33 feet). You do not need wires to get connected as you do with a USB connection, and you do not need to place the devices face to face as you do with wireless infrared technology. Bluetooth wireless technology is a global standard supported by thousands of companies. These companies produce products that meet the global standard. 1 Connect the USB device to the (USB) port. Refer to the operating instructions of the USB device before connecting.

2 3 4 Press HOME. The home menu appears on the TV screen. Press B/b to select [Video], [Music], or [Photo]. Press V/v to select device], then press Note [USB . Supported Bluetooth version and profiles Profile refers to a standard set of capabilities for various Bluetooth product capabilities. This system supports the following Bluetooth version and profiles. Supported Bluetooth version: Bluetooth Specification version 3.0 Supported Bluetooth profiles: A2DP 1.2 (Advanced Audio Distribution Profile) AVRCP 1.3 (Audio Video Remote Control Profile) Do not remove the USB device during operation.

To avoid data corruption or damage to the USB device, turn the system off before connecting or removing the USB device. 28US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Right Note 5 • To be able to use the Bluetooth function, the Bluetooth device to be connected must support the same profile as this system. Even if the device supports the same profile, the functions may differ depending on the specifications of the Bluetooth device. • The audio playback on this system may be delayed from that on the Bluetooth device because of the characteristics of the Bluetooth wireless technology.

Once pairing is completed, the device is automatically connected to the system. Device name appears on the TV screen. Note Playback You can pair up to 9 Bluetooth devices. If the 10th Bluetooth device is paired, the least recently connected device will be replaced by the new one. Pairing this system with a Bluetooth device Pairing is an operation where Bluetooth devices register with each other beforehand.

Once a pairing operation is performed, it does not need to be performed again. 6 7 Start playback on the Bluetooth device. Adjust the volume. Adjust the volume of the Bluetooth device first, if the volume level is still too low, adjust the volume level on the unit. 1 2 3 To cancel pairing operation Place the Bluetooth device within 1 meter (3.3 feet) from the unit. Press BLUETOOTH. You can also select [Bluetooth AUDIO] from [Input] in home menu. Set the Bluetooth device in pairing mode. For details on setting the Bluetooth device in pairing mode, refer to the operating instructions supplied with the device.

Select "BLU-RAY HOME THEATRE SYSTEM" on the Bluetooth device display. Perform this step within 5 minutes, otherwise pairing will be canceled. Note Press HOME or FUNCTION. Connecting to a Bluetooth device from this system You can connect to a Bluetooth device from this unit. Check the following before playing music: – The Bluetooth function of the Bluetooth device is turned on. – The pairing has been completed (page 29). 4 1 Press BLUETOOTH. Note To connect to the most recent connected Bluetooth device, press N. Then proceed to Step 5. If passkey is required on the Bluetooth device, enter "0000". Passkey may be called "Passcode", "PIN code", "PIN number" or "Password". 2 Press OPTIONS. 29US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Left 3 4 5 6 Press V/v repeatedly to select [Device List], then press . A list of paired Bluetooth devices appears.

Press V/v repeatedly to select the device you want, then press . Press N to start playback. Adjust the volume. Adjust the volume of the Bluetooth device first, if the volume level is still too low, adjust the volume level on the unit. Connecting to a smartphone by Onetouch listening function (NFC) By holding an NFC-compatible smartphone near to the on the unit, the unit and smartphone proceed to complete pairing and the Bluetooth connection automatically.

Compatible smartphones Smartphones with a built-in NFC function (OS: Android 2.3.3 – 4.0.x, excluding Android 3.x) What is "NFC"? NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as mobile phones and IC tags. Thanks to the NFC function, data communication can be achieved easily just by holding the device near the on the NFC-compatible devices. Note Once the unit and the Bluetooth device are connected, you can control playback by pressing N, X, x, m/M and ./>. To disconnect the Bluetooth device Press HOME, FUNCTION or RETURN.

To delete a paired Bluetooth device from the device list 1 Follow Steps 1 to 3 above. 2 Press V/v repeatedly to select the device, then press OPTIONS. 1 3 Press V/v repeatedly to select [Remove], then press . 4 Follow the on-screen instructions to delete the device using B/V/v/b and . Note While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)

<http://yourpdfguides.com/dref/5477889>

Download and install the app “NFC Easy Connect”. “NFC Easy Connect” is a free app for Android smartphones that can be obtained on Google Play. Search for the app using the keyword “NFC Easy Connect” on the site, or access the download site directly by reading the two-dimensional code below. Note that “NFC Easy Connect” is free but data communication fees when downloading are charged separately. 30US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HA\SO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.

fm masterpage: Right Two-dimensional code* for direct access * Use a two-dimensional code reader app. Note • The system only can recognize and connects to one NFC-compatible device at a time. • Depending on your smartphone, you may need to turn on the NFC function on your smartphone in advance. For details, refer to the operating instructions of the smartphone. Tip Playback Note The app may not be available in some countries/regions. 2 3 If pairing and the Bluetooth connection fail, do the following. – Relaunch “NFC Easy Connect” and move the smartphone slowly over the . – Remove the case from the smartphone if using a commercially available smartphone case. Start the “NFC Easy Connect” app on the smartphone. Make sure that the application screen is displayed.

Hold the smartphone near to the on the unit until the smartphone vibrates. To listen to music Start playback of an audio source on the smartphone. For details on playback operations, refer to the operating instructions of your smartphone. Tip If the volume level is low, adjust the volume of the smartphone first. If the volume level is still too low, adjust the volume level on the unit. To stop playback Vibration cue is provided when the smartphone is recognized by the unit.

After being recognized by the unit, follow the on-screen instructions displayed on the smartphone, and complete the procedure for Bluetooth connection. When the Bluetooth connection is established, the blue LED indicator on the front panel stops flashing. The playback time appears in the front panel display. The playback will be stopped when you perform any of the following items: – Hold the smartphone near to the on the unit again.

– Stop the music player of the smartphone. – Turn off the unit or the smartphone. – Change the function. – Disable the Bluetooth function on the smartphone. 31US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY

HA\SO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Left Playing via a Network Enjoying Sony Entertainment Network (SEN) Sony Entertainment Network serves as a gateway delivering selected Internet content and a variety of on-demand entertainment straight to your unit. Tip Video streaming control panel The control panel appears when a video file starts playing. The displayed items may differ depending on the Internet content provider. To display again, press DISPLAY. • Some Internet content requires registration via a PC before it can be played.

For further details, visit the following website: <http://www.sony.com/blurayhtsupport/> • Some Internet content may not be available in some countries/regions. A Control display Press B/V/v/b or operations. for playback 1 2 3 Prepare for Sony Entertainment Network.

Connect the system to a network (page 21). Press SEN. Press B/V/v/b to select the Internet content and a variety of on-demand entertainment, then press . B Playing status bar Status bar, cursor indicating the current position, playing time, duration of the video file C Network condition indicator Indicates signal strength for a wireless connection. Indicates a wired connection.

D Network transmission speed E The next video file name F The currently selected video file name 32US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HA\SO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Right Playing files on a Home Network (DLNA) You can play video/music/photo files on other DLNA-certified equipment by connecting them to your home network. This unit can be used as a player and renderer. • Server: Stores and shares digital media contents • Player: Finds and plays digital media content from the DMS • Renderer: Receives and plays files from the server, and can be operated by another equipment (controller) • Controller: Operates the renderer equipment Server To play files stored on a DLNA server via the system (DLNA Player) Select the DLNA server icon from [Video], [Music], or [Photo] in the home menu, then select the file that you want to play. Server Playback Player (This system) To play remote files by operating the system (Renderer) via a DLNA controller You can operate the system with a DLNA-certified controller (a mobile phone, etc), when playing files stored on a DLNA server. Server Player (This system) Player Renderer (This system) Prepare for using the DLNA function. • Connect the system to a network (page 21). • Prepare other DLNA-certified equipment.

For details, refer to the operating instructions of the equipment. Controller For details on operation, refer to the operating instructions of the DLNA controller.

Note Do not operate the system with the supplied remote control and a DLNA controller at the same time. Tip The system is compatible with the “Play To” function of Windows Media® Player 12 that comes standard with Windows 7. 33US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HA\SO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\050PLA.fm masterpage: Left Playing the same music in different rooms (PARTY STREAMING) You can play the same music at the same time on all Sony equipment which are compatible with the PARTY STREAMING function and connected to your home network. Contents in [Music] and the “FM”, “BT” and “AUDIO” functions can be used with the PARTY STREAMING function. There are two kinds of PARTY STREAMING-compatible equipment. • PARTY host: Plays and sends music. • PARTY guest: Plays music that is received from PARTY host. This unit can be used as a PARTY host or PARTY guest. PARTY host (This system) To use the system as the PARTY host Select a track in [Music], a radio station in [Radio], [AUDIO] or [Bluetooth AUDIO] in [Input], press OPTIONS.

Then select [Start PARTY] to start. To close, press OPTIONS, then select [Close PARTY]. Note If content that is not compatible with the PARTY STREAMING function is played, the system closes PARTY automatically. To use the system as a PARTY guest Select [PARTY] in [Music], then select the PARTY host device icon. To leave the PARTY, press OPTIONS, then select [Leave PARTY].

To close the PARTY, press OPTIONS, then select [Close PARTY]. Note The sale and product lineup of products that are compatible with the PARTY STREAMING function differ depending on the area.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)

<http://yourpdfguides.com/dref/5477889>

• Connect the system to a network (page 21). • Insert a disc with content about which you want to search. • The available items differ depending on the situation.

Playback Press *V/v* to select [Video Search] or [Music Search]. • Select a title to acquire content information. • [3D Depth Adjustment]: Adjusts the depth of 3D images. • For PARTY guest: Closes a party which the system is participating in. • [BNR]: Reduces the mosaic-like block noise in the picture. • The audio information appears on the TV screen. • When 4 digits are displayed, they represent a language code. See "Language Code List" (page 66). • x DVD-VR The types of sound tracks recorded on a disc are displayed. • The option menu appears on the TV screen.

Press *V/v* to select [A/V SYNC], then press . Press *B/b* to adjust the delay, then press . • "AV.SYNC" appears in the front panel display. Press or *b*. Press *V/v* to adjust the delay, then press . You can adjust from 0 ms to 300 ms in 25 ms increments. Press OPTIONS. • [1/L]: The sound of the left channel (monaural). • [2/R]: The sound of the right channel (monaural).

• Select the radio station. • [Auto Tuning] appears on the TV screen. Scanning stops when the system tunes in a station. To cancel automatic tuning, press any buttons. • "MAIN": Sound of the main language will be output. • "SUB": Sound of the sub language will be output. • The option menu appears on the TV screen. Press *V/v* to select [FM Mode], then press . Press *V/v* to select [Monaural], then press . • [Stereo]: Stereo reception.

• [Monaural]: Monaural reception. Tip You can set [FM Mode] for each preset station separately. 38US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HANSO120029BDVE6100_4100_3100_E2100\4446733111_US (U2)\070TUN.fm masterpage: Right To turn off the radio Press */I*. Selecting a preset station Presetting radio stations You can preset up to 20 stations. Before tuning, make sure to turn down the volume to minimum. 1 2 Press FUNCTION repeatedly until "FM" appears in the front panel display. The last received station is tuned in. Press PRESET +/- repeatedly to select the preset station. The preset number and frequency appear on the TV screen and front panel display.

Each time you press the button, the system tunes in one preset station. Tip Tuner 1 2 3 4 5 6 Press FUNCTION repeatedly until "FM" appears in the front panel display. Hold down TUNING +/- until the auto scanning starts. Scanning stops when the system tunes in a station. Press OPTIONS. The option menu appears on the TV screen. Press *V/v* to select [Preset Memory], then press . Press *V/v* to select the preset number you want, then press Repeat Steps 2 to 5 to store other stations. • You can select the preset station number directly by pressing the number buttons.

• Each time you press DISPLAY, the display in the front panel display changes cyclically as follows: Frequency t Preset number t Decoding status* * Appears when [Sound Effect] is set to [Dolby Pro Logic], [DTS Neo:6 Cinema], or [DTS Neo:6 Music] (page 48). To change a preset number Select the preset number you want by pressing PRESET +/-, then perform the procedure from Step 3. 39US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HANSO120029BDVE6100_4100_3100_E2100\4446733111_US (U2)\080OTH.fm masterpage: Left System Audio Control Other Operations You can enjoy the sound from TV or other equipment by a simple operation. You can use the System Audio Control function as follows: • When the system is turned on, the sound of the TV or other equipment can be output from the speakers of the system.

• When sound from the TV or other equipment is output via the speakers of the system, you can switch the sound to output from the TV speakers by pressing SPEAKERS TVyAUDIO. • When sound from the TV or other equipment is output via the speakers of the system, you can adjust the volume and turn off the sound of the system by operating the TV. Using the Control for HDMI Function for "BRAVIA" Sync This function is available on TVs with the "BRAVIA" Sync function. By connecting Sony equipment that is compatible with the Control for HDMI function via an HDMI cable, operation is simplified. Note To use the "BRAVIA" Sync function, be sure to turn on the system and all connected equipment after completed the HDMI connection.

Audio Return Channel You can enjoy TV sound via the system by using just one HDMI cable. For details of the setting, see "[Audio Return Channel]" (page 50). Control for HDMI - Easy Setting You can set the system's [Control for HDMI] function automatically by enabling the corresponding setting on the TV.

For details about the Control for HDMI function, see "[HDMI Settings]" (page 50) Language Follow When you change the language for the on-screen display of the TV, the system's on-screen display language is also changed after turning off and on the system. System Power Off You can turn the system off in sync with the TV. Note The system does not turn off automatically while playing music or when "FM" function is selected. Setting the Speakers [Speaker Settings] To obtain optimum surround sound, set the speakers' distance from your listening position. Then use the test tone to adjust the balance of the speakers. One-Touch Play When you press *N* on the remote control, the system and TV turn on, and the TV's input is switched to the HDMI input which the system is connected. 1 Press HOME.

The home menu appears on the TV screen. 40US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HANSO120029BDVE6100_4100_3100_E2100\4446733111_US (U2)\080OTH.fm masterpage: Right 2 3 4 5 Press *B/b* to select [Setup]. Tip Press *V/v* to select [Audio Settings], then press . Press *V/v* to select [Speaker Settings], then press . The [Select speaker layout.] display appears. Press *V/v* to select setting according to your speakers placement, then press . • [Standard]: The surround speakers are installed in the rear position. • [All Front]: All speakers are installed in the front position.

Note You can change the unit of measurement (feet or meters) by pressing the color button (RED). x [Level] You can adjust the sound level of the speakers. You can set the parameters from -6.0 dB to +6.0 dB.

Be sure to set [Test Tone] to [On] for easy adjustment. [Front Left/Right] 0.0 dB: Set the front speaker level. [Center] 0.0 dB: Set the center speaker level. [Surround Left/Right] 0.0 dB: Set the surround speaker level. [Subwoofer] 0.0 dB: Set the subwoofer level. x [Test Tone] The speakers will emit a test tone to adjust [Level]. [Off]: The test tone is not emitted from the speakers. [On]: The test tone is emitted from each speaker in sequence while adjusting level.



You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide
<http://yourpdfguides.com/dref/5477889>

When you select one of the [Speaker Settings] items, the test tone is emitted from each speaker in sequence. Adjust the sound level as follows. Other Operations The [Distance] and [Level] settings are reset to default settings each time you change the speaker layout setting.

6 7 8 Press V/v to select the item, then press . Press V/v to adjust the parameter. Press B/b and to confirm the settings. Check the following settings. x [Distance] Be sure to set the parameters of the distance from the listening position to the speakers. You can set the parameters from 0 to 23 feet (0.0 to 7.0 meters). [Front Left/Right] 10 ft/3.0 m: Set the front speaker distance.

[Center] 10 ft/3.0 m: Set the center speaker distance. [Surround Left/Right] 10 ft/3.0 m: Set the surround speaker distance. @@ 2 Press V/v to select [Level], then press .

@@ Hold down x on the unit for more than 5 seconds. "LOCKED" appears in the front panel display. @@@@ The time can be preset in intervals of 10 minutes. Press SLEEP. @@@@ Connect the system to a network (page 21).

Press HOME. The home menu appears on the TV screen. Press B/b to select [Network]. Other Operations Press V/v to select [Internet Browser], then press . @@ Re-enter the code number. @@ Enter the URL using the software keyboard, then select [Enter]. To set the default start page Saving Power in Standby Mode Check that you have made the following settings: - [Control for HDMI] in [HDMI Settings] is set to [Off] (page 50). - [Quick Start Mode] is set to [Off] (page 50). - [Remote Start] in [Network Settings] is set to [Off] (page 51). While the page you want to set is displayed, select [Set as start page] from the options menu.

To return to the previous page Select [Previous page] from the options menu. When the previous page does not appear even if you select [Previous page], select [Window List] from the options menu and select the page you want to return to from the list. To quit Internet Browser Press HOME. 43US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\0800TH.fm masterpage: Left Internet Browser display You can check website information by pressing DISPLAY. The display information differs depending on the website and page status. Available options Various settings and operations are available by pressing OPTIONS. The available items differ depending on the situation. [Browser Setup] Displays the Internet Browser settings. • [Zoom]: Increases or decreases the size of the displayed contents. • [JavaScript Setup]: Sets whether to enable or disable JavaScript. • [Cookie Setup]: Sets whether or not to accept browser cookies. • [SSL Alarm Display]: Sets whether to enable or disable SSL. [Window List] A Page title B Page address C Cursor Move by pressing B/V/v/b. Place the cursor on the link you want to view, then press .

The linked website is displayed. D SSL icon Appears when the linked URL is secured. E Signal strength indicator Appears when the system is connected to a wireless network. F Progress bar/Loading icon Appears when the page is being read, or during file download/transfer. G Text input field Press , then choose [Input] from the options menu to open the software keyboard.

H Scroll bar Press B/V/v/b to move the page display left, up, down, or right. Displays a list of all current opened websites. Allows you to return to a previous displayed website by selecting the window. [Bookmark List] Displays the bookmark list. [URL entry] Allows you to enter a URL when the software keyboard is displayed. [Previous page] Moves to a previous displayed page. [Next page] Moves to the previous displayed next page. [Cancel loading] Stops loading a page. [Reload] Reloads the same page. [Add to Bookmark] Adds the current displayed website to the bookmark list.

[Set as start page] Sets the current displayed website as the default start page. [Open in new window] Opens a link in a new window. [Character encoding] Sets the character encoding system. 44US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\090SET.fm masterpage: Right [Display certificate] Displays server certificates sent from pages that support SSL. [Input] Settings and Adjustments Displays the software keyboard to enter characters while browsing a website. [Break] Using the Setup Display You can make various adjustments to items such as picture and sound. The default settings are underlined. Note Moves the cursor to the next line in the text input field. [Delete] Erases one character on the left side of the cursor during text input.

Playback settings stored in the disc take priority over the Setup Display settings. Therefore, some of the functions may not be performed. 1 2 3 Press HOME. The home menu appears on the TV screen. Press B/b to select [Setup].

Settings and Adjustments Press V/v to select the setup category icon, then press . Icon Explanation [Network Update] (page 46) Updates the software of the system. [Screen Settings] (page 46) Makes the screen settings according to the type of TV. [Audio Settings] (page 48) Makes the audio settings according to the type of connecting jacks. [BD/DVD Viewing Settings] (page 49) Makes detailed settings for BD/DVD playback.

45US BDV-E6100/BDV-E4100/BDV-E3100/BDV-E2100 4-446-733-11(1) D:\NORM'S JOB\SONY HASO120029\BDVE6100_4100_3100_E2100\4446733111_US (U2)\090SET.fm masterpage: Left Icon Explanation [Parental Control Settings] (page 49) [Screen Settings] x [3D Output Setting] [Auto]: Normally select this. [Off]: Select this to display all contents in 2D. x [TV Screen Size Setting for 3D] Sets the screen size of your 3D-compatible TV. x [TV Type] [16:9]: Select this when connecting to a wide-screen TV or a TV with a wide-mode function. [4:3]: Select this when connecting to a 4:3 screen TV without a wide-mode function. x [Screen Format] [Full]: Select this when connecting to a TV with a wide-mode function. Displays a 4:3 screen picture in 16:9 aspect ratio even on a wide-screen TV. [Normal]: Changes the picture size to fit the screen size with the original picture aspect ratio. Makes detailed settings for the Parental Control function.

[System Settings] (page 50) Makes the system-related settings. [Network Settings] (page 51) Makes detailed settings for Internet and network. [Easy Network Settings] (page 52) Runs [Easy Network Settings] to make the basic network settings. [Resetting] (page 52) Resets the system to the factory settings. [Network Update] By updating your software to the latest version, you can take advantage of the newest functions. For information about update functions, refer to the following website: <http://www.sony.com/blurrayhtsupport/> During a software update, "UPDATE" appears in the front panel display. After the update completes, the unit automatically turns off. While the updating operation is in progress, do not turn on or off the unit, or operate the unit or TV.



[You're reading an excerpt. Click here to read official SONY BDV-E2100 user guide](http://yourpdfguides.com/dref/5477889)
<http://yourpdfguides.com/dref/5477889>