



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CDX-G1000U. You'll find the answers to all your questions on the SONY CDX-G1000U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CDX-G1000U
User guide SONY CDX-G1000U
Operating instructions SONY CDX-G1000U
Instructions for use SONY CDX-G1000U
Instruction manual SONY CDX-G1000U

SONY 4-466-656-1211

FM/MW/LW
Compact Disc
Player

Operating Instructions	GB
Bedienungsanleitung	DE
Mode d'emploi	FR
Istruzioni per l'uso	IT
Gebruiksaanwijzing	NL

To cancel the demonstration (DEMO) display, see page 10.
Zum Deaktivieren der Demo-Anzeige (DEMO) schlagen Sie bitte auf Seite 11 nach.
Pour annuler la démonstration (DEMO), reportez-vous à la page 10.
Per annullare la dimostrazione (DEMO), vedere pagina 10.
Om de demonstratie (DEMO) te annuleren, zie pagina 10.

COMPACT DISC DIGITAL AUDIO TEST

CDX-G1020UC/CDX-G1002U/CDX-G1001U/CDX-G1000U



[You're reading an excerpt. Click here to read official SONY CDX-G1000U user guide](http://yourpdfguides.com/dref/5585388)

<http://yourpdfguides.com/dref/5585388>

Manual abstract:

CDX-G1020UC/CDX-G1002U/CDX-G1001U/CDX-G1000U Be sure to install this unit in the dashboard of the car for safety. For installation and connections, see the supplied installation/connections manual. Made in Thailand Laser Diode Properties □ Emission Duration: Continuous □ Laser Output: Less than 53.3 μW (This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.) Notice for customers: the following information is only applicable to equipment sold in countries applying EU Directives Manufacturer: Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan For EU product compliance: Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany Warning if your car's ignition has no ACC position Be sure to set the AUTO OFF function (page 10). The unit will shut off completely and automatically in the set time after the unit is turned off, which prevents battery drain. If you do not set the AUTO OFF function, press and hold OFF until the display disappears each time you turn the ignition off. 6 Listening to the Radio Listening to the Radio . O □ (browse) (page 9) Enter the browse mode during playback. -OFF Press and hold for 1 second to turn off the power.

Press and hold for more than 2 seconds to turn off the power and the display. O Receptor for the remote commander □ Disc slot □ Display window □ □ (disc eject) □ AF (alternative frequencies)/TA (traffic announcement) Set AF and TA. @@ Rotate the control dial to select [CLOCK-ADJ], then press it. the hour indication flashes. @@ 1 2 Press and hold OFF □.

The unit is turned off. @@ Rotate the control dial to set the hour and minute. The setup is complete and the clock starts. to display the clock , press DSPL. @@ The alarm will only sound if the built-in amplifier is used.

Connecting a USB Device 1 2 Turn down the volume on the unit. Connect the USB device to the unit. Attaching the front panel 5GB Connecting Other Portable Audio Device 1 2 3 Turn off the portable audio device. Turn down the volume on the unit. Connect the portable audio device to the AUX input jack (stereo mini jack) on the unit with a connecting cord* (not supplied). * Be sure to use a straight type plug. Listening to the Radio Listening to the Radio To listen to the radio, press SRC to select [TUNER]. storing automatically (BTM) 1 2 3 Press MODE to change the band (FM1 , FM2 , FM3 , MW or LW). Press MENU, rotate the control dial to select [GENERAL], then press it. Rotate the control dial to select [BTM], then press it.

The unit stores stations in order of frequency on the number buttons. 4 Press SRC to select [AUX]. Tuning To match the volume level of the connected device to other sources Start playback of the portable audio device at a moderate volume, and set your usual listening volume on the unit. To tune manually Press and hold SEEK +/- to locate the approximate frequency, then press SEEK +/- repeatedly to fine adjust to the desired frequency. to tune automatically Press SEEK +/- . Scanning stops when the unit receives a station. Repeat this procedure until the desired station is received. Storing manually 1 While receiving the station that you want to store, press and hold a number button (1 to 6) to display [MEM]. 6GB Receiving the stored stations 1 Select the band, then press a number button (1 to 6). Area, set [REG-OFF] in GENERAL setup during FM reception (page 10).

This function does not work in the UK and some other areas. Local Link function (UK only) This function enables you to select other local stations in the area, even if they are not stored on your number buttons. During FM reception, press a number button (1 to 6) on which a local station is stored. Within 5 seconds, press again a number button of the local station. Repeat this procedure until the local station is received.

Using Radio Data System (RDS) Setting alternative frequencies (AF) and traffic announcement (TA) AF continuously retunes the station to the strongest signal in a network, and TA provides current traffic information or traffic programs (TP) if received. Rotate the control dial until the desired program type appears, then press it. The unit starts to search for a station broadcasting the selected program type. To store RDS stations with the AF and TA setting You can preset RDS stations along with an AF/TA setting. Set AF/TA, then store the station with BTM or manually.

If you preset manually, you can also preset non-RDS stations. Music, LIGHT M (Light classical), CLASSICS (Serious classical), OTHER M (Other Music), WEATHER (Weather), FINANCE (Finance), CHILDREN (Children's program), SOCIAL A (Social Affairs), RELIGION (Religion), PHONE IN (Phone In), TRAVEL (Travel), LEISURE (Leisure), JAZZ (Jazz Music), COUNTRY (Country Music), NATION M (National Music), OLDDIES (Oldies Music), FOLK M (Folk Music), DOCUMENT (Documentary) To receive emergency announcements With AF or TA on, emergency announcements will automatically interrupt the currently selected source. When adjusting the volume level during a traffic announcement Level will be stored into memory for subsequent traffic announcements, independently from the regular volume level. To stay with one regional program (REGIONAL) When the AF and REGIONAL functions are on, you will not be switched to another regional station with a stronger frequency. @@@@ @@@@ Ω Playback of the following MP3/WMA files is not supported. 2 Adjust the volume on this unit. to stop playback Press and hold OFF for 1 second. 8GB To remove the device Stop playback, then remove the device. Rotate the control dial to select the item. The list is jumped in steps of 10% of the total number of items.

@@@@ Playback in selected play mode may take time to start. 4 5 Press ENTER to return to the QuickBrowZer mode. the selected item appears. Rotate the control dial to select the desired item, then press it. playback starts. Available play modes differ depending on the selected sound source. @@ when the track list appears , press (back) repeatedly. @@@@ Repeat step 2 to search the desired track. (Available only when the unit is turned off.) BEEP Activates the beep sound: [ON] , [OFF].

@@ aUX-A (AUX Audio) Activates the AUX source display: [ON] , [OFF]. (Available only when the unit is turned off. @@@@ Rotate the control dial to select [DEMO], then press it. Rotate the control dial to select [DEMO-OFF], then press it. The display returns to normal reception/ play mode.

@@ The following items can be set depending on the source and setting. 1 2 Press MENU. Rotate the control dial to select the setup category, then press it. @@ To return to the previous display Press (back). @@ The equalizer curve setting can be memorized for each source.

@@@@ @@@@ @@@@, heart, square, star). Attempting to do so may damage the unit. □ 8 cm (3 1/4 in) discs. @@@@ □ Power antenna (aerial) extends automatically. Notes on CD-R/CD-RW discs □ The maximum number of: (CD-R/CD-RW only) □ folders (albums): 150 (including root folder) □ files (tracks) and folders: 300 (may less than 300 if folder/file names contain many characters) □ displayable characters for a folder/file name: 32 (Joliet)/64 (Romeo) □ If the multi-session disc begins with a CDDA session, it is recognized as a CD-DA disc, and other sessions are not played back.



You're reading an excerpt. Click here to read official SONY CDX-G1000U user guide

<http://yourpdfguides.com/dref/5585388>

⚠ Discs that this unit CANNOT play □ CD-R/CD-RW of poor recording quality. ⚠ CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/Level 2, Joliet/Romeo or multi-session. Moisture condensation Should moisture condensation occur inside the unit, remove the disc and wait for about an hour for it to dry out; otherwise the unit will not operate properly. To maintain high sound quality Do not splash liquid onto the unit or discs. Notes on discs □ Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.

⚠ Before playing, wipe the discs with a cleaning cloth from the center out. do not use solvents such as benzine, thinner, commercially available cleaners. ⚠ This unit is designed to play back discs that conform to the Compact Disc (CD) standard. DualDiscs and some of the music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore, these discs may not be playable by this unit. ⚠ Discs that this unit CANNOT play □ Discs with labels, stickers, or sticky tape or paper attached. Doing so may cause a malfunction, or may ruin the disc. Playback order of MP3/WMA files MP3/WMA Folder (album) MP3/WMA file (track) If you have any questions or problems concerning your unit that are not covered in this manual, consult your nearest Sony dealer. 12GB CD Player section Maintenance Cleaning the connectors The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, detach the front panel (page 5) and clean the connectors with a cotton swab. Do not apply too much force.

Otherwise, the connectors may be damaged. Wma) Power amplifier section Notes □ For safety, turn off the ignition before cleaning the connectors, and remove the key from the ignition switch. ⚠ Never touch the connectors directly with your fingers or with any metal device. Output: Speaker outputs Speaker impedance: 4 – 8 ohms Maximum power output: 55 W × 4 (at 4 ohms) General Outputs: Audio outputs terminal (rear, sub) Power antenna (aerial)/Power amplifier control terminal (REM OUT) Inputs: Remote controller input terminal Antenna (aerial) input terminal AUX input jack (stereo mini jack) USB port Power rec recorded in Multi Session. ⚠ A disc to which data can be added.

@@ oVERLOAD □ USB device is overloaded. ⚠ Disconnect the USB device, then change the source by pressing SRC. @@ ⚠ Wait until reading is complete and playback starts automatically. Depending on the disc structure, it may take more than a minute. @@@@ [] or [] □ During reverse or fast-forward, you have reached the beginning or the end of the disc and you cannot go any further.

[] □ The character cannot be displayed. If these solutions do not help improve the situation, consult your nearest Sony dealer. If you take the unit to be repaired because of CD playback trouble, bring the disc that was used at the time the problem began. 13FR Généralités Spécifications Radio FM Plage de syntonisation : 87,5 – 108,0 MHz Borne d'antenne : Connecteur d'antenne externe Moyenne fréquence : 25 kHz Sensibilité utile : 8 dBf Sélectivité : 75 dB à 400 kHz Rapport signal/bruit : 80 dB (stéréo) Séparation : 50 dB à 1 kHz Réponse en fréquence : 20 – 15 000 Hz MW (PO)/LW (GO) Plage de syntonisation : MW : 531 – 1 602 kHz LW : 153 – 279 kHz Borne d'antenne : Connecteur d'antenne externe Moyenne fréquence : 9 124,5 kHz ou 9 115,5 kHz/4,5 kHz Sensibilité : MW (PO) : 26 µV, LW (GO) : 45 µV Sorties : Borne de sorties audio (arrière, caisson de graves) Borne de commande de l'antenne électrique/amplificateur de puissance (REM OUT) Entrées : Borne d'entrée de commande à distance Borne d'entrée de l'antenne Prise d'entrée AUX (mini-prise stéréo) Port USB Alimentation requise : batterie de véhicule 12 V CC (masse négative) Dimensions : Environ 178 mm × 50 mm × 177 mm (l/h/p) Dimensions du support : Environ 182 mm × 53 mm × 160 mm (l/h/p) Poids : environ 1,2 kg Contenu du coffret : Appareil principal (1) Composants destinés à l'installation et au raccordement (1 jeu) Lecteur CD Rapport signal-bruit : 95 dB Réponse en fréquence : 10 – 20 000 Hz Pleurage et scintillement : En dessous du seuil mesurable Codec correspondant : MP3 (. Com/ Register your product online now at: Registrieren Sie Ihr Produkt jetzt bei: Merci d'enregistrer votre produit en ligne sur : Registra online il tuo prodotto su: Registreer uw product nu online via: www. .



[You're reading an excerpt. Click here to read official SONY CDX-G1000U user guide](http://yourpdfguides.com/dref/5585388)
<http://yourpdfguides.com/dref/5585388>