



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CDX-G3000UV. You'll find the answers to all your questions on the SONY CDX-G3000UV in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CDX-G3000UV  
User guide SONY CDX-G3000UV  
Operating instructions SONY CDX-G3000UV  
Instructions for use SONY CDX-G3000UV  
Instruction manual SONY CDX-G3000UV



Operating Instructions **GB**  
⚠ Before operating the TV, please read the "Safety information" section of this manual. Retain this manual for future reference.

Инструкция по эксплуатации **RU**  
⚠ Перед включением телевизора прочтите раздел "Сведения по безопасности" этого руководства. Сохраните данное руководство для справки в будущем.

KDL-20G30xx

**BRAVIA**

© 2007 Sony Corporation

For use M information about Sony products  
Для получения полной информации о продукции Sony  
<http://www.sony-europe.com/myproduct/>



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)

<http://yourpdfguides.com/dref/5585623>

**Manual abstract:**

@@@@@ Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents. Trademark information • is a registered trademark of the DVB Project • Manufactured under license from BBE Sound, Inc. licensed by BBE Sound, Inc. Under one or more of the following US patents: 5510752, 5736897.

□ Dolby™ and the double-D symbol are trademarks of Dolby Laboratories. DIGITAL ~ The "xx" that appears on the model name, corresponds to two numeric digits related to colour variation. Notice for Digital TV function • Any functions related to Digital TV ( ) will only work in countries or areas where DVB-T (MPEG2) digital terrestrial signals are broadcasted. Please confirm with your local dealer if you can receive a DVB-T signal where you live. □

Although this TV set follows DVB-T specifications, compatibility with future DVB-T digital terrestrial broadcasts cannot be guaranteed.

□ Some Digital TV functions may not be available in some countries. Book Page 4 Thursday, September 13, 2007 10:42 AM Start-up Guide 1: Checking the accessories Remote RM-ED005 (1) Size AA batteries (R6 type) (2) Support belt (1) and screws (2) Stand (1) Screws for stand (2) Hole Masks (2) Stand 2: Attaching the stand 1 Open the carton box and take out the stand. To insert batteries into the remote Push and lift the cover to open. ~ • Observe the correct polarity when inserting batteries. □ Do not use different types of batteries together or mix old and new batteries.

□ Handle the remote with care. Do not drop or step on it, or spill liquid of any kind onto it. □ Do not place the remote in a location near a heat source, a place subject to direct sunlight, or a damp room. 2 Release the protection bag and take out the TV set. 4 GB 010COV. Book Page 5 Thursday, September 13, 2007 10:42 AM 3 Place the TV set on the stand. Take care not to interfere with cables. 3: Connecting an aerial/ VCR/ DVD recorder Connecting an aerial only Coaxial cable Start-up Guide 4 Check the stopper to make sure the TV set is correctly fixed to the stand. Connecting an aerial/ VCR/ DVD recorder Stopper 5 Take out the screws from the accessory bag. Coaxial cable Scart lead 6 Fix the TV to the stand using the supplied screws.

Coaxial cable VCR ~ If using an electric screwdriver, set the tightening torque at approximately 2 N. Book Page 6 Thursday, September 13, 2007 10:42 AM 4: Preventing the TV from toppling over 6: Selecting the language, country/region and location 3,4 5: Bundling the cables 1 2 3 Connect the TV to your mains socket (220-240V AC, 50Hz). press 1 on the TV. When you switch on the TV for the first time, the Language menu appears on the screen. Press F/f to select the language displayed on the menu screens, then press . auto Start Up Language Country Location Select: Confirm: 6 GB 010COV. Book Page 7 Thursday, September 13, 2007 10:42 AM 4 Press F/f to select the country/region in which you will operate the TV, then press . Auto Start Up Language Country Location If a message appears for you to confirm the aerial connection No digital or analogue channels were found. check all the aerial connections and press to start auto-tuning again. Start-up Guide 3 When the Programme Sorting menu appears on the screen, follow the steps of "Programme Sorting" (page 24). If you do not change the order in which the analogue channels are stored on the TV, go to step 4.

back: Select: Confirm: 4 ~ Press MENU to exit. The TV has now tuned in all the available channels. If the country/region in which you want to use the TV does not appear in the list, select "-" instead of a country/region. 5 Press F/f to select the location type in which you will operate the TV, then press . When a digital broadcast channel cannot be received, or when selecting a region in which there are no digital broadcasts in step 4 (page 7), the time must be set after performing step 4.

Auto Start Up Language Country Location Home Shop Detaching the Table-Top Stand from the TV ~ Do not remove the Table-Top Stand for any reason other than to wall-mount the TV. Back: Select: Confirm: This option selects the initial picture mode appropriate for the typical lighting condition in these environments. 1 7: Auto-tuning the TV 1 Before you start auto-tuning the TV, insert a pre-recorded tape into the VCR connected to the TV (page 5) and start play back. The video channel will be located and stored on the TV during auto-tuning. If no VCR is connected to the TV, skip this step.

4 Back: Start: Cancel: MENU The TV starts searching for all available digital channels, followed by all available analogue channels. This may take some time, so do not press any buttons on the TV or remote while proceeding. Hole Masks ~ After detaching the Table-Top stand, cover the holes with the hole masks (supplied). 7 GB 010COV. Book Page 8 Thursday, September 13, 2007 10:42 AM Installed with stand Safety information Installation/Set-up Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electrical shock or damage and/or injuries. Installation • The TV set should be installed near an easily accessible mains socket. □ Place the TV set on a stable, level surface. □ Only qualified service personnel should carry out wall installations. □ For safety reasons, it is strongly recommended that you use Sony accessories, including: Wall-mount bracket SU-WL100. 30 cm 10 cm 10 cm 6 cm Leave at least this space around the set.

□ To ensure proper ventilation and prevent the collection of dirt or dust: - Do not lay the TV set flat, install upside down, backwards, or sideways. □ Do not place the TV set on a shelf, rug, bed or in a closet. □ Do not cover the TV set with a cloth, such as curtains, or items such as newspapers, etc. □ Do not install the TV set as shown below. transporting • Before transporting the TV set, disconnect all cables. □ When transporting the TV set by hand, hold it as shown on the right. Do not put stress on the LCD panel and the frame around the screen. □ When transporting the TV set, do not subject it to jolts or excessive vibration.



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)

<http://yourpdfguides.com/dref/5585623>

□ When transporting the TV set for repairs or when moving, pack it using the original carton and packing material. Wall Wall Ventilation • Never cover the ventilation holes or insert anything in the cabinet.

□ Leave space around the TV set as shown below. □ It is strongly recommended that you use a Sony wallmount bracket in order to provide adequate air-circulation. Mains lead Handle the mains lead and socket as follows in order to avoid any risk of fire, electrical shock or damage and/or injuries: - - - - Use only Sony mains leads, not those of other brands. Insert the plug fully into the mains socket. operate the TV set on a 220-240 V AC supply only. When wiring cables, be sure to unplug the mains lead for your safety and take care not to catch your feet on the cables. □ Disconnect the mains lead from the mains socket before working on or moving the TV set. □ Keep the mains lead away from heat sources. □ Unplug the mains plug and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate, which could result in a fire.

Installed on the wall 30 cm 10 cm 10 cm 10 cm Leave at least this space around the set. Notes • Do not use the supplied mains lead on any other equipment. □ Do not pinch, bend, or twist the mains lead excessively. The core conductors may be exposed or broken. □ Do not modify the mains lead. □ Do not put anything heavy on the mains lead. □ Do not pull on the mains lead itself when disconnecting the mains lead. 8 GB 010COV. Book Page 9 Thursday, September 13, 2007 10:42 AM • Do not connect too many appliances to the same mains socket. □ Do not use a poor fitting mains socket.

Precautions Viewing the TV • View the TV in moderate light, as viewing the TV in poor light or during long period of time, strains your eyes. □ When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result. Prohibited Usage Do not install/use the TV set in locations, environments or situations such as those listed below, or the TV set may malfunction and cause a fire, electrical shock, damage and/or injuries. Location: Outdoors (in direct sunlight), at the seashore, on a ship or other vessel, inside a vehicle, in medical institutions, unstable locations, near water, rain, moisture or smoke. LCD Screen • Although the LCD screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD screen and is not a malfunction. □ Do not push or scratch the front filter, or place objects on top of this TV set. The image may be uneven or the LCD screen may be damaged. □ If this TV set is used in a cold place, a smear may occur in the picture or the picture may become dark.

This does not indicate a failure. These phenomena disappear as the temperature rises. □ Ghosting may occur when still pictures are displayed continuously. It may disappear after a few moments. □ The screen and cabinet get warm when this TV set is in use.

This is not a malfunction. • The LCD screen contains a small amount of liquid crystal and mercury. The fluorescent tubes used in this TV set also contain mercury. Follow your local ordinances and regulations for disposal. Environment: Places that are hot, humid, or excessively dusty; where insects may enter; where it might be exposed to mechanical vibration, near flammable objects (candles, etc).

The TV set shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the TV. Situation: Do not use when your hands are wet, with the cabinet removed, or with attachments not recommended by the manufacturer. Disconnect the TV set from mains socket and aerial during lightning storms. Broken pieces: • Do not throw anything at the TV set. The screen glass may break by the impact and cause serious injury. □ If the surface of the TV set cracks, do not touch it until you have unplugged the mains lead. Otherwise electric shock may result. Handling and cleaning the screen surface/cabinet of the TV set Be sure to unplug the mains lead connected to the TV set from mains socket before cleaning. to avoid material degradation or screen coating degradation, observe the following precautions. □ To remove dust from the screen surface/cabinet, wipe gently with a soft cloth.

If dust is persistent, wipe with a soft cloth slightly moistened with a diluted mild detergent solution. • Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the screen surface and cabinet material. □ When adjusting the angle of the TV set, move it slowly so as to prevent the TV set from moving or slipping off from its table stand When not in use • If you will not be using the TV seROG +/- to select a TV channel. To select channel numbers 10 and above using the number buttons, enter the second and third digits within two seconds. To select a digital channel using the Digital Electronic Programme Guide (EPG), see page 14. in digital mode An information banner appears briefly. The following icons may be indicated on the banner. : Radio service : Scrambled/Subscription service : Multiple audio languages available : Subtitles available : Subtitles available for the hearing impaired : Recommended minimum age for current programme (from 4 to 18 years) : Parental Lock c: Current programme is being recorded 2 2 3 Additional operations To Turn on the TV from Standby mode without sound Do this Press %. 3 Adjust the volume Access the Programme index table (in analogue mode only) 1 Press 1 on the TV to switch on the TV.

When the TV is in standby mode (the 1 (standby) indicator on the TV (front) is red), press "/I on the remote to switch on the TV. 2 Press DIGITAL to switch to digital mode or ANALOG to switch to analogue mode. The channels available vary depending on the mode. Each time you press /, the display changes cyclically as follows: Text t Text over the TV picture (mix mode) t No Text (exit the Text service) To select a page, press the number buttons or PROG +/- Z When four coloured items appear at the bottom of the Text page, Fasttext is available.

Fasttext allows you to access pages quickly and easily. Press the corresponding coloured button to access the page. MM 16:9 Watching TV \* Parts of the left and right of the picture may be cut off. In analogue mode, digital mode (non-widescreen pictures) and AV inputs 4:3 Picture Freeze Freezes the TV picture (e.

To make a note of a telephone number or recipe). 1 2 3 4 Press on the remote control. Press F/f/G/g to adjust the position of the window. Again to return to normal TV 16:9 mM z Not available for AV3 input.



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)

<http://yourpdfguides.com/dref/5585623>

To change the screen format manually to suit the broadcast Press repeatedly to select the desired screen format. Using the Tools menu Press TOOLS to display the following options when viewing a TV programme. Book Page 14 Thursday, September 13, 2007 10:42 AM Checking the Digital Electronic Programme Guide (EPG) \* All Categories 1 2 ~ In digital mode, press . Perform the desired operation as shown in the following table or displayed on the screen. Select: Programme information will only be displayed if the TV station is transmitting it. +/- 1 day on/off: Options: Digital Electronic Programme Guide (EPG) \* This function may not be available in some countries/regions.

To Watch a programme Turn off the EPG Sort the programme information by category – Category list Do this Press F/f/G/g to select the programme, then press Press . Set a programme to be recorded – Timer REC 1 Press F/f/G/g to select the future programme you want to record, then press / . 2 Press F/f to select “Timer REC”. 3 Press to set the TV and your VCR timers. a red c symbol appears by that programme’s information. The indicator on the TV front panel lights up in orange. Z To record the programme you are currently watching, press / . Set a programme to be displayed automatically on the screen when it starts – Reminder 1 Press F/f/G/g to select the future programme you want to display, then press / . The indicator on the TV front panel lights up in orange. ~ If you switch the TV to standby mode, it will automatically turn itself on when the programme is about to start.

14 GB 010COV. Book Page 15 Thursday, September 13, 2007 10:42 AM To Set the time and date of a programme you want to record – Manual timer REC Do this 1 Press F/f/G/g to select the future programme you want to record, then press / . 2 Press F/f to select “Manual timer REC”, then press . 3 Press F/f to select the date, then press g. 4 Set the start and stop time in the same way as in step 3.

5 Press F/f to select the programme, then press . 6 Press to set the TV and your VCR timers. a red c symbol appears by that programme’s information. The indicator on the TV front panel lights up in orange. Z To record the programme you are currently watching, press / . 3 Press F/f to select the programme you want to cancel, then press . 4 Press F/f to select “Cancel Timer”, then press . A display appears to confirm that you want to cancel the programme. 5 Press G/g to select “Yes”, then press ~ to confirm. □ You can set VCR timer recording on the TV only for SmartLink compatible VCRs. If your VCR is not SmartLink compatible, a message will be displayed to remind you to set your VCR timer. □ Once a recording has begun, you can switch the TV to standby mode, but do not turn off the TV completely or the recording may be cancelled. □ If an age restriction for programmes has been selected, a message asking for a PIN code will appear on the screen. For details, see “Parental Lock” on page 28. 15 GB 010COV.

Book Page 16 Thursday, September 13, 2007 10:42 AM Using the Digital Favourite list Favourite Set-up Favourites 1 TV3 33 3/24 K3/300 TVE 1 TVE 2 24H TVE CLAN TVE TELEDEPORTE VEO \* Enter Programme number 011 012 013 014 015 016 017 018 019 020 SETenVEO Tienda en VEO NET TV CUATRO CNN+ 40 LATINO la Sexta Telecinco T5 Estrellas T5 Sport --- The Favourite feature allows you to specify up to four lists of your favourite programmes. Perform the desired operation as shown in the following table or displayed on the screen. Favourites 2 Store favourite: Back: RETURN Digital Favourite list \* This function may not be available in some countries/regions. To Create your Favourite list for the first time Do this 1 Press to select “Yes”. 2 Press yellow key to select favourite list. 3 Press F/f to select the channel you want to add, then press . Channels that are stored in the Favourite list are indicated by a symbol. Watch a channel 1 Press yellow key to navigate through favourite lists. 2 Press F/f to select the channel, then press . 2 Press the yellow button to choose the list you want to edit.

3 Press F/f to select the channel you want to add or remove, then press . 1 Press the blue button. 2 Press the yellow button to select the favourite list you want to edit. Turn off the Favourite list Add or remove channels in the currently edited Favourite list Remove all channels from the current Favourite list 16 GB 010COV. Book Page 17 Thursday, September 13, 2007 10:42 AM Using Optional Equipment Connecting optional equipment You can connect a wide range of optional equipment to your TV.

connecting cables are not supplied. DVD player with component output Using Optional Equipment Video game equipment DVD player Decoder DVD recorder VCR Decoder CAM card For service use only S VHS/Hi8/ DVC camcorder Headphones 17 GB 010COV. Book Page 18 Thursday, September 13, 2007 10:42 AM Viewing pictures from connected equipment Switch on the connected equipment, then perform one of the following operation. For equipment connected to the scart sockets using a fully-wired 21-pin scart lead Start playback on the connected equipment. The picture from the connected equipment appears on the screen.

For an auto-tuned VCR (page 7) In analogue mode, press PROG +/-, or the number buttons, to select the video channel. For other connected equipment Press / to display the connected equipment list. Press F/f to select the desired input source, then press . (The highlighted item is selected if 2 seconds pass without any operation after pressing F/f. @@@@ conditional To use Pay Per View services. @@ To use the CAM, remove the rubber cover from the CAM slot. Switch off the TV when inserting your CAM into the CAM slot. @@ For details, see page 16. @@@@ If you connect mono equipment, connect to the L socket 4. 18 GB 010COV.

@@@@@@@ For details about settings, see page 20 to 28. ~ The options you can adjust vary depending on the situation. Unavailable options are greyed out or not displayed. \* This function may not be available in some countries/ regions. For details about settings, see page 16. For details about settings, see page 14. @@@@ Adjusts the brightness of the backlight. @@ Adjusts the whiteness of the picture. □ Cool”: Gives the white colours a blue tint. @@@@ □ High/Mid/Low”: Modifies the effect of the noise reduction.

@@Z “Auto” is not available for AV3 mode. @@ This setting is especially effective for dark images scenes. @@@@ “Brightness”, “Colour”, “Sharpness” and “Adv. Contrast Enhancer” are not available when “Picture Mode” is set to “Vivid”. using MENU Functions 21 GB 010COV.

Book Page 22 Thursday, September 13, 2007 10:42 AM Sound Adjustment menu Sound Adjustment Sound Effect Treble Bass Balance Reset Dual Sound Auto Volume Mono On Standard 50 50 0 You can select the options listed below on the Sound menu. @@ back: Select: Enter: Exit: MENU Sound Effect Selects the sound mode.



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)  
<http://yourpdfguides.com/dref/5585623>

□Standard”: Enhances clarity, detail, and sound presence by using “BBE High definition Sound System. □ “Dynamic”: Intensifies clarity and sound presence for better intelligibility and musical realism by using the “BBE High definition Sound System. ” “BBE ViVA”: BBE ViVA Sound provides musically accurate natural 3D image with Hi-Fi sound.

The clarity of the sound is improved by BBE while the width depth and height of sound image are expanded by BBE’s proprietary 3D sound process. BBE ViVA Sound is compatible with all TV programs including news, music, dramas, movies, sports and electronic games. □Dolby Virtual”: Uses the TV speakers to simulate the surround effect produced by a multi channel system. “Off”: Flat response. Also allows you to store your preferred settings. Z •If you set “Auto Volume” to “On”, “Dolby Virtual” changes to “Standard”. □ If headphones are connected, “Sound Effect” changes to “Off”. Resets all the sound settings to the factory settings. Selects the sound from the speaker for a stereo or bilingual broadcast. “Stereo”, “Mono”: For a stereo broadcast.

□A”/“B”/“Mono”: For a bilingual broadcast, select “A” for sound channel 1, “B” for sound channel 2, or “Mono” for a mono channel, if available. Z If you select other equipment connected to the TV, set “Dual Sound” to “Stereo”, “A” or “B”. Auto Volume Keeps a constant volume level even when volume level gaps occur (e. Book Page 23 Thursday, September 13, 2007 10:42 AM Features menu Features Power Saving AV2 Output RGB Centre Timer Standard TV 0 You can select the options listed below on the Features menu. @@Back: Select: Enter: Exit: MENU Power Saving Selects the power saving mode to reduce the power consumption of the TV. “Standard”: Default settings. □Reduce”: Reduces the power consumption of the TV. “Picture Off”: Switches off the picture. You can listen to the sound with the picture off. Sets a signal to be output through the socket labelled / 2 on the rear of the TV.

If you connect a VCR to the / 2 socket, you can then record from the equipment connected to other sockets of the TV. “TV”: Outputs a broadcast. □Auto”: Outputs whatever is being viewed on the screen. Not available for AV3. Adjusts the horizontal picture position so that the picture is in the middle of the screen.

Z This option is only available if an RGB source has been connected to the Scarts connectors 1/ 1 or 2/ 2 on the rear of the TV. AV2 Output Using MENU Functions RGB Centre Timer Sets the timer to turn on/off the TV. Sleep Timer Sets a period of time after which the TV automatically switches itself into standby mode. When the Sleep Timer is activated, the (Timer) indicator on the TV (front) lights up in orange. Z •If you switch off the TV and switch it on again, “Sleep Timer” is reset to “Off”.

• “Sleep timer will end soon. Power will be turned off” appears on the screen one minute before the TV switches to standby mode. Clock Set Allows you to adjust the clock manually. When the TV is receiving digital channels, the clock cannot be adjusted manually since it is set to the time code of the broadcasted signal. Timer Sets the timer to turn on/off the TV. “Timer Mode”: Selects the desired period. □On Time”: Sets the time to turn on the TV. □Off Time”: Sets the time to turn off the TV. 23 GB 010COV. Book Page 24 Thursday, September 13, 2007 10:42 AM Set-up menu Set-up Auto Start Up Language Auto Tuning Programme Sorting AV Preset Sound Offset Manual Programme Preset Digital Set-up English You can select the options listed below on the Set-up menu.

@@Back: Select: Enter: Exit: MENU Auto Start Up Starts the “first time operation menu” to select the language, country/region and location, and tune in all available digital and analogue channels. Usually, you do not need to do this operation because the language and country/region will have been selected and channels already tuned when the TV was first installed (page 7). However, this option allows you to repeat the process (e. g. , to retune the TV after moving house, or to search for new channels that have been launched by broadcasters). Selects the language in which the menus are displayed. tunes in all the available analogue channels. Usually you do not need to do this operation because the channels are already tuned when the TV was first installed (page 7).

However, this option allows you to repeat the process (e. g.

, to retune the TV after moving house, or to search for new channels that have been launched by broadcasters). Changes the order in which the analogue channels are stored on the TV. 1 Press F/f to select the channel you want to move to a new position, then press g. 2 Press F/f to select the new position for your channel, then press . Assigns a name to any equipment connected to the side and rear sockets.

The name will be displayed briefly on the screen when the equipment is selected. You can skip an input source that is not connected to any equipment. 1 Press F/f to select the desired input source, then press . 2 Press F/f to select the desired option below, then press . Language Auto Tuning Programme Sorting AV Preset 1 Press F/f to select the desired letter or number (“\_” for a blank space), then press g.

If you input a wrong character Press G/g to select the wrong character. Then, press F/f to select the correct character. 2 Repeat the procedure in step 1 until the name is completed. 3 Select “OK”, then press . □ “Skip”: Skips an input source that is not connected to any equipment when you press F/f to select the input source. 24 GB 010COV. Book Page 25 Thursday, September 13, 2007 10:42 AM Sound Offset Manual Programme Preset Sets an independent volume level to each equipment connected to the TV. Before selecting “Label”/“AFT”/“Audio Filter”/“Skip”/“Decoder”, press F/f to select the programme number you want to modify. 2 Press F/f to select one of the following TV broadcast systems, then press G. B/G: For western European countries/regions D/K: For eastern European countries/regions L: For France I: For the United Kingdom ~ Depending on the country/region selected for “Country” (page 6), this option may not be available.

3 Tune the channels as follows: If you do not know the channel number (frequency) Press F/f to search for the next available channel. When a channel has been found, the search will stop. to continue searching , press F/f. If you know the channel number (frequency) Press the number buttons to enter the channel number of the broadcast you want or your VCR channel number.



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)

<http://yourpdfguides.com/dref/5585623>

Using MENU Functions 4 Press to jump to “Confirm”, then press . Repeat the procedure above to preset other channels manually. Label Assigns a name of your choice, up to five letters or numbers, to the selected channel. AFT Allows you to fine-tune the selected programme number manually if you feel that a slight tuning adjustment will improve the picture quality. continued 25 GB 010COV. Book Page 26 Thursday, September 13, 2007 10:42 AM Audio Filter Improves the sound for individual channels in the case of distortion in mono broadcasts.

Sometimes a non-standard broadcast signal can cause sound distortion or intermittent sound muting when watching mono programmes. If you do not experience any sound distortion, we recommend that you leave this option set to the factory setting “Off”. ~ You cannot receive stereo or dual sound when “Low” or “High” is selected. Audio Filter” is not available when “System” is set to “L”. skip Skips unused analogue channels when you press PROG +/- to select channels.

(You can still select a skipped channel using the number buttons. ) Decoder Views and records the scrambled channel selected when using a decoder connected directly to scart connector / 1, or to scart connector / 2 via a VCR. ~ Depending on the country/region selected for “Country” (page 6), this option may not be available. Confirm Saves changes made to the “Manual Programme Preset” settings. 26 GB 010COV.

Book Page 27 Thursday, September 13, 2007 10:42 AM Digital Set-up menu Set-up Auto Start Up Language Auto Tuning Programme Sorting AV Preset Sound Offset Manual Programme Preset Digital Set-up English You can select the options listed below on the “Digital Set-up” menu. to select options in “Settings”, refer to “Navigating through menus” (page 19). ~ Some functions may not be available in some countries/regions. back: Select: Enter: Exit: MENU Digital Tuning Digital Auto Tuning Tunes in the available digital channels. This option allows you to retune the TV after moving house, or to search for new channels that have been launched by broadcasters). For details, see “Auto-tuning the TV” on page 7. Programme List Edit Removes any unwanted digital channels stored on the TV, and changes the order of the digital channels stored on the TV. 1 Press F/f to select the channel you want to remove or move to a new position. Press the number buttons to enter the known three-digit programme number of the broadcast you want. Using MENU Functions 2 Remove or change the order of the digital channels as follows: To remove the digital channel Press .

After a confirmation message appears, press G to select “Yes”, then press . To change the order of the digital channels Press g, then press F/f to select the new position for the channel and press G. 1 Press the number button to select the channel number you want to manually tune, then press F/f to tune the channel. 2 When the available channels are found, press F/f to select the channel you want to store, then press . 3 Press F/f to select the programme number where you want to store the new channel, then press . Repeat the above procedure to manually tune other channels. continued 27 GB 010COV. Book Page 28 Thursday, September 13, 2007 10:42 AM Digital Set-up Subtitle Set-up “Subtitle Setting”: When “For Hard Of Hearing” is selected, some visual aids may also be displayed with the subtitles (if TV channels broadcast such information). Subtitle Language”: Selects which language subtitles are displayed in.

Audio Set-up “Audio Type”: Switches to broadcast for the hearing impaired when “For Hard Of Hearing” is selected.

Audio Language”: Selects the language used for a programme. Some digital channels may broadcast several audio languages for a programme. Z This option is only available when “Audio Description” is set to “On”. banner Mode “Basic”: Displays programme information with a digital banner. Full”:

Displays programme information with a digital banner, and displays detailed programme information below that banner.

Radio Display The screen wallpaper is displayed when listening to a radio broadcast after 20 seconds without pressing any button. You can select the screen wallpaper colour, or display a random colour. To cancel the screen wallpaper display temporarily, press any button. Parental Lock Sets an age restriction for programmes. Any programme that exceeds the age restriction can only be watched after a PIN Code is entered correctly.

1 Press the number buttons to enter your existing PIN code. If you have not previously set a PIN, a PIN code entry screen appears. follow the instructions of “PIN Code” below. 2 Press F/f to select the age restriction or “None” (for unrestricted watching), then press . 3 Press RETURN. PIN Code To set your PIN for the first time 1 Press the number buttons to enter the new PIN code. 2 Press RETURN. To change your PIN 1 Press the number buttons to enter your existing PIN code. 2 Press the number buttons to enter the new PIN code. Technical Set-up “Auto Service Update”: Enables the TV to detect and store new digital services as they become available.

Software Download”: Enables the TV to automatically receive software updates, free through your existing aerial (when issued). sony recommends that this option is set to “On” at all times. If you do not want your software to be updated, set this option to “Off”. System Information”: Displays the current software version and the signal level. Time Zone”: Allows you to manually select the time zone you are in, if it is not the same as the default time zone setting for your country/region. Auto DST”: Sets whether or not to automatically switch between summer time and winter time. “On”: Automatically switches between summer time and winter time according to the calendar. “Off”: The time is displayed according to the time difference set by “Time Zone”. CA Module Set-up Allows you to access a pay TV service once you obtain a Conditional Access Module (CAM) and a view card. See page 17 for the location of the (PCMCIA) socket.

28 GB 010COV. Book Page 29 Thursday, September 13, 2007 10:42 AM Additional Information Specifications Display Unit Power Requirements: 220–240 V AC, 50 Hz Screen Size: 20 inches Display Resolution: 640 dots (horizontal) × 480 lines (vertical) Power Consumption: 50 W or less Standby Power Consumption\*: 0,7 W or less \* Specified standby power is reached after the TV finishes necessary internal processes. Design and specifications are subject to change without notice. @@@@ when it is flashing The self-diagnosis function is activated. @@@@ no colour on programmes • Select “Reset” (page 21).



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)

<http://yourpdfguides.com/dref/5585623>

No colour or irregular colour when viewing a signal from the 3 sockets • Check the connection of the 3 sockets and check if each sockets are firmly seated in their respective sockets. Sound No sound, but good picture • Press 2 +/- or % (Mute). Channels The desired channel cannot be selected • Switch between digital and analogue mode and select the desired digital/analogue channel. Some channels are blank • Scrambled/Subscription only channel. subscribe to the pay TV service.

□ Channel is used only for data (no picture or sound). □ Contact the broadcaster for transmission details. Digital channels are not displayed • Contact a local installer to find out if digital transmissions are provided in your area. • Upgrade to a higher gain aerial. 2 Press 1 on the TV to turn it off, disconnect the mains lead, and inform your dealer or Sony service centre of how the indicator flashes (number of flashes). When it is not flashing 1 Check the items in the tables below. 2 If the problem still persists, have your TV serviced by qualified service personnel. Picture No picture (screen is dark) and no sound • Check the aerial connection. □ Connect the TV to the mains, and press 1 on the TV. □ If the 1 (standby) indicator lights up in red, press "/1.

No picture or no menu information from equipment connected to the scart connector • Press / to display the connected equipment list, then select the desired input. □ Check the connection between the optional equipment and the TV. Only snow and noise appear on the screen • Check if the aerial is broken or bent. □ Check if the aerial has reached the end of its serviceable life (three to five years in normal use, one to two years at the seaside). Distorted picture (dotted lines or stripes) • Keep the TV away from electrical noise sources such as cars, motorcycles, hair-dryers or optical equipment. □ When installing optional equipment, leave some space between the optional equipment and the TV. • Check the aerial connection. □ Keep the aerial cable away from other connecting cables. Picture or sound noise when viewing a TV channel • Adjust "AFT" (Automatic Fine Tuning) to obtain better picture reception (page 25). Some tiny black points and/or bright points appear on the screen • The picture of a display unit is composed of pixels.

Tiny black points and/or bright points (pixels) on the screen do not indicate a malfunction. General The TV turns off automatically (the TV enters standby mode) • Check if the "Sleep Timer" or the "Off Time" are activated (page 23). □ If no signal is received and no operation is performed in the TV mode for 10 minutes, the TV automatically switches to standby mode. The TV turns on automatically • Check if the "On Time" is activated (page 23). Some input sources cannot be selected • Select "AV Preset" and cancel "Skip" of the input source (page 24).

The remote does not function • Replace the batteries. A channel cannot be added to the Favourite list • Up to 999 channels can be stored in the Favourite list.



[You're reading an excerpt. Click here to read official SONY CDX-G3000UV user guide](http://yourpdfguides.com/dref/5585623)  
<http://yourpdfguides.com/dref/5585623>