



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CMT-S20. You'll find the answers to all your questions on the SONY CMT-S20 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CMT-S20 User guide SONY CMT-S20 Operating instructions SONY CMT-S20 Instructions for use SONY CMT-S20 Instruction manual SONY CMT-S20

SONY
Home Audio System
Operating instructions

CMT-S20

Disposal of Old Electrical & Electronic Equipment

WARNING

CAUTION

Notice for customers in countries applying EU directives

Note on DualDiscs

Music discs encoded with copyright protection technologies

License and Trademark Notice

ANTENNA

AUDIO IN jacks

SPEAKERS

Power

Operations

Playing a CD/MP3/WMA disc

Other operations

Playing a file of the USB device

Getting Started

Listening to the radio

Practising radio stations

To tune to a preset radio station

To use the system as a battery charger

Playing a file of the USB device

You're reading an excerpt. Click here to read official SONY CMT-S20 user guide <http://yourpdfguides.com/dref/5311734>

If you registered a radio station to a preset number 7 or higher, press TUNING MODE repeatedly until PRESET appears then press PRESET+/PRESET repeatedly to select the desired preset number. CAUTION The use of optical instruments with this product will increase eye hazard. this appliance is classified as a CLASS 1 LASER product.

This marking is located on the rear exterior. Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) 1 Select the CD function. Press on the unit, and place a disc with the label side up on the CD compartment. To close the CD compartment, press on the unit. You can use the system as a battery charger for USB devices that have a rechargeable function when the system is on. The charging begins when the USB device is connected to the (USB) port. The charge status appears in the USB device display. For details, see the user's guide of your USB device. To use the system as battery charger When carrying this system 1 Remove a disc to protect the CD mechanism. 3 Start playback.

Playback of the CD-DA disc starts automatically. press (play) to play a MP3/WMA disc. Notes on charging the USB device with this system You cannot use the system as a battery charger when the system is off. Some USB devices can be charged only when the system is in the USB function. Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

this product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minatoku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents. This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol.

The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. DISPLAY when the system is off. The clock is displayed for 8 seconds. the USB device is not recognized. 3 Select the desired track or file number. Are the + and speaker cords shortcircuited? Is anything blocking the ventilation holes of the system? If the issue persists, contact your nearest Sony dealer. Several radio stations can be heard at the same time. remaining playing time for an MP3/WMA file. ID3 tag information the cord itself.

Are you using only the supplied speakers? Is anything blocking the ventilation holes of the system? Using optional audio components 1 Prepare the sound source. here are many folders or files on the USB T device. You can wake up to a CD, FM reception, USB device or an audio component connected to the AUDIO IN jack at a preset time. Make sure you have set the clock. Sound comes from one channel, or the left and right volumes are unbalanced. On placement Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light. Be careful when placing the unit or speakers on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result. If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the CD player, and cause the system to malfunction. In this situation, remove the disc, and leave the system turned on for about an hour until the moisture evaporates. 3 kg Quantity of the main unit: 1 piece Supplied accessories: Remote Commander (1), FM lead antenna (1), Speaker pads (8) Design and specifications are subject to change without notice.

Standby power consumption: 0.5 W Halogenated flame retardants are not used in the certain printed wiring boards. 4 Start playback. Start playback of the connected component and adjust the volume. 1 Prepare the sound source.

Prepare the sound source, and then press VOLUME +/- to adjust the volume. To start from a specific CD track or audio file, create your own program. Erroneous display Send the music data to the USB device again, as the data stored in the USB device may have been corrupted. The character codes that can be displayed by this system are numbers and alphabets only. Other characters are not displayed correctly. severe hum or noise. Move the system away from sources of noise. Connect the system to a different wall outlet. Install a noise filter (available separately) to the power cord. Messages DISC ERR : You have loaded a disc that cannot be played. FULL : You tried to program more than 64 tracks or files (steps). NO FILE : There are no playable files on the CD-R/CD-RW discs or in the USB device. NO STEP : All of the programmed tracks have been erased. nO USB : No USB device is connected or an unsupported USB device is connected. PLAY SET : You tried to select the timer when the Play Timer is not set.

TIME NG : The Play Timer start and end times are set to the same time. adjust the component's volume accordingly. See To turn off the automatic standby function. If the clock is not set, the system will be in clock set mode. In that case, set the clock. The remote does not function. Point the remote at the system's sensor. Move the remote closer to the system. The USB device is not recognized. The USB device does not work properly.

3 Set the play timer. Adjusting the sound To Press Press repeatedly to select PLAY SET, then press. 4 Set the time to start playback. Press / repeatedly to set the hour, then press. Use the procedure above to set the minutes.

On heat buildup Heat buildup on the unit during operation is normal and is not cause for alarm. Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.



[You're reading an excerpt. Click here to read official SONY CMT-S20 user guide](http://yourpdfguides.com/dref/5311734)

<http://yourpdfguides.com/dref/5311734>

⌂ Do not obstruct the ventilation holes. Adjust the volume Generate a more dynamic sound Set the sound effect VOLUME +/⌂ ⌂. bASS BOOST ⌂.
CD/MP3/WMA player The sound skips, or the disc will not play. ⌂ Wipe the disc clean, and replace it. @@@@At high volume, speaker vibration may
cause the sound to skip. @@ 6 Select the sound source. @@Play does not start. @⌂ ⌂ @ ⌂ ⌂ ⌂ ⌂ Press ⌂ ⌂ ⌂ to start playback. EQ ⌂ ⌂ repeatedly
until desired sound effect is displayed. On the speaker system 7 Turn off the system. press ⌂ ⌂ ⌂ ⌂ ⌂ ⌂ ⌂. The system automatically turns on before the
preset time.

If the system is on at the preset time, the Play Timer will not play. Do not operate the system from the time the system turns on until the playback starts. Play
does not start from the first track. ⌂ Set the play mode to normal play mode. Play does not start from the first track. ⌂ Set the play mode to Normal Play
mode. This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the
TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the speakers far away from the TV. Starting playback takes more time than
usual.

⌂ The following discs can increase the time it takes to start playback; a ⌂ disc recorded with a complicated tree structure. ⌂ disc recorded in
multisession mode. A ⌂ disc that has not been finalized (a disc to which data can be added). A ⌂ disc that has many folders. Files cannot be played
back.

⌂ The audio files may have inappropriate file extensions. The file extensions supported by this system are as follows: ⌂ P3: file extension ⌂. mp3⌂
M ⌂ MA: file extension ⌂. Wma⌂ W ⌂ The audio files may have been created in formats other than MP3/WMA formats. ⌂ USB storage devices
formatted with file systems other than FAT16 or FAT32 are unsupported.

* ⌂ If you use a partitioned USB storage device, only files on the first partition can be played. ⌂ Files that are encrypted or protected by passwords , etc.
Cannot be played back. * This system supports FAT16 and FAT32, but some USB storage devices may not support all of these FAT. For details, see the
operation manual of each USB storage device or contact the manufacturer. Cleaning the cabinet To check the setting 1 Press TIMER MENU ⌂. Repeat the
same procedure as above until ⌂OFF⌂ appears in step 3, and then press ⌂. Clean this system with a soft cloth slightly moistened with a mild
detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzine, or alcohol. To cancel the timer To change the
setting Start over from step 1.

Tip The Play Timer setting remains as long as the setting is not cancelled manually. .



[You're reading an excerpt. Click here to read official SONY CMT-S20 user guide](http://yourpdfguides.com/dref/5311734)
<http://yourpdfguides.com/dref/5311734>