



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-H300. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-H300 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY CYBER-SHOT DSC-H300**  
**User guide SONY CYBER-SHOT DSC-H300**  
**Operating instructions SONY CYBER-SHOT DSC-H300**  
**Instructions for use SONY CYBER-SHOT DSC-H300**  
**Instruction manual SONY CYBER-SHOT DSC-H300**

4-476-545-11(1)

**SONY**

**DSC-H300**

**Digital Still Camera**

Appareil photo numérique / Fotocamera digitale /  
Cámara fotográfica digital / Cámara fotográfica digital /  
Digitale Fotokamera / Digitale camera / Cyfrowy aparat fotograficzny /  
Digitální fotoaparát / Digitális fényképezőgép / Digitálny fotoaparát /  
Digital stillbildekamera / Digitaliliekamera / Digitalt stillkamera /  
Digitalt stillbildekamera / Digitální fotoaparát / Aparat foto digital /  
Ψηφιακή φωτογραφική μηχανή

Instruction Manual

Cyber-shot

DSC-H300

© 2013 Sony Corporation Printed in China

4476545110

|    |    |
|----|----|
| GB | HU |
| FR | SK |
| IT | SE |
| ES | FI |
| PT | NO |
| DE | DK |
| NL | HR |
| PL | RO |
| CZ | GR |



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-H300 user guide](http://yourpdfguides.com/dref/5449153)  
<http://yourpdfguides.com/dref/5449153>

**Manual abstract:**

1 Access the Sony support page. 3 Search for the model name of your camera within the support page. □ Check the model name on the bottom of your camera. GB 2 Checking the supplied items The number in parentheses indicates the number of pieces. □ Camera (1) • LR6 (size AA) alkaline batteries (4) • Dedicated USB cable (1) (Sony Corporation 1-837-783-) • Shoulder strap (1) • Lens cap (1)/Lens cap strap (1) • Instruction Manual (this manual) (1) Owner's Record The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product. \_\_\_\_\_ 3 GB WARNING To reduce fire or shock hazard, do not

expose the unit to rain or moisture. [ CAUTION Replace the battery with the specified type only. Otherwise, fire or injury may result. For Customers in the U. The UL Mark on the product means it has been UL Listed. @@: 858-942-2230 This device complies with Part15 of the FCC Rules. @@ [ CAUTION You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. 5 GB [ Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. @@@@ □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

GB 6 For Customers in Europe [ Notice for the customers in the countries applying EU Directives Manufacturer: Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan For EU product compliance: Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany ] Notice If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc). The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. @@ 8 feet. @@ the recycling of materials will help to conserve natural resources. @@@@ By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. 9 GB Inserting the batteries/a memory card (sold separately) Ensure the notched corner faces correctly. 1 Open the cover.

2 Insert the memory card (sold separately). gB 10 3 Match +/- and insert the batteries. X Batteries you can and cannot use with your camera In the table below, one cannot be used. Battery type LR6 (size AA) alkaline batteries HR15/51: HR6 (size AA) Nickel-Metal Hydride batteries Lithium batteries\* Manganese batteries\* Ni-Cd batteries\* — — — — — indicates the battery can be used, while — indicates the Supplied Supported \* Operating performance cannot be ensured if voltage drops or other problems are caused by the nature of the battery. @@@@ @8,000 images • The number is based on the CIPA standard. @@@@ 2 Select a desired language. @@@@ 5 Follow the instructions on the screen. @@ 2 Press the shutter button fully down to shoot an image. @@ 2 Press the MOVIE button again to stop recording. Press z in the center of the control button to view movies. x Deleting an image 1 Press the (Delete) button. 2 Select [This Image] with v on the control button, then press z. @@ 19 GB Organizing Viewing images on Calendar\* Importing images from your camera Sharing images Uploading images to network services\* Sharing images on "PlayMemories Online" \* There is the difference between Windows and Mac. GB 20 z Downloading "PlayMemories Home" You can download "PlayMemories Home" from the following URL: www.jp/imsoft/Mac/ 21 GB Recommended computer environment The following computer environment is recommended when using the software "PlayMemories Home.

@@@ Be particularly careful of the lens. @@@ • Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired. □ Do not aim the camera at the sun or other bright light.

It may cause the malfunction of the camera. @@ □ Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. @@ 23 GB Warning on copyright Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws. 8 mm – 973 mm SteadyShot: Optical Burst shooting (when shooting with the largest pixel number): Approx. 55 MB), "Memory Stick Duo" media, "Memory Stick Micro" media, SD cards, microSD memory cards Flash: Flash range (ISO sensitivity (Recommended Exposure Index) set to Auto): Approx. 8 oz) Microphone: Monaural Speaker: Monaural Exif Print: Compatible PRINT Image Matching III: Compatible GB 26 Design and specifications are subject to change without notice. @@@@ However, the ™ or ® marks are not used in all cases in this manual. 27 GB Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

1,6 W Användningstemperatur: 0 °C till 40 °C Förvaringstemperatur: -20°C till +60°C Ytermått (enligt CIPA): 127,5 mm × 89,0 mm × 91,7 mm (B/H/D) Vikt (enligt CIPA) (inklusive fyra batterier och ett "Memory Stick Duo"-minneskort): Ca. X Bateriale recomandate și bateriile contraindicate În tabelul de mai jos, indică tipul bateriilor pe care le puteți utiliza, iar — indică tipul care nu poate fi utilizat. .



**You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-H300 user guide**  
<http://yourpdfguides.com/dref/5449153>