



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-RX100 III. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-RX100 III in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CYBER-SHOT DSC-RX100 III
User guide SONY CYBER-SHOT DSC-RX100 III
Operating instructions SONY CYBER-SHOT DSC-RX100 III
Instructions for use SONY CYBER-SHOT DSC-RX100 III
Instruction manual SONY CYBER-SHOT DSC-RX100 III

SONY. 4-429-666-52(1)

DSC-RX100

Digital Still Camera / Instruction Manual	GB
Appareil photo numérique / Mode d'emploi	FR
Fotocamera digitale / Istruzioni per l'uso	IT
Cámara fotográfica digital / Manual de instrucciones	ES
Cámara fotográfica digital / Manual de instruções	PT
Digitale Fotokamera / Gebrauchsanleitung	DE
Digitale camera / Gebruiksaanwijzing	NL
Cyfrowy aparat fotograficzny / Instrukcja obsługi	PL
Digitální fotoaparát / Návod k obsluze	CZ
Digitális fényképezőgép / Használati útmutató	HU
Digitálny fotoaparát / Návod na použitie	SK
Digitál stillbildkamera / Handledning	SE
Digitalkamera / Käyttöopas	FI
Digitalt stillkamera / Bruksanvisning	NO
Digitalt stillbilledkamera / Betjeningsvejledning	DK

Cyber-shot

©2012 Sony Corporation Printed in China 4429666520

DSC-RX100



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-RX100 III user guide](http://yourpdfguides.com/dref/5591162)
<http://yourpdfguides.com/dref/5591162>

Manual abstract:

3 Search for the model name of your camera within the support page. □ Check the model name on the bottom of your camera. @@@@ • Instruction Manual (this manual) (1) GB 2 Owner's Record The model and serial numbers are located on the bottom. Record the serial number in the space provided below.

Refer to these numbers whenever you call your Sony dealer regarding this product. _____ GB WARNING To reduce fire or shock hazard, do not expose the unit to rain or moisture. **IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS** If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet. CAUTION [Battery pack If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. □ Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it. □ Do not short circuit and do not allow metal objects to come into contact with the battery terminals.

□ Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun. GB 3 • Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack. □ Keep the battery pack out of the reach of small children. □ Keep the battery pack dry. □ Replace only with the same or equivalent type recommended by Sony.

□ Dispose of used battery packs promptly as described in the instructions. [AC Adaptor Connect the AC Adaptor to the nearest wall outlet (wall socket). If some trouble occurs while using the AC Adaptor, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket). The power cord (mains lead), if supplied, is designed specifically for use with this camera only, and should not be used with other electrical equipment. For Customers in the U.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.> [Battery pack This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003. The UL Mark on the product means it has been UL Listed. If you have any questions about this product, you may call: Sony Customer Information Center 1-800-222-SONY (7669). The number below is for the FCC related matters only. : 858-942-2230 This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

[CAUTION You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. [Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

GB 5 For Customers in Europe [Notice for the customers in the countries applying EU Directives The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents. This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9. 8 feet).

[Attention The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [Notice If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again. [Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. the recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. GB 6 [Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are GB added if the battery contains more than 0. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-RX100 III user guide](http://yourpdfguides.com/dref/5591162)
<http://yourpdfguides.com/dref/5591162>

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Notice for customers in the United Kingdom A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i. e. , marked with an or mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

GB 7 Identifying parts A Shutter button B Mode dial (Intelligent Auto)/(Superior Auto)/(Program Auto)/(Aperture Priority)/(Shutter Priority)/(Manual Exposure)/(Memory recall)/(Movie)/(Sweep Shooting)/(Scene Selection) C For shooting: W/T (zoom) lever For viewing: Index/Playback zoom lever D Self-timer lamp/Smile Shutter lamp/AF illuminator E Power/Charge lamp F ON/OFF (Power) button G Flash • Do not cover the flash with your fingers. □ When using the flash, the flash pops up automatically. If not using the flash, press it down manually. GB 8 H I J K L M N O P Q R S Microphone Hook for strap Control Ring Lens Speaker Light sensor LCD screen Fn (Function) button MOVIE (Movie) button Micro USB connector MENU button Control wheel T U (Playback) button / (In-Camera Guide/Delete) button V Battery insertion slot W Battery eject lever X Tripod socket hole • Use a tripod with a screw less than 5.5 mm (7/32 inches) long.

Otherwise, you cannot firmly secure the camera, and damage to the camera may occur. Y Access lamp Z Memory card slot wj HDMI micro jack wk Battery/Memory card cover GB Inserting the battery pack Battery eject lever 1 Open the cover. 2 Insert the battery pack. Lever, insert the battery pack as • While pressing the battery eject illustrated. Make sure that the battery eject lever locks after insertion.

□ Closing the cover with the battery inserted incorrectly may damage the camera. GB 9 Charging the battery pack Power/Charge lamp Lit: Charging Off: Charging finished Flashing: Charging error or charging paused temporarily because the camera is not within the proper temperature range For customers in the USA and Canada Power cord (Mains lead) For customers in countries/ regions other than the USA and Canada AC Adaptor 1 Connect the camera to the (supplied). (supplied), using the micro USB cable 2 Connect the AC Adaptor to the wall outlet (wall socket). The Power/Charge lamp lights orange, and charging starts. □ Turn off the camera while charging the battery. □ You can charge the battery pack even when it is partially charged. □ When the Power/Charge lamp flashes and charging is not finished, remove and re-insert the battery pack. GB 10 Notes • If the Power/Charge lamp on the camera flashes when the AC Adaptor is connected to the wall outlet (wall socket), this indicates that charging is temporarily stopped because the temperature is outside the recommended range. GB When the temperature gets back within the appropriate range, the charging resumes. We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F).

□ The battery pack may not be effectively charged if the terminal section of the battery is dirty. In this case, wipe any dust off lightly using a soft cloth or a cotton swab to clean the terminal section of the a C: SD card D: microSD memory card Notes • When using “Memory Stick Micro” media or microSD memory cards with this camera, make sure to use with the appropriate adaptor. X To remove the memory card/battery pack Memory card: Push the memory card in once to eject the memory card. battery pack: Slide the battery eject lever. Be sure not to drop the battery pack. Notes • Never remove the memory card/battery pack when the access lamp (page 8) is lit. This may cause damage to data in the memory card. GB 15 Setting the clock ON/OFF (Power) Power/Charge lamp (green) Control wheel Select items b/B Set the numeric value of date and time: v/V / Set: z the 1 PressTime ON/OFF (Power) button. On the camera for the first Date & setting is displayed when you turn time. □ It may take time for the power to turn on and allow operation.

That [Enter] is selected on the screen, then press 2 Check the control wheel. 5 Check that [Enter] is selected, then press z. GB 16 Shooting still images/movies Do not cover the flash. Shutter button W/T (zoom) lever Mode dial GB : Intelligent Auto : Movie MOVIE W: zoom out T: zoom in Shooting still images button halfway down to 1 Press the shutterfocus, a beep sounds and the z or focus. when the image is in indicator lights.

2 Press the shutter button fully down to shoot an image. Shooting movies (Movie) button to 1 Press the MOVIE lever to change the zoom start recording. • Use the W/T (zoom) scale. □ Press the shutter button to shoot still images while continuing to record the movie. 2 Press the MOVIE button again to stop recording.

Notes • Do not pull up the flash manually. this may cause a malfunction. □ When using the zoom function while shooting a movie, the sound of the camera operating will be recorded. The sound of the MOVIE button operating may also be recorded when movie recording is finished. □ Continuous shooting is possible for approximately 29 minutes at one time at the camera's default settings and when the temperature is approximately 25°C (77°F). When movie recording is finished, you can restart recording by pressing the MOVIE button again. Recording may stop to protect the camera depending on the ambient temperature. GB 17 Viewing images W: zoom out T: zoom in Control wheel Fn (Function) (Playback) / (Delete) Select images: B (next)/b (previous) or turn the control wheel Set: z the (Playback) button. 1 Press scan switch the display mode between still images and movies by • You selecting MENU t 1 t [Still/Movie Select]. X Selecting next/previous image Select an image by pressing B (next)/b (previous) on the control wheel or by turning the control wheel.

Press z in the center of the control wheel to view movies. x Deleting an image 1 Press / (Delete) button.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-RX100 III user guide](http://yourpdfguides.com/dref/5591162)

<http://yourpdfguides.com/dref/5591162>

2 Select [Delete] with v on the control wheel, then press z. x Rotating an image Press the Fn (Function) button. X Returning to shooting images Press the shutter button halfway down. GB 18 Viewing the Guide This camera is equipped with a built-in instruction guide. GB MENU / (In-Camera Guide) In-Camera Guide The camera displays explanations for MENU items and the setting values. 1 Press the MENU button. 2 Select the desired MENU item, then press / (In-Camera Guide) button. Shooting Tip The camera displays shooting tips for the shooting mode selected.

I Press / (In-Camera Guide) button in shooting mode. 2 Select the desired shooting tip, then press z on the control wheel. the shooting tip is displayed. □ You can scroll the screen using v/V and change shooting tips using b/B. GB 19 Introduction of other functions Other functions can be operated using the control wheel, MENU button, etc.

Control Ring MENU Fn (Function) Control wheel x Control wheel DISP (Display Contents): Allows you to change the screen display. (Flash Mode): Allows you to select a flash mode for still images. Allows you to change [Bkground Defocus], [Brightness], [Color], [Vividness] and [Picture Effect] when shooting mode is set to [Intelligent Auto] or [Superior Auto]. / (Drive Mode): Allows you to use the self-timer and burst shooting mode. Z (Tracking focus): The camera tracks the subject and adjusts focus automatically even when the subject is moving.

GB 20 x Fn (Function) button Allows you to register seven functions and recall those functions when shooting. 1 Press the Fn (Function) button. 2 Select the desired function using the Fn (Function) button or b/B on the control wheel. 3 Select the setting value by turning the control wheel or Control Ring. GB x Control Ring Your favorite functions can be assigned to the Control Ring; when shooting, established settings can be changed just by turning the Control Ring. Selects the aspect ratio for still images. Sets the image quality for still images. selects the size of panoramic images. Sets the shooting direction for panoramic images. Sets the drive mode, such as for continuous shooting.

Sets the Soft Skin Effect and the effect level. selects to detect faces and adjust various settings automatically. Sets to automatically release the shutter when a smile is detected. Analyzes the scene when capturing a face and saves another image with a more impressive composition. adjusts the luminous sensitivity. @@@ Shoots still images with a texture unique to the selected effect. provides a higher-quality zoomed image than with Digital Zoom. @@@@ Sets noise reduction processing for high-sensitivity shooting. @@ Sets whether to record a shooting date on the still image. selects pre-set settings to match various scene conditions.

@@Movie Selects the movie file format. Selects the size of the recorded movie frame. Sets the still image size shot when recording a movie. sets SteadyShot. Sets whether to record audio when shooting a movie.

Reduces wind noise during movie recording. Selects the exposure mode to suit your subject or effect. Of Right Button Reduces the red-eye phenomenon when using flash. @@ Displays the captured image after shooting. sets auto review.

@@ Enhances the outline of in-focus ranges with a specific color. Sets the color used for the peaking function. Assigns the desired functions to the Control Ring. Sets whether to display animation when operating the Control Ring. @@ Assigns the desired functions to the center button. Assigns the desired functions to the left button. Assigns the desired functions to the right button. gB 23 MF Assist Focus Magnif. @@ Sets the length of time the image will be shown in an enlarged form. Sets whether to track faces as a priority when tracking.

Registers or changes the person to be given priority in the focus. @@ Connects to a 3D compatible TV and allows you to view 3D images. Sets how to play back an image recorded in portrait. @@@@ Changes the selected folder for storing images. Creates a new folder for storing still images and movies (MP4). recovers the image database file and enables recording and playback. @@@@@@ sets the screen brightness. Sets the length of time until the camera turns off automatically. Sets the resolution when the camera is connected to an HDMI TV. @@ Sets the upload function of the camera when using an Eye-Fi card. sets the USB connection method. @@ Sets whether to supply power using a USB connection. Sets the operating sound of the camera. @@@@@@ notes

• "PlayMemories Home" is not compatible to Mac OS. If you play back images on a Mac, use the applications that are installed on your Mac.

For details, visit the following URL. Jp/imsoft/Mac/ x Features of "PlayMemories Home" Below are examples of the functions available when you use "PlayMemories Home". To take advantage of the various "PlayMemories Home" functions, connect to the Internet and install the "Expanded Feature". □ You can import images shot with the camera to a computer and display them. □ You can display images stored on a computer by shooting date in a calendar display.

• You can correct (Red Eye Correction, etc.) still images, print the images, send images by e-mail, and change the shooting date and time. □ You can save and print images with the date. □ You can create a disc from AVCHD movies imported to a computer. (Expanded Feature) GB 26 Install "Image Data Converter" "Image Data Converter" allows you to develop RAW images. 1 Download the software from the following URL and install it on your computer. Jp/imsoft/Mac/ GB x Features of "Image Data Converter" Below are examples of the functions available when you use "Image Data Converter". □ You can edit RAW images using multiple correction functions, such as tone curve or sharpness. □ You can adjust images using white balance, aperture and Creative Style, etc. □ You can save displayed and edited still images to your computer.

There are two ways to save RAW images: save and leave as RAW data or save in a general-purpose file format. □ You can display and compare the RAW images/JPEG images that are shot with this camera. □ You can rank images in five levels. □ You can set the color label. For other details, see Help under "Image Data Converter". Jp/ids-se/ GB 27 Number of still images and recordable time of movies The number of still images and recordable time may vary depending on the shooting conditions and the memory card. X Still images Image Size: L: 20M When [Aspect Ratio] is set to [3:2]* Capacity 2 GB Quality Standard Fine RAW & JPEG RAW 295 images 170 images 58 images 88 images * When the [Aspect Ratio] is set to other than [3:2], you can record more pictures than shown above. (Except when [Quality] is set to [RAW].) x Movies The table below shows the approximate maximum recording times. These are the total times for all movie files.

Continuous shooting is possible for approximately 29 minutes.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-RX100 III user guide](http://yourpdfguides.com/dref/5591162)
<http://yourpdfguides.com/dref/5591162>

The maximum size of an MP4-format movie file is up to approximately 2 GB. (h (hour), m (minute)) Capacity 2 GB Record Setting 60i 24M(FX)/50i 24M(FX) 60i 17M(FH)/50i 17M(FH) 60p 28M(PS)/50p 28M(PS) 1440×1080 12M VGA 3M 10 m 10 m 9m 15 m 1 h 10 m GB 28 •The recordable time of movies varies because the camera is equipped with VBR (Variable Bit Rate), which automatically adjusts image quality depending on the shooting scene. When you record a fast-moving subject, the image is clearer but the recordable time is shorter because more memory is required for recording. The recordable time also varies depending on the shooting conditions, the subject GB or the image quality/size settings.

Notes on using the camera Functions built into this camera • This manual describes 1080 60i-compatible devices and 1080 50i-compatible devices. To check whether your camera is a 1080 60i-compatible device or 1080 50i-compatible device, check for the following marks on the bottom of the camera. 1080 60i-compatible device: 60i 1080 50i-compatible device: 50i • This camera is compatible with 1080 60p or 50p-format movies. Unlike standard recording modes up to now, which record in an interlacing method, this camera records using a progressive method. This increases the resolution, and provides a smoother, more realistic image.

On use and care Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping, or stepping on the product. Be particularly careful of the lens. GB 29 Notes on recording/playback • Before you start recording, make a trial recording to make sure that the camera is working correctly. □ The camera is neither dust-proof, nor splash-proof, nor water-proof. • Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired. □ Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera. □ If moisture condensation occurs, remove it before using the camera.

□ Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged. Do not use/store the camera in the following places • In an extremely hot, cold or humid place In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction. □ Storing under direct sunlight or near a heater The camera body may become discolored or deformed, and this may cause a malfunction. □ In a location subject to rocking vibration • Near a location that generates strong radio waves, emits radiation or is strongly magnetic place. Otherwise, the camera may not properly record or play back images. □ In sandy or dusty places Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired. On carrying Do not sit down in a chair or other place with the camera in the back pocket of your trousers or skirt, as this may cause malfunction or damage the camera.

Carl Zeiss lens The camera is equipped with a Carl Zeiss lens which is capable of reproducing sharp images with excellent contrast. The lens for the camera has been produced under a quality assurance system certified by Carl Zeiss in accordance with the quality standards of Carl Zeiss in Germany. Notes on the screen The screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the screen.

These dots are a normal result of the manufacturing process, and do not affect the recording. Notes on the flash GB • Do not carry the camera by the flash unit, or use excessive strength on it. 30 • If water, dust or sand get into the open flash unit, it may cause a malfunction. On camera's temperature Your camera and battery may get hot due to continuous use, but it is not a malfunction. On the overheat protection Depending on the camera and battery temperature, you may be unable to record GB movies or the power may turn off automatically to protect the camera.

A message will be displayed on the screen before the power turns off or you can no longer record movies. In this case, leave the power off and wait until the camera and battery temperature goes down. If you turn on the power without letting the camera and battery cool enough, the power may turn off again or you may be unable to record movies. On charging the battery If you charge a battery that has not been used for a long time, you may be unable to charge it to the proper capacity. This is due to the battery characteristics, and is not a malfunction. charge the battery again. Warning on copyright Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

No compensation for damaged content or recording failure Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc. Cleaning the camera surface Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth.

To prevent damage to the finish or casing: –Do not expose the camera to chemical products such as thinner, benzene, alcohol, disposable cloths, insect repellent, sunscreen or insecticide. 9 (T) While shooting movies (16:9): 29 mm – 105 mm*1 While shooting movies (4:3): 36 mm – 128 mm*1 *1 When [SteadyShot] is set to [Standard] SteadyShot: Optical Exposure control: Automatic exposure, Aperture priority, Shutter priority, Manual exposure, Scene Selection (13 modes) White balance: Automatic, Daylight, Shade, Cloudy, Incandescent, Fluorescent (Warm White/ Cool White/Day White/Daylight), Flash, Color temperature/Color filter, Custom Signal format: For 1080 50i: PAL color, CCIR standards HDTV 1080/50i, 1080/50p specification For 1080 60i: NTSC color, EIA standards HDTV 1080/60i, 1080/60p specification GB File format: Still images: JPEG (DCF, Exif, MPF Baseline) compliant, DPOF compatible Movies (AVCHD format): AVCHD format Ver. 264 Audio: Dolby Digital 2ch, equipped with Dolby Digital Stereo Creator • Manufactured under license from Dolby Laboratories. movies (MP4 format): Video: MPEG-4 AVC/H. 264 Audio: MPEG-4 AAC-LC 2ch Recording media: "Memory Stick Duo" media, "Memory Stick Micro" media, SD cards, microSD memory cards Flash: Flash range (ISO sensitivity (Recommended Exposure Index) set to Auto): Approx. 5 Wh (1 240 mAh) Design and specifications are subject to change without notice. GB 33 Trademarks • The following marks are trademarks of Sony Corporation. , "Cyber-shot", "Memory Stick PRO Duo", "Memory Stick PRO-HG Duo", "Memory Stick Duo", "Memory Stick Micro" • "AVCHD Progressive" and "AVCHD Progressive" logotype are trademarks of Panasonic Corporation and Sony Corporation.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-RX100 III user guide](http://yourpdfguides.com/dref/5591162)

<http://yourpdfguides.com/dref/5591162>

□ Windows is registered trademark of Microsoft Corporation in the United States and/or other countries. □ In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers.

However, the TM or [®] marks are not used in all cases in this manual. Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website. Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink. □ Add further enjoyment with your PlayStation 3 by downloading the application for PlayStation 3 from PlayStation Store (where available.) • The application for PlayStation 3 requires PlayStation Network account and application download.

□ Remplacez-la uniquement par une batterie de même type ou d'un type équivalent recommandé par Sony. [Batteri Batteriet kan brista om det hanteras ovarsamt, vilket kan leda till brand eller risk för kemiska brännskador. SE x Uppladdning genom att ansluta kameran till en dator Batteripaketet går att ladda upp genom att ansluta kameran till en dator med hjälp av en mikro-USB-kabel. SE 9 Observera • Observera följande vid uppladdning via en dator: – Om kameran ansluts till en bärbar dator som inte är ansluten till en strömkälla förbrukas datorns batteriström. Sätt som visas i figuren • Håll fasade hörnet på det och stick in det tills det klickar till på plats.

@@@ Ved å sørge for at dette produktet avhentes på korrekt måte, vil du være med på å forhindre mulige negative følger for miljøet og helse, som ellers kan forårsakes av feilaktig avfallshåndtering av dette produktet. For å forsikre at batteriet blir behandlet korrekt skal det leveres til en resirkuleringsstasjon for elektriske produkter når det er oppbrukt. NO 6 H I J K L M N O P Q R S Mikrofon Krok for rem Kontrollring Linse Høytaler Lyssensor LCD-skjerm Fn (funksjonsknapp) MOVIE (filmknapp) Micro-USB-kontakt MENU-knapp Kontrollhjul T U -knapp (avspilling) / (kameraveiviser/sletteknapp) V Spor for innsetting av batteri W Batteriutkaster X Hull for stativfeste • Bruk et stativ hvor skruen er kortere enn 5,5 mm. □ Den angitte batteritiden for film er basert på opptak under følgende forhold: – Opptaksinnstilling: 60i 17M(FH)/50i 17M(FH) – Når kontinuerlig opptak avsluttes som følge av innstilte grenseverdier (29 minutter), kan du trykke på MOVIE (filmknappen) igjen for å fortsette å ta opp film. Kameraet for første Innstillingen for dato og tidspunkt vises når du slår på gang. Hvis temperaturen er for lav eller for høy, vil opptaket kunne stoppes for å beskytte kameraet. Stille innbruksmodus, for eksempel for kontinuerlig opptak. NO 21 Oppsettmeny Menystart Modushjulhjelp LCD-lysstyrke Starttid for strømsparing HDMI-oppløsning KTRL for HDMI Laste opp innstilling. Ingen erstatning for ødelagt innhold eller opptaksfeil Sony kan ikke gi erstatning for opptaksfeil, tap av eller skade på innspilt innhold som følge av funksjonsfeil i kameraet eller opptaksmediene e. For å forhindre skade på overflaten eller huset: – Ikke utsett kameraet for kjemiske produkter som tynner, bensin, alkohol, engangskluter, insektmiddel, solkrem eller insektgift.

) • Betjeningsvejledning (denne vejledning) (1) DK 2 ADVARSEL Apparatet må ikke udsættes for regn eller fugt af hensyn til risiko for brand eller elektrisk stød. □ Udskift kun batteriet med et batteri af samme type eller en tilsvarende type, som anbefales af Sony. □ Der gives ingen garanti for opladning med en specialbygget eller modificeret computer. □ Batterilevetiden for film gælder for optagelse under følgende forhold: – Optageindstilling: 60i 17M(FH)/50i 17M(FH) – Når kontinuerlig optagelse stopper pga. 1 Tryk på ON/OFF og klokkeslæt vises, når du tænder for kameraet Indstillingen for dato første gang. (Blitztilstand): Giver dig mulighed for at vælge en blitztilstand for stillbilleder. DK Hukommelse Optagemenu for film Filformat Optageindstilling Billedformat (Dual Rec) SteadyShot Vælger filformatet for film. For lydstyrke Vis afspilning Vælger visningsformatet for billeder. Om brug og vedligeholdelse Produktet må ikke udsættes for hårdhændet behandling, skilles ad, ændres, udsættes for stød eller tryk som f. Ingen kompensation for ødelagt indhold eller optagefejl Sony kan ikke kompensere for manglende evne til at optage eller tab af optaget indhold pga.

For at undgå at beskadige overfladebehandlingen eller kabinettet: – Udsæt ikke kameraet for kemiske produkter som fx fortynder, benzin, alkohol, engangsklude, insektmiddel, solcreme eller insektgift. .



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-RX100 III user guide](http://yourpdfguides.com/dref/5591162)
<http://yourpdfguides.com/dref/5591162>