



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-WX350. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-WX350 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CYBER-SHOT DSC-WX350

User guide SONY CYBER-SHOT DSC-WX350

Operating instructions SONY CYBER-SHOT DSC-WX350

Instructions for use SONY CYBER-SHOT DSC-WX350

Instruction manual SONY CYBER-SHOT DSC-WX350



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX350 user guide](http://yourpdfguides.com/dref/5580475)
<http://yourpdfguides.com/dref/5580475>

Manual abstract:

Refer to it for in-depth instructions on the many functions of the camera. 1 Access the Sony support page. 3 Search for the model name of your camera within the support page. □ Check the model name on the bottom of your camera. GB 2 Checking the supplied items The number in parentheses indicates the number of pieces. □ Camera (1) • Rechargeable battery pack NP-BX1 (1) • Micro USB cable (1) • AC Adaptor AC-UB10C/UB10D (1) • Power cord (mains lead) (not supplied in the USA, Canada and China) (1) • Wrist strap (1) • Instruction Manual (this manual) (1) • Wi-Fi Connection/One-touch (NFC) Guide (1) This Guide describes the function using Wi-Fi. 3 GB Owner's Record The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product. _____ GB 4

WARNING To reduce fire or shock hazard, do not expose the unit to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet. CAUTION [Battery pack If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. □ Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it. @@@@□ Keep the battery pack out of the reach of small children. □ Keep the battery pack dry.

□ Replace only with the same or equivalent type recommended by Sony. @@[AC Adaptor Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using the apparatus. The power cord (mains lead), if supplied, is designed specifically for use with this camera only, and should not be used with other electrical equipment. GB 6 For Customers in Europe [Notice for the customers in the countries applying EU Directives Manufacturer: Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan For EU product compliance: Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany Hereby, Sony Corporation, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For details, please access the following URL: <http://www.De/> 7 GB [Notice If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again. This product has been tested and found compliant with the limits set out in the EMC regulation for using connection cables shorter than 3 meters (9. 8 feet). The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other European countries with separate collection systems) This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0. By ensuring these products and batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling.

The recycling of the materials will help to conserve natural resources. GB 8 In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery. For Customers in Singapore 9

GB For customers who purchased their camera from a store in Japan that caters to tourists [Note Some certification marks for standards supported by the camera can be confirmed on the screen of the camera. select MENU t (Setup) 6 t [Certification Logo]. If display is not possible due to problems such as camera failure, contact your Sony dealer or local authorized Sony service facility. GB 10 Inserting the battery pack Battery eject lever 1 Open the cover.

2 Insert the battery pack. @@@@2 Connect the AC Adaptor to the wall outlet (wall socket). @@@@ using the AC Adaptor (supplied). @@@@6600 images • The number is based on the CIPA standard. @@ 1 Open the cover.

2 Insert the memory card (sold separately). @@ battery pack: Slide the battery eject lever. Be sure not to drop the battery pack. @@@@X To set the date and time again Select MENU t setting display. @@2 Press the shutter button fully down to shoot an image.

@@2 Press the MOVIE (Movie) button again to stop recording. @@@@Press z on the control wheel to view movies. x To delete an image 1 Press (Delete) button. 2 Select [Delete] with v on the control wheel, then press z. @@@@@ sony. @@@@@Be particularly careful of the lens. @@It may take some time until you can perform the next operation. If a database file error occurs, import all the images to a computer using PlayMemories Home, then format the memory card. Notes on recording/playback • To ensure stable operation of the memory card, we recommend that you use this camera to format any memory card being used with this camera for the first time. Note that formatting will erase all data recorded on the memory card.

This data cannot be restored. Be sure to back up any important data to a computer or other storage location. □ Before you start recording, make a trial recording to make sure that the camera is working correctly. □ The camera is neither dust-proof, nor splash-proof, nor water-proof. gB 26 • Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired. □ Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera. □ Do not use the camera near a location that generates strong radio waves or emits radiation.

Otherwise, the camera may not properly record or play back images.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX350 user guide](http://yourpdfguides.com/dref/5580475)
<http://yourpdfguides.com/dref/5580475>

□ Using the camera in sandy or dusty locations may cause malfunctions. □ Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.

□ Clean the flash surface before use. The heat of the flash emission may cause dirt on the flash surface to start smoking or burning. Wipe the flash surface with a soft cloth to remove dirt or dust, etc. On camera's temperature Your camera and battery may get hot due to continuous use, but it is not a malfunction. On the overheat protection Depending on the camera and battery temperature, you may be unable to record movies or the power may turn off automatically to protect the camera.

A message will be displayed on the screen before the power turns off or you can no longer record 27 GB movies. In this case, leave the power off and wait until the camera and battery temperature goes down. If you turn on the power without letting the camera and battery cool enough, the power may turn off again or you may be unable to record movies. Note on wireless LAN We assume no responsibility whatsoever for any damage caused by unauthorized access to, or unauthorized use of, destinations loaded on the camera, resulting from loss or theft. Warning on copyright Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the 800 punkter [Strömförsörjning, allmänt] Ström:

Uppladdningsbart batteri NP-BX1, 3,6 V Nätadapter AC-UB10C/UB10D, 5 V Effektförbrukning (under tagning): Ungefär 1,0 W Drifttemperatur: 0 °C till 40 °C Förvaringstemperatur: -20 °C till +60 °C 29 SE Mått (enligt CIPA): 96 mm × 54,9 mm × 25,7 mm (B/H/D) Vikt (enligt CIPA) (inklusive batteri av typ NP-BX1, Memory Stick PRO Duo): Ungefär 164 g Mikrofon: Stereo Högtalare: Mono Exif Print: Kompatibel PRINT Image Matching III: Kompatibel [Trådlöst LAN] Standard som stöds: IEEE 802.11 b/g/n Frekvens: 2,4 GHz Säkerhetsprotokoll som stöds: WEP/WPA-PSK/WPA2-PSK Konfigureringsmetod: WPS (Wi-Fi Protected Setup) /manuell Åtkomstmetod: Infrastrukturläge NFC: enligt NFC Forum typ 3-tag Nätadapter AC-UB10C/UB10D Strömkrav: 100 V till 240 V växelström (AC), 50 Hz/60 Hz, 70 mA Utpänning: 5 V likström (DC), 0,5 A Drifttemperatur: 0 °C till 40 °C Förvaringstemperatur: -20 °C till +60 °C SE 30 Mått: Ungefär 50 mm × 22 mm × 54 mm (B/H/D) Uppladdningsbart batteri NP-BX1 Batterityp: Litiumjonbatteri Max. För å redusere brannfaren og faren for å få elektrisk støt, må du ikke utsette denne enheten for regn eller fuktighet. @@@@@@3 DK ADVARSEL Apparatet må ikke udsættes for regn eller fugt af hensyn til risiko for brand eller elektrisk stød. □ Udskift kun batteriet med et batteri af samme type eller en tilsvarende type, som anbefales af Sony.

For kunder som købte deres kamera i en butik i Japan, som sælger til turister [Bemærkning Nogle certificeringsmærker for standarder, der understøttes af kameraet, kan bekræftes på kameraets skærm. Net/pcenv/23 DK Bemærkninger om brug af kameraet Om brug og vedligeholdelse Kameraet må ikke udsættes for hårdhændet behandling, adskilles, ændres, udsættes for kraftige stød eller slag, f. Ingen kompensation for beskadiget indhold eller fejl i optagelse Sony kan ikke kompensere for manglende evne til at optage eller tab af optaget indhold pga. .



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX350 user guide](http://yourpdfguides.com/dref/5580475)
<http://yourpdfguides.com/dref/5580475>