



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-WX80. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-WX80 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY CYBER-SHOT DSC-WX80**  
**User guide SONY CYBER-SHOT DSC-WX80**  
**Operating instructions SONY CYBER-SHOT DSC-WX80**  
**Instructions for use SONY CYBER-SHOT DSC-WX80**  
**Instruction manual SONY CYBER-SHOT DSC-WX80**



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>

**Manual abstract:**

Resolution (DSC-WX200) Main Settings Beep Panel Brightness Language Setting Display color Demo Mode Initialize Function Guide CTRL FOR HDMI USB Connect Setting USB Power Supply LUN Setting Download Music Empty Music Airplane Mode (DSC-WX80/WX200) Eye-Fi Power Save Version Certification Logo (DSC-WX200) Network Settings WPS Push (DSC-WX80/WX200) Access point settings (DSC-WX80/WX200) Edit Device Name (DSC-WX80/WX200) SSID/PW Reset (DSC-WX80/WX200) Disp MAC Address (DSC-WX80/WX200) Memory Card Tool/Internal Memory Tool Format Create REC.Folder Change REC.Folder 8 Delete REC.Folder Copy File Number Clock Settings Area Setting Date & Time Setting Back to top Copyright 2013 Sony Corporation 9 Cyber-shot User Guide Search Print Top page > Viewing images on a TV Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Copyright 2013 Sony Corporation Viewing images on a TV Viewing an image on a High Definition (HD) TV Viewing an image on an HD TV using the HDMI Cable (sold separately) Viewing an image on a "BRAVIA" Sync-compatible TV Viewing an image on a "BRAVIA" Sync-compatible TV Viewing 3D images on a 3D TV Viewing 3D images on a 3D TV Back to top 10 Cyber-shot User Guide Search Print Top page > Using with your computer Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Copyright 2013 Sony Corporation Using with your computer Recommended computer environment Recommended computer environment Using the software "PlayMemories Home" (Windows) Installing "PlayMemories Home" (Windows) "Music Transfer" Software for Mac Importing images to a computer Connecting the camera to the computer Importing images to a computer Disconnecting the camera from the computer Creating a disc of movies Selecting the method for creating a disc of movies Back to top 11 Cyber-shot User Guide Search Print Top page > Printing Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Copyright 2013 Sony Corporation Printing Printing still images Printing still images Back to top 12 Cyber-shot User Guide Search Print Top page > Troubleshooting Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Troubleshooting If you have problems If you have problems Troubleshooting Battery pack and power Shooting still images/movies Viewing images Wi-Fi (DSC-WX80/WX200) Computers Memory card Internal memory Printing Others Warning indicators and messages Self-diagnosis display Messages Situations this camera has difficulty handling Situations this camera has difficulty handling Back to top Copyright 2013 Sony Corporation 13 Cyber-shot User Guide Search Print Top page > Precautions / About this camera Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Precautions / About this camera Precautions Precautions On the internal rechargeable backup battery Battery pack Charging the battery pack Memory card On cleaning On cleaning Number of still images and recordable time of movies Number of still images Recordable time of movies Using the camera abroad Using the camera abroad On TV color systems About this camera Carl Zeiss lens (DSC-WX60/WX80) AVCHD format License Trademarks Trademarks Back to top Copyright 2013 Sony Corporation 14 Cyber-shot User Guide Search Print Top page > Contents list Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Contents list Before Use How to use this User Guide How to use this User Guide Names of parts and list of icons displayed on the screen Names of parts List of icons displayed on the screen Using the wrist strap Using the wrist strap Using the internal memory Using the internal memory Using the In-Camera guide In-Camera Guide Back to top Operating the camera Operating the camera Using the control wheel Using MENU items (Shooting) Using MENU items (Viewing) Changing camera settings Back to top Shooting Shooting still images Shooting still images Zoom (Still images) Shooting movies Shooting movies Zoom (Movies) Shooting still images while recording a movie (Dual Rec) Selecting the shooting mode based on the subject List of mode switch functions REC Mode Intelligent Auto Superior Auto Background Defocus Program Auto 15 3D Still Image Intelligent Sweep Panorama Picture Effect Scene Selection Back to top Viewing Viewing still images Viewing still images Playback zoom Image Index Deleting images Deleting images Viewing burst images Viewing burst images Viewing movies Viewing movies Viewing panorama images Scrolling the panorama images for display Back to top Useful shooting functions Functions available for each shooting mode Functions available for each shooting mode MENU items available for each shooting mode Menu items available for shooting Tracking focus DISP (Display Setting) Flash Cont. Shooting Settings Self-Timer Movie shooting scene Panorama Shooting Scene Easy Mode HDR Painting effect Area of emphasis Color hue Extracted Color Illustration Effect Defocus Effect Soft Skin Effect Ctrl with Smartphone (DSC-WX80/WX200) Send to Computer (DSC-WX80/WX200) Still Image Size (Dual Rec) Still Image Size/Panorama Image Size Movie Quality/Movie Size 16 Exposure Compensation ISO White Balance Underwater White Balance (DSC-WX200) Focus Metering Mode Cont. Shooting Interval Scene Recognition Smile Shutter Smile Detection Sensitivity Face Detection Anti Blink Movie SteadyShot Back to top Useful viewing functions Functions available for each view mode MENU items available for each view mode MENU items (Viewing) Easy Mode Send to Smartphone (DSC-WX80/WX200) View on TV (DSC-WX80/WX200) Send to Computer (DSC-WX80/WX200) Beauty Effect Retouch Picture Effect Slideshow Delete 3D Viewing View Mode Display Cont. Shooting Group Protect Print (DPOF) Rotate Back to top Changing settings Shooting Settings Movie format AF Illuminator Grid Line Clear Image Zoom Digital Zoom Wind Noise Reduct. Red Eye Reduction Blink Alert Write Date 17 Disp.



**[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)**  
<http://yourpdfguides.com/dref/5477861>

Resolution (DSC-WX200) Main Settings Beep Panel Brightness Language Setting Display color Demo Mode Initialize Function Guide CTRL FOR HDMI USB Connect Setting USB Power Supply LUN Setting Download Music Empty Music Airplane Mode (DSC-WX80/WX200) Eye-Fi Power Save Version Certification Logo (DSC-WX200) Network Settings WPS Push (DSC-WX80/WX200) Access point settings (DSC-WX80/WX200) Edit Device Name (DSC-WX80/WX200) SSID/PW Reset (DSC-WX80/WX200) Disp MAC Address (DSC-WX80/WX200) Memory Card Tool/Internal Memory Tool Format Create REC.Folder Change REC.

Folder Delete REC.Folder Copy File Number Clock Settingsng with your computer Printing Troubleshooting Precautions / About this camera Contents list Shutter button For shooting: W/T (zoom) lever For viewing: Flash Self-timer lamp/Smile Shutter lamp/AF illuminator ON/OFF (Power) button Charge lamp Microphone Lens (Index) lever / (Playback zoom) lever Names of parts LCD screen Mode switch MOVIE (Movie) button Multi / Micro USB Terminal\* Hook for wrist strap 24 Control wheel Wi-Fi receiver (built-in) (DSC-WX80/WX200) MENU button / (In-Camera Guide / Delete) button (Playback) button Battery insertion slot Tripod receptacle Speaker Battery eject lever Access lamp Memory card slot HDMI micro jack Battery / Memory card cover \* Supports Micro USB compatible device. Back to top Copyright 2013 Sony Corporation 25 Cyber-shot User Guide Search Print Top page > Before Use > Names of parts and list of icons displayed on the screen > List of icons displayed on the screen Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list List of shooting mode icons List of viewing mode icons Icons are displayed on the screen to indicate the camera status. (Display Setting) on the control wheel. You can change the screen display using List of icons displayed on the screen List of shooting mode icons Display Indication Battery remaining

Low battery warning Image size/Panorama image size/Quality , is DSC-WX200 only.

, is DSCWX60/WX80 only. 9 Number of recordable images (Dual Rec) Scene Selection (Underwater) is DSC-WX200 only. Picture Effect Shooting mode (Underwater iSweep Panorama) is DSCWX200 only. 26 Scene Recognition icon White balance (Underwater White Balance) is DSC-WX200 only. HDR Painting effect Color hue Extracted Color Illustration effect Metering Mode Vibration warning Anti Blink Scene Recognition Overlay icon Burst Shooting Interval Smile Detection Sensitivity indicator 1.

4 Zoom scaling Display Indication Tracking focus AE/AF lock ISO400 ISO number NR slow shutter 125 F3.3 Shutter speed Aperture value Wind Noise Reduction +2.0EV Exposure value AF range finder frame indicator Display Indication Recording folder 96 Number of recordable images 27 CAPTURE 100Min Importing still images Recordable time Recording Media (Memory card, internal memory) Warning indicator pertaining to still image recording Flash mode C:32:00 Self-diagnosis display AF Illuminator Red-eye reduction Defocus Effect Flash charging Display Indication Self-timer Airplane Mode (DSC-WX80/WX200) Face detection Destination Soft Skin Effect Database file full/Database file error Overheating warning Write Date AF range finder frame Spot metering cross-hairs Histogram REC Standby 0:12 Recording a movie/Movie standby Recording time (m:s) List of viewing mode icons 28 Display Indication Battery remaining Low battery warning Image size/Panorama image size/Quality , is DSC-WX200 only. , is DSC-WX60/WX80 only. View mode 3D images Burst Images Main image in the burst group Protect Print order (DPOF) Playback zoom Display Indication 101-0012 Folder-file number 2013-1-1 9:30 AM Recorded date/time of the playback image Display Indication Playback folder 12/12 Image number/Number of images recorded in selected date range, folder Playback Media (Memory card, internal memory) Eye-Fi Mode display Flash mode Metering Mode White balance (Underwater White Balance) is DSC-WX200 only. C:32:00 ISO400 Self-diagnosis display ISO number 29 Display 500 +2.0EV F3.3 Indication Shutter speed Exposure value Aperture value Database file full/Database file error Overheating warning Airplane Mode (DSC-WX80/WX200) Playback Variable speed playback Playback bar 00:00:12 Counter Histogram Volume Back to top Copyright 2013 Sony Corporation 30 Cyber-shot User Guide Search Print Top page > Before Use > Using the wrist strap > Using the wrist strap Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Copyright 2013 Sony Corporation Back to top Using the wrist strap Attach the strap and place your hand through the loop to prevent the camera from damage by being dropped. 31 Cyber-shot User Guide Search Print Top page > Before Use > Using the internal memory > Using the internal memory Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Using the internal memory On image data stored in the internal memory The camera has approximately 48 MB of internal memory. You can record still images on the internal memory when there is no memory card inserted in the camera.

When a memory card is inserted [Recording]: Images are recorded on the memory card. [Playback]: Images on the memory card are played back. [Menu, Settings, etc.]: Various functions can be performed on images on the memory card. When there is no memory card inserted [Recording]: Images are recorded using the internal memory. However, movies cannot be recorded to the internal memory. [Playback]: Images stored in the internal memory are played back. [Menu, Settings, etc.]: Various functions can be performed on images in the internal memory. On image data stored in the internal memory We recommend that you copy (back up) data using one of the following methods.

To copy (back up) data on a hard disk of your computer Without a memory card inserted in the camera, import the images into a computer. [Details] To copy (back up) data on a memory card Prepare a memory card with sufficient free capacity, then copy the images in the internal memory to the memory card. [Details] Notes You cannot transfer image data on a memory card to the internal memory. By making a USB connection between the camera and a computer with a micro USB cable, you can transfer data stored in the internal memory to a computer. However you cannot transfer data on a computer to the internal memory.

You cannot transfer images recorded on the internal memory using the Wi-Fi function (DSCWX80/WX200). Back to top Copyright 2013 Sony Corporation 32 Cyber-shot User Guide Search Print Top page > Before Use > Using the In-Camera guide > In-Camera Guide Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Notes / (In-Camera Guide) button is not available in Easy Mode.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>

Depending on the selected functions, the operation guide and details may not be displayed. In-Camera Guide This camera contains an internal function guide. This allows you to search the camera's functions according to your needs.

You can use the selected function after reading the guide. 1. Press the MENU button. 2. Select the desired MENU item using / . 3. Press the / (In-Camera Guide) button. The operation guide for the MENU item you have selected in step 2 is displayed. 4. Use / to switch among summary, operation and details screens.

When [Use this function] is displayed on the screen, select it to switch to that mode. If you press the / (In-Camera Guide) button when the MENU screen is not displayed, you can search the guide using keywords or icons. Back to top Copyright 2013 Sony Corporation 33 Cyber-shot User Guide Search Print Top page > Operating the camera > Operating the camera > Using the control wheel Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list The following functions are located on the up/down/right/left side of the control wheel: (Display (Self-Timer) and (Cont. Shooting Settings). Setting), (Flash), Press the control wheel toward each icon to enter the setup screen for each function. Turn the control wheel or press the up/down/right/left side of the wheel following the screen to move the selection frame. Press in the center of the control wheel to set the selected item. Using the control wheel Moving the selection frame on MENU screen, etc. Selecting an image to be played back Selecting a REC mode Moving the selection frame on MENU screen, etc. Turn the control wheel or press the up/down/right/left side of the wheel to move the selection frame.

In some modes, you can also move the selection frame by turning the control wheel. Selecting an image to be played back Press the right or left side of the control wheel, or turn the wheel to play back the next/previous image. Selecting a REC mode Turn the control wheel to display the REC mode selection screen. Keep turning the control wheel until the desired mode is selected. The available modes differ depending on the position of the mode switch.

34 You can also change the REC mode from [MENU]. Back to top Copyright 2013 Sony Corporation 35 Cyber-shot User Guide Search Print Top page > Operating the camera > Operating the camera > Using MENU items (Shooting) Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 3. Select the desired menu item with / on the control wheel. Using MENU items (Shooting) You can select the various shooting functions easily from the MENU button. 1.

Press the ON/OFF (Power) button and set the camera to shooting mode. 2. Press the MENU button to display the Menu screen. 4. Select the desired item with / on the control wheel or by turning the control wheel. 5. Press the MENU button to close the Menu screen. Back to top Copyright 2013 Sony Corporation 36 Cyber-shot User Guide Search Print Top page > Operating the camera > Operating the camera > Using MENU items (Viewing) Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 3. Select the desired menu item with / on the control wheel. Using MENU items (Viewing) You can select the various viewing functions easily from the MENU button.

1. Switch to playback mode. 2. Press the MENU button to display the Menu screen. 4. Select the desired item with / on the control wheel or by turning the control wheel. 5. Press in the center of the control wheel to execute the function. Back to top Copyright 2013 Sony Corporation 37 Cyber-shot User Guide Search Print Top page > Operating the camera > Operating the camera > Changing camera settings Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 2. Select (Settings) with / on the control wheel, then press on the control wheel to Changing camera settings You can change the settings on the [Settings] screen.

1. Press the MENU button to display the Menu screen. display the setup screen. 3. Select the desired category by using press . / on the control wheel or turning the control wheel, then 4. Select the desired item by using press . / on the control wheel or turning the control wheel, then 5. Select the desired setting, then press . Notes [Shooting Settings] appears only when settings have been entered from shooting mode.

[Memory Card Tool] appears only when a memory card is inserted in the camera, while [Internal 38 Memory Tool] appears only when a memory card is not inserted. Back to top Copyright 2013 Sony Corporation 39 Cyber-shot User Guide Search Print Top page > Shooting > Shooting still images > Shooting still images Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 2. Hold the camera steady as illustrated. Do not cover the flash or lens with your fingers. Shooting still images 1. Set the mode switch to (Still Image), then press the ON/OFF (Power) button. 3. Press the shutter button halfway down to focus. When the image is in focus, a beep sounds and the indicator lights. The shortest shooting distance is approximately 5 cm (2 inches) (W), 1.

5 m (4 ft 11 1/8 inches) (T) (from the lens). 4. Press the shutter button fully down. If you shoot a still image of a subject that is difficult to focus on When the camera cannot focus on the subject automatically, the AE/AF lock indicator changes to slowly flashing and the beep does not sound. Either recompose the shot or change the focus setting. [Details] 40 Focusing may be difficult in the following situations: It is dark and the subject is distant. The contrast between the subject and the background is poor. The subject is seen through glass. The subject is moving quickly. There is reflective light or shiny surfaces. The subject is backlit or there is a flashing light. Back to top Copyright 2013 Sony Corporation 41 Cyber-shot User Guide Search Print Top page > Shooting > Shooting still images > Zoom (Still images) Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Notes Zoom is locked to the W side in [iSweep Panorama] mode.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>

**Zoom (Still images)** Available zoom Zoom scale Enlarges images with the W/T (zoom) lever when shooting. The camera's optical zoom function can enlarge images up to 8× (DSC-WX60/WX80), 10× (DSC-WX200). Optical zoom allows you to enlarge an image without deteriorating its original quality.

1. Set the camera to shooting mode. 2. Slide the W/T (zoom) lever. Slide the lever to the T side to zoom in, or to the W side to zoom out.

**Available zoom** The camera achieves a high magnification zoom scale by combining zoom methods. The icon and zoom bar on the screen change in accordance with the zoom you use. **Optical zoom range** The camera's optical zoom function can enlarge images up to 8× (DSC-WX60/WX80), 10× (DSCWX200). **Zoom range other than optical zoom** Zoom with the original image quality When [Image Size] is set to other than the maximum image size, you can shoot still images with no deterioration in the original image quality, even if the optical zoom scale exceeds 8× (DSCWX60/WX80), 10× (DSC-WX200) magnification, by trimming image processing. ( ) [Clear Image Zoom] ) [Digital Zoom] Zoom with close to the original image quality [Details] Less than the original image quality [Details] Operation Settings Still Image Size: [18M]/[16:9(13M)] (DSC42 Zoom bar Using optical zoom only WX200), [16M]/[16:9(12M)] (DSCWX60/WX80) [Clear Image Zoom]: [Off] [Digital Zoom]: [Off] Still Image Size: Other than [18M] (DSCWX200), [16M] (DSC-WX60/WX80) [Clear Image Zoom]: [Off] [Digital Zoom]: [Off] Zooming images without deterioration Shooting clear images using [Clear Image Zoom] (close to the original image quality) Zooming to the maximum zoom range [Clear Image Zoom]: [On] [Digital Zoom]: [Off] [Clear Image Zoom]: [On] [Digital Zoom]: [On] [Clear Image Zoom] may not be available for some settings. [Details] Zoom scale The supported zoom scales are different depending on the settings or the image size. The table below summarizes the zoom scales when [Clear Image Zoom] and [Digital Zoom] are set to [On]. DSC-WX60/WX80: Zoom with Zoom with maximum [Clear Image Zoom] [On] zoom scale \*1 16 20 28 115 16 38 32 40 56 115 \*2 32 76 Image Size Optical zoom 16M 10M 5M VGA 16:9(12M) 16:9(2M) 8 8 8 8 8 \*1 The maximum zoom scale is the magnification when [Clear Image Zoom] is set to [On] or [Digital Zoom] is set to [On]. The maximum zoom scale varies depending on the settings. The maximum zoom scale for the default setting is the same as when [Clear Image Zoom] is [On].

[Details] \*2 When [Still Image Size] is set to [VGA], [Digital Zoom] is limited; magnification will be the same when [Digital Zoom] is set to [Off], and when [Clear Image Zoom] is set to [On]. DSC-WX200: Zoom with Zoom with maximum [Clear Image Zoom] [On] zoom scale \*1 20 26 37 153 43 Image Size Optical zoom 18M 10M 5M VGA 10 10 10 40 53 75 153 \*2 16:9(13M) 16:9(2M) 10 10 20 51 40 102 \*1 The maximum zoom scale is the magnification when [Clear Image Zoom] is set to [On] or [Digital Zoom] is set to [On]. The maximum zoom scale varies depending on the settings. The maximum zoom scale for the default setting is the same as when [Clear Image Zoom] is [On]. [Details] \*2 When [Still Image Size] is set to [VGA], [Digital Zoom] is limited; magnification will be the same when [Digital Zoom] is set to [Off], and when [Clear Image Zoom] is set to [On]. Notes The default setting for [Clear Image Zoom] is [On]. The default setting for [Digital Zoom] is [Off]. Set [Digital Zoom] to [On] to enlarge images even with deterioration. [Details] The default setting for [Still Image Size] is set to maximum. To change the zoom scale, change [Still Image Size].

[Details] Zoom functions other than the optical zoom are not available when shooting in the following situations: In [Picture Effect] In [Background Defocus] When the Smile Shutter function is activated. @@When [Backlight Correction HDR] mode is selected in Scene Selection. The Face Detection function does not operate when you use other than the optical zoom. Back to top Copyright 2013 Sony Corporation 44 Cyber-shot User Guide Search Print Top page > Shooting > Shooting movies > Shooting movies Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 2.

Press the MOVIE (Movie) button to start recording.

**Shooting movies** 1. Set the mode switch to (Movie Mode), then press the ON/OFF (Power) button. 3. Press the MOVIE button again to stop recording. MOVIE (Movie) button You can start recording a movie by pressing the MOVIE button, regardless of the position of the mode switch.

Notes The sound of the lens and lever operating will be recorded when the zoom function operates while shooting a movie. The sound of the MOVIE button operating may also be recorded when you press the MOVIE button to stop recording. Continuous shooting is possible for approximately 29 minutes at one time at the camera's default settings and when the temperature is approximately 25°C (77°F). When movie recording is finished, you can restart recording by pressing the MOVIE button again. Recording may stop to protect the camera depending on the ambient temperature. Related Topic Zoom (Movies) Shooting still images while recording a movie (Dual Rec) Movie Quality/Movie Size 45 Movie format Back to top Copyright 2013 Sony Corporation 46 Cyber-shot User Guide Search Print Top page > Shooting > Shooting movies > Zoom (Movies) Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Zoom (Movies) Available zoom Enlarges images with the W/T (zoom) lever when shooting. The camera's optical zoom function can enlarge images up to 8× (DSC-WX60/WX80), 10× (DSC-WX200). 1. Set the camera to shooting mode. 2.

Slide the W/T (zoom) lever. Slide the lever to the T side to zoom in, or to the W side to zoom out. Available zoom When zooming, you can exceed the 8× (DSC-WX60/WX80), 10× (DSC-WX200) optical zoom. Set [Digital Zoom] to [On] to enlarge the images. The camera can enlarge images up to 32× (DSCWX60/WX80), 40× (DSC-WX200). **Optical zoom range** Optical zoom: The camera's optical zoom function can enlarge images up to 8× (DSC-WX60/WX80), 10× (DSC-WX200). **Zoom range other than optical zoom** [Digital Zoom]: Less than original image quality. [Details] Operation To zoom in to the maximum scale before image quality deterioration occurs To zoom in to the maximum scale Settings [Digital Zoom]: [Off] [Digital Zoom]: [On] Zoom bar Notes [Clear Image Zoom] is not available while recording movies. The camera zooms slowly while recording movies. Back to top Copyright 2013 Sony Corporation 47 48 Cyber-shot User Guide Search Print Top page > Shooting > Shooting movies > Shooting still images while recording a movie (Dual Rec) Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 2.



**You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide**  
<http://yourpdfguides.com/dref/5477861>

Press the shutter button. A still image is recorded. The number of recordable still images (A) appears on the screen when you press the shutter button halfway down. Shooting still images while recording a movie (Dual Rec) You can shoot still images while recording a movie. The camera keeps recording the movie even if you shoot still images.

Up to 10 still images can be shot during one movie recording. 1. Press the MOVIE (Movie) button to start recording a movie. 3. Press the MOVIE button to stop recording the movie.

After recording movies, the recorded still images are displayed in frames on the screen. Notes The sound of the shutter button operating may be recorded. Flash is not available for shooting still images during movie recording. The size of a still image that can be shot while recording a movie varies depending on the movie size. For details, see "Still Image Size(Dual Rec)." [Details] When the Smile Shutter function is set to [On], the shutter releases automatically each time the camera detects a smiling face. You cannot switch [On] or [Off] for Smile Shutter during movie recording. When the (Movie Mode) is set and the camera is on [Standby], you cannot use [Smile Shutter]. appears on the If the memory card capacity is insufficient or 10 images have been shot, screen. This icon indicates that no more still images can be shot.

Back to top Copyright 2013 Sony Corporation 49 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > List of mode switch functions Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list (Still Image) Allows you to shoot still images. [Details] Set the mode switch to the desired function. List of mode switch functions (iSweep Panorama) Allows you to shoot a panorama image by composing images. [Details] (Movie) Allows you to change the settings for movie recording. [Details] Related Topic Shooting still images Intelligent Sweep Panorama Shooting movies Back to top Copyright 2013 Sony Corporation 50 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > REC Mode Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list (Intelligent Auto) (Superior Auto) (Program Auto) (3D Still Image) (Scene Selection) (Picture Effect) (Background Defocus) Allows you to shoot with the setting adjusted automatically. [Details] Allows you to shoot still images in higher quality than with Intelligent Auto mode. [Details] Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). [Details] Also you can select various settings using the menu. Allows you to shoot images that can be played back stereoscopically on a 3D TV. [Details] Allows you to shoot with preset settings according to the scene. [Details] Allows you to shoot a still image with an original texture according to the desired effect. [Details] Allows you to shoot an image with background defocus and define the subject. [Details] REC Mode You can select the still image shooting mode when the mode switch is set to [Still Image]. 1. MENU (REC Mode) desired mode Back to top Copyright 2013 Sony Corporation 51 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Intelligent Auto Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 1. Set the mode switch to (Still Image). (Intelligent Auto). [Details] Intelligent Auto Allows you to shoot still images with the setting adjusted automatically. 2. Turn the control wheel to select 3.

Shoot with the shutter button. On Scene Recognition Scene Recognition operates in Intelligent Auto mode. This function lets the camera automatically recognize the shooting conditions and shoot the image. Features of Auto shooting modes In Superior Auto mode, the camera shoots a higher-quality image than in Intelligent Auto mode. The camera also shoots multiple images based on the recognized scene, then creates a composite of the multiple images (Overlay shooting). Program Auto mode allows you to change various shooting settings, such as the white balance or ISO settings. Major restricted functions Forced flash REC Mode When to use (Intelligent Auto) Use when you want the camera to automatically recognize the shooting conditions and shoot some images continuously. Use when you shoot images under difficult conditions, such as low light or backlit scenes. Use when you want to shoot a higher-quality image than in (Intelligent Auto) mode. (Superior Auto) Continuous shooting, Smile Shutter (Program Auto) Use when you want to shoot using customized shooting settings with Scene the exposure (both the shutter speed and the aperture value) adjusted Recognition automatically.

52 Notes In [Intelligent Auto] mode, you may be unable to shoot low light or backlit scenes clearly. In [Superior Auto] mode, it takes some time to record an image, because the camera overlays the images. Related Topic Advanced mode Functions available for each shooting mode MENU items available for each shooting mode Back to top Copyright 2013 Sony Corporation 53 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Superior Auto Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Superior Auto The camera combines Scene Recognition and high-quality image technology to automatically shoot the images with the optimal settings. 1. Set the mode switch to (Still Image). (Superior Auto). [Details] 2. Turn the control wheel to select 3. Shoot with the shutter button. The camera shoots burst images when needed and overlays the multiple images.

By overlaying the images, the camera records an image with less subject blur and noises. What is the difference between Superior Auto mode and Intelligent Auto mode? In Superior Auto mode, the camera shoots burst images based on the recognized scene, then creates a composite of the burst images (Overlay shooting). The camera automatically corrects the backlight and reduces the noise by overlaying images, so a higher-quality image results than in Intelligent Auto mode. : Scene Recognition Night Scene Night Portrait Backlight Backlight Portrait Landscape Macro Portrait Infant Spotlight Low Light Tripod Move (Bright) Move (Dark) : Overlaying processing Hand-held Twilight 54 Anti Motion Blur Backlight Correction HDR The camera automatically selects an overlaying mode based on the recognized scene, and the (overlay) appears on the screen.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>

Notes When the camera overlays the images, it takes more time to record an image.

In low light conditions such as night scenes, set [Flash] to [Off] to achieve the optimal effect of the overlaid images. Related Topic Scene Recognition Functions available for each shooting mode MENU items available for each shooting mode Back to top Copyright 2013 Sony Corporation 55 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Background Defocus Before Use Operating the camera

Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 1. Set the mode switch to (Still Image). (Background Defocus). [Details] Background Defocus Allows you to shoot an image with image processing so that the background and the subject stands out.

2. Turn the control wheel to select 3. Shoot with the shutter button. Tips for adjusting the intensity of the background defocus Before shooting, select MENU [Defocus Effect] [High], [Mid] or [Low] to change the intensity of the background defocus effect. Tips for defocusing the background Position of the subject and the background If you shoot an image with the subject and background far apart, as shown in the illustration, the background can be defocused. Shoot from the recommended shooting distance indicated on the screen. Subject is sufficiently removed from the background Subject and background are too close 56 Zoom scale and position of the subject When you shoot a flower and a small item from close up, turn the W/T (zoom) lever to the W side. For shooting people, move a short distance away from the subject and turn the W/T (zoom) lever to the T side. To lock the focus on the subject more easily, use the Tracking focus function of the camera. [Details] Notes When shooting, hold the camera still to reduce camera shake.

If you are unable to defocus effectively, try the following steps: Turn the W/T (zoom) lever to the T side. Approach the subject until you are within the recommended shooting distance. Separate the subject and the background. Shoot after focusing on the subject. Related Topic Defocus Effect Tracking focus Functions available for each shooting mode MENU items available for each shooting mode Back to top Copyright 2013 Sony Corporation 57 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Program Auto Before Use Operating the camera

Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Copyright 2013 Sony Corporation Related Topic Functions available for each shooting mode MENU items available for each shooting mode Back to top Program Auto Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). Also you can select various settings using the menu. 1. Set the mode switch to (Still Image). (Program Auto). [Details] 2. Turn the control wheel to select 3. Shoot with the shutter button. 58 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > 3D Still Image Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Tips for shooting 3D images 3D Still Image Shooting a 3D image. Images recorded using the 3D functions can be played back stereoscopically on a 3D TV. 1.

Set the mode switch to (Still Image). (3D Still Image). [Details] 2. Turn the control wheel to select 3. Shoot with the shutter button. Approach a subject with the subject and background far apart, as shown in the illustration. The 3D effect may not work effectively when the scene is too dark, the subject is moving or you moved the camera after setting the AE/AF lock. If you shoot the image in a dark place, noise may be highly visible. Notes Available image sizes are [18M] (DSC-WX200), [16M] (DSC-WX60/WX80) and [16:9(13M)] (DSCWX200), [16:9(12M)] (DSC-WX60/WX80). The 3D images are played back as standard still images on this camera. Related Topic Functions available for each shooting mode MENU items available for each shooting mode Viewing 3D images on a 3D TV Back to top Copyright 2013 Sony Corporation 59 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Intelligent Sweep Panorama Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 1. Set the mode switch to 2. Select a shooting direction. 3. Align the camera with the end of the subject to be shot and press the shutter button fully.

(iSweep Panorama). Allows you to create a panoramic image from composite images. The camera also automatically detects people's faces or moving subjects. Intelligent Sweep Panorama A: This part will not be recorded. 4. Pan the camera to the end of the guide (B), following the indication on the screen. Tips for shooting a panorama image Pan the camera in an arc at a constant velocity in the direction indicated on the screen. Subjects at rest are more suited for panorama shots than moving subjects. Radius as short as possible. 60 Vertical direction Horizontal direction First, press the shutter button halfway so that you can lock the focus and exposure.

Then, press the shutter button fully down and pan or tilt the camera. If a section with greatly varied shapes or scenery is concentrated along a screen edge, the image composition may fail. In such case, adjust the frame composition so that the section is in the center of the image, then shoot again. To shoot a 360 degree panoramic image This camera is equipped with a panorama shooting function, capable of shooting a near-full 360 degree panoramic image. Shoot a panoramic image by selecting MENU set [Panorama Image Size] to [360°].

Recorded panoramic images can be scrolled accurately when played on the camera. Select a shooting direction with / . You cannot shoot a panoramic image in a vertical direction with [Panorama Image Size] set to [360°]. The image actually recorded may not cover 360 degrees, depending on the subject or the way it is shot. Notes If you cannot pan the camera across the entire subject within the given time, a gray area occurs in the composite image.

If this happens, move the camera faster to record a full panorama image. Since several images are stitched together, the stitched part will not be recorded smoothly. When the whole angle of panoramic shooting and the AE/AF locked angle are very different in brightness, color and focus, the shooting will not be successful.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>

If this happens, change AE/AF locked angle and shoot again. You cannot create panorama images in the following situations: You pan the camera too quickly or too slowly. 61 There is too much camera shake. Related Topic Scrolling the panorama images for display Still Image Size/Panorama Image Size Functions available for each shooting mode MENU items available for each shooting mode Panorama Shooting Scene Picture Effect Back to top Copyright 2013 Sony Corporation 62 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Picture Effect Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list (HDR Painting) Allows you to shoot multiple images with different exposures to create a single image that looks like an oil painting. You can change the effect level using MENU [HDR Painting effect]. Picture Effect Allows you to shoot a still image with an original texture according to the desired effect. 1.

Set the mode switch to 2. MENU (Still Image). (Picture Effect) desired mode (REC Mode) If you want to select other Picture Effect mode, select from MENU. If you want to add an effect to a movie, press the MOVIE (Movie) button after selecting the desired effect. Allows you to shoot multiple images with different exposures to create a single, sharp monochrome image. (Richtone Monochrome) Allows an image to be processed so that it looks as though you were shooting dioramas. One part of the image is blurred for a high-contrast image. You can change the blurred part using MENU [Area of emphasis]. (Miniature) Allows you to shoot images with effects such as tunnel effect, high contrast, or color cast as if they were shot with a toy camera. You can change the color hue using MENU [Color hue].

(Toy camera) 63 Allows you to shoot a pop art-like colorful image with emphasis on the color tone. (Pop Color) Allows you to shoot an image that makes a strong impression by leaving a specified color on portions of a monochrome image. You can select the color to extract using MENU [Extracted Color]. (Partial Color) Allows you to shoot soft, clear images with an emphasis on brightness. (Soft High-key) Allows you to shoot an image with ink bleed and blurring effects as if it painted with watercolors.

(Watercolor) Allows you to shoot an illustration-like image by emphasizing the outlines. You can [Illustration Effect]. change the effect level using MENU (Illustration) To add an effect when shooting panoramic image If you set MENU [Panorama Shooting Scene] [Picture Effect] desired mode, the following Picture Effect modes are effective: [Pop Color] 64 [Partial Color] [Soft High-key] To add an effect to a movie The following Picture Effect modes are effective for movies and the Dual Rec function. [Toy camera] [Pop Color] [Partial Color] [Soft High-key] When the mode switch is set to (Movie Mode), you cannot set the Picture Effect. Related Topic HDR Painting effect Area of emphasis Color hue Extracted Color Illustration Effect Functions available for each shooting mode MENU items available for each shooting mode Panorama Shooting Scene Back to top Copyright 2013 Sony Corporation 65 Cyber-shot User Guide Search Print Top page > Shooting > Selecting the shooting mode based on the subject > Scene Selection Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Allows you to shoot images with a softer atmosphere for portraits and flowers, etc.

(Soft Skin)\* Allows you to shoot faces for smoothness. Scene Selection Allows you to shoot with preset settings according to the scene. 1. When the mode switch is set to (REC Mode) MENU When the mode switch is set to MENU (Still Image): (Scene Selection) (Movie): (Scene Selection) desired mode desired mode (Movie shooting scene) Scene Selection modes with an \* mark are not available for [Scene Selection] in [Movie shooting scene]. (Soft Snap) Allows you to shoot indoor shots without using the flash to reduce subject blur. (Anti Motion Blur)\* Allows easy shooting of distant scenes by focusing in the distance. Shoots the clear sky and trees and flowers in vivid colors. (Landscape) Allows you to shoot three images having different exposures to create a single image with a greater range of gradation. 66 (Backlight Correction HDR)\* Allows you to shoot sharp images of people with the night view in the background without compromising the atmosphere. (Night Portrait)\* Allows you to shoot night scenes at far distance without losing the dark atmosphere of the surroundings.

(Night Scene) Allows you to shoot night scenes with less noise without using a tripod. (Hand-held Twilight)\* Allows you to shoot images without a flash under low light conditions, reducing blur. (High Sensitivity) Allows you to shoot food arrangements in delicious and bright color. (Gourmet)\* Allows you to shoot images of your pet with the best settings. (Pet)\* 67 Allows you to shoot scenes on the beach in bright and vivid colors even under the sunlight. (Beach) Allows you to record clear images preventing sunken colors in snowy scenes or other places where the whole screen appears white. (Snow) Allows you to record fireworks in all their splendor. (Fireworks) Allows you to shoot underwater in natural colors when using the Marine Pack. (Underwater) (DSC-WX200) Notes (Night Portrait), (Night Scene) or (Fireworks) mode, the When you shoot images using shutter speed is slower and the images tend to blur. To prevent blurring, the use of a tripod is recommended.

Related Topic Functions available for each shooting mode MENU items available for each shooting mode Back to top Copyright 2013 Sony Corporation 68 Cyber-shot User Guide Search Print Top page > Viewing > Viewing still images > Viewing still images Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Back to top Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Copyright 2013 Sony Corporation Viewing still images 1. Switch to playback mode. 2. Select an image. Viewing images taken with a different camera If you insert a memory card which has images taken with a different camera, registration screen with the message "Files found which were not recognized Import files" will be displayed.

To view unregistered images, register them by selecting [OK]. 69 Cyber-shot User Guide Search Print Top page > Viewing > Viewing still images > Playback zoom Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list 4.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>



Change the zoom scale with the W/T (zoom) lever. Turn the W/T (zoom) lever to T side ( ) to zoom in, W side ( Playback zoom Enlarges the image being played back. 1.

Switch to playback mode. 2. Turn the W/T (zoom) lever to T side ( ) during still image playback. . The frame in the lower left of the image shows which part of the total image is being displayed. ) to zoom out. To save enlarged images You can save an enlarged image by using the trimming function. [Retouch] [Trimming (Resize)]. Press MENU Back to top Copyright 2013 Sony Corporation 70 Cyber-shot User Guide Search Print Top page > Viewing > Viewing still images > Image Index Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Image Index Displays multiple images at the same time.

1. Switch to playback mode. ) to display the image index screen. 2. Turn the W/T (zoom) lever to the W side ( Turn the lever again to display an index screen with more images. Displaying images of the desired date/folder Select the left side bar, then select the desired date range or folder using / . Viewing images with the Calendar When [View Mode] is set to [Date View] and the screen display is in index mode, turn the W/T (zoom) ) to view images with the Calendar.

lever to W side ( /// : Moves the selection frame to a different date. : Displays the calendar of the next/previous month. / , then the desired month.

To select the month you want to display, select . To view images in selected date in index mode, select the date and press To cancel the calendar display and return to an index screen, select , then press . Back to top Copyright 2013 Sony Corporation 71 Cyber-shot User Guide Search Print Top page > Viewing > Deleting images > Deleting images Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list This Image All Imgs in This Cnt.Sht. Grp.

All but This Image Cancel Multiple Images Deleting images Allows you to select unwanted images for deletion. You can also delete images from the MENU button. [Details] 1. Switch to playback mode. 2.

/(Delete) button . desired mode 3. Press [OK] All Images on This Date All in This Folder All AVCHD view files Deletes all still images and movies in the selected date range or folder, or all AVCHD movies. Allows you to select and delete multiple images. After step 2, select an image to be deleted, then press To cancel the selection, press MENU [OK] again to cancel the . mark. Deletes the currently displayed image. Deletes all images in the selected burst group at once. Deletes all images in a burst group except the selected image in Display Cont. Shooting Group mode.

Cancels the deletion. You can switch between index and single-image mode when selecting images Turn the W/T (zoom) lever to the T side ( ) in index mode to return to single-image mode, and turn ) in single-image mode to return to index mode. the lever to the W side ( Notes When the internal memory is used to record images, View Mode is set to Folder View. To delete images in the internal memory, remove the memory card. Related Topic Delete Back to top 72 Copyright 2013 Sony Corporation 73 Cyber-shot User Guide Search Print Top page > Viewing > Viewing burst images > Viewing burst images Before Use

Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Viewing burst images Tilt playback Unfold You can select the playback method for continuous (burst) shots when [View Mode] is set to [Date View] and [Display Cont. Shooting Group] is set to [Display Main Image Only]. [View Mode] is set to [Date View] and [Display Cont. Shooting Group] is set to [Display Main Image Only] in its default setting. 1. Switch to playback mode.

2. Select the burst images then operate as following. Operation Action Tilt playback Next image Previous image Unfold Tilt playback The burst shots are played back smoothly as a movie. 1. Press to enter the Tilt playback screen.

2. Tilt the camera to the right or left, with the center of the camera as the axis. 3. To exit Tilt playback, execute any operation, such as pressing . 74 Unfold The thumbnails of a series of burst shots are displayed on the bottom of the screen.

A selected image is enlarged. 1. Press to unfold the burst shots. A series of burst shots are displayed in an index. When images are displayed in an index, 2. Press / is displayed on the main image. to display each image in a burst group. . 3. Switch the display between single-image display and index display by pressing 4.

To cancel the display, press . Related Topic View Mode Display Cont. Shooting Group Back to top Copyright 2013 Sony Corporation 75 Cyber-shot User Guide Search Print Top page > Viewing > Viewing movies > Viewing movies Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list Viewing movies Displaying the control panel 1. Switch to playback mode. 2. Select a movie. 3. Press . Movie playback starts. On the movie viewing screen Select the image you want to display using / , and press .

The Playback bar appears, you can check a playback position of a movie. The icon displayed may vary depending on image size and quality. Operation Action during playback Stop Fast forward Fast rewind Frame advance/Frame rewind Displays the control panel To display only movies on the index screen You can view only movie thumbnails on the index screen by pressing MENU (View Mode) (Folder view (MP4)) or (AVCHD view). (Folder view (MP4)): Displays MP4-format movie thumbnails on the index screen. (AVCHD view): Displays AVCHD-format movie thumbnails on the index screen.

76 When a movie file is played back to the end, the camera automatically starts playing back the next movie file. Notes You may not be able to play back some images shot using other cameras. Displaying the control panel Display the control panel, you can control slow movie playback and adjust the volume. 1. Press .

/, and press . The control panel appears. 2. Select a desired button with Control panel Action Playback Pause Fast forward Fast rewind Slow playback Slow rewind playback Chapter advance Chapter rewind Frame advance Frame rewind Volume settings Closes the control panel Notes The buttons on the control panel will vary depending on the playback status. 77 Related Topic View Mode Back to top Copyright 2013 Sony Corporation 78 Cyber-shot User Guide Search Print Top page > Viewing > Viewing panorama images > Scrolling the panorama images for display Before Use Operating the camera Shooting Viewing Useful shooting functions Useful viewing functions Changing settings Viewing images on a TV Using with your computer Printing Troubleshooting Precautions / About this camera Contents list A: Shows the displayed area of the whole panorama image Scrolling the panorama images for display You can scroll panorama images by pressing the center button while panorama images are being displayed.



[You're reading an excerpt. Click here to read official SONY CYBER-SHOT DSC-WX80 user guide](http://yourpdfguides.com/dref/5477861)  
<http://yourpdfguides.com/dref/5477861>

