



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY DSC-HX300/B. You'll find the answers to all your questions on the SONY DSC-HX300/B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY DSC-HX300/B  
User guide SONY DSC-HX300/B  
Operating instructions SONY DSC-HX300/B  
Instructions for use SONY DSC-HX300/B  
Instruction manual SONY DSC-HX300/B

**SONY**

4-457-248-21(1)

Digital Still Camera / Instruction Manual	GB
Cámara fotografía digital / Manual de instrucciones	ES

Cyber-shot



DSC-HX300



[You're reading an excerpt. Click here to read official SONY DSC-HX300/B user guide](http://yourpdfguides.com/dref/547777)  
<http://yourpdfguides.com/dref/547777>

**Manual abstract:**

3 Search for the model name of your camera within the support page. □ Check the model name on the bottom of your camera. @@@@Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product.

**GB WARNING** To reduce fire or shock hazard, do not expose the unit to rain or moisture. **IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS** If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet. **CAUTION** [ Battery pack If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. □ Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it. □ Do not short circuit and do not allow metal objects to come into contact with the battery terminals. □ Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.

**GB 3** • Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack. □ Keep the battery pack out of the reach of small children. □ Keep the battery pack dry. □ Replace only with the same or equivalent type recommended by Sony. □ Dispose of used battery packs promptly as described in the instructions.

[ AC Adaptor Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using the apparatus. The power cord (mains lead), if supplied, is designed specifically for use with this camera only, and should not be used with other electrical equipment. For Customers in the U. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.> [ Battery pack This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003. For Customers in the U. The UL Mark on the product means it has been UL Listed. If you have any questions about this product, you may call: Sony Customer Information Center 1-800-222-SONY (7669). The number below is for the FCC related matters only. : 858-942-2230 **GB** This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

[ CAUTION You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

[ Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

**GB 5** For Customers in Europe [ Notice for the customers in the countries applying EU Directives This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents. This product has been tested and found compliant with the limits set out in the EMC regulation for using connection cables shorter than 3 meters (9. 8 feet).

[ Attention The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [ Notice If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc. ) again. [ Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. the recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. **GB 6** [ Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the GB materials will help to conserve natural resources.



[You're reading an excerpt. Click here to read official SONY DSC-HX300/B user guide](http://yourpdfguides.com/dref/547777)  
<http://yourpdfguides.com/dref/547777>

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Notice for customers in the United Kingdom A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i. e. , marked with an or mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

GB 7 Identifying parts A FOCUS (Focus) button • You can select the focus mode by pressing the FOCUS button when the Zoom/Focus switch is set to AF/ZOOM. □ If you press the FOCUS button when the Zoom/Focus switch is set to MF, the center of the display will be magnified to allow easier focusing. B CUSTOM (Custom) button • You can assign a desired function to the CUSTOM button. the default setting is set to [AEL]. C Shutter button D For shooting: WT (zoom) lever For viewing: (Playback zoom) lever/ (Index) lever E Self-timer lamp/Smile Shutter lamp/AF illuminator F Lens G Flash H (Flash pop-up) button I Hook for shoulder strap J Zoom/Focus switch K Manual ring • When the Zoom/Focus switch is set to AF/ZOOM, turn the manual ring to perform the zoom function.

□ When the Zoom/Focus switch is set to MF, turn the manual ring to adjust the focus. GB 8 L M N O P Q Stereo microphone Viewfinder MOVIE (Movie) button (Playback) button Control button FINDER/LCD button R ON/OFF (Power) button and Power/Charge lamp S Mode dial: (Intelligent Auto)/(Superior Auto)/(Program Auto)/(Aperture Priority Shooting)/(Shutter Speed Priority Shooting)/(Manual Exposure Shooting)/(Memory recall mode)/(iSweep Panorama)/(Movie Mode)/(3D Still Image)/(Scene Selection) T Jog dial U / (In-Camera Guide/Delete) button V MENU button W Finder adjustment dial X Multi/Micro USB Terminal\* Y Connector cover Z HDMI micro jack wj Speaker wk LCD screen wl Battery/Memory card cover e; Battery insertion slot ea Battery eject lever es Access lamp ed Memory card slot ef Tripod receptacle • Use a tripod with a screw less than 5. 5 mm (7/32 inches) long. Otherwise, you cannot firmly secure the camera, and damage to the camera may occur. \* Supports Micro USB compatible device.

GB 9 Inserting the battery pack Battery eject lever 1 Open the cover. 2 Insert the battery pack. Lever, insert the battery pack as • While pressing the battery eject illustrated. Make sure that the battery eject lever locks after insertion. □ Closing the cover with the battery inserted incorrectly may damage the camera. GB 10 Charging the battery pack For customers in the USA and Canada GB Power cord (Mains lead) Power/Charge lamp Lit: Charging Off: Charging finished Flashing: Charging error or charging paused temporarily because the camera is not within the proper temperature range 1 Connect the camera to the AC Adaptor (supplied), using the micro USB cable (supplied). 2 Connect the AC Adaptor to the wall outlet (wall socket). The Power/Charge lamp lights orange, and charging starts. □ Turn off the camera while charging the battery. □ You can charge the battery pack even when it is partially charged.

□ When the Power/Charge lamp flashes and charging is not finished, remove and re-insert the battery pack. GB 11 Notes • If the Power/Charge lamp on the camera flashes when the AC Adaptor is connected to the wall outlet (wall socket), this indicates that charging is temporarily stopped because the temperature is outside the recommended range. When the temperature gets back within the appropriate range, the charging resumes. We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F). □ The battery pack may not be effectively charged if the terminal section of the battery is dirty. In this case, wipe any dust off lightly using a soft cloth or a cotton swab to clean the terminal section of the battery. □ Connect the AC Adaptor (supplied) to the nearest wall outlet (wall socket). If any malfunctions occur while using the AC Adaptor, disconnect the plug from the wall oh facing as illustrated, insert the until it clicks into place. 3 Close the cover. GB 15 x Memory cards that you can use Memory card Memory Stick XC-HG Duo A Memory Stick PRO Duo Memory Stick PRO-HG Duo Memory Stick Duo B C Memory Stick Micro (M2) SD memory card SDHC memory card SDXC memory card microSD memory card D microSDHC memory card microSDXC memory card — (Mark2 only) (Class 4 or faster) (Mark2 only) For still images For movies • In this manual, the products in the table are collectively referred to as follows: A: “Memory Stick Duo” media B: “Memory Stick Micro” media C: SD card D: microSD memory card Notes • To use a “Memory Stick Micro” media or microSD memory card with the camera, be sure to insert it into a dedicated adaptor first.

X To remove the memory card/battery pack Memory card: Push the memory card in once to eject the memory card. battery pack: Slide the battery eject lever. Be sure not to drop the battery pack. Notes • Never remove the memory card/battery pack when the access lamp (page 8) is lit. This may cause damage to data in the memory card/internal memory.

gB 16 Setting the clock ON/OFF (Power) button Control button GB Select items: v/V/b/B Set: z the 1 PressTime ON/OFF (Power) button. On the camera for the first Date & setting is displayed when you turn time. □ It may take time for the power to turn on and allow operation. By following the on-screen instructions, then & Time Format], [Daylight Savings] or 4 Set [Date Time] and [Date & Time], then select [OK] t [Summer [OK]. 5 Follow the pack will run out on the when: • The battery quickly – [Disp.

resolution] is set to [High]. GB 17 Shooting still images/movies W: zoom out T: zoom in Shutter button Mode dial : Intelligent Auto : Movie Mode MOVIE Shooting still images button halfway down to focus. 1 Press the shutterfocus, a beep sounds and the z indicator lights.



[You're reading an excerpt. Click here to read official SONY DSC-HX300/B user guide](http://yourpdfguides.com/dref/5477777)

<http://yourpdfguides.com/dref/5477777>

When the image is in 2 Press the shutter button fully down to shoot an image. Shooting movies (Movie) button to 1 Press the MOVIE lever to change the zoom start recording. • Use the W/T (zoom) scale. □ Press the shutter button to shoot still images while continuing to record the movie. 2 Press the MOVIE button again to stop recording. GB 18 Notes • If you use the zoom function while shooting a movie, the sounds of the lens moving and the lever, jog dial, and manual ring being operated will be recorded. The sound of the MOVIE button operating may also be recorded when movie recording is finished.

□ The panoramic shooting range may be reduced, depending on the subject or the way it is shot. Therefore even when [360°] is set for panoramic shooting, the recorded image may be less than 360 degrees. □ Continuous shooting is possible for approximately 29 minutes at one time at the GB camera's default settings and when the temperature is approximately 25°C (77°F). When movie recording is finished, you can restart recording by pressing the MOVIE button again. Recording may stop to protect the camera depending on the ambient temperature. Viewing images Jog dial W: zoom out T: zoom in Control button (Playback) / (Delete) Select images: B (next)/b (previous) or turn the jog dial Set: z the 1 Press images on (Playback) button. With other cameras are played • When a memory card recorded back on this camera, the registration screen for the data file appears. @@ Press z in the center of the control button to view movies. gB 19 x Deleting an image 1 Press / (Delete) button. 2 Select [This Image] with v on the control button, then press z. X Returning to shooting images Press the shutter button halfway down. In-Camera Guide This camera contains an internal function guide. @@ mMENU / (In-Camera Guide) 1 Press the MENU button. 2 Select the desired MENU item, then press the Camera Guide button. / (In-Camera Guide) The operation guide for the selected item is displayed.

@@@ While displaying the guide, try the other functions. @@ / (Cont. @@ (Photo Creativity): Allows you to operate the camera intuitively. (Flash): Allows you to select a flash mode for still images. @@ press the jog dial to select an item.

Turn the jog dial to change the setting value. @@@ select recording mode when shooting panoramic images. @@ select pre-set settings to match various scene conditions. @@ Shoot still images using minimal functions. @@ Set the still image size shot while recording a movie. @@@@ When [Toy camera] is selected in Picture Effect, sets the color hue. @@@@ adjust color tones of an image. @@ 22 Metering Mode Cont. @@ Select the number of images taken per second for Burst shooting. Set the type of the bracket shooting.

set to automatically detect shooting conditions. Set the Soft Skin Effect and the effect level. Set to automatically release the shutter when a smile is detected. Set the Smile Shutter function sensitivity for detecting smiles. Select the vividness of the image, accompanied by effects. Adjust the vividness of the image. Adjust the contrast of the image. Adjust the sharpness of the image. Adjust the image resolution and the noise balance. @@ set the strength of SteadyShot in Movie Mode.

@@ register the desired modes or camera settings. Set the mode dial to (Memory recall mode) to retrieve the registered settings. Search the camera's functions according to your needs. gB Movie SteadyShot Register Setting In-Camera Guide GB 23 Viewing Retouch Picture Effect Slideshow Delete 3D Viewing View Mode Display Cont. Shooting Group Protect Print (DPOF) Rotate In-Camera Guide Retouch an image using various effects. Set to play back images shot in 3D mode on a 3D TV. Select the display format for images. Search the camera's functions according to your needs. X Setting items If you press the MENU button while shooting or during playback, (Settings) is provided as a final selection. You can change the default settings on the (Settings) screen.

Folder/Copy/File Number Area Setting/Date & Time Setting Clock Settings \*1 GB \*2 If Shooting Settings Main Settings Memory Card \*2 Tool 24 Displayed only when an Eye-Fi memory card is inserted. A memory card is not inserted, (Internal Memory Tool) will be displayed and only [Format] can be selected.

Features of "PlayMemories Home" The software "PlayMemories Home" allows you to import still images and movies to your computer and use them. □ PlayMemories Home" is required for importing AVCHD movies to your computer. Viewing images on Calendar Sharing images on "PlayMemories Online" Importing images from your camera GB Creating movie discs Uploading images to network services z Downloading "PlayMemories Home" (for Windows only) You can download "PlayMemories Home" from the following URL: www. □ An Internet connection is required to use "PlayMemories Online" or other network services. □ PlayMemories Online" or other network services may not be available in some countries or regions. □ "PlayMemories Home" is not compatible with Macs. Use the applications that are installed on your Mac. For details, visit the following URL: <http://www>.

Jp/imsoft/Mac/ GB 25 x Installing "PlayMemories Home" on a computer Internet browser on your 1 Using the URL, then click [Install] t computer, go to the following [Run]. Net/pm instructions 2 Follow the complete the on the screen to installation. □ When the message to connect the camera to a computer is displayed, connect the camera and computer using To a USB jack the micro USB cable (supplied). To the Multi/Micro USB Terminal x Viewing "PlayMemories Home Help Guide" For details on how to use "PlayMemories Home", refer to the "PlayMemories Home Help Guide". 1 Double-click the [PlayMemories Home Help Guide] icon on the desktop. □ To access the "PlayMemories Home Help Guide" from the start menu: Click [Start] t [All Programs] t [PlayMemories Home] t [PlayMemories Home Help Guide]. □ For Windows 8, select the [PlayMemories Home] icon from the Start screen to start [PlayMemories Home], then select [PlayMemories Home Help Guide] from [Help] menu. □ For details on "PlayMemories Home", you can also see the "Cyber-shot User Guide" (page 2) or the following PlayMemories Home support page (English only): <http://www.jp/pmh-se/> GB 26 Number of still images and recordable time of movies The number of still images and recordable time may vary depending on the shooting conditions and the memory card. x Still images (Units: Images) GB Capacity Size 20M VGA 16:9(15M) Internal memory Approx.

48 MB 7 155 8 Memory card 2 GB 295 6400 325 x Movies The table below shows the approximate maximum recording times. These are the total times for all movie files. Continuous shooting is possible for approximately 29 minutes (a product specification limit). The maximum continuous recording time of an MP4 (12M) format movie is about 15 minutes (limited by the 2 GB file size restriction).



[You're reading an excerpt. Click here to read official SONY DSC-HX300/B user guide](http://yourpdfguides.com/dref/5477777)  
<http://yourpdfguides.com/dref/5477777>

(h (hour) , m (minute)) Capacity Size AVC HD 28M (PS) AVC HD 24M (FX) AVC HD 9M (HQ) MP4 12M MP4 3M Internal memory Approx. 48 MB — — — — — Memory card 2 GB 8m (8 m) 10 m (10 m) 25 m (15 m) 15 m 1 h 10 m The number in ( ) is the minimum recordable time. □ The recordable time of movies varies because the camera is equipped with VBR (Variable Bit Rate), which automatically adjusts image quality depending on the shooting scene. When you record a fast-moving subject, the image is clearer but the recordable time is shorter because more memory is required for recording. GB 27 The recordable time also varies depending on the shooting conditions, the subject or the image quality/size settings. Notes on using the camera Functions built into this camera • This manual describes each of the functions of 1080 60i-compatible devices and 1080 50i-compatible devices. To check if your camera is a 1080 60i-compatible device or 1080 50i-compatible device, check for the following marks on the bottom of the camera. 1080 60i-compatible device: 60i 1080 50i-compatible device: 50i • This camera is compatible with 1080 60p or 50p-format movies. Unlike standard recording modes up to now, which record in an interlacing method, this camera records using a progressive method. This increases the resolution, and provides a smoother, more realistic image. □ Do not watch 3D images shot with this camera for extended periods of time on 3D-compatible monitors. □ When you view 3D images shot with this camera on a 3D-compatible monitor, you may experience discomfort in the form of eye strain, fatigue, or nausea. To prevent these symptoms, we recommend that you take regular breaks. However, you need to determine for yourself the length and frequency of breaks you require, as they vary according to the individual. If you experience any type of discomfort, stop viewing the 3D images until you feel better, and consult a physician as necessary. Also refer to the operating instructions supplied with the device or software you have connected or are using with this camera.

Note that a child's eyesight is still at the development stage (particularly children below the age of 6). Consult a pediatrician or ophthalmologist before letting your child view 3D images, and make sure he/she observes the above precautions when viewing such images. On use and care Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping, or stepping on the product. Be particularly careful of the lens. GB 28 Notes on recording/playback • Before you start recording, make a trial recording to make sure that the camera is working correctly. □ The camera is neither dust-proof, nor splash-proof, nor water-proof. • Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired. □ Do not aim the camera at the sun or other bright light.

It may cause the malfunction of the camera. □ If moisture condensation occurs, remove it before using the camera. GB • Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged. Do not use/store the camera in the following places • In an extremely hot, cold or humid place In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction. □ Under direct sunlight or near a heater The camera body may become discolored or deformed, and this may cause a malfunction. □ In a location subject to rocking vibration • Near a location that generates strong radio waves, emits radiation or is strongly magnetic place. Otherwise, the camera may not properly record or play back images. □ In sandy or dusty places Be careful not to let sand or dust get into the camera.

This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired. Carl Zeiss lens The camera is equipped with a Carl Zeiss lens which is capable of reproducing sharp images with excellent contrast. The lens for the camera has been produced under a quality assurance system certified by Carl Zeiss in accordance with the quality standards of Carl Zeiss in Germany. Notes on the screen and lens The screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the screen. These dots are a normal result of the manufacturing process, and do not affect the recording. On camera's temperature Your camera and battery may get hot due to continuous use, but it is not a malfunction. GB 29 On the overheat protection Depending on the camera and battery temperature, you may be unable to record movies or the power may turn off automatically to protect the camera. A message will be displayed on the screen before the power turns off or you can no longer record movies.

In this case, leave the power off and wait until the camera and battery temperature goes down. If you turn on the power without letting the camera and battery cool enough, the power may turn off again or you may be unable to record movies. On charging the battery If you charge a battery that has not been used for a long time, you may be unable to charge it to the proper capacity. This is due to the battery characteristics, and is not a malfunction. charge the battery again. Warning on copyright Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws. No compensation for damaged content or recording failure Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc. @@@@ If you get any on the screen, wipe it off immediately. @@ □ If fingerprints or debris are stuck to the screen, we recommend that you gently remove any debris and then wipe the screen clean with a soft cloth.

Note on disposal/transfer of the camera To protect personal data, perform the following when disposing of or transferring the camera. □ Format the internal memory (page 24), record images up to full capacity of the internal memory with the lens covered, and then format the internal memory again. This will make it difficult to recover any of your original data. 264 Audio: Dolby Digital 2ch, equipped with Dolby Digital Stereo Creator • Manufactured under license from Dolby Laboratories. 48 MB), "Memory Stick Duo" media, "Memory Stick Micro" media, SD cards, microSD memory cards Flash: Flash range (ISO sensitivity (Recommended Exposure Index) set to Auto): Approx.

7 oz) For countries or regions other than the USA and Canada: Approx. 0 type) TFT drive Total number of dots: 921 600 dots [Power, general] Power: Rechargeable battery pack NP-BX1, 3.



[You're reading an excerpt. Click here to read official SONY DSC-HX300/B user guide](http://yourpdfguides.com/dref/547777)  
<http://yourpdfguides.com/dref/547777>

3 W (during shooting with the LCD screen) Approx. 1. 1 W (during shooting with the viewfinder) Operating temperature: 0 °C to 40 °C (32 °F to 104 °F)  
Storage temperature: -20 °C to +60 °C (-4 °F to +140 °F) Dimensions (CIPA compliant): 129.

5 Wh (1 240 mAh) Design and specifications are subject to change without notice. 32 Trademarks • The following marks are trademarks of Sony Corporation, "Cyber-shot," "Memory Stick XC-HG Duo," "Memory Stick PRO Duo," "Memory Stick PRO-HG Duo," "Memory Stick Duo," "Memory Stick Micro" • "AVCHD Progressive" and "AVCHD Progressive" logotype are trademarks of Panasonic Corporation and Sony Corporation. □ The terms HDMI and HDMI HighDefinition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. □ Windows is registered trademark of Microsoft Corporation in the United States and/or other countries. □ Facebook and the "f" logo are trademarks or registered trademarks of Facebook, Inc. □ YouTube and the YouTube logo are trademarks or registered trademarks of Google Inc. □ In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the ™ or ® marks are not used in all cases in this manual. □ Add further enjoyment with your PlayStation 3 by downloading the application for PlayStation 3 from PlayStation Store (where available).

) • The application for PlayStation 3 requires PlayStation Network account and application download, accessible in areas where the PlayStation Store is available. GB Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website. Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink. .



[You're reading an excerpt. Click here to read official SONY DSC-HX300/B user guide](#)  
<http://yourpdfguides.com/dref/547777>