



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY DSC-HX300. You'll find the answers to all your questions on the SONY DSC-HX300 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY DSC-HX300
User guide SONY DSC-HX300
Operating instructions SONY DSC-HX300
Instructions for use SONY DSC-HX300
Instruction manual SONY DSC-HX300



<http://www.sony.net/SonyInfo/Support/>

DSC-HX300

SONY.

4-457-248-51(1)

 
Digital Still Camera / Instruction Manual	GB
Appareil photo numérique / Mode d'emploi	FR
Fotocamera digitale / Istruzioni per l'uso	IT
Cámara fotográfica digital / Manual de instrucciones	ES
Câmara fotográfica digital / Manual de instruções	PT
Digitale Fotokamera / Gebrauchsanleitung	DE
Digitale camera / Gebruiksaanwijzing	NL
Cyfrowy aparat fotograficzny / Instrukcja obsługi	PL
Digitální fotoaparát / Návod k obsluze	CZ
Digitális fényképezőgép / Használati útmutató	HU
Digitálny fotoaparát / Návod na používanie	SK
Digitál stillbildkamera / Handledning	SE
Digitalkamera / Käyttöopas	FI
Digitall stillkamera / Bruksanvisning	NO
Digitall stillbildkamera / Betjeningsvejledning	DK
Digitálni fotoaparát / Priručnik za upotrebu	HR
Aparat foto digital / Manual de instrucțiuni	RO
Ψηφιακή φωτογραφική μηχανή / Εγχειρίδιο οδηγιών	GR

©2013 Sony Corporation Printed in China



4457248510

Cyber-shot



DSC-HX300



[You're reading an excerpt. Click here to read official SONY DSC-HX300 user guide](#)

<http://yourpdfguides.com/dref/5052923>

Manual abstract:

3 Search for the model name of your camera within the support page. □ Check the model name on the bottom of your camera. @@@@Record the serial number in the space provided below. @@ _____ GB WARNING To reduce fire or shock hazard, do not expose the unit to rain or moisture. **IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS** If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet. CAUTION [Battery pack If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. □ Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it. @@@@□ Keep the battery pack out of the reach of small children. □ Keep the battery pack dry. □ Replace only with the same or equivalent type recommended by Sony. @@ [AC Adaptor Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using the apparatus. The power cord (mains lead), if supplied, is designed specifically for use with this camera only, and should not be used with other electrical equipment. For Customers in the U. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.> [Battery pack This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003. For Customers in the U.

The UL Mark on the product means it has been UL Listed. If you have any questions about this product, you may call: Sony Customer Information Center 1-800-222-SONY (7669). The number below is for the FCC related matters only. : 858-942-2230 This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. GB [CAUTION You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. [Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver. □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. GB 5 For Customers in Europe [Notice for the customers in the countries applying EU Directives This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents. [

Attention The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [Notice If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again. [Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste.) again. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. the recycling of materials will help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. GB 6 [Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are GB added if the battery contains more than 0. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery.

The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i. e. , marked with an or mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station. GB 7 Identifying parts A FOCUS (Focus) button • You can select the focus mode by pressing the FOCUS button when the Zoom/Focus switch is set to AF/ZOOM.



[You're reading an excerpt. Click here to read official SONY DSC-HX300 user guide](http://yourpdfguides.com/dref/5052923)

<http://yourpdfguides.com/dref/5052923>

charge the battery again. Warning on copyright Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws. @@@@If you get any on the screen, wipe it off immediately.

@@@Note on disposal/transfer of the camera To protect personal data, perform the following when disposing of or transferring the camera. □ Format the internal memory (page 24), record images up to full capacity of the internal memory with the lens covered, and then format the internal memory again. This will make it difficult to recover any of your original data. 264 Audio: Dolby Digital 2ch, equipped with Dolby Digital Stereo Creator • Manufactured under license from Dolby Laboratories. 48 MB), "Memory Stick Duo" media, "Memory Stick Micro" media, SD cards, microSD memory cards Flash: Flash range (ISO sensitivity (Recommended Exposure Index) set to Auto): Approx. 7 oz) For countries or regions other than the USA and Canada: Approx. @3 W (during shooting with the LCD screen) Approx. 1. @@@@, "Cyber-shot," "Memory Stick XC-HG Duo," "Memory Stick PRO Duo," "Memory Stick PRO-HG Duo," "Memory Stick Duo," "Memory Stick Micro" • "AVCHD Progressive" and "AVCHD Progressive" logotype are trademarks of Panasonic Corporation and Sony Corporation. □ The terms HDMI and HDMI HighDefinition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

□ Windows is registered trademark of Microsoft Corporation in the United States and/or other countries. □ Facebook and the "f" logo are trademarks or registered trademarks of Facebook, Inc. □ YouTube and the YouTube logo are trademarks or registered trademarks of Google Inc. □ In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the ™ or ® marks are not used in all cases in this manual. □ Add further enjoyment with your PlayStation 3 by downloading the application for PlayStation 3 from PlayStation Store (where available.) • The application for PlayStation 3 requires PlayStation Network account and application download. accessible in areas where the PlayStation Store is available. GB Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website. Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

X Uppladdning genom att ansluta kameran till en dator Batteriet går att ladda upp genom att ansluta kameran till en dator med hjälp av en mikro-USB-kabel.

□ Om man ansluter kameran till en dator med hjälp av mikro-USB-kabeln medan kameran är i uppspelningsläge, ändras skärmen på kameran från uppspelningsskärmen till USB-anslutningsskärmen. 2 Sätt in ditt minneskort i kamerans minneskortsluck på det sätt som visas i figuren • Håll minneskortet med det och stick in det tills det klickar till på plats. Används för att lägga till olika sorters textur till bilder. 264 Ljud: MPEG-4 AAC-LC 2-kanaler Inspelningsmedia:

Internminne (ungefär 48 MB), "Memory Stick Duo", "Memory Stick Micro", SDkort, microSD-minneskort Blixt: Blixtomfång (ISO-känslighet (Rekommenderat exponeringsindex) inställd på Auto): Ungefär 0,5 m till 8,5 m (W)/ Ungefär 2,4 m till 3,5 m (T) [In- och utgångar] HDMI-anslutning: HDMI-mikrouttag Multi/mikro-USB-terminal*: USB-kommunikation USB-kommunikation: Hi-Speed USB (USB 2.

0) * Stöder Mikro-USB-kompatibla enheter. SE 30 [Skärm] LCD-skärm: 7,5 cm (3,0-typ) TFT-enhet Totalt antal punkter: 921 600 punkter Nätadapter AC-UB10/UB10B/ UB10C/UB10D Strömkrav: 100 V till 240 V växelström, 50 Hz/60 Hz, 70 mA Utpänning: 5 V likström, 0,5 A Driftstemperatur: 0 °C till 40 °C Förvaringstemperatur: -20 °C till +60 °C Mått: Ungefär. □ Der gives ingen garanti for opladning med en specialbygget eller modificeret computer. Setaji modul de măsurare care determină care parte a subiectului va fi măsurată pentru a se stabili expunerea. Folder REC/Copiază/Număr fișier Setare zonă/Setare dată și oră Setări oră *1Afișat *2Dacă Setări fotografiere Setări principale Instrument card de *2 memorie doar când este introdus un card de memorie Eye-Fi.



[You're reading an excerpt. Click here to read official SONY DSC-HX300 user guide](http://yourpdfguides.com/dref/5052923)

<http://yourpdfguides.com/dref/5052923>