



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY DSX-A60BT. You'll find the answers to all your questions on the SONY DSX-A60BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY DSX-A60BT  
User guide SONY DSX-A60BT  
Operating instructions SONY DSX-A60BT  
Instructions for use SONY DSX-A60BT  
Instruction manual SONY DSX-A60BT

**SONY.** 4-468-990-11(1)

FM/MW/LW  
Digital Media  
Player

Operating Instructions	GB
Bedienungsanleitung	DE
Mode d'emploi	FR
Istruzioni per l'uso	IT
Gebruiksaanwijzing	NL

—  
—

To cancel the demonstration (DEMO) display, see page 19.  
Zum Deaktivieren der Demo-Anzeige (DEMO) schlagen Sie bitte auf Seite 21 nach.  
Pour annuler la démonstration (DEMO), reportez-vous à la page 21.  
Per annullare la dimostrazione (DEMO), vedere pagina 21.  
Om de demonstratie (DEMO) te annuleren, zie pagina 21.

Made for  
iPod iPhone Bluetooth®

DSX-A60BT



[You're reading an excerpt. Click here to read official SONY DSX-A60BT user guide](http://yourpdfguides.com/dref/5585396)  
<http://yourpdfguides.com/dref/5585396>

**Manual abstract:**

hereby, Sony Corp., declares that this DSXA60BT is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.De/Italy>: Use of the RLAN network is governed: □ with respect to private use, by the Legislative Decree of 1. 105 indicates when free use is permitted; □ with respect to the supply to the public of the RLAN access to telecom networks and services, by the Ministerial Decree 28. 25 (general authorization for electronic communications networks and services) of the Code of electronic communications. Norway:

Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of NyAlesund, Svalbard. Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely.

2GB Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. notes on BLUETOOTH function Caution IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE. Note on the lithium battery Do not expose the battery to excessive heat such as direct sunlight, fire or the like. Warning if your car's ignition has no ACC position Be sure to set the AUTO OFF function (page 19).

The unit will shut off completely and automatically in the set time after the unit is turned off, which prevents battery drain. If you do not set the AUTO OFF function, press and hold OFF until the display disappears each time you turn the ignition off. iMPORTANT NOTICE! Safe and efficient use Changes or modifications to this unit not expressly approved by Sony may void the user's authority to operate the equipment. Please check for exceptions, due to national requirement or limitations, in usage of BLUETOOTH equipment before using this product. Driving Check the laws and regulations on the use of cellular phones and handsfree equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require. Connecting to other devices When connecting to any other device, please read its user guide for detailed safety instructions. 3GB Radio frequency exposure RF signals may affect improperly installed or inadequately shielded electronic systems in cars, such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems or air bag systems. For installation or service of this device, please consult with the manufacturer or its representative of your car. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to this device.

Consult with the manufacturer of your car to ensure that the use of your cellular phone in the car will not affect its electronic system. Check regularly that all wireless device equipment in your car is mounted and operating properly. Emergency calls This BLUETOOTH car handsfree and the electronic device connected to the handsfree operate using radio signals, cellular, and landline networks as well as userprogrammed function, which cannot guarantee connection under all conditions. Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies). Remember, in order to make or receive calls, the handsfree and the electronic device connected to the handsfree must be switched on in a service area with adequate cellular signal strength. Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. 26 Listening to the Radio Listening to the Radio . O (browse) (page 15) Enter the browse mode during playback. Press and hold more than 2 seconds to switch the BLUETOOTH signal. -OFF Press and hold for 1 second to turn off the power.

Press and hold for more than 2 seconds to turn off the power and the display. If the unit is turned off and the display disappears, it is unable you to operate with the remote. /□ (prev/next), □/□ (reverse/fast-forward) □ Receptor for the remote commander □ AF (alternative frequencies)/TA (traffic announcement) Set AF and TA in RDS. Call a stored phone number. Remove the insulation film before use.

Detaching the Front Panel You can detach the front panel of this unit to prevent theft. 1 2 Rotate the control dial to select [CLOCK-ADJ], then press it. The unit is turned off. Press □, then remove the panel by pulling it towards you. Rotate the control dial to set the hour and minute.

The setup is complete and the clock starts. to display the clock, press DSPL. Caution alarm If you turn the ignition switch to the OFF position without detaching the front panel, the caution alarm will sound for a few seconds. The alarm will only sound if the built-in amplifier is used. Preparing a BLUETOOTH Device You can enjoy music, or perform handsfree calling, by connecting a suitable BLUETOOTH device. For details on connecting, refer to the operating instructions supplied with the device. Before connecting the device, turn down the volume of this unit; otherwise, loud sound may result.

Attaching the front panel 8GB Pairing and connecting with a BLUETOOTH device When connecting a BLUETOOTH device (cellular phone, audio device, etc.) for the first time, mutual registration (called "pairing") is required.



**[You're reading an excerpt. Click here to read official SONY DSX-A60BT user guide](http://yourpdfguides.com/dref/5585396)**

<http://yourpdfguides.com/dref/5585396>

Pairing enables this unit and other devices to recognize each other.

\* Passkey may be called "passcode," "PIN code," "PIN number" or "Password," etc. 6 1 2 Place the BLUETOOTH device within 1 m (3 ft) of this unit. Press CALL, rotate the control dial to select [PAIRING], then press it. Select this unit on the BLUETOOTH device to establish the BLUETOOTH connection. Or lights up when the connection is made. Note While connecting to a BLUETOOTH device, this unit cannot be detected from another device. To enable detection, enter the pairing mode and search for this unit from another device. 3 4 Perform pairing on the BLUETOOTH device so it detects this unit. Select [Sony Automotive] shown in the display of the BLUETOOTH device. If [Sony Automotive] does not appear, repeat from step 2.

To cancel pairing Perform step 2 to cancel the pairing mode after this unit and the BLUETOOTH device are paired. Connecting with a paired BLUETOOTH device To use a paired device, connection with this unit is required. 1 Press CALL, rotate the control dial to select [BT SIGNAL], then press it. 9GB Make sure that lights up. 2 3 Activate the BLUETOOTH function on the BLUETOOTH device.

Operate the BLUETOOTH device to connect to this unit. or lights up. Connecting an iPod/iPhone, use the USB connection cable for iPod (not supplied). iPod/USB device to the unit. To connect an iPod/iPhone, use the USB connection cable for iPod (not supplied).

When connecting an iPhone Icons in the display: Lights up when a cellular phone is connected to the unit. Lights up when an audio device is connected to the unit. To connect the last-connected device from this unit Activate the BLUETOOTH function on the BLUETOOTH device. Press (handsfree) to connect with the cellular phone, or PAUSE to connect with the audio device. Note While streaming BLUETOOTH audio, you cannot connect from this unit to the cellular phone. Connect from the cellular phone to this unit instead. connecting Other Portable Audio Device 1 2 3 Turn off the portable audio device. Turn down the volume on the unit. Connect the portable audio device to the AUX input jack (stereo mini jack) on the unit with a connecting cord (not supplied)\*. \* Be sure to use a straight type plug.

Tip With BLUETOOTH signal on: when the ignition is turned to on, this unit reconnects automatically to the last-connected cellular phone. 10GB Listening to the Radio Listening to the Radio To listen to the radio, press SOURCE to select [TUNER]. 4 Press SOURCE to select [AUX]. Storing automatically (BTM) To match the volume level of the connected device to other sources Start playback of the portable audio device at a moderate volume, and set your usual listening volume on the unit. Rotate the control dial to select [BTM], then press it. The unit stores stations in order of frequency on the number buttons. To tune manually Press and hold SEEK +/- to locate the approximate frequency, then press SEEK +/- repeatedly to fine adjust to the desired frequency. to tune automatically Press SEEK +/- Scanning stops when the unit receives a station. Repeat this procedure until the desired station is received.

11GB Storing manually To receive emergency announcements With AF or TA on, emergency announcements will automatically interrupt the currently selected source. 1 While receiving the station that you want to store, press and hold a number button (1 to 6) until [MEM] appears. When adjusting the volume level during a traffic announcement Level will be stored into memory for subsequent traffic announcements, independently from the regular volume level. Receiving the stored stations 1 Select the band, then press a number button (1 to 6). To stay with one regional program (REGIONAL) When the AF and REGIONAL functions are on, you will not be switched to another regional station with a stronger frequency.

If you leave this regional program's reception area, set [REG-OFF] in the general setup during FM reception (page 20). This function does not work in the UK and some other areas. Using Radio Data System (RDS) Setting alternative frequencies (AF) and traffic announcement (TA) AF continuously retunes the station to the strongest signal in a network, and TA provides current traffic information or traffic programs (TP) if received. Local Link function (UK only) This function enables you to select other local stations in the area, even if they are not stored on your number buttons. During FM reception, press a number button (1 to 6) on which a local station is stored.

Within 5 seconds, press again a number button of the local station. Repeat this procedure until the local station is received. 1 Press AF/TA to select [AF-ON], [TAON], [AF/TA-ON] or [AF/TA-OFF]. To store RDS stations with the AF and TA setting You can preset RDS stations along with an AF/TA setting. Set AF/TA, then store the station with BTM or manually. If you preset manually, you can also preset non-RDS stations. 12GB 2 Rotate the control dial until the desired program type appears, then press it. The ur details, see "Preparing a BLUETOOTH Device" (page 8). Rotate the control dial to select the desired item, then press it. playback starts.

Receiving a Call 1 Press (handsfree) when a call is received with a ringtone. The phone call starts. Note The ringtone and talker's voice are output only from the front speakers. To reject the call Press and hold OFF for 1 second. to end the call Press (handsfree) again. 16GB Making a Call You can make a call from the phonebook or call history when a cellular phone supporting PBAP (Phone Book Access Profile) is connected. Calling by phone number input 1 2 Press CALL, rotate the control dial to select [DIAL NUM], then press it. Rotate the control dial to enter the phone number, and lastly select [ ] (space), then press (handsfree)\*. The phone call starts. \* To move the digital indication, press SEEK +/-.

Calling from the phonebook 1 2 3 4 Press CALL, rotate the control dial to select [PH BOOK], then press it. Rotate the control dial to select an initial from the initial list, then press it. Rotate the control dial to select a name from the name list, then press it. Rotate the control dial to select a number from the number list, then press it. The phone call starts.

Note [\_] appears instead of [#] on the display. Calling by redial 1 Press CALL, rotate the control dial to select [REDIAL], then press it. The phone call starts. Presetting phone numbers You can store up to 6 contacts in the preset dial. 1 Calling from the call history 1 2 Press CALL, rotate the control dial to select [RECENT], then press it.

A list of the call history appears. Select a phone number that you want to store in the preset dial, from the phonebook, call history or by inputting the phone number directly. The phone number appears in the display of this unit. Rotate the control dial to select a name or phone number from the call history, then press it. The phone call starts. 2 Press and hold a number button (1 to 6) until [MEM] appears.



[You're reading an excerpt. Click here to read official SONY DSX-A60BT user guide](http://yourpdfguides.com/dref/5585396)  
<http://yourpdfguides.com/dref/5585396>



7 kg (1 lb 9 oz) Package contents: Main unit (1) Remote commander (1): RM-X231 Parts for installation and connections (1 set) Optional accessories/equipment: USB connection cable for iPod: RC-100IP Wireless Communication System: BLUETOOTH Standard version 2. 5 PBAP (Phone Book Access Profile) \*1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna (aerial)'s performance, operating system, software application, etc. \*2 BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices. Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information. Design and specifications are subject to change without notice. 25GB Copyrights The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners. Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Use of this trademark is subject to Google Permissions. Troubleshooting The following checklist will help you remedy problems you may encounter with your unit.

Before going through the checklist below, check the connection and operating procedures. For details on using the fuse and removing the unit from the dashboard, refer to the installation/connections manual supplied with this unit. If the problem is not solved, visit the support site on the back cover. General No power is being supplied to the unit. <sup>^</sup>If the unit is turned off and the display disappears, the unit cannot be operated with the remote commander. <sup>^</sup>The position of the fader control [FADER] is not set for a 2-speaker system. no beep sound. <sup>^</sup>An optional power amplifier is connected and you are not using the built-in amplifier. The contents of the memory have been erased. <sup>^</sup>The power supply lead or battery has been disconnected or not connected properly. Stored stations and correct time are erased. the fuse has blown. Makes a noise when the position of the ignition is switched. <sup>^</sup>The leads are not matched correctly with the car's accessory power connector. 26GB During playback or reception, the demonstration mode starts. <sup>^</sup>If no operation is performed for 5 minutes with [DEMO-ON] set, the demonstration mode starts.  Set [DEMO-OFF] (page 19). The display disappears from/does not appear in the display window.  Press OFF on the unit until the display appears. <sup>^</sup>The station does not specify the program type. [PI SEEK] appears and the unit starts searching for another frequency with the same PI (program identification) data.  Check the connection of the car antenna (aerial).  If the auto antenna (aerial) will not extend, check the connection of the power antenna (aerial) control lead. USB playback You cannot play back items via a USB hub.  This unit cannot recognize USB devices via a USB hub. A USB device takes longer to play back. <sup>^</sup>The USB device contains files with a complicated tree structure. the sound is intermittent. <sup>^</sup>The sound may be intermittent at a high-bitrate of more than 320 kbps. RDS The SEEK starts after a few seconds of listening.

<sup>^</sup>The station does not broadcast any traffic announcements despite being TP.  Tune in another station. BLUETOOTH function The connecting device cannot detect this unit. <sup>^</sup>Before the pairing is made, set this unit to pairing standby mode. <sup>^</sup>While connected to a BLUETOOTH device, this unit cannot be detected from another device.  Disconnect the current connection and search for this unit from another device. <sup>^</sup>When the device pairing is made, set the BLUETOOTH signal output to on (page 9). 27GB Connection is not possible. <sup>^</sup>The connection is controlled from one side (this unit or BLUETOOTH device), but not both.  Connect to this unit from a BLUETOOTH device or vice versa.

The name of the detected device does not appear. <sup>^</sup>Depending on the status of the other device, it may not be possible to obtain the name. no ringtone. <sup>^</sup>Adjust the volume by rotating the control dial while receiving a call. <sup>^</sup>Depending on the connecting device, the ringtone may not be sent properly.  Set [RINGTONE] to [1] (page 21). <sup>^</sup>The front speakers are not connected to the unit.  Connect the front speakers to the unit. The ringtone is output only from the front speakers. The talker's voice cannot be heard. <sup>^</sup>The front speakers are not connected to the unit.  Connect the front speakers to the unit. The talker's voice is output only from the front speakers. A call partner says that the volume is too low or high. <sup>^</sup>Adjust the volume accordingly using mic gain adjustment (page 18). Echo or noise occurs in phone call conversations. <sup>^</sup>If the ambient noise other than the phone call sound is loud, try reducing this noise. : If a window is open and road noise, etc., is loud, shut the window. If an air conditioner is loud, lower the air conditioner.

The phone is not connected. <sup>^</sup>When BLUETOOTH audio is played, the phone is not connected even if you press (handsfree).  Connect from the phone. The phone sound quality is poor. <sup>^</sup>Phone sound quality depends on reception conditions of cellular phone.  Move your car to a place where you can enhance the cellular phone's signal if the reception is poor. The volume of the connected audio device is low (high). <sup>^</sup>Volume level will differ depending on the audio device.  Adjust the volume of the connected audio device or this unit. The sound skips during playback of a BLUETOOTH audio device.

<sup>^</sup>Reduce the distance between the unit and the BLUETOOTH audio device. <sup>^</sup>If the BLUETOOTH audio device is stored in a case which interrupts the signal, remove the audio device from the case during use. <sup>^</sup>Several BLUETOOTH devices or other devices which emit radio waves are in use nearby.  Turn off the other devices.  Increase the distance from the other devices.

<sup>^</sup>The playback sound stops momentarily when the connection between this unit and the cellular phone is being made. This is not a malfunction. Some functions do not work. <sup>^</sup>Check if the connecting device supports the functions in question. a call is answered unintentionally. <sup>^</sup>The connecting phone is set to answer a call automatically. Pairing failed due to time out. <sup>^</sup>Depending on the connecting device, the time limit for pairing may be short.  Try completing the pairing within the time. BLUETOOTH function cannot operate. <sup>^</sup>Turn off the unit by pressing OFF for more than 2 seconds, then turn the unit on again. No sound is output from the car speakers during handsfree call. <sup>^</sup>If the sound is output from the cellular phone, set the cellular phone to output the sound from the car speakers.



[You're reading an excerpt. Click here to read official SONY DSX-A60BT user guide](http://yourpdfguides.com/dref/5585396)  
<http://yourpdfguides.com/dref/5585396>

Ω Press OFF for more than 2 seconds (the display disappears), then press OFF again. If the error indication remains on in the display, consult your nearest Sony dealer.

The unit starts searching for another frequency with the same PI (program identification) data ([PI SEEK] appears). NO MUSIC □ The USB device does not contain a music file. Ω Connect a USB device with a music file in it. NO NAME □ An album/artist/track name is not written in the USB. NO SUPRT (not supported) □ USB hub is not supported on this unit. □ The connected USB device is not supported. For details on the compatibility of your USB device, visit the support site on the back cover. NO TP (no traffic programs) □ The unit will continue searching for available TP stations. Error displays/Messages CHECKING □ The unit is confirming the connection of a USB device. Ω Wait until confirming the connection is finished.

eRROR □ There may be an internal malfunction. Ω Press OFF for more than 2 seconds (the display disappears), then press OFF again. eRROR-99 □ There may be an internal malfunction. 29GB □ Disconnect the USB device, then change the source by pressing OFF. Ω Indicates that the USB device is out of order, or an unsupported device is connected.

@@Ω Wait until reading is complete and playback starts automatically. @@@@The music application in the iPod/iPhone is terminated. @@A cellular phone has been disconnected during a call. □ Be sure to connect a cellular phone. NO INFO (no information) □ Network name and cellular phone name are not received with cellular phone connected.

NO SUPRT (not supported) □ The BLUETOOTH connected cellular phone does not support PBAP (Phone Book Access Profile). In this case, this unit cannot access to the cellular phone's phonebook or call history. \*The cellular phone is not supported by this unit, although the cellular phone supports PBAP (Phone Book Access Profile). Ω Check if the cellular phone is connected correctly. For details on the compatibility of your cellular phone, visit the support site. p (preset number) EMPTY □ The preset dial is empty. UNKNOWN □ Name or phone number cannot be displayed when browsing phonebook or call history. WITHHELD □ Phone number is hidden by caller. For BLUETOOTH function: BT BUSY (BLUETOOTH busy) □ The phonebook and the call history of the cellular phone are not accessible from this unit. Ω Wait for a while, and then try again.

\*Phonebook content was changed while accessing the cellular phone. Ω Access the phonebook in the cellular phone again. MEM FAIL (memory failure) □ This unit failed to store the contact in the preset dial. Ω Make sure that the number you intend to store is correct (page 17). If these solutions do not help improve the situation, consult your nearest Sony dealer. Made for □ iPod touch (5. Made for □ iPod touch (5ème génération) □ iPod touch (4ème génération)

□ iPod touch (3ème génération) □ iPod touch (2ème génération) □ iPod classic □ iPod nano (7ème génération) □ iPod nano (6ème génération) □ iPod nano (5ème génération) □ iPod nano (4ème génération) □ iPod nano (3ème génération) □ iPod nano (2ème génération) □ iPod nano (1ère génération)\* □ iPhone 5 □ iPhone 4S □ iPhone 4 □ iPhone 3GS □ iPhone 3G \* La commande passer n'est pas disponible pour l'iPod nano (1ère génération). Ordre de lecture des fichiers MP3/ WMA MP3/WMA Dossier (album) Fichier MP3/WMA (plage) □ « Made for iPod » et « Made for iPhone » signifient qu'un accessoire électronique a été conçu pour être connecté spécifiquement à un iPod ou un iPhone, respectivement, et qu'il a été certifié par le développeur comme étant conforme aux normes de performances Apple. Généralités Sorties : Borne de sorties audio (avant, arrière) Borne de commande de relais d'antenne électrique Borne de commande d'amplificateur de puissance Entrées : Borne d'entrée de commande à distance Borne d'entrée de l'antenne Prise d'entrée AUX (mini-prise stéréo) Port USB Alimentation requise : batterie de véhicule 12 V CC (masse négative) Dimensions : Environ 178 mm × 50 mm × 120 mm (l/h/p)

Dimensions du support : Environ 182 mm × 53 mm × 103 mm (l/h/p) Poids : Environ 0,7 kg Accessoires fournis : Appareil principal (1) Télécommande (1) : RM-X231 Composants destinés à l'installation et au raccordement (1 jeu) Appareils/accessoires en option : Câble de connexion USB pour iPod : RC-100IP Il est possible que votre revendeur ne dispose pas de certains accessoires décrits 28FR Dépannage La liste de contrôles suivante vous aidera à remédier aux problèmes que vous pourriez rencontrer avec cet appareil. Made for □ iPod touch (5<sup>a</sup> generazione) □ iPod touch (4<sup>a</sup> generazione) □ iPod touch (3<sup>a</sup> generazione) □ iPod touch (2<sup>a</sup> generazione) □ iPod classic □ iPod nano (7<sup>a</sup> generazione) □ iPod nano (6<sup>a</sup> generazione) □ iPod nano (5<sup>a</sup> generazione) □ iPod nano (4<sup>a</sup> generazione) □ iPod nano (3<sup>a</sup> generazione) □ iPod nano (2<sup>a</sup> generazione) □ iPod nano (1<sup>a</sup> generazione)\* □ iPhone 5 □ iPhone 4S □ iPhone 4 □ iPhone 3GS □ iPhone 3G \* La funzione di controllo passeggero non è disponibile per iPod nano (1<sup>a</sup> generazione).

Ω "Made for iPod" e "Made for iPhone" significano che un accessorio elettronico è stato appositamente progettato per il collegamento all'iPod o all'iPhone, rispettivamente, ed è stato certificato dallo sviluppatore per la conformità agli standard Apple. Selecteer een eerste letter uit de lijst van eerste letters door de regelknop te verdraaien en druk vervolgens op de regelknop. Made for □ iPod touch (5e generatie) □ iPod touch (4e generatie) □ iPod touch (3e generatie) □ iPod touch (2e generatie) □ iPod classic □ iPod nano (7e generatie) □ iPod nano (6e generatie) □ iPod nano (5e generatie) □ iPod nano (4e generatie) □ iPod nano (3e generatie) □ iPod nano (2e generatie) □ iPod nano (1e generatie)\* □ iPhone 5 □ iPhone 4S □ iPhone 4 □ iPhone 3GS □ iPhone 3G \* Passagiersbediening is niet beschikbaar voor iPod nano (1e generatie). Ω "Made for iPod" en "Made for iPhone" betekenen dat een elektronisch accessoire speciaal is ontworpen om aan te sluiten op respectievelijk een iPod of iPhone en dat de ontwikkelaar van het accessoire verklaart dat het voldoet aan de prestatienormen van Apple.



[You're reading an excerpt. Click here to read official SONY DSX-](#)

[A60BT user guide](#)

<http://yourpdfguides.com/dref/5585396>

, declares that this DSX-A60BT is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.  
For details, please access the following URL: <http://www. Com/> Register your product online now at: Registrieren Sie Ihr Produkt jetzt bei: Merci  
d'enregister votre produit en ligne sur : Registra online il tuo prodotto su: Registreer uw product nu online via: [www. .](http://www. .)



[You're reading an excerpt. Click here to read official SONY DSX-A60BT user guide](http://yourpdfguides.com/dref/5585396)

<http://yourpdfguides.com/dref/5585396>