

Manual abstract:

power on. Slide and lift the battery compartment lid, then insert a battery with the correct polarity. Utilizing Your Computer Installing the help guide on your computer By installing the help guide on your computer from the built-in memory of the IC recorder, you can search for detailed operations and possible solutions when a problem occurs. Additional features Details of these additional features for recording, playback, and editing are included in the help guide.

Scene Selection Recording Filter Noise Cut T-MARK (Track mark) DPC (Digital Pitch Control) A-B Repeat VOR (Voice Operated Recording) Sound Effects Easy Search Divide Sound Organizer editing software Quick Start Guide Turn the power on. Slide and hold the HOLD•POWER switch in the direction of "POWER" until the window display appears. Precautions On power Operate the unit only on 1. Should any solid object or liquid fall into the unit, remove the battery and have the unit checked by qualified personnel before operating it any further. If you have any questions or problems concerning your unit, please consult your nearest Sony dealer. After the installation completes, double-click the [Help_Guide_icdu53_uc.

Html] icon in the desktop for Windows (or in Finder for Mac). the help guide is displayed. You can also view the help guide on the following Sony IC Recorder customer support home page: <http://rd1.sony.Net/help/icdu53/uc/> To release the IC recorder from the HOLD status, slide the HOLD•POWER switch towards the center.

Connect the IC recorder to your computer. Copy files or folders you want to transfer to your computer. Dispose of used batteries according to the instructions. Press or to set the year (the last two digits of Welcome to your new Sony IC recorder! This is the Quick Start Guide, which provides you with instructions on the basic operations of the IC recorder. please read it carefully.

We hope you enjoy using your new Sony IC recorder. The year), and then press (play/enter). Repeat this procedure to set month, day, hour, and minute in sequence. 60 GB = 3,865,470,566 Byte) *1 A small amount of the built-in memory is used for file management and therefore not available for user storage. *2

When the built-in memory is formatted with the IC recorder. RECYCLING NICKEL METAL HYDRIDE BATTERIES Nickel metal hydride batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www>. This class B digital apparatus complies with Canadian ICES-003. check the supplied items.

It is not compatible with Mac. If the IC recorder cannot be connected to a computer directly, use the supplied USB connection support cable. Press REC/PAUSE. Recording starts and the operation indicator lights in red. Built-in microphones Place the IC recorder so that the built-in microphones face the direction of the source to be recorded. Make sure the IC recorder has been recognized properly. While the IC recorder is connected to the computer, "Connecting" is displayed in the display window of the IC recorder. Playback starts and the operation indicator lights in green. Follow the instructions that appear on the screen. Battery compartment Control button (, , (review/fast backward) , Strap hole (A strap is not supplied).

(cue/fast forward)) (play/enter) button* MENU button FOLDER button T-MARK (track mark) button (microphone) jack* (headphones) jack ERASE button VOL -/+ (volume -/+) button* A-B (repeat A-B) button DPC (SPEED CTRL) switch * These buttons and the jack have a tactile dot. Use it as a reference point for operations, or to identify each terminal. When the [Ready to Install the Program] window appears, click [Install]. (The Help Guide and the Sound Organizer software will also be erased.) Select "Execute" using or , and then press (play/ enter). Erasing..." is displayed while the selected file is being erased. Indicateur de fonctionnement Assurez-vous d'accepter les conditions du contrat de licence, sélectionnez [I accept the terms in the license agreement], puis cliquez sur [Next].



[You're reading an excerpt. Click here to read official SONY ICD-UX533 user guide](http://yourpdfguides.com/dref/5067928)
<http://yourpdfguides.com/dref/5067928>