

Manual abstract:

Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong.

The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11) Only use attachments/accessories specified by the manufacturer. 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.

When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Precautions Play the unit on the power source specified in "Specifications." To disconnect the power cord (mains lead), pull it out by the plug, not the cord. Since a strong magnet is used for the speaker, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet. Do not leave the unit in a location near a heat source such as a radiator or airduct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.

Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a thick pile surface (rug, a blanket, etc.), or near materials that might block the ventilation holes (such as a curtain, etc.). Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further. To clean the casing, use a soft cloth dampened with a mild detergent solution. Never touch the wire of the external FM antenna during a thunderstorm. Furthermore, immediately disconnect the main plug from the wall outlet. Specifications Time display 12-hour system

About the backup battery To maintain accurate time, this unit includes an internal CR2032 battery as a backup power source in the event of a power interruption. @@@@And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus. Do not install the appliance in a confined space, such as a bookcase or built-in cabinet. Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time. As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately. The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. The nameplate and important information concerning safety are located on the bottom exterior. Knowing when to replace the battery When the battery becomes weak, "" will appear in the display. @@Replace the battery with a Sony CR2032 lithium battery.

Use of another battery may cause a fire or explosion. @@@@ (See fig. @@ (See fig. @@ Be sure to observe the correct polarity when installing the battery. Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

If you have any questions or problems concerning your unit, consult your nearest Sony dealer. Dimensions 2 4 Press DATE/TIME ZONE to set. 3 Insert the battery compartment back 4 into the unit and secure it with the screw. (See fig. -) To turn "" off in the display, press RADIO BAND, AUDIO IN, or NATURE SOUND / PRESET after replacing the battery.

CAUTION Danger of explosion if battery is incorrectly replaced. Replace only with the same type. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.

13) Unplug this apparatus during lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Troubleshooting Should any problem persist after you have made the following checks, consult your nearest Sony dealer. The clock flashes "AM 12:00" due to a power interruption. The battery is low. Replace the battery. Remove the old battery and install a new one. The alarm settings do not sound at the preset alarm time. Check that alarm "" or alarm "" is properly set/displayed.

The alarm settings are activated but there is no sound at the preset alarm time. Check the alarm volume setting. When daylight saving time begins, the clock does not switch to daylight saving time automatically. Make sure the clock is set correctly.

@@@@@ : scans downwards through the frequency bands.

Scanning starts from the currently-tuned frequency. @@@@ Replace the battery if "" appears. The snooze function will not work. @@@@ (See "Setting the clock") The factory setting alarm time is "PM 12:00." To set the radio alarm, first preset your favorite station.

(See "Presetting a station") While setting the alarm, you must perform each step within 65 seconds, or the alarm setting mode will be canceled.



[You're reading an excerpt. Click here to read official SONY ICF-C717PJ user guide](http://yourpdfguides.com/dref/2743823)
<http://yourpdfguides.com/dref/2743823>

Preset tuning You can preset 5 stations for FM and 5 stations for AM. Using the Projector function The Projector function allows you to display the clock and alarm on a nearby wall, up to a distance of 2 metres away. Pressing the PROJECTION ROTATE button repeatedly changes the angle of rotation at which the clock and alarm appear sensitivity. AM: Connect the supplied AM loop antenna to the unit. Rotate the antenna horizontally for optimum reception. You can choose one of 3 settings: "NATURE SOUND," "RADIO," or "BUZZER." Set the alarm mode as follows: NATURE SOUND: see " Setting the Nature Sound alarm." RADIO: see " Setting the radio alarm." BUZZER: see " Setting the buzzer alarm.

" desired alarm mode ("NATURE SOUND," "RADIO," or "BUZZER"), and press ALARM ON/OFF A or B. The display returns to clock mode (and the sleep timer starts) approximately 4 seconds after the duration is set and the SLEEP button is released. Note Even if the sleep timer is set, it cannot turn off the power of optional components connected to the AUDIO IN jack of this player. To return to the radio Press RADIO BAND. The frequency is shown in the display. To confirm an alarm time setting To turn off the unit before the preset time Press OFF ALARM RESET. To stop listening Press OFF ALARM RESET, and stop playback on the connected unit. Turn off the ALARM ON/OFF "" or "" indicator in the display, and press the ALARM ON/OFF A or B button again. You can confirm the alarm time by pressing TIME SET + or - after the alarm time is set. To change the sleep timer setting You can press SLEEP repeatedly to select the desired sleep timer setting even after the sleep timer has been activated.

To turn off the sound from the optional component Press OFF ALARM RESET, and then turn off the optional component. Notes Refer also to the connected component's manual. Connect the audio cable firmly to prevent a malfunction. Keep digital music players away from the speaker. If you increase the volume too much, loud sound may occur when switching to the radio.

@@@AUDIO IN cannot be set for the alarm sound. @@If noise occurs, even when the component is turned off, disconnect and place the external component away from the unit. To change an alarm setting Setting the Nature Sound alarm 1 Perform steps 1 to 5 in "To set the alarm." 2 Press TIME SET + or - to select "NATURE SOUND" alarm mode, and press ALARM ON/OFF A or B. There are two ways to set the alarm: To change all alarm settings Set the alarm again.

To change an alarm time only When the alarm is set (ALARM "" or ALARM "" appears), this function is available. Press and hold TIME SET + for at least 2 seconds to move the alarm time forwards. Press and hold TIME SET - for at least 2 seconds to move the alarm time back. When you release the button, the changed time will be displayed for about 2 seconds. To further change the alarm time, press TIME SET + or - within these 2 seconds, otherwise the setting change will be fixed as displayed. To deactivate the sleep timer Press SLEEP repeatedly to set the sleep timer to "OFF" in step 2. Note on radio reception Keep digital music players or mobile phones away from the AM loop antenna or the FM antenna, as this may lead to reception interference. 3 Press TIME SET + or - to select the 4 "NATURE SOUND" appears in the display. NATURE SOUND / PRESET 1 to 5, and press ALARM ON/OFF A or B. Press TIME SET + or - to adjust the volume, and press ALARM ON/OFF A or B.

The setting is entered. 5 Press ALARM ON/OFF A or B. "" or "" appears in the display after about 4 seconds. Nature Sounds will sound at the set time. .



[You're reading an excerpt. Click here to read official SONY ICF-C717PJ user guide](http://yourpdfguides.com/dref/2743823)

<http://yourpdfguides.com/dref/2743823>