



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY KD55X9305. You'll find the answers to all your questions on the SONY KD55X9305 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY KD55X9305

User guide SONY KD55X9305

Operating instructions SONY KD55X9305

Instructions for use SONY KD55X9305

Instruction manual SONY KD55X9305



[You're reading an excerpt. Click here to read official SONY
KD55X9305 user guide](http://yourpdfguides.com/dref/5830694)

<http://yourpdfguides.com/dref/5830694>

Manual abstract:

, Production Date (year/month) and Power Supply rating are located on the rear of the TV or package. 14 Installing the TV to the Wall . NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced with the same rating of fuse approved by ASTA or BSI to BS 1362 (i. e. , marked with or) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station. 23 FUSE How to replace the fuse Open the fuse compartment with a blade screwdriver, and replace the fuse.

Please refer to the illustration that actually equipped with the product. 2GB IMPORTANT NOTICE This product has been manufactured by or on behalf of Sony Corporation , 1-7-1 Konan Minato-ku Tokyo , 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents. Notice for Wireless Signal Hereby, Sony Corporation declares that this unit is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For details, please access the following URL: [http://www. De/](http://www.De/) Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives. TV wireless system may be operated in following countries: AT, BE, HR, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IE, IT, LV, LT, LU, MT, NL, PL, PT, SK, SI, ES, SE, GB, IS, LI, NO, CH, BG, RO, TR, AL, BA, MK, MD, RS, ME, Kosovo This equipment can be operated in other non-European countries. Only qualified service personnel should carry out wall installations. For safety reasons, it is strongly recommended that you use Sony accessories, including: Wall-Mount Bracket SU-WL450 (KD-65/55X9305C) • Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set.

The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket. The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc. 8 mm - 12 mm GB Screw (M6) Wall-Mount Bracket Transporting • Before transporting the TV set , disconnect all cables. Two or three people are needed to transport a large TV set. • When transporting the TV set by hand , hold it as shown below. Do not put stress on the LCD panel and the frame around the screen. KD-75X9405C Safety information WARNING Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Installation/Set-up Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electrical shock or damage and/or injuries. Installation • To avoid slipping and causing personal injury, do not step on the TV protection bag when unpacking the TV set.

The TV set should be installed near an easily accessible mains socket. Place the TV set on a stable, level surface to avoid it from falling down and cause personal injury or damage to the TV. Install the TV where it cannot be pulled, pushed, or knocked over. Install the TV so that the TV's Table-Top Stand does not protrudes out from the TV stand (not supplied). If the Table-Top Stand protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV. KD-65/55X9305C • When transporting the TV set, do not subject it to jolts or excessive vibration. When transporting the TV set for repairs or when moving, pack it using the original carton and packing material. Ventilation • Never cover the ventilation holes or insert anything in the cabinet. Leave space around the TV set as shown below. It is strongly recommended that you use a Sony Wall-Mount Bracket in order to provide adequate air circulation.

Installed on the wall 30 cm 10 cm 10 cm 10 cm Leave at least this space around the set. 3GB Installed with stand 30 cm 10 cm 10 cm 6 cm • Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor colour. Should this occur, allow moisture to evaporate completely before powering the TV on.

Environment: Leave at least this space around the set. To ensure proper ventilation and prevent the collection of dirt or dust: Do not lay the TV set flat, install upside down, backwards, or sideways. Do not place the TV set on a shelf, rug, bed or in a closet. Do not cover the TV set with a cloth, such as curtains, or items such as newspapers, etc. Do not install the TV set as shown below.

air circulation is blocked. Places that are hot, humid, or excessively dusty; where insects may enter; where it might be exposed to mechanical vibration, near flammable objects (candles, etc). The TV set shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the TV. Do not place the TV in a humid or dusty space, or in a room with oily smoke or steam (near cooking tables or humidifiers). fire , electric shock , or warping may result. Do not install the TV in places subject to extreme temperature such as in direct sunlight, near a radiator or a heating vent. The TV may overheat in such condition which can cause deformation of the enclosure and/or TV malfunction. Wall Wall Situation: • Do not use when your hands are wet, with the cabinet removed, or with attachments not recommended by the manufacturer. Disconnect the TV set from mains socket and aerial during lightning storms. Do not install the TV so that it sticks out into an open space.

Injury or damage from a person or object bumping into the TV may result. Mains lead Handle the mains lead and socket as follows in order to avoid any risk of fire, electrical shock or damage and/or injuries: Use only mains leads supplied by Sony, not other suppliers. Insert the plug fully into the mains socket. Operate the TV set on a 220-240 V AC supply only. When wiring cables, be sure to unplug the mains lead for your safety and take care not to catch your feet on the cables. Disconnect the mains lead from the mains socket before working on or moving the TV set. Keep the mains lead away from heat sources. Unplug the mains plug and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate, which could result in a fire.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/5830694)

[KD55X9305 user guide](http://yourpdfguides.com/dref/5830694)

<http://yourpdfguides.com/dref/5830694>

Broken pieces: • Do not throw anything at the TV set.

The screen glass may break by the impact and cause serious injury. □ If the surface of the TV set cracks, do not touch it until you have unplugged the mains lead. Otherwise electric shock may result. Note • Do not use the supplied mains lead on any other equipment. □ Do not pinch, bend, or twist the mains lead excessively.

The core conductors may be exposed or broken. □ Do not modify the mains lead. □ Do not put anything heavy on the mains lead. □ Do not pull on the mains lead itself when disconnecting the mains lead. □ Do not connect too many appliances to the same mains socket.

□ Do not use a poor fitting mains socket. When not in use • If you will not be using the TV set for several days, the TV set should be disconnected from the mains for environmental and safety reasons. □ As the TV set is not disconnected from the mains when the TV set is just turned off, pull the plug from the mains to disconnect the TV set completely. □ However, some TV sets may have features that require the TV set to be left in standby to work correctly. Prohibited

Usage Do not install/use the TV set in locations, environments or situations such as those listed below, or the TV set may malfunction and cause a fire, electrical shock, damage and/or injuries. For children • Do not allow children to climb on the TV set. □ Keep small accessories out of the reach of children, so that they are not mistakenly swallowed. Location: • Outdoors (in direct sunlight), at the seashore, on a ship or other vessel, inside a vehicle, in medical institutions, unstable locations, near water, rain, moisture or smoke. □ If the TV is placed in the changing room of a public bath or hot spring, the TV may be damaged by airborne sulfur, etc. If the following problems occur.

Turn off the TV set and unplug the mains lead immediately if any of the following problems occur. Ask your dealer or Sony service centre to have it checked by qualified service personnel. Ω TV set is damaged by being dropped, hit or having something thrown at it. Ω Any liquid or solid object falls through openings in the cabinet. □ For best picture quality, do not expose the screen to direct illumination or sunlight. About LCD Monitor Temperature When the LCD Monitor is used for an extended period, the panel surrounds become warm. You may feel hot when touching there by the hand. 4GB Precautions Viewing the TV • View the TV in moderate light, as viewing the TV in poor light or during long period of time, strains your eyes. □ When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result. □ Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games.

Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual of any other device or media used with this television and (ii) our website (www).

The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above. □ Do not use, store, or leave the 3D Glasses or in places with a high temperature, e. Optional Equipment • Keep optional components or any equipment emitting electromagnetic radiation away from the TV set.

Otherwise picture distortion and/or noisy sound may occur. □ This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection signal cable shorter than 3 meters. GB Recommendation of F-type plug Projection of the inner wire from the connection part must be less than 1. (Reference drawing of the F type plug) Wireless Function of the unit • Do not operate this unit near medical equipment (pacemaker, etc.), as malfunction of the medical equipment may result. □ Although this unit transmits/receives scrambled signals, be careful of unauthorised interception. We cannot be responsible for any trouble as a result. Caution about handling the remote control • Observe the correct polarity when inserting batteries. □ Do not use different types of batteries together or mix old and new batteries. • Dispose of batteries in an environmentally friendly way.

Certain regions may regulate the disposal of batteries. please consult your local authority. □ Handle the remote control with care. Do not drop or step on it, or spill liquid of any kind onto it. □ Do not place the remote control in a location near a heat source, a place subject to direct sunlight, or a damp room. LCD Screen • Although the LCD screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or brinic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

6GB Parts and Controls Controls and Indicators GB □ Remote Control sensor*1 / Light sensor*1 / Illumination LED / 3D Sync Transmitter*1 The illumination LED lights up or blinks according to the status of the TV. □ White When turning on the TV/picture off mode/software update, etc. *1 Do not place anything near the sensor. 7GB Inputs and Outputs KD-75X9405C/55X9305C KD-65X9305C 8GB □ □ LAN □ □ □ /DIGITAL AUDIO OUT (OPTICAL) AV 1 □ HDMI IN 2/MHL • You can connect your MHL (Mobile Highdefinition Link) device using an HD quality MHL cable. gB • Connect with a SCART cable. When you connect an analogue decoder, the TV tuner outputs scrambled signals to the decoder, and the decoder unscrambles the signals before outputting them. Make sure your TV is connected to the Internet. If you do not have a network connection, you will be able to download the software from the Sony support website using your PC. For details on how to upgrade, please visit the Sony support website. To stay informed about the exact release date, please subscribe at <http://www>.

For details, refer to the instruction manual supplied with your CAM. □ Do not insert the smart card directly into the TV CAM slot. It must be fitted into the Conditional Access Module provided by your authorised dealer. □ CAM is not supported in some countries/ areas.



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/5830694)

[KD55X9305 user guide](http://yourpdfguides.com/dref/5830694)

<http://yourpdfguides.com/dref/5830694>

check with your authorised dealer. □ A CAM message may appear when you switch to a digital programme after using the Internet video. A (USB 1/2, REC)*2 *3 (USB 3 (HDD) • Connecting a large USB device may interfere with other connected devices beside it. □ When connecting a large USB device, connect to the USB 1 jack. A AUDIO OUT/□ • To listen to the TV's sound through the connected equipment, press HOME. Select [Settings] t [Sound] t [Headphone/Audio out] and then select the desired item.

A HDMI IN 1/3/4 • If connecting a digital audio system that is compatible with Audio Return Channel (ARC) technology, use HDMI IN 4. If not, an additional connection with DIGITAL AUDIO OUT (OPTICAL) is necessary. 9GB Using Remote Control Remote Control Parts Description IR (infrared) Remote Control Touchpad Remote Control □ □/ (Input select/Text hold) □ Number buttons EXIT Return to the previous screen or exit from the menu. When an Interactive Application service is available, press to exit from the service. • (TV standby) Turn on or turn off the TV (standby mode). Turn Live Football Mode on or off (when the feature is available). You can also display it by slide down your finger from ACTION MENU on the Touchpad Remote Control. □ □/□/□/□/□/□ Operate media contents on TV and connected BRAVIA Sync-compatible device. *E REC*1 *2 Record the current programme with the USB HDD recording function. O Touchpad Operate the TV with the touchpad.

Some models of Xperia) corresponding to the One-touch mirroring function, then its screen is displayed on the TV. DISCOVER Bring up the Content Bar to search for content. You can also launch Content Bar by slide up your finger from DISCOVER on the Touchpad Remote Control. □/□/□/□/ (Item select/Enter) □ □ +/- (Volume) Adjust the volume. (Jump) Jump back and forth between two channels or inputs.

The TV alternates between the current channel or input and the last channel or input that was selected. *1 The location, availability and function of remote control button may vary depending on your country/region/TV model. Make sure your TV is connected to the Internet. If you do not have a network connection, you will be able to download the software from the Sony support website using your PC. For details on how to upgrade, please visit the Sony support website.

To stay informed about the exact release date, please subscribe at <http://www.sony.com>. Press again to restore the sound. A AUDIO Change the language for the programme currently being viewed. (Subtitle setting) Turn subtitles on or off (when the feature is available). 11GB Using the Touchpad Remote Control Touchpad Remote Control can only be used after pairing with the TV. To pair, follow the pairing screen instruction. Pairing screen can be displayed by pressing the □ button on the TV for 5 seconds, or select [Settings] - [Touchpad Remote Control settings] - [Pair Touchpad Remote Control]. @@@@ Be careful not to pinch the finger during installation. @@ □ Ensure that there are no objects in front of the TV. @@@@ Before connecting cables, remove the terminal cover.

@@@@ do not attempt to install it yourself. @@@@ Use the Wall-Mount Bracket SU-WL450 (not supplied) (KD-65/55X9305C) to install the TV to the wall. When installing the Wall-Mount Bracket, also refer to the Operating Instructions and Installation Guide supplied with the Wall-Mount Bracket. Note • Be sure to store the removed screws in a safe place, keeping them away from children. For instructions on Wall-Mount Bracket installation of your TV model, refer to the following website: www.sony.com/eu/tv/wall-mount-bracket-manual 18GB 1 Remove the screws from the rear of the TV. KD-65X9305C Standard mounting Super Slim (60) mounting GB KD-55X9305C 2 Before installing the Wall-Mount Bracket, attach the Wall-Mount Attachment □ (supplied with the TV) to the rear of the TV (to make it parallel with the wall). (Except KD-65X9305C (Super Slim (60) mounting)) Note • Be sure to fasten the Wall-Mount Attachment when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torquing the Wall-Mount Attachment and damaging the TV. □ If using an electric screwdriver, set the torque at approximately 1. 19GB Standard mounting, Slim mounting (KD-55X9305C) Wall-Mount Attachment □ (supplied with the TV) Standard mounting Slim mounting (KD-55X9305C) Super Slim (60) mounting (KD-65X9305C) Slim mounting (KD-55X9305C), Super Slim (60) mounting (KD-65X9305C) Note • You cannot use some of the terminals on the rear of the TV when using this mounting style. 20GB KD-75X9405C only Your TV can be mounted on a wall using a Wall-Mount Bracket (not supplied) out of the box as packaged. Prepare the TV for the Wall-Mount Bracket before making cable connections. For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. do not attempt to install it yourself. □ Follow the instructions provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight. □ Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand.

Keep the screws away from small children. GB 1 Remove the screws from the rear of the TV. 2 Before installing the Wall-Mount Bracket, attach the Wall-Mount Attachment □ (supplied with the TV) to the rear of the TV (to make it parallel with the wall). Note • Be sure to fasten the Wall-Mount Attachment when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torquing the Wall-Mount Attachment and damaging the TV. □ If using an electric screwdriver, set the torque at approximately 1. Wall-Mount Attachment □ (supplied with the TV) 21GB Troubleshooting In order to keep your TV software up-to-date, it is necessary to download the latest software information via the digital broadcasting system or internet and to update the software. select [Update Now] to start a software update. The illumination LED flashes white while the software is updating.

Do not unplug the mains lead during the software update. If you do, the software update may not finish completely, and it may cause a software malfunction. software updates can take up to 30 minutes. If you do not wish to update the software automatically, press HOME and select [Help] t [System software update] t [Automatic software download] t [Off]. When you unplug the TV and plug it in again, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV because it takes time to initialise the system. Wait for about 10 to 20 seconds, then operate it again.



[You're reading an excerpt. Click here to read official SONY](#)

[KD55X9305 user guide](#)

<http://yourpdfguides.com/dref/5830694>

When the illumination LED is flashing in red, count how many times it flashes (interval time is three seconds). If the illumination LED flashes red, reset the TV by disconnecting the mains lead for two minutes, then turn on the TV. If the problem persists, contact your dealer or Sony service centre with the number of times the illumination LED flashes red (interval time is three seconds). Disconnect the mains lead, and inform your dealer or Sony service centre.

When the illumination LED is not flashing, check the items as follows. You can also refer to [Troubleshooting] in the Help Guide or perform self-diagnosis by selecting [Help] t [Self diagnostics]. If the problem persists, have your TV serviced by qualified service personnel. Ω Connect the TV to mains lead, and press □ on the TV or the remote control. Some programmes cannot be tuned.

□ Check the antenna (aerial)/cable connection. Ω The satellite cable might be short-circuited or there might be connection problems of the cable. Check the cable connection and then turn the TV off with the Mains power On/Off switch, and turn it on again. Ω The frequency that you entered is out of range. Ω Attempt the [Digital Auto Tuning] by selecting [Antenna] instead of [Cable].

The remote control does not function. Ω When the TV is used for an extended period, the TV surrounds become warm. You may feel hot when touching there by the hand. Frozen audio or video, a blank screen, or the TV does not respond to TV or remote control buttons. Ω Perform a simple reset of the TV by unplugging the mains lead for two minutes, then plug it in again. 22GB The □, CH+/-, □ +/-, □ and TV buttons cannot be located on the TV. Ω See below illustration for location of the buttons Specifications System Panel system LCD (Liquid Crystal Display) Panel, LED Backlight GB on the TV. The illumination LED is turned on. Ω If you do not wish to light up the illumination LED, Channel coverage Analogue: UHF/VHF/Cable, Depending on your country/area selection. Ω If you use WEP security, select [Easy] t [Wi-Fi] t Input/Output jacks Antenna (aerial) cable 75 ohm external terminal for VHF/UHF [Connect by scan list].

Then, select the network name (SSID) you want to connect. Cannot find the required network name in network setup. / COMPONENT IN YPBPR (Component Video): 1080p (50, 60 Hz), 1080i (50, 60 Hz), 720p (50, 60 Hz), 576p, 576i, 480p, 480i Audio input (phono jacks) t AV2 Video input (common phono pin with Y input) 23GB HDMI IN 1, 2, 3, 4 (support 4K resolution) Video (2D): 4096 × 2160p (50, 60Hz)*1*2, 4096 × 2160p (24 Hz)*2, 3840 × 2160p (50, 60 Hz)*1, 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 576i, 480p, 480i, PC Formats *1 YCbCr 4:2:0 / 8bit only *2 3840 × 2160p is displayed when 4096 × 2160p is input LAN 10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. 10BASE-T/ 100BASE-TX communication rate and communication quality are not guaranteed for this TV. CAM (Conditional Access Module) slot Average annual energy consumption*1 KD-75X9405C: 415 kWh KD-65X9305C: 266 kWh KD-55X9305C: 230 kWh Standby power consumption*2*3 0. 5 cm Notes on Digital TV function • Any functions related to Digital TV () will only work in countries or areas where DVB-T/DVB-T2 (MPEG-2 and H. 264/MPEG-4 AVC) digital terrestrial signals are broadcast or where you have access to a compatible DVB-C (MPEG-2 and H. 264/MPEG-4 AVC) cable service. Please confirm with your local dealer if you can receive a DVB-T/ DVB-T2 signal where you live or ask your cable provider if their DVB-C cable service is suitable for integrated operation with this TV. □ Your cable provider may charge a fee for their services, or require you to agree to its terms and conditions of business.

□ This TV set complies with DVB-T/DVB-T2 and DVB-C specifications, but compatibility with future DVB-T/DVB-T2 digital terrestrial and DVB-C digital cable broadcasts are not guaranteed. □ Some Digital TV functions may not be available in some countries/areas and DVB-C cable may not operate correctly with some providers. 9 kg Trademark information • The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

• “BRAVIA” and are trademarks of Sony Corporation. □ Gracenote, Gracenote eyeQ, Gracenote VideoID, Gracenote Video Explore, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries. 3 kg *1 Energy consumption per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used. 2 Specified standby power is reached after the TV * finishes necessary internal processes.

*3 Standby power consumption will increase when your TV is connected to the network. Note • Do not remove the dummy card from TV CAM (Conditional Access Module) slot other than to insert a smart card fitted in CAM. • Optional accessories availability depends on countries/region/TV model/stock. □ Design and specifications are subject to change without notice. • This TV set incorporates MHL 3. 25GB • MHL, Mobile High-Definition Link and the MHL Logo are trademarks or registered trademarks of MHL Licensing, LLC. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. @@Portions © UEI 2000 – 2014 • The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

This TV is not intended for controlling motorized antennas. • TUXERA is a registered trademark of Tuxera Inc. In the US and other countries. In the United States and in other countries. □ Pour des raisons de sécurité, il est vivement recommandé d'utiliser les accessoires Sony, notamment : Support de fixation murale □ SU-WL450 (KD-65/55X9305C) • Veuillez à bien utiliser les vis fournies avec le support de fixation murale lors de la mise en place du support de fixation murale sur le téléviseur. Fixation du support de table (alternative) Reportez-vous au mode d'emploi ci-dessous pour mettre le support de table sur la position médiane lorsque celui-ci est sur la position de bord. Lorsque vous installez le support de fixation mural, reportez-vous également au Mode d'emploi et au Guide d'installation fournis avec le support de fixation mural.



[You're reading an excerpt. Click here to read official SONY
KD55X9305 user guide
http://yourpdfguides.com/dref/5830694](http://yourpdfguides.com/dref/5830694)

□ Conservez les vis non utilisées et le support de table en lieu sûr avant de pouvoir fixer le support de table. Sans support de table KD-75X9405C : 192,9 × 99,1 × 11,0 cm KD-65X9305C : 170,6 × 87,1 × 9,0 cm KD-55X9305C : 148,4 × 74,4 × 9,0 cm Largeur du support (Environ.) Position des bords : KD-75X9405C : 191,0 cm KD-65X9305C : 169,0 cm KD-55X9305C : 146,8 cm Position médiane : KD-75X9405C : 70,7 cm KD-65X9305C : 60,7 cm KD-55X9305C : 60,7 cm Poids (Environ.)

) Avec support de table KD-75X9405C : 56,8 kg KD-65X9305C : 48,0 kg KD-55X9305C : 37,9 kg Sans support de table KD-75X9405C : 56,0 kg KD-65X9305C : 47,3 kg KD-55X9305C : 37,3 kg *1 Consommation électrique par an, en considérant que le poste reste allumé 4 heures par jour pendant 365 jours. @@@@ @@@@ 160 linhas (vertical) 24PT Potência nominal USB 1/2: 5 V, , 500 mA MÁX USB 3: 5 V, , 900 mA MÁX MHL (HDMI IN 2): 5 V, , 1,5 A MÁX Nota • Não retire o cartão fictício da ranhura CAM (Módulo de Acesso Condicional) do televisor, exceto quando for para introduzir um smart card instalado no CAM. @@@@ Utrustning som är kopplad till skyddsjord via jordat vägguttag och/eller via annan utrustning och samtidigt är kopplad till kabelTV nät kan i vissa fall medföra brandfara. Se till att din TV är ansluten till Internet. Se till att din TV är ansluten till Internet.

@ @ □ Visse tv'er kan have funktioner, hvor tv'et skal stå i standby for at fungere korrekt. Hvis det sker, skal du sørge for, at fugten fordamper helt, før du tænder for tv'et. □ Dette TV-apparat følger specifikationerne for DVB-T/DVB-T2 og DVB-C, men der er ikke garanti for kompatibiliteten med fremtidige DVB-T/DVB-T2 digitale jordbundne udsendelser og DVB-C digitale kabeludsendelser. @ @ Jos pöytäjalusta työntyy televisiojalustan ulkopuolelle, se voi aiheuttaa television kaatumisen, putoamisen tai henkilövahingon tai television vaurioitumisen. Muiden kuin mukana toimitettujen ruuvien käyttö voi aiheuttaa vaurioita television sisäosiin, television putoamisen tai muuta vahinkoa.

FI NO PL CZ SK HU RO BG GR TR RU UA 17FI Television asennus seinälle Tässä television käyttöohjeessa näytetään vain vaiheet, joilla valmistellaan television asennus seinälle. KD-65X9305C Normaali asennus Erikoi sohut (60) asennus KD-55X9305C FI 2 Kiinnitä ennen seinäasennuskiinnittimen asennusta seinäasennuskiinnike □ (toimitetaan television mukana) television taakse (jotta se tulee seinän suuntaisesti). 19FI Normaali asennus, Kapea asennus (KD-55X9305C) Seinäasennuskiinnike □ (toimitetaan television mukana) Normaali asennus Kapea asennus (KD-55X9305C) Erikoi sohut (60) asennus (KD-65X9305C) Kapea asennus (KD-55X9305C), Erikoi sohut (60) asennus (KD-65X9305C) Huomautus • Joitakin television takana olevia liitäntöjä ei voida käyttää, kun käytetään superohutta asennusta. Tämän television asentaminen edellyttää riittävää ammattitaitoa erityisesti sen määrittämiseksi, kestäkö seinä television painon. FI NO 2 Kiinnitä ennen seinäasennuskiinnittimen asennusta seinäasennuskiinnike □ (toimitetaan television mukana) television taakse (jotta se tulee seinän suuntaisesti). @ @ @ @ @ @ @ Vegg Vegg Nettledning Håndter nettleddningen og støpset som følger for å unngå risiko for brann, elektrisk støt eller annen skade og/eller personskader: □ Bruk kun nettleddninger som er levert av Sony, ikke av andre leverandører. Ved å sørge for at dette produktet avhentes på korrekt måte, vil du være med på å forhindre mulige negative følger for miljøet og helse, som ellers kan forårsakes av feilaktig avfallshåndtering av dette produktet. For å forsikre at batteriet blir behandlet korrekt skal det leveres til en resirkuleringsstasjon for elektriske produkter når det er oppbrukt. Åpne introduksjonen/veiledningen for fjernkontrollen med styreflate Midtre posisjon Merknader • To eller flere personer kreves for å utføre denne installasjonen. Tilstrekkelig ekspertise er nødvendig for å installere dette produktet, spesielt for å fastslå at veggen kan klare TV-ens vekt.

Instruksjoner for installeringen av veggmonteringsbraketten for TV-modellen din finnes på denne nettsiden: www. Tilstrekkelig ekspertise er nødvendig for å installere denne TV-en, spesielt for å fastslå at veggen kan klare TV-ens vekt. Ω Forsøk [Automatisk kanalsøk for digitale kanaler] ved å velge [Egen Antenne] i stedet for [Kabel].) (b × h × d) med bordstativ Kantposisjon: KD-75X9405C: 192,9 × 104,1 × 32,2 cm KD-65X9305C: 170,6 × 91,1 × 29,2 cm KD-55X9305C: 148,4 × 78,0 × 25,5 cm Midtre posisjon: KD-75X9405C: 192,9 × 104,8 × 32,2 cm KD-65X9305C: 170,6 × 91,9 × 29,2 cm KD-55X9305C: 148,4 × 78,7 × 25,5 cm Merknader • Ikke ta narrekortet ut av TV CAM-sporet (Conditional Access Module) for noen annen årsak enn for å sette inn et smartkort i CAM-sporet. @ @ @ @ @ @ @ @ RO Nota • Nu scoateți cardul machetă din slotul TV CAM (modul de acces condiționat) decât pentru a introduce un card inteligent în acest slot. @ @ @ @ @ @ @ For useful information about Sony products Pour obtenir les informations utiles concernant les produits Sony Información de utilidad para productos Sony Voor nuttige informatie over Sony producten Für hilfreiche Informationen zu Sony Produkten Para informação útil sobre os produtos Sony Per informazioni utili sui prodotti Sony For nyttig informasjon om Sony-produkter For mere informasjon om Sony-produkter Hyödyllistä tietoa Sony tuotteista For nyttig informasjon om Sony produkter Szczegółowe informacje o produktach Sony Užitečné informace o výrobcích Sony Pre viac informácií o produktoch Sony Sony termékekről hasznos információkat találhat az alábbi weboldalon Pentru informații utile despre produsele Sony За полез.



[You're reading an excerpt. Click here to read official SONY
KD55X9305 user guide
http://yourpdfguides.com/dref/5830694](http://yourpdfguides.com/dref/5830694)