



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY KDL40R550. You'll find the answers to all your questions on the SONY KDL40R550 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY KDL40R550**  
**User guide SONY KDL40R550**  
**Operating instructions SONY KDL40R550**  
**Instructions for use SONY KDL40R550**  
**Instruction manual SONY KDL40R550**



[You're reading an excerpt. Click here to read official SONY KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)  
<http://yourpdfguides.com/dref/5826932>

**Manual abstract:**

.....  
.....  
... 3 Safety information ..  
.....  
..... 3 Precautions .  
.....  
.....  
..... 5 Navigating through Home Menu Internet Contents . . . .  
.....  
.....  
..... 14 Digital Programme List . . . . .  
.....  
.....  
15 Digital (EPG). . . . .  
.....  
.....  
..... 15 Applications. . . . .  
.....  
.....  
..... 15 Using the TV as a Photo Frame ..  
.....  
..... 15 Listening to FM Radio (for Russia or Ukraine only) ..  
.....  
.....  
.....  
... 16 Parts and Controls TV. . . . .  
.....  
.....  
.....  
..... 7 Remote Control . . . . .  
.....  
.....  
..... 8 Connection TV to the Internet Setting up the Internet Connection . . . . .  
.....  
..... 10 Type 1: Secured network with Wi-Fi Protected Setup™ (WPS) . . . . .  
.....  
..... @ . . . . .  
.....  
.....  
11 Type 3: Unsecured network with any type of wireless LAN router . . . . .  
.....  
.....  
..... 11 Type 4: Wired network set-up . . . . .  
..... 11 Preparing a Wired Network . . . . .  
.....  
.....  
..... 12 Viewing the Network Status . . . . .  
.....  
..... 12 Photo Sharing Plus . . . . .  
.....  
.....  
..... 16 Recordings. . . . .  
.....  
.....  
..... 17 Media . . . . .  
.....  
.....  
.....

.....	17 Playback Photo/Music/Video via USB	.....	17 Home Network
	.....		.....
	.....		.....
	18 Connecting to a Home Network	.....	18 Renderer
	.....		.....
	.....		.....
.....	18 Display Settings for Media Servers	...	
	.....	18 Settings	
	.....		.....
	.....		.....
	19 System Settings	.....	
	.....		.....
	.....		.....
...	19 Customer Support	.....	
	.....		.....
	.....		.....
...	26 If You Cannot Connect to the Internet	..	12 Privacy Policy
	.....		.....
	.....		.....
..	12 Watching TV Changing the Viewing Style	...	
	.....	13 Changing the Screen Format	...
	.....		.....
	.....	13 Setting Scene Select	
	.....		.....
	.....		.....
.....	13 Viewing Pictures from Connected Equipment	Connection Diagram	..
	.....		.....
	.....		.....
....	Using Audio and Video Equipment		
	.....	Using Screen mirroring	..
	.....		.....
	.....		.....
	.....		.....
..	Installing the TV to the Wall	.....	
..	28 29 29 30 Additional Information	Troubleshooting	...
	.....		.....
	.....		.....
..	31 Picture	.....	
	.....		.....
	.....		.....
	.....		.....
..	31 Sound	.....	
	.....		.....
	.....		.....
...	32 Channels	.....	
	.....		.....
	.....		.....
	.....		.....
..	32 Network	.....	
	.....		.....
	.....		.....
	.....		.....
32	General	.....	
	.....		.....

.....  
.....  
.....

@@@Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents. Note •The “x” that appears in the model name corresponds to a numeric digit, related to design, colour or TV system. • Before operating the TV, please read “Safety information” (page 3). • Images and illustrations used in Startup Guide and this manual are for reference only and may differ from actual product appearance. Notice for Wireless Signal Hereby, Sony Corporation declares that this unit is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.compliance.sony.de/>  
Location of the identification label Labels for the TV Model No.

, Production Date (year/month) and Power Supply rating are located on the rear of the TV or package. Labels for the mains adaptor Model No. and Serial No. are located on the bottom of the mains adaptor. GB WARNING TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES. NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced with the same rating of fuse approved by ASTA or BSI to BS 1362 (i.e., marked with or ) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse.

Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station. Safety information WARNING Batteries must not be exposed to excessive heat such as sunshine, fire or the like. Installation/Set-up Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electrical shock or damage and/or injuries. Installation • The TV set should be installed near an easily accessible mains socket.

• Place the TV set on a stable, level surface to avoid it from falling down and cause personal injury or damage to the TV. • Install the TV so that the TV's Table-Top Stand does not protrudes out from the TV stand (not supplied). If the Table-Top Stand protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV. FUSE How to replace the fuse Open the fuse compartment with a blade screwdriver, and replace the fuse. Please refer to the illustration that actually equipped with the product.

• Only qualified service personnel should carry out wall installations. • For safety reasons, it is strongly recommended that you use Sony accessories, including: Wall-Mount Bracket – SU-WL450 3GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:SONY TVSY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)4562100111\_GB020REG.fm masterpage: Left • Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Mounting Hooks to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Mounting Hook. The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc. 8 ~ 12 mm  Do not install the TV set as shown below. Air circulation is blocked. Wall Wall Screw (supplied with the Wall-Mount Bracket) Mounting Hook Hook attachment on rear of TV set Mains lead Handle the mains lead and socket as follows in order to avoid any risk of fire, electrical shock or damage and/or injuries:  Use only mains leads supplied by Sony, not other suppliers.  Insert the plug fully into the mains socket.

Operate the TV set on a 220 V - 240 V AC supply only.  When wiring cables, be sure to unplug the mains lead for your safety and take care not to catch your feet on the cables.  Disconnect the mains lead from the mains socket before working on or moving the TV set.  Keep the mains lead away from heat sources.  Unplug the mains plug and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate, which could result in a fire. Transporting • Before transporting the TV set, disconnect all cables. • Two or three people are needed to transport a large TV set. • When transporting the TV set by hand, hold it as shown below. Do not put stress on the LCD panel and the frame around the screen.  
Note • Do not use the supplied mains lead on any other equipment. • Do not pinch, bend, or twist the mains lead excessively.



[You're reading an excerpt. Click here to read official SONY  
KDL40R550 user guide  
http://yourpdfguides.com/dref/5826932](http://yourpdfguides.com/dref/5826932)

The core conductors may be exposed or broken. • Do not modify the mains lead. • Do not put anything heavy on the mains lead.

- Do not pull on the mains lead itself when disconnecting the mains lead. • Do not connect too many appliances to the same mains socket. • Do not use a poor fitting mains socket. • When transporting the TV set, do not subject it to jolts or excessive vibration. • When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

Ventilation • Never insert anything in the cabinet. • Leave space around the TV set as shown below. • It is strongly recommended that you use a Sony Wall-Mount Bracket in order to provide adequate air circulation. NOTE ON MAINS ADAPTOR Warning To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus. Do not install this equipment in a confined space, such as a bookshelf or similar unit. • Please ensure that the mains socket is installed near the equipment and shall be easily accessible. • Be sure to use the supplied mains adaptor and mains lead. • Do not use any other mains adaptor. It may cause a malfunction.

- Connect the mains adaptor to an easily accessible mains socket. • Do not coil the mains lead around the mains adaptor. The core wire may be cut and/or it may cause a malfunction of the media receiver. • Do not touch the mains adaptor with wet hands. • If you notice an abnormality in the mains adaptor, disconnect it from the mains socket immediately. • The set is not disconnected from the mains source as long as it is connected to the mains socket, even if the set itself has been turned off. • As the mains adaptor will become warm when it is used for a long time, you may feel hot when touching it by hand. Installed on the wall 30 cm 10 cm 10 cm 10 cm Leave at least this space around the set. Installed with stand 30 cm 10 cm 10 cm 6 cm Leave at least this space around the set. • To ensure proper ventilation and prevent the collection of dirt or dust:  Do not lay the TV set flat, install upside down, backwards, or sideways.

Do not place the TV set on a shelf, rug, bed or in a closet.  Do not cover the TV set with a cloth, such as curtains, or items such as newspapers, etc. 4GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\020REG.fm masterpage: Right Prohibited Usage Do not install/use the TV set in locations, environments or situations such as those listed below, or the TV set may malfunction and cause a fire, electrical shock, damage and/or injuries. For children • Do not allow children to climb on the TV set.

- Keep small accessories out of the reach of children, so that they are not mistakenly swallowed. Location: • Outdoors (in direct sunlight), at the seashore, on a ship or other vessel, inside a vehicle, in medical institutions, unstable locations, near water, rain, moisture or smoke. • If the TV is placed in the changing room of a public bath or hot spring, the TV may be damaged by airborne sulphur, etc. If the following problems occur..

• Turn off the TV set and unplug the mains lead immediately if any of the following problems occur. Ask your dealer or Sony service centre to have it checked by qualified service personnel. When:  Mains lead is damaged.  Poor fitting of mains socket.  TV set is damaged by being dropped, hit or having something thrown at it.  Any liquid or solid object falls through openings in the cabinet. GB • For best picture quality, do not expose the screen to direct illumination or sunlight. • Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation.

This may cause the TV to show poor picture and/or poor colour. Should this occur, althen not in use • If you will not be using the TV set for several days, the TV set should be disconnected from the mains for environmental and safety reasons. • As the TV set is not disconnected from the mains when the TV set is just turned off, pull the plug from the mains to disconnect the TV set completely. • However, some TV sets may have features that require the TV set to be left in standby to work correctly. 5GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\020REG.fm masterpage: Left Optional Equipment • Keep optional components or any equipment emitting electromagnetic radiation away from the TV set. Otherwise picture distortion and/or noisy sound may occur. • This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection signal cable shorter than 3 meters. Disposal of the TV set Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Recommendation of F-type plug Projection of the inner wire from the connection part must be less than 1.5 mm.

7 mm max. 1.5 mm max. (Reference drawing of the F type plug) Caution about handling the remote control • Observe the correct polarity when inserting batteries. • Do not use different types of batteries together or mix old and new batteries.

- Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority. • Handle the remote control with care. Do not drop or step on it, or spill liquid of any kind onto it. • Do not place the remote control in a location near a heat source, a place subject to direct sunlight, or a damp room. Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.



[You're reading an excerpt. Click here to read official SONY KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)  
<http://yourpdfguides.com/dref/5826932>

0005% mercury or 0.

004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Wireless

Function of the unit • Do not operate this unit near medical equipment (pacemaker, etc.), as malfunction of the medical equipment may result.

• Although this unit transmits/receives scrambled signals, be careful of unauthorised interception. We cannot be responsible for any trouble as a result. 6GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\030PAR.fm masterpage: Right  CH/INPUT Parts and Controls Switches between the CH Up/Down screen and the input select screen. TV 1  (Sensors/LED indicator) • Receives signals from the remote control.

Do not put anything over the sensor. Doing so may affect its function. • Lights up in amber when the [Sleep Timer] or [On Timer] is set (page 24), or the TV is in Photo Frame Mode (page 15). • Lights up in green when [Power Saving] is set to [Picture Off] (page 26). • Lights up in green when the TV is turned on. • Does not light up when the TV is in standby mode. • Flashes while the remote control is being operated. Note • Make sure that the TV is completely turned off before unplugging the AC power cord (mains lead). GB Parts and Controls 2 3 Hint • The  + button has a tactile dot. Use it as a reference when operating the TV. 4   (Power) Turns the TV on or switches to standby mode. Note • To disconnect the TV from the AC power completely, pull the plug from the mains socket.   +/- / (Volume / Item select) • Increases/decreases the volume, or selects the next (+) or previous (-) channel when the CH Up/Down notification is displayed by pressing the CH/INPUT button. • Moves the selected input source up/down when the input select menu is displayed by pressing the CH/INPUT button. 7GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\030PAR.

fm masterpage: Left  EXIT\* Remote Control Return to the previous screen or exit from the menu. When an Interactive Application service is available, press to exit from the service.  Colour buttons Displays operation guide (when colour buttons are available).  NETFLIX\* Press to access the "NETFLIX" online service.  / (Info / Text reveal) • Displays information about the programme/input you are viewing. Press again to remove the display from the screen. • In text mode, reveals hidden information (e.g. answers to a quiz).

SLEEP\* Press repeatedly until the TV displays the time in minutes ([Off]/[15 min]/[30 min]/[45 min]/[60 min]/[90 min]/[120 min]) that you want the TV to remain on before shutting off. To cancel the sleep timer, press SLEEP repeatedly until [Off] appears.     (Item select / Enter) • Select or adjust items. • Confirm selected items.  RETURN • Returns to the previous screen of any displayed menu.

• Stops playback when playing photo/ music/video file.  HOME  Displays or cancels the menu. / (Input select / Text hold) • Displays and selects the input source (page 29). • In text mode, holds the current page.   +/- (Volume) Adjusts volume.

AUDIO Select the sound of multilingual source or dual sound for the programme current being viewed (Depend on programme source).  DIGITAL/ANALOG Switches to digital or analogue input.  Number buttons • Select channels. For channel numbers 10 and above, enter the next digit quickly. • In text mode, enter the three digit page number to select the page.  (Subtitle) Changes the subtitle setting (page 21). 8GB

KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\030PAR.fm masterpage: Right           • Operate media contents on TV and connected BRAVIA Sync compatible device. • This key also can be used to operate VOD (Video on demand) service playback. Availability is depend on VOD service.

(except KDL-32R40xC, KDL-40R45xC)  (Jump) Returns to the previous channel or input viewed more than 15 seconds.  PROG +/- /   (TV standby) Turns the TV on or switches to standby mode. • Selects the next (+) or previous (-) channel. • In text mode, selects the next ( ) or previous ( ) page.   (Mute) Mutes the sound. Press again to restore the sound. GB Parts and Controls  SYNC MENU Press to display the BRAVIA Sync Menu and then select connected HDMI equipment from [Device Selection]. The following options can be selected from BRAVIA Sync Menu. Device Control: Use the [Device Control] to operate equipment that is compatible with BRAVIA Sync Control. Select options from [Home (Menu)], [Options], [Content List] and [Power Off] to operate the equipment.

Speakers: Select [TV Speakers] or [Audio System] to output the TV's sound from the TV speakers or connected audio equipment. TV Control: Use the [TV Control] menu to operate the TV from the [Home (Menu)] or [Options] menu. Return to TV: Select this option to return to TV programme.  TITLE LIST Display the Title list.  (Wide Mode) Adjusts the screen display.

Press repeatedly to select the desired wide mode (page 13). \* The location, availability and function of remote control button may vary depending on your country/ region/TV model. Hint • The number 5, , PROG + and AUDIO buttons have tactile dots. Use the tactile dots as references when operating the TV. Note • If subtitles are selected and the user launches a digital text application via 'text' key, subtitles may, under certain circumstance stop being displayed. When the user exits the digital text application, subtitle decoding will resume automatically.   (Text) In text mode, displays Text broadcast. Each time you press , the display changes cyclically as follows: Text  Text over the TV picture (mix mode)  No Text (exit the Text service)  GUIDE (EPG) Displays the Digital EPG (Electronic Programme Guide) (page 15).



[You're reading an excerpt. Click here to read official SONY KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)  
<http://yourpdfguides.com/dref/5826932>

**OPTIONS** Displays a list that contains shortcuts to some setting menus. The listed options vary depending on the current input and content. 9GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: Left Connection TV to the Internet (except KDL-40R45xC, KDL-32R40xC) Type 1: Secured network with Wi-Fi Protected Setup™ (WPS) The WPS standard makes security of a wireless home network as straightforward as pressing the WPS button on the wireless LAN router. Before setting up a wireless LAN, check the location of the WPS button on the router and verify how to use it. For security purpose, [WPS (PIN)] provides a PIN code for your router. PIN code is renewed every time you select [WPS (PIN)].

Setting up the Internet Connection Using the network feature you can connect the TV to the Internet. The set-up procedure differs depending on the type of network and LAN router. Before setting up the Internet connection, be sure to set up a LAN router. Check your wireless LAN environment using the following chart. Wireless LAN Secure Wireless LAN? YES m Do you use a wireless LAN router compatible with Wi-Fi Protected Setup™ (WPS)? YES m Type 1\* NO k

Type 2 NO k Type 3 1 2 Press HOME, then select [Settings]  [System Settings]  [Set-up]  [Network]  [Network Set-up]. IP Address setting/Proxy server: – automatic setting: [Set up network connection]  [Easy] – manual setting: [Set up network connection]  [Expert]  [Wireless Set-up] 3 Select [WPS (Push Button)] for Push Button method or [WPS (PIN)] for PIN method. Note Button name of the WPS may differ depending on the router (e.g. AOSS button). Wired LAN, Type 4 \* Type 1 is easier to set up if your router has an automatic setting button, e. g. Air Station One-Touch Secure System (AOSS). Most of the latest routers have this function. 4 Follow the instructions on the set-up screen.

Note • If you use WPS for network set-up, the security settings of the wireless LAN router activate, and any equipment previously connected to the wireless LAN in a non-secure status will be disconnected from the network. In this case, activate the security settings of the disconnected equipment and then reconnect. Or, you can deactivate the security settings of the wireless LAN router, and then connect the equipment to a TV in a non-secure status. • To use the network with IPv6, select [Settings]  [System Settings]  [Set-up]  [Network]  [IPv6/ IPv4 Priority]  [IPv6], then select [Easy] in [Set up network connection]. • When IPv6 is selected, HTTP Proxy cannot be set.

Type 1: Follow the configuration for Secured network with Wi-Fi Protected Setup™ (WPS). Type 2: Follow the configuration for Secured network without Wi-Fi Protected Setup™ (WPS). Type 3: Follow the configuration for Unsecured network with any type of wireless LAN router. Type 4: Follow the configuration for Wired network set-up. 10GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: Right Type 2: Secured network without Wi-Fi Protected Setup™ (WPS) To set up a wireless LAN, SSID (wireless network name) and security key (WEP or WPA key) will be required. If you do not know them, consult the instruction manual of your router. Note • Security key (WEP or WPA key) will not be required because you do not need to select any security method in this procedure. • To use the network with IPv6, select [Settings]  [System Settings]  [Set-up]  [Network]  [IPv6/ IPv4 Priority]  [IPv6], then select [Easy] in [Set up network connection]. • When IPv6 is selected, HTTP Proxy cannot be set.

1 2 Press HOME, then select [Settings]  [System Settings]  [Set-up]  [Network]  [Network Set-up]. IP Address setting/Proxy server: – automatic setting: [Set up network connection]  [Easy] – manual setting: [Set up network connection]  [Expert]  [Wireless Set-up] Type 4: Wired network set-up Enter the respective alphanumeric values for your router if necessary. The items that need to be set (e.g. IP Address, Subnet Mask, DHCP) may differ depending on the Internet service provider or router. For details, refer to the instruction manuals provided by your Internet service provider, or those supplied with the router. GB Connection TV to the Internet 3 4 Select [Scan], then select a network from the list of scanned wireless networks. Follow the instructions on the set-up screen. 1 2 Press HOME, then select [Settings]  [System Settings]  [Set-up]  [Network]  [Network Set-up]. IP Address setting/Proxy server: – automatic setting: [Set up network connection]  [Easy] – manual setting: [Set up network connection]  [Expert]  [Wired Set-up] Note • To use the network with IPv6, select [Settings]  [System Settings]  [Set-up]  [Network]  [IPv6/ IPv4 Priority]  [IPv6], then select [Easy] in [Set up network connection].

• When IPv6 is selected, HTTP Proxy cannot be set. • Please make sure your surrounding is secure when you key in your password. 3 Follow the instructions on the set-up screen. Type 3: Unsecured network with any type of wireless LAN router To set up a wireless LAN, SSID (wireless network name) will be required. [Network Set-up] can also be set from [Auto Start-up] menu.

Note • Allows automatic configuration of your wired/ wireless network.  When connecting with LAN cable: Wired  When connecting with built-in Wireless LAN: Wireless  When connecting with both of the cables: Wired • Set to [Easy], sets the IP address automatically. For proxy server is not use. • To use the network with IPv6, select [Settings]  [System Settings]  [Set-up]  [Network]  [IPv6/ IPv4 Priority]  [IPv6], then select [Easy] in [Set up network connection]. • When IPv6 is selected, HTTP Proxy cannot be set.

1 2 Press HOME, then select [Settings]  [System Settings]  [Set-up]  [Network]  [Network Set-up]. IP Address setting/Proxy server: – automatic setting: [Set up network connection]  [Easy] – manual setting: [Set up network connection]  [Expert]  [Wireless Set-up] 3 4 Select [Scan], then select a network from the list of scanned wireless networks. Follow the instructions on the set-up screen. 11GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: Left Preparing a Wired Network TV If You Cannot Connect to the Internet Use the diagnosis to check possible causes for network connection failures, and settings. Internet Modem with router functions or 1 2 3 Press HOME, then select [Settings]  [System Settings]  [Set-up]  [Network]  [Network Set-up]. Select [View Network setting and status]. Select [Check Connection].



[You're reading an excerpt. Click here to read official SONY](#)

[KDL40R550 user guide](#)

<http://yourpdfguides.com/dref/5826932>

This may take several minutes. You cannot cancel the diagnosis after selecting [Check Connection].

Router Modem Privacy Policy Internet Note • For LAN connections, use a Category 7 cable (not supplied). Viewing the Network Status You can confirm your network status. 1 2 Press HOME, then select [Settings] □ [System Settings] □ [Set-up] □ [Network] □ [Network Set-up]. Select [View Network setting and status]. When you use the following functions to connect the Internet, certain information will be sent to Sony Corporation's global servers, which is considered to be personal information, and need your agreement in order that service providers use it. • System software updating by connecting the Sony Corporation's global servers through the Internet. • The Internet contents or other Internet services from service providers like Youtube. This TV has the setting screens in Auto Startup or Setting Menu to confirm your agreement to this after you read the detail of Privacy Policy. If you want to use these functions, please check [Agree] in each setting screen. If [Disagree] is checked, upper 2 functions are not available.

You can change this setting by pressing HOME, then select [Settings] □ [System Settings] □ [Set-up] □ [Privacy Policy]. 12GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML

28)\4562100111\_GB040WAT.fm masterpage: Right Watching TV Changing the Viewing Style Changing the Screen Format 1 2 3 4 Press □/□ on the TV or remote control to turn on the TV. Press DIGITAL/ANALOG to switch between digital and analogue modes. Press the number buttons or PROG +/- to select a TV channel.

Press □ +/- to adjust the volume. 1 Press repeatedly to select the screen format. [Wide Zoom]\* [Normal] [Full] [Zoom]\* In digital mode An information banner appears briefly. The following icons may be indicated on the banner. [14:9]\* GB Watching TV : Data service (Broadcast application) : Radio service : Scrambled/Subscription service : Multiple audio languages available \* Parts of the top and bottom of the picture may be cut off.

Note • You cannot select [14:9] for HD source pictures. : Subtitles available hearing impaired : Recommended minimum age for current programme (from 3 to 18 years) For HDMI PC Input (PC timing) [Normal] [Full 1] : Subtitles and/or audio available for the : Parental Lock : Digital Programme Lock : Audio available for the visually impaired [Full 2] : Spoken subtitle audio available : Multi-channel audio available Setting Scene Select 1 2 Press OPTIONS. Press □/□ then Select]. to select [Scene When you select the desired scene option, the optimum sound and picture quality for selected scene are automatically set.

The options you can select may vary. Unavailable options are greyed out. 13GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB040WAT.fm masterpage: Left Navigating through Home Menu The HOME button allows you to access a variety of TV settings and features. Internet Contents (except KDL-40R45xC, KDL-32R40xC) Internet Contents delivers a variety of ondemand entertainment straight to your TV. By making an Internet connection, you can enjoy your favorite internet contents.

Note • Be sure to connect your TV to the Internet and complete [Network Set-up] (page 23). 1 Press HOME. To use Internet Contents 1 2 3 Press HOME, then select [Internet Contents]. Press □/□ to select the desired internet service in service list and press . Press to launch the desired internet contents. To exit Internet Contents Press HOME. 2 Press □/□ to select an option, then press . Note • If you experience difficulties with this feature, check that the Internet connection is set up properly. • The interface to Internet content depends on the Internet content providers. • To update Internet Contents services, Press HOME, then select [Settings] □ [System Settings] □ [Set-up] □ [Network] □ [Refresh Internet Content].

To use NETFLIX Press NETFLIX button on the remote control to launch menu. Note • It is possible that Netflix cannot be used via a Proxy server. 14GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB040WAT.fm masterpage: Right Digital Programme List 1 Press HOME in digital mode. 2 Press □/□ then to select [Digital Programme List].

Applications Using the TV as a Photo Frame Photo Frame displays the clock and calendar at the same time as displaying a photo, and listening to music or FM radio. 1 2 3 3 Press □/□/□/□ then programme. to select a Press HOME. Press □/□ then [Applications]. Press □/□ then Frame Mode].

to select to select [Photo GB Navigating through Home Menu To use the Favourite list The Favourite feature allows you to specify up to four lists of your favourite programmes. While watching TV, press to create or display a Favourite list. Hint • Press the blue button to edit the Favourite list. Follow the guides at the bottom of the screen. To launch Photo Frame while playback USB media 1 2 Press OPTIONS, while playback a photo or music file. Press □/□ then to select [Photo Frame Mode] to launch Photo Frame. Digital (EPG) 1 Press GUIDE in digital mode. To select Display mode You can change the photo frame display by selecting [Display Mode] in the [Photo Frame Settings] (page 24). To select Clock Display mode You can select among three clock display modes by selecting [Clock Display] in the [Photo Frame Settings] (page 24). 2 Press □/□/□/□ then programme.

to select a Note • This TV does not have a battery powered backup for the clock. If there is a power failure or if you disconnect the power cord, current date and time will reset automatically. 15GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB040WAT.fm masterpage: Left Duration To save power, the TV continually plays back in Photo Frame Mode for up to 24 hours before powering off automatically. After automatic power off, do not use Photo Frame Mode for at least one hour to avoid panel burn-in. You can change the setting of the [Duration] in the [Photo Frame Settings] (page 24). To avoid panel burn-in, the position of the photo, clock and calendar are switched automatically every hour. Photo Sharing Plus (except KDL-40R45xC, KDL-32R40xC) Connect, copy and view favourite photos on TV using your devices (eg. smartphones or tablets). 1 2 3 4 5 Press HOME.

Press □/□ then [Applications]. Press □/□ then Sharing Plus]. to select to select [Photo Listening to FM Radio (for Russia or Ukraine only) Follow the instructions on the screen to connect your device to the TV. Open web browser on device after all connections are established, then follow the instructions on the screen to access the URL. 1 2 3 4 Press HOME.



[You're reading an excerpt. Click here to read official SONY KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)  
<http://yourpdfguides.com/dref/5826932>



Press  $\square/\square$  then [Applications]. Press  $\square/\square$  then to select to select [FM Radio]. To display photo on TV Press PROG +/- to select an FM radio station. 1 2 Tap on your device to start. Select a photo.

The selected photo will be displayed automatically on TV. To exit FM Radio mode 1 Press RETURN. To save a photo displayed on TV Presetting Radio Stations When you use FM Radio function for the first time, press HOME and select [Settings]  $\square$  [System Settings]  $\square$  [Channel Set-Up]  $\square$  [FM Radio Set-Up]  $\square$  [Auto Tuning]. 1 2 Tap thumbnail on your device, then hold the photo to open the context menu. Select [OK]. Note • Connect USB flash drive to keep up to 50 photos. • Up to 10 smartphones or tablets can be connected to the TV at the same time. • Maximum file size of each photo is 20 MB. • You can also throw a background music with a maximum size of 30 MB. • The default browser for Android 2.

3 or later is supported. • The default browser for iOS is supported; however, some functions cannot be used depending on the version of your iOS. To change preset radio stations 1 2 3 4 Press OPTIONS in FM Radio mode. Press  $\square/\square$  then Presets]. to select [FM Radio Press  $\square/\square$  then to select the radio station you want to change. Press  $\square/\square$  then to change the FM frequency then to edit FM Radio station name. Note • If the station has a noisy sound, you may be able to improve the sound quality by pressing  $\square/\square$ . • When an FM stereo programme has static noise, press AUDIO until [Mono] appears. There will be no stereo effect, but the noise will be reduced. 16GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.

fm masterpage: Right Recordings 1 Press HOME in digital mode. 2 Press  $\square/\square$  then to select [Recordings]. To adjust the picture and sound quality of USB media 1 2 3 Press OPTIONS during video playback. Press  $\square/\square$  then [Sound]. to select [Picture] or to select and 3 Press  $\square/\square$  then to select [Title List], [Timer List], [Error List] or [Manual timer REC].

Press  $\square/\square/\square/\square$  then adjust an item. Note (except KDL-40R45xC, KDL-32R40xC) • While recording, cannot enter [Menu]  $\square$  [Internet Contents] • Press  $\square$  REC button to record currently viewed programmed in digital mode with USB HDD recording function. To play a photo as a slideshow (Photo) 1 Press the green button in thumbnail view to start slideshow. To set [Slideshow Effect] and [Slideshow Speed], press OPTIONS  $\square$  [Playback Options]. To stop a slideshow, press RETURN.

GB Navigating through Home Menu Media Playback Photo/Music/Video via USB You can enjoy photo/music/video files stored in a Sony digital still camera or camcorder through a USB cable or USB storage device on your TV. Note • While the TV is accessing the data on a USB device, observe the following:  $\square$  Do not turn off the TV.  $\square$  Do not disconnect the USB cable.  $\square$  Do not remove the USB device. The data on the USB device may be damaged. • Sony will not be held liable for any damage to, or loss of, data on the recording media due to a malfunction of any connected devices or the TV. • The file system on the USB device supports FAT16, FAT32 and NTFS. • The file name and folder name may not display correctly in some cases. • When you connect a Sony digital still camera, set the camera's USB connection mode to Auto or Mass Storage. For more information about USB connection mode, refer to the instructions supplied with your digital camera.

• Use a USB storage device that is compliant with USB mass storage device class standards. • If a selected file has incorrect container information, or is incomplete, it cannot be played back. 1 2 3 4 5 6 7 Connect a supported USB device to the TV. Press HOME. Press  $\square/\square$  then to select [Media]. Press  $\square/\square$  then to select [Photo], [Music] or [Video]. [Device Selection] appears. Press  $\square/\square$  to select a device. (except KDL-40R45xC, KDL-32R40xC) Press  $\square/\square/\square/\square$  then or folder. to select a file USB Video format • AVI (

avi) Video Codec: MPEG1, MPEG2, Xvid, MPEG4, H.264, Motion JPEG Audio Codec: PCM, MPEG1 Layer1/2, MPEG2 AAC (2ch), MPEG4 AAC (2ch), MPEG4 HE-AAC (2ch), Dolby Digital (2ch), Dolby Digital Plus(2ch), WMA v8, MP3 If more than one USB device is connected, press the red button to select [Playback Options] then [Device Selection] to select the appropriate USB device (KDL-40R45xC, KDL-32R40xC only). • ASF (.wmv, .asf) Video Codec: WMV v9, Xvid, VC-1 Audio Codec: MP3, WMA v8 Playback Options Press the red button in thumbnail view to display the list of USB playback settings.

17GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT, fm masterpage: Left • MP4 (.mp4, .mov, .3gp) Video Codec: MPEG4, H.

264, H.263, Motion JPEG Audio Codec: MPEG1 Layer1/2, MP3, MPEG2 AAC, MPEG4 AAC, MPEG4 HE-AAC Home Network (except KDL-40R45xC, KDL-32R40xC) Connecting to a Home Network You can enjoy various content (e.g. @@@@Unavailable options are greyed out or not displayed. @@@@Adv. @@@@Clear White: Emphasises white colours. Live Colour: Makes colours more vivid. @@adverts tend to be louder than programmes). Automatically changes [Screen Format] to match the input signal. @@@@The sound becomes monaural, but the noise is reduced.

@@@@Manual Programme Preset: Before selecting [TV System]/[Channel]/[AFT]/[Audio Filter]/[Skip]/[Colour System], press PROG +/- to select the programme number with the channel. You cannot select a programme number that is set to [Skip]. Programme: Presets programme channels manually. Subtitle Set-up: Subtitle Setting When [For Hard Of Hearing] is selected, some visual aids may also be displayed with the subtitles (if TV channels broadcast such information). Primary Preferred Language Select preferred language which subtitles are displayed in. Secondary Preferred Language Select secondary preferred language which subtitles are displayed in. Audio Set-up: Audio type (Audio description) Normal Provides normal audio type. Audio Description Provides audio description (narration) of visual information if TV channels broadcast such information. For Hard Of Hearing Switches to broadcast for the hearing impaired when [For Hard Of Hearing] is selected. Spoken subtitle Switches to broadcast for the spoken subtitle audio if TV channels broadcast such information.

Primary Preferred Language Select the preferred language used for a programme. Some digital channels may broadcast several audio languages for a programme. Secondary Preferred Language Select the secondary preferred language used for a programme. Some digital channels may broadcast several audio languages for a programme. Mixing Level Adjusts the TV main audio and Audio Description output levels.

Hint • This option is only available when [Audio Description] in [Audio type (Audio description)] is set.



[You're reading an excerpt. Click here to read official SONY](#)

[KDL40R550 user guide](#)

<http://yourpdfguides.com/dref/5826932>

**GB Navigating through Home Menu Programme Sorting:** Changes the order in which the channels are stored on the TV. **Digital Set-up Digital Tuning:** Digital Auto Tuning Tunes in the available digital channels. This option allows you to retune the TV after moving house, or to search for new channels that have been launched by broadcasters. **Auto Tuning Range [Normal]:** Searches for available channels within your region/country. **[Full]:** Searches for available channels regardless of region/country. **Note** • You can run [Digital Auto Tuning] after moving to a new residence, changing service providers, or to search for newly launched channels. **Guide set-up:** Update Guide in standby TV obtains EPG data during standby mode. **Programme List Edit** Removes any unwanted digital channels stored on the TV, and changes the order of the digital channels stored on the TV. **Digital Manual Tuning** Tunes the digital channels manually. 21GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: **Left Technical Set-up:** Auto Service Update Enables the TV to detect and store new digital services as they become available. **Service Replacement Select [On]** to automatically change the channel when broadcaster changes transmission of the viewing programme to a different channel. **Programme List Transfer Import** or **export** tuned programmes using USB device. **Interactive Application** Enables the viewing of programmes featuring interactive services.

**Auto Start Application** Launches broadcast-related applications automatically. **Application for (Prog. [current program])** Enables the interactive application service for the current programme. **Note** • The interactive service is only available if provided by the broadcaster. • Available functions and screen content vary depending on the broadcaster. **Satellite Set-up:** Allows you to automatically tune satellite channels. **Digital satellite tuning** Tunes in the available satellite service. This option allows you to retune the TV after moving house, or to search for new channels that have been launched by broadcasters. **Satellite Programme List Edit** Removes any unwanted satellite service stored on the TV, and changes the order of the satellite service stored on the TV. **Satellite Auto Service Update** Enables the TV to detect and store new satellite services as they become available.

**FM Radio Set-up (for Russia or Ukraine only)** Presets up to 30 FM radio stations that can be received in your area. **Auto Tuning:** Allows you to automatically tune and store all the available channels. **FM Radio Presets:** Allows you to manually tune and store each available channel one at a time. **Note** • To enable this feature, access to FM Radio mode by using **Home (Menu)** (page 16), then preset your desired FM radio stations according to the steps mentioned above.

**CA Module Set-up:** Allows you to access a pay TV service once you obtain a Conditional Access Module (CAM) and a view card.

**Parental Lock PIN Code** Sets a PIN code to block channels, external inputs, Internet services and all channel tuning related settings. Use 0-9 on the remote control to enter a four-digit PIN code. **CA Module PIN:** Allows you to enter the 8 digits Conditional Access Module (CAM) PIN to be stored in TV. **Delete Service List:** Deletes a service list. Select [Yes] to delete.

**Change PIN Code** Select to change your PIN code. **Interactive Application Setup:** The interactive application service offers high-quality digital text and graphics, along with advanced options. The service is supported by broadcasters. **Parental Rating** Sets an age restriction for viewing. To view any programme rated for ages above the age you specify, enter the correct PIN code. **Setup Protection** Enable or disable protection on programme related operations. 22GB

KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: **Right Digital Programme Lock** Locks a digital channel from being watched. To view a blocked channel, select [Unlocked]. **Satellite Programme Lock** Locks satellite programme from being watched.

To view locked programme, select [Unlocked]. **Built-in Wi-Fi:** Turns the built-in wireless LAN [On] or [Off]. Set to [Off], if you do not use the built-in wireless LAN. When you switch from [Off] to [On], make the settings in [Network Set-up]. **Wi-Fi Direct:** Turns On/Off to connect your TV with Wi-Fi Direct device such as PC, Mobile Phone or Digital Camera. **Wi-Fi Direct Settings:** Set to connect a Wi-Fi direct device to the TV using the Wi-Fi Direct function. If you cannot connect, press **OPTIONS** key and select [Manual]. **Device Name:** Change the name of the TV shown on the connected device. **Refresh Internet Content:** Reconnects to the internet to receive available Internet content services. **Home Network Setup: Server Display Settings** Displays the connected server list.

You can select the server to display in the Home menu. **Server Diagnostics** Diagnoses whether the TV can connect to each server on the home network. **Remote Start** This feature allow connected device in the home network to turn on the TV. **Note** • The standby power consumption will increase if [On] is set. **External Input Lock** Locks external input from being watched.

To view a internet contents, select [Unlocked]. **Note** • Entering the correct PIN code for blocked channel or external input will temporarily deactivates the [Parental Lock] feature. To reactivate the [Parental Lock] settings, turn off and on the TV. **GB Navigating through Home Menu Hint** • If you lost your PIN code, see page 33. **Guidance Block for Recorded Titles (for United Kingdom only)** You can block recorded content by displaying a guidance that requires password input to access.

**Internet Lock (except KDL-40R45xC, KDL-32R40xC)** Locks internet contents from being watched. To view a internet contents , select [Unlocked]. **Set-up Network (except KDL-40R45xC, KDL-32R40xC)** **Network Set-up:** Sets the network status settings. **IPv6/IPv4 Priority:** Switch between [IPv6] and [IPv4 (Recommended)]. **Note** • To use the network with [IPv6], select [IPv6], then select [Easy] in [Set up network connection]. • When IPv6 is selected, HTTP Proxy cannot be set. • When IPv6 is selected, some Internet browser sites, applications or content cannot be watched. **Renderer** **Renderer Function** Enables the TV to play photo/music/ video files on a device (e.g. digital still camera) by operating the device via the network.

**Renderer Access Control** Allows access from a specified control device. **Renderer Set-up** Adjusts the [Renderer Set-up] detailed settings. **Privacy Policy Select** [Agree] or [Disagree] for Privacy Policy confirmation. (page 12) 23GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: **Left Photo Frame Settings Display Mode:** Allows you to select the display mode. See page 15. **Clock Display:** Allows you to select the clock display.



[You're reading an excerpt. Click here to read official SONY KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)  
<http://yourpdfguides.com/dref/5826932>

*Note • This option is available when [Display Mode] is set to [Image and Clock] or [Full Screen Clock]. Clock Set: Sets the current time and date. This feature also can be set from initial set-up.*

*Auto/Manual Select [Manual] to set current time manually. Automatic time zone Sets whether or not to automatically select the time zone you are in. On: Automatically switches between summer time and winter time according to the calendar. Off: The time is displayed according to the time difference set by [Time Zone]. Automatic daylight saving time Sets whether or not to automatically switch between summer time and winter time.*

*Date Set current date. Time Set Current Time. Time Zone Allows you to manually select the time zone you are in, if it is not the same as the default time zone setting for your country/region. Audio Application: Sets [FM Radio], [Music] or [Off] as audio application. Image Selection: Select image.*

*Music Selection: Select music. Slideshow Setting: Select from showing slideshow mode or single view photo. Music Playback Setting: Select from listening to all tracks or a single music track. Duration: Select the time period ([1 h], [2 h], [4 h] or [24 h]) after which the TV automatically switches to standby mode.*

*First day of the week: Sets [Sunday] or [Monday] as the first day of the week on the calendar. USB Auto Start When USB device is connected to the USB port, select [On] to automatically view the thumbnail of the last played Photo/ Music/Video. Recording Set-up To register and deregister HDD for recording function. Auto Start-up Starts the initial set-up procedure. This option allows you to retune the TV after moving houses, or to search for new channels that have been launched by broadcasters. Clock/Timers Sets the timer and clock.*

*Sleep Timer: Sets the time in minutes that you would like the TV to remain on before shutting off automatically. On Timer: Turns on the TV from standby mode at a time you set, and tuned to a channel or input of your preference. Before setting this function, make sure you set the correct current time. Language Select the language in which the menus are displayed. Start-up Logo Select [On] to display the logo when the TV is turned on. Select [Off] to disable it. LED Indicator Select [On] to light up the LED indicator. Select [Off] to disable it. 24GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: Right AV Set-up AV Preset: Assigns name to external equipment input.*

*Enable: Select [Auto] to display names only when the equipment is connected, or [Always] to display regardless of connection status. Colour System: Selects the colour system ([Auto], [PAL], [SECAM], [NTSC3.58], [NTSC4.43], [PAL60]) according to the composite video signal from the input source.*

*AV2/Component Input: Select [Auto] to have the TV detect and switch between the component video jack or the video jack when component video jack or video jack is connected.*

*Note • You cannot use the component video jack and the video jack at the same time. Digital Audio Out: Sets the audio signal that is output by connecting using digital audio output (optical) cable or HDMI cable. Set to [Auto], when connecting equipment compatible with Dolby Digital or DTS. Set to [PCM], when connecting equipment not compatible with Dolby Digital or DTS. TV Position: Improves the speaker settings when set as [Table-Top Stand] or [Wall Mount] according to your TV's position.*

*BRAVIA Sync Settings Allows the TV to communicate with equipment that is compatible with the BRAVIA Sync Control function, and connected to the HDMI ports of the TV. Note that communication settings must also be made on the connected equipment. GB Navigating through Home Menu Speakers: Select sound output from the TV speakers or external audio equipment. Headphone/Audio Out: Sets the sound output to headphone, external audio systems or Active Subwoofer connected to the TV. Disconnect headphone from the TV when you select [Audio Out] or [Subwoofer]. Headphone Speaker Link: Switches the TV's internal speakers on/off when you connect headphone to the TV. Headphone Volume: Adjusts the volume of the headphone. Note • This option is not available, when [Headphone/Audio Out] is set to [Audio Out] or [Subwoofer]. BRAVIA Sync Control: Sets whether or not to link the operations of the TV and the connected equipment that is compatible with BRAVIA Sync Control. When set to [On], the following functions are available.*

*If the specific Sony equipment that is compatible with BRAVIA Sync Control is connected, this setting is applied to the connected equipment automatically.*

*Auto Devices Off: When set to [On], the connected equipment that is compatible with BRAVIA Sync Control turns off when your TV goes to standby mode.*

*Auto TV On: When set to [On], the TV turns on when you turn on the connected equipment that is compatible with BRAVIA Sync Control. BRAVIA Sync Device List: Displays a list of connected equipment that is compatible with BRAVIA Sync Control. Select [Enable] to update the [BRAVIA Sync Device List].*

*Audio Out: Variable: When using an external audio system, volume output from audio out can be controlled using the TV's remote control. Fixed: The audio output of the TV is fixed. Use your audio receiver's volume control to adjust the volume (and other audio settings) through your audio system. Hint • This option is only available when [Headphone/Audio Out] is set to Audio Out. 25GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.*

*fm masterpage: Left Device Control Keys: Select button functions of the TV's remote control to operate the connected equipment. None Deactivates the control by the TV's remote control. Normal For basic operations, such as navigation buttons (up, down, left or right, etc). Tuning Keys For basic operations and operation of channel-related buttons, such as PROG +/- or (0-9), etc. Useful when you control a tuner or set-top box, etc; via the remote control.*

*Menu Keys For basic operations and operation of the HOME/OPTIONS button. Useful when you select menus of a BD player, etc; via the remote control. Tuning and Menu Keys For basic operations and operation of channel-related buttons and HOME/ OPTIONS button. Note • Some equipment with [BRAVIA Sync Control] does not support the [Device Control Keys] feature. Eco Reset Resets the current Eco settings to the default values.*

*Power Saving Reduces power consumption of the TV by adjusting the backlight. When you select [Picture Off], the picture is switched off. The sound remains unchanged. Idle TV Standby Turns the TV off after it has been kept idle for the preset length of time. Customer Support Model Name Displays model name of your TV. Software Version Displays current software version of your TV. Digital Select [System Information] to display digital channel information of your TV.*



[You're reading an excerpt. Click here to read official SONY](http://yourpdfguides.com/dref/5826932)

[KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)

<http://yourpdfguides.com/dref/5826932>

*Network Set-up (United Kingdom model KDL-40R453C, KDL-32R403C only) Allows you to set up the IP settings of the TV's Ethernet port and establish a network connection. Note • For LAN connections, use a Category 5 cable (not supplied). • This TV supports additional content/services provided by the MHEG Internet Connected Services feature.*

*General Internet (IPTV/Web service/e-mail, etc.) is not supported by this TV. External Inputs Select [View AV Preset] to view or manage the TV input. Picture Check View Test Picture: Allows you to check the picture condition on the display. USB System Update (KDL-40R45xC, KDL-32R40xC only) Select to perform system update. Customer Support Provides information of your TV's model, software, and others. For details, see page 26. Software Update (except KDL-40R45xC, KDL-32R40xC) Updates the TV system using USB memory or via Network. Select [USB] or [Network] to update. Note • Software update via the internet may vary depending on TV models.*

*26GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\040WAT.fm masterpage: Right Automatic Software Download Select [On] to download the software automatically by broadcast signal or network. Select [Off] to disable it. Factory Settings Resets all settings to factory settings. After completing this process, the initial set-up screen is displayed.*

*Note • Be sure not to turn the TV off during this period (it takes about 30 seconds) or press any buttons. Initialize Personal Information (except KDL-40R45xC, KDL-32R40xC) You can erase your personal information stored in the TV. Product Support Displays your TV's product information. GB Navigating through Home Menu 27GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\050OPT.fm masterpage: Left Viewing Pictures from Connected Equipment Connection Diagram You can connect a wide range of optional equipment to your TV.*

*Note • Depending on TV model, connecting a large USB device may interfere with other connected devices beside it. \*2 Digital still camera/ Camcorder/USB storage media \*1 HDMI Device VCR/Video game equipment/ DVD player/S VHS/Hi8/DVC camcorder \*1 Home Audio System with HDMI VCR/DVD Recorder \*1 Headphone/ Home Audio System/ Subwoofer < 12 mm < 21 mm \*2 \*2 Terminals and labels may vary depending on TV model. Home Audio System Optical Input DVD player with component output Picture Quality • AV composite cable • Antenna (aerial) cable • Component cable • HDMI cable SD HD Standard definition (SD) videos have picture signals with a vertical resolution of 480 (NTSC) or 576 (PAL/SECAM) lines. High definition (HD) videos have picture signals with a vertical resolution of 720 or 1,080 lines. 28GB KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\050OPT.fm masterpage: Right Using Audio and Video Equipment 1 Turn on the connected equipment. 2 Press to display the input source. 3 Press / then to select the desired input source. The highlighted item is selected if 5 seconds pass without any operation. Note • When connecting a digital audio system not compatible with Audio Return Channel (ARC) technology using an HDMI cable, you need to connect an optical audio cable to the DIGITAL AUDIO OUT (OPTICAL) to output digital sound.*

*• When connecting with an HDMI cable, be sure to use HighSpeed HDMI Cable with Cable Type Logo (Recommended SONY Cable). • When connecting mono equipment, connect the audio cable to the L (mono) jack. Using Screen mirroring (except KDL-40R45xC, KDL-32R40xC) Screen mirroring displays the screen of a compatible device (e.g. smartphones) on your large TV screen by Miracast technology. No wireless router (or access point) is required to use this feature. 1 2 Press the / button, then select [Screen mirroring] using / buttons. Operate the Screen mirroring compatible device to connect with the TV.*

*Once connected, the screen will be displayed on the device and also TV. For details, refer to the instruction manual of the device.*

*To use BRAVIA Sync devices When connecting the TV to BRAVIA Sync compatible equipment, you can control them together. Be sure to perform the necessary settings in advance. The BRAVIA Sync Control settings must be set on both the TV and the connected equipment. See [BRAVIA Sync Settings] (page 25) for the settings on the TV side. Refer to the connected equipment operating instructions for the settings on the connected equipment side.*

*To list connected devices/deregister device When the standby screen for the Screen mirroring is displayed, press OPTIONS, then select [Show Device List / Delete]. To deregister a device, select the device in the list to delete, press . Then, select [Yes] in the confirmation display. To display registration notification when attempting to connect a device with the TV Activating this function can avoid an unintended device from being connected. When the standby screen for then Screen mirroring is displayed, press OPTIONS, then select [Registration Notification]  [On].*

*Note that once you decline registration request from a device, you will not be able to connect the device unless you delete it from the device list. To change the band setting (for experts) When the standby screen for Screen mirroring is displayed, press OPTIONS, then select [Band Setting]. Note • Connecting devices must conform to the following: Screen mirroring compatible devices: 2.4 GHz connection (5 GHz not supported). • For information about the supported wireless band of your device, refer to the instruction manual of your device. GB Viewing Pictures from Connected Equipment 29GB*

*KDL-48R55xC/40R55xC/40R45xC/32R50xC/32R40xC 4-562-100-11(1) D:\SONY TV\SY140226\_SE2\_SE2N\_EU\_IM (GB+ML 28)\4562100111\_GB\050OPT.fm masterpage: Left Installing the TV to the Wall This TV's instruction manual only shows the steps on preparing the installation of the TV before installing to the wall. To Customers: For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself. To Sony Dealers and Contractors: Provide full attention to safety during the installation, periodic maintenance and examination of this product.*

*Sufficient expertise is required for installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation. Use the Wall-Mount Bracket SU-WL450 (not supplied) to install the TV to the wall. When installing the Wall-Mount Bracket, also refer to the Operating Instructions and Installation Guide supplied with the Wall-Mount Bracket.*



[You're reading an excerpt. Click here to read official SONY KDL40R550 user guide](http://yourpdfguides.com/dref/5826932)  
<http://yourpdfguides.com/dref/5826932>