



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY MEX-BT3100P. You'll find the answers to all your questions on the SONY MEX-BT3100P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY MEX-BT3100P
User guide SONY MEX-BT3100P
Operating instructions SONY MEX-BT3100P
Instructions for use SONY MEX-BT3100P
Instruction manual SONY MEX-BT3100P

SONY 4-427-433-13(1)

Bluetooth®
Audio System

Operating Instructions GB
Mode d'emploi FR

Owner's Record
The model and serial numbers are located on the bottom of the unit.
Record the serial number in the space provided below.
Refer to these numbers whenever you call upon your Sony dealer regarding this product.

■ Model No. MEX-BT3100P Serial No. _____
■

To cancel the demonstration (DEMO) display, see page 7.
Pour annuler l'affichage de démonstration (DEMO), reportez-vous à la page 7.

MEX-BT3100P



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)

<http://yourpdfguides.com/dref/4677709>

Manual abstract:

@@To cancel the demonstration (DEMO) display, see page 7. @@@@For installation and connections, see the supplied installation/connections manual.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. @@@@ is not more than that necessary for successful communication. @@@@This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. □ Increase the separation between the equipment and receiver.

□ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. □ Consult the dealer or an experienced radio/TV technician for help. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE).

But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles). CAUTION The use of optical instruments with this product will increase eye hazard. 2 For the State of California, USA only Perchlorate Material – special handling may apply, See www. Use of this trademark is subject to Google Permissions. BlackBerry® is the property of Research In Motion Limited and is registered and/or used in the U.

Used under license from Research In Motion Limited. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners. Note on the lithium battery Do not expose the battery to excessive heat such as direct sunlight, fire or the like. Warning if your car's ignition has no ACC position Be sure to set the Auto Off function (page 34). The unit will shut off completely and automatically in the set time after the unit is turned off, which prevents battery drain. If you do not set the Auto Off function, press and hold □□□□□□□□□□ until the display disappears each time you turn the ignition off. zAPPIN and Quick-BrowZer are trademarks of Sony Corporation. Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. 19 Searching a track by listening to track passages — ZAPPIN™. 30 Two-way Music Control with Android phone . RF signals may affect improperly installed or inadequately shielded electronic systems in cars, such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems or air bag systems. For installation or service of this device, please consult with the manufacturer or its representative of your car. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to this device. Consult with the manufacturer of your car to ensure that the use of your cellular phone in the car will not affect its electronic system. Check regularly that all wireless device equipment in your car is mounted and operating properly.

Emergency calls This Bluetooth car handsfree and the electronic device connected to the handsfree operate using radio signals, cellular, and landline networks as well as user-programmed function, which cannot guarantee connection under all conditions. Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies). Remember, in order to make or receive calls, the handsfree and the electronic device connected to the handsfree must be switched on in a service area with adequate cellular signal strength. Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Safe and efficient use Changes or modifications to this unit not expressly approved by Sony may void the user's authority to operate the equipment.

Please check for exceptions, due to national requirement or limitations, in usage of Bluetooth equipment before using this product. Driving Check the laws and regulations on the use of cellular phones and handsfree equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require. Connecting to other devices When connecting to any other device, please read its user guide for detailed safety instructions. 6 Canceling the DEMO mode You can cancel the demonstration display which appears while this unit is turned off.

Detaching the front panel You can detach the front panel of this unit to prevent theft. 1 2 1 2 3 4 Press □□□□□□□□, rotate the control dial until "DISPLAY" appears, then press it. Rotate the control dial until "DEMO" appears, then press it. Rotate the control dial to select "DEMO-OFF," then press it. the setting is complete. Press (BACK) to return to the previous display. The display returns to normal reception/ play mode. press and hold □□□□□□□□□□ □. The unit is turned off. Press the front panel release button □, then remove the panel by pulling it towards you.

setting the clock The clock uses a 12-hour digital indication. Caution alarm If you turn the ignition switch to the OFF position without detaching the front panel, the caution alarm will sound for a few seconds. The alarm will only sound if the built-in amplifier is used.



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)
<http://yourpdfguides.com/dref/4677709>

4 If passkey* input is required in the display of the device to be connected, input "0000. * Passkey may be called "passcode," "PIN code," "PIN number" or "Password," etc. , depending on the device. Input passkey Tips • For details on pairing for a Bluetooth device, refer to the operating instructions supplied with the device. □ You can pair up to 9 Bluetooth devices with this unit. □0000" 1 2 Place the Bluetooth device within 1 m (3 ft) of this unit. Press □□□□□□ and rotate the control dial until "PAIRING" appears, then press it. the unit enters pairing standby mode. This unit and the Bluetooth device memorize each other's information, and when pairing is made, stays lit. The unit is ready for connection to the device. Note If " " continues to flash, the Bluetooth device may not be compatible with this unit.

For details on compatible devices, visit the support site on the back cover. Flashing 3 Set the Bluetooth device to search for this unit. A list of detected devices appears in the display of the device to be connected. This unit is displayed as "Sony Automotive" on the device to be connected. 5 Select this unit on the Bluetooth device to be connected.

" " or " " appears when the connection is made. Notes • While connecting to a Bluetooth device, this unit cannot be detected from another device. To enable detection, enter the pairing mode and search for this unit from another device. □ It may take time to search or connect. □ Depending on the device, the confirmation display of the connection appears before inputting the passkey. □ The time limit for inputting the passkey differs depending on the device. If the time expires, perform the pairing procedure from the beginning again. □ This unit cannot be connected to a device that supports only HSP (Head Set Profile). 22 Tip Connection between this unit and the Bluetooth device may be automatic, depending on the device. 2 3 Turn on the cellular phone and activate the Bluetooth signal.

Connect to this unit using the cellular phone. " " appears when the connection is made. If you select the Bluetooth phone source after the connection is made, the network name and the connected cellular phone name appear in the display. Canceling pairing Perform step 2 to cancel the pairing mode after this unit and the Bluetooth device are paired. Connection Icons in the display: To use the device after pairing is made, start the connection. Sometimes pairing allows for connection automatically. If pairing has already been achieved, start operation from here. Connecting a cellular phone 1 Press □□□□□□ and rotate the control dial until "BT SIGNL" appears, then press it. □ " lights up when Bluetooth signal is activated. Connecting the last-connected cellular phone from this unit 1 2 3 Make sure the Bluetooth signal of the cellular phone is activated.

□ " flashes while the connection is being made, then stays lit while connected. Note When the Bluetooth signal for this unit is already ON, selecting "BT SIGNL" deactivates the Bluetooth signal. Tip You can also output the Bluetooth signal from this unit by pressing and holding □□□□□□ on this unit more than 2 seconds. Notes • Some cellular phones require permission to access their phonebook data during handsfree connection to this unit. obtain permission via the cellular phone.

□ While streaming Bluetooth audio, you cannot connect from this unit to the cellular phone. Connect from the cellular phone to this unit instead. A connecting noise may be heard over playback sound. 23 Tip With Bluetooth signal on: when the ignition is turned to on, this unit reconnects automatically to the last-connected cellular phone. But automatic connection also depends on the cellular phone's specification.

if automatic connection is not made , connect manually. Handsfree calling Once the unit is connected to the cellular phone, you can make/receive handsfree calls by operating this unit. Connecting an audio device 1 Press □□□□□□ and rotate the control dial until "BT SIGNL" appears, then press it. □ " lights up when Bluetooth signal is activated. Before handsfree calling, check the following: □ Make sure that " " and " " appear in the display. □ If " " and " " do not appear, perform the connection procedure (page 23). □ If you cannot connect this unit and the cellular phone via the Bluetooth function, perform the pairing procedure (page 22). 2 3 Turn on the audio device and activate the Bluetooth signal. Connect to this unit using the audio device. " " appears when the connection is made.

Receiving calls When receiving a call, a ringtone is output from your car speakers or the connected cellular phone. The caller's name or phone number appears in the display. Connecting the last-connected audio device from this unit 1 2 3 Make sure the Bluetooth signal of the audio device is activated. Press □□□□□□ when a call is received with a ringtone. The phone call starts. Notes • Depending on the cellular phone, the caller's name may appear. □ The ringtone and talker's voice are output only from the front speakers. □ " flashes while the connection is being made, then stays lit while connected. Rejecting a call Press and hold □□□□□□□□□□□□ for 1 second. ending a call Press □□□□□□ again.

24 Calling from the phonebook When connecting to a cellular phone supporting PBAP (Phone Book Access Profile), you can access the phonebook, and make a call. Calling by phone number input 1 2 Press □□□□□□ and rotate the control dial until "DIAL NUMBER" appears, then press it. Rotate the control dial to enter the phone number, and lastly select " " (space), then press □□□□□□ (ENTER)*. The phone call starts. * To move the digital indication , press □□□□□□ -/+.

Note " _ " appears instead of "#" on the display. 1 2 3 4 Press □□□□□□ and rotate the control dial until "PHONEBOOK" appears, then press it. Rotate the control dial to select an initial from the initial list, and then press it. Rotate the control dial to select a name from the name list, and then press it. Rotate the control dial to select a number from the number list, and then press it.

The phone call starts. Calling by preset number You can store up to 6 contacts in the preset dial. For details on how to store, see "Preset dial" (page 26). Note Depending on the cellular phone, contacts displayed on the unit may differ from the phonebook of the cellular phone. 1 2 3 Press □□□□□□□□□□□□□□, rotate the control dial until "BT PHONE" appears, then press it. Press a number button (□□□ to □□□) to select the contact you want to call.



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)
<http://yourpdfguides.com/dref/4677709>

press **ENTER**. The phone call starts. Calling from the call history When connecting to a cellular phone supporting PBAP (Phone Book Access Profile), you can access to the call history stored in the cellular phone, and make a call. 1 Press **RECENT CALL** and rotate the control dial until "RECENT CALL" appears, then press it.

A list of the call history appears. Rotate the control dial to select a name or phone number from the call history, then press it. The phone call starts. Calling by redial 1 Press **RECALL** and rotate the control dial until "REDIAL" appears, then press it. The phone call starts. 2 25 Operations during a call Presetting the volume of the ringtone and talker's voice You can preset the volume level of the ringtone and talker's voice. To adjust the ringtone volume: Rotate the control dial while receiving a call. ringtone volume can be adjusted. To adjust the talker's voice volume: Rotate the control dial during a call. The talker's voice volume can be adjusted.

Note If the Bluetooth phone source is selected, rotating the control dial will only adjust the talker's volume. Preset dial You can store up to 6 contacts in the preset dial. Notes • If your cellular phone supports PBAP (Phone Book Access Profile), you can select a phone number from the phonebook or call history. **DISCONNECT** Disconnecting the power supply lead will erase all the contacts in the preset dial. 1 Select a phone number that you want to store in the preset dial, from the phonebook, call history* or by inputting the phone number directly.

The phone number appears in the display of this unit. * For the call history, you can also select from the caller name. In this case, the caller name appears in the display of this unit. Mic gain adjustment You can adjust the volume for the other party. **CALLER NAME** The contact is stored in the selected preset number.

CALLER NAME Say the voice tag stored on the cellular phone. Your voice is recognized, and the call is made. **CALLER NAME** Store a voice tag on your cellular phone beforehand. **CALLER NAME** For details, see the support site on the back cover. **CALLER NAME** If you receive a new SMS message, the SMS indicator flashes. 1 2 3 4 Turn down the volume on this unit. Adjust the volume on this unit. **CALLER NAME** Note Function of the SMS indicator may depend on the cellular phone. changing display items Press **CALLER NAME**. **CALLER NAME** Set your usual listening volume on the unit.

CALLER NAME Press (BACK) to return to the previous display. **CALLER NAME**, may not be displayed on this unit. The information is displayed during Bluetooth audio playback only. **CALLER NAME** (The operation differs depending on the audio device. **CALLER NAME**) from this unit. **CALLER NAME** press **PAUSE***2 on this unit. **CALLER NAME** the menu list appears. **CALLER NAME** the confirmation appears. **CALLER NAME** Press (BACK) to return to the previous display. **CALLER NAME***2 Depending on the device, it may be necessary to press twice.

CALLER NAME 28 4 Press **PAUSE***2 (PAUSE) to start playback. **CALLER NAME** You can control Pandora® on Bluetooth connected Android and BlackBerry phone from this unit. Download the latest version of the Pandora® application and obtain more information from www.pandora.com. Com For details on usable devices, visit the support site on the back cover.

notes • Certain Pandora® service functions may not be available. **CALLER NAME** You can control Pandora® via the Bluetooth function on Android and BlackBerry phones only. **CALLER NAME** The Pandora® service is only available in the U. s. **CALLER NAME** You cannot control Pandora® via the Bluetooth function while running the "App Remote" application via Bluetooth.

*1 Does not appear, depending on the device connected to the USB port. *2 When the mobile device is connected, the device number may appear. Make sure that the same numbers are displayed (e. g. , 123456) in this unit and the mobile device, then press **CALLER NAME** on this unit and select "Yes" on the mobile device. Notes • You cannot skip back to the previous track. Adjusting the volume level The volume level of Pandora® is adjusted in the same way as a Bluetooth audio device. For details, see page 27. **CALLER NAME** "thumbs" feedback "Thumbs Up" or "Thumbs Down" feedback allows you to personalize stations to suit your preference. Streaming Pandora® Before connecting the mobile device, turn down the volume of the unit.

CALLER NAME Station list The station list allows you to easily select a desired station. 1 During playback , press (BROWSE). 2 9 2 3 Press **CALLER NAME** + to select the sorting order "BY DATE" or "A TO Z. **CALLER NAME** Rotate the control dial to select the desired station, then press it. playback starts. Shuffle Shuffle allows you to listen to tracks played on one or more Pandora® stations in your station list randomly. Edit your Shuffle station selections on the device before connection. App Remote via Bluetooth wireless technology (Android phone) Downloading the "App Remote" application from Google Play is required for Android phone. If the application is downloaded to an Android phone and connected to the unit, the following features are available: – Operate the unit to launch and control compatible applications on Android phone. **CALLER NAME** Operate Android phone with simple finger gestures to control the source of the unit.

For details on available applications, visit the support site on the back cover. Notes • For your safety, follow your local traffic laws and regulations, and do not operate the application while driving. **CALLER NAME** The "App Remote" application via the Bluetooth function is only available for Android phones with Android 2. **CALLER NAME** start up the "App Remote" application. **CALLER NAME** connection to the mobile device starts.

CALLER NAME (Available operations differ depending on the application. **CALLER NAME** For details on the operations on the mobile device, see the help of the application. Selecting the sound quality —EQ7 Preset You can select an equalizer curve from 7 equalizer curves (XPLOD, VOCAL, EDGE, CRUISE, SPACE, GRAVITY, CUSTOM or OFF). 1 2 During reception/playback, press **CALLER NAME**, rotate the control dial until "SOUND" appears, then press it. Rotate the control dial until "EQ7 PRESET" appears, then press it.

Rotate the control dial until the desired equalizer curve appears, then press it. Press (BACK) to return to the previous display. Note When the mobile device is connected, the device number may appear. Make sure that the same numbers are displayed (e. g. , 123456) in this unit and the mobile device, then press **CALLER NAME** on this unit and select "Yes" on the mobile device. Tip You can also press **CALLER NAME**, rotate the control dial to select "APP REM," then press it to establish the connection. And then press **CALLER NAME** to select the source. 3 4 To cancel the equalizer curve, select "OFF" in step 3. Tip The equalizer curve setting can be memorized for each source.



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)
<http://yourpdfguides.com/dref/4677709>

to terminate connection Press and hold . 31 Customizing the equalizer curve — EQ7 Setting “CUSTOM” of EQ7 allows you to make your own equalizer settings. Optimizing sound by Time Alignment — Listening Position The unit can simulate a natural sound field by delaying the sound output from each speaker to suit your position. The options for “POSITION” are indicated below. FRONT L (): Front left FRONT R (): Front right FRONT (): Center front ALL (): In the center of your car OFF: No position set 1 2 3 After selecting a source, press , rotate the control dial until “SOUND” appears, then press it. Rotate the control dial until “EQ7 SETTING” appears, then press it. Rotate the control dial until “BASE” appears, then press it. You can select an equalizer curve as a basis for further customizing. Rotate the control dial to select the equalizer curve, then press it. setting the equalizer curve. Rotate the control dial to select the frequency range, then press it. 0 kHz Rotate the control dial to adjust the volume level, then press it. The volume level is adjustable in 1 dB steps, from -6 dB to +6 dB. You can also set the approximate subwoofer position from your listening position if: – the audio output is set to “SUB-OUT” (page 34). the listening position is set to other than “OFF.

The options for “SET SW POS” are indicated below. NEAR (): Near NORMAL (): Normal FAR (): Far 1 2 3 4 5 During reception/playback, press , rotate the control dial until “SOUND” appears, then press it. Rotate the control dial until “POSITION” appears, then press it. Rotate the control dial until “SET F/R POS” appears, then press it. Rotate the control dial to select from “FRONT L,” “FRONT R,” “FRONT” or “ALL,” then press it. Rotate the control dial until “SET SW POS” appears, then press it. Repeat steps and to adjust other frequency ranges. 6 Press (BACK) to return to the previous display. the equalizer curve is stored in “CUSTOM. 32 6 7 Rotate the control dial to select the subwoofer position from “NEAR,” “NORMAL” or “FAR,” then press it. Press (BACK) to return to the previous display. 4 Press (BACK) to return to the previous display. Tip The DM+ setting can be memorized for each source other than the tuner. To cancel listening position, select “OFF” in step 4. Adjusting the listening position You can fine-tune the listening position setting.

Using rear speakers as subwoofer — Rear Bass Enhancer Rear Bass Enhancer enhances the bass sound by applying a low pass filter setting (page 35) to the rear speakers. This function allows the rear speakers to work as a subwoofer if one is not connected. 1 2 3 4 During reception/playback, press , rotate the control dial until “SOUND” appears, then press it. Rotate the control dial until “POSITION” appears, then press it. Rotate the control dial until “ADJ POSITION” appears, then press it. Rotate the control dial to adjust the listening position, then press it. adjustable range: “+3” – “CENTER” – “-3. Press (BACK) to return to the previous display. 1 2 3 4 5 During reception/playback, press , rotate the control dial until “SOUND” appears, then press it. Rotate the control dial until “RB ENH” appears, then press it.

Rotate the control dial until “RBE MODE” appears, then press it. Rotate the control dial to select from “1,” “2” or “3,” then press it. Press (BACK) to return to the previous display. 5 DM+ Advanced DM+ Advanced improves digitally compressed sound by restoring high frequencies lost in the compression process. Using a subwoofer without a power amplifier — Subwoofer Direct Connection You can use the subwoofer without a power amplifier when it is connected to the rear speaker cord.

Note Be sure to connect a 4 - 8 ohm subwoofer to either of the rear speaker cords. Do not connect a speaker to the other rear speaker cord. 1 2 3 During playback, press , rotate the control dial until “SOUND” appears, then press it. Rotate the control dial until “DM+” appears, then press it. Rotate the control dial to select “ON,” then press it.

33 1 2 3 4 5 During reception/playback, press , rotate the control dial until “SOUND” appears, then press it. Rotate the control dial until “SW DIREC” appears, then press it. Rotate the control dial until “SW MODE” appears, then press it. Rotate the control dial to select “1,” “2” or “3,” then press it. Press (BACK) to return to the previous display. bBEEP Activates the beep sound: “ON,” “OFF. AUTO OFF Shuts off automatically after a desired time when the unit is turned off: “NO,” “30S (Seconds),” “30M (Minutes),” “60M (Minutes). BTM*3 (page 11) ZAPPIN*4 ZAP TIME (Zappin Time) Selects the playback time for the ZAPPIN function. For details on the settings for the subwoofer phase, position, low pass filter frequency and the low pass filter slope, see page 35. Adjusting setup items 1 2 3 4 Press , rotate the control dial until the desired category appears, then press it.

Rotate the control dial until the desired item appears, then press it. Rotate the control dial to select the setting, then press it. * The setting is complete. Press (BACK) to return to the previous display. zAP BEEP (Zappin Beep) Applies a beep sound between track passages: “ON,” “OFF. PARENTAL*5 Sets the parental lock to “ON” or “OFF,” and edits the passcode (page 38). *1 When the unit is turned off. * For CLOCK-ADJ and BTM settings, step 4 is not necessary. The following items can be set depending on the source and setting: GENERAL: CLOCK-ADJ (Clock Adjust) (page 7) CAUT ALM*1 (Caution Alarm) Activates the caution alarm: “ON,” “OFF” (page 7). DM+*3 (page 33) LOUDNESS (Dynamic Loudness) Reinforces bass and treble for clear sound at low volume levels: “ON,” “OFF.

ALO (Automatic Level Optimizer) Adjust the playback volume level of all playback sources to the optimum level: “ON,” “OFF. HPF SLOP (High Pass Filter Slope) Selects the HPF slope (effective only when HPF FREQ is set to other than “OFF”): “1,” “2,” “3. 35 AUX VOL*6 (AUX Volume level) Adjusts the volume level for each connected auxiliary equipment: “+18 dB” – “0 dB” – “-8 dB. This setting negates the need to adjust the volume level between sources.



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)

<http://yourpdfguides.com/dref/4677709>

BTA VOL*7 (Bluetooth Audio Volume Level) (page 27) *1 Does not appear when "SET F/R POS" is set to "OFF.

*2 When the audio output is set to "SUB-OUT" (page 34). *3 Does not appear when the tuner is selected. BT (Bluetooth): For details on setup items for the Bluetooth settings, see page 21. 36 SiriusXM Vehicle Tuner Using optional equipment Auxiliary audio equipment By connecting an optional portable audio device to the AUX input jack (stereo mini jack) on the unit and then simply selecting the source, you can listen on your car speakers. Connecting the portable audio device Everything worth listening to is on SiriusXM, getting over 130 channels, including the most commercial-free music, plus the best sports, news, talk and entertainment.

a SiriusXM Vehicle Tuner (sold separately) and Subscription are required. For more information, visit www. Activate the SiriusXM Vehicle Tuner using one of the two methods below: • Online: Go to www. Displaying the SiriusXM Radio ID 1 2 3 Turn off the portable audio device. Turn down the volume on the unit. Connect the portable audio device to the unit with a connecting cord (not supplied)*. * Be sure to use a straight type plug. 1 2 During playback, press enter the browse mode. (BROWSE) to Rotate the control dial to select the channel "0," then press it. note To select "SIRIUSXM," press beforehand.

Selecting channels 1 Adjusting the volume level Be sure to adjust the volume for each connected audio device before playback. press mode. (BROWSE) to enter the browse 2 Rotate the control dial to select the desired channel, then press it. Selecting channels from categories 1 2 3 4 5 Turn down the volume on the unit. Set your usual listening volume on the unit. Adjust the input level (page 36). 1 2 Press to enter browse mode. Rotate the control dial to select the desired category, then press it. 37 Storing channels 1 While receiving the channel that you want to store, press and hold a number button (to) until "MEM" appears. Additional Information Precautions • Cool off the unit beforehand if your car has been parked in direct sunlight.

Do not leave the front panel or audio devices brought in inside the car, or it may cause malfunction due to high temperature in direct sunlight. • Power antenna (aerial) extends automatically. To receive the stored channel, select "SX1," "SX2" or "SX3" by pressing , then press a number button (to). Parental control Some SiriusXM channels contain content that is not suitable for children. You can enable a parental control passcode for these channels.

1 2 3 On the GENERAL menu (page 34), rotate the control dial to select "PARENTAL," then press it. Rotate the control dial to select "LOCK SEL," then press it. Rotate the control dial to select "LOCKON," then press it. Moisture condensation Should moisture condensation occur inside the unit, remove the disc and wait for about an hour for it to dry out; otherwise the unit will not operate properly. To unblock the channels, select "OFF" in step 3, then enter the passcode. the initial passcode is "0000. To maintain high sound quality Do not splash liquid onto the unit or discs. Changing the passcode 1 2 3 On the GENERAL menu (page 34), rotate the control dial to select "PARENTAL," then press it. Rotate the control dial to select "CODE EDIT," then press it. On the current passcode input display, enter the current passcode, then press the control dial. the initial passcode is "0000. On the new passcode input display, enter your new 4-digit passcode, then press the control dial. Notes on discs • Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight. Before playing, wipe the discs with a cleaning cloth from the center out. do not use solvents such as benzine, thinner, commercially available cleaners.

This unit is designed to play back discs that conform to the Compact Disc (CD) standard. DualDiscs and some of the music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore, these discs may not be playable by this unit. 4 Changing display items Press to change as follows: Channel Number (Default) Channel Name Artist Name Song Title Content Info Category Name Clock 38 • Discs that this unit CANNOT play – Discs with labels, stickers, or sticky tape or paper attached. Doing so may cause a malfunction, or may ruin the disc., heart, square, star). Attempting to do so may damage the unit. – 8 cm (3 1/4 in) discs. About iPod • You can connect to the following iPod models. Update your iPod devices to the latest software before use. Made for – iPod touch (4th generation) – iPod touch (3rd generation) – iPod touch (2nd generation) – iPod classic – iPod nano (6th generation) – iPod nano (5th generation) – iPod nano (4th generation) – iPod nano (3rd generation) – iPod nano (2nd generation) – iPod nano (1st generation)* – iPhone 4S – iPhone 4 – iPhone 3GS – iPhone 3G * Passenger control is not available for iPod nano (1st generation).

Notes on CD-R/CD-RW discs • The maximum number of: (CD-R/CD-RW only) – folders (albums): 150 (including root folder) – files (tracks) and folders: 300 (may less than 300 if folder/file names contain many characters) – displayable characters for a folder/file name: 32 (Joliet)/64 (Romeo) • If the multi-session disc begins with a CDDA session, it is recognized as a CD-DA disc, and other sessions are not played back. Discs that this unit CANNOT play – CD-R/CD-RW of poor recording quality. CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/Level 2, Joliet/Romeo or multi-session. Playback order of MP3/WMA/ AAC files MP3/WMA/AAC Folder (album) MP3/WMA/ AAC file (track) • "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance. about Bluetooth function What is Bluetooth technology? Bluetooth wireless technology is a shortrange wireless technology that enables wireless data communication between digital devices, such as a cellular phone and a headset. Bluetooth wireless technology operates within a range of about 10 m (about 33 feet).



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)

<http://yourpdfguides.com/dref/4677709>

Connecting two devices is common, but some devices can be connected to multiple devices at the same time. 39 • You do not need to use a cable for connection since Bluetooth technology is a wireless technology, neither is it necessary for the devices to face one another, such as the case with infrared technology.

For example, you can use such a device in a bag or pocket. • Bluetooth technology is an international standard supported by millions of companies all over the world , and employed by various companies worldwide. On Bluetooth communication • Bluetooth wireless technology operates within a range of about 10 m. Maximum communication range may vary depending on obstacles (person, metal, wall, etc.) or electromagnetic environment. □ The following conditions may affect the sensitivity of Bluetooth communication. □ There is an obstacle such as a person, metal, or wall between this unit and Bluetooth device. – A device using 2.4 GHz frequency, such as a wireless LAN device, cordless telephone, or microwave oven, is in use near this unit. □ This unit supports security capabilities that comply with the Bluetooth standard to provide a secure connection when the Bluetooth wireless technology is used, but security may not be enough depending on the setting.

Be careful when communicating using Bluetooth wireless technology. □ We do not take any responsibility for the leakage of information during Bluetooth communication. □ Connection with all Bluetooth devices cannot be guaranteed. – A device featuring Bluetooth function is required to conform to the Bluetooth standard specified by Bluetooth SIG , and be authenticated. □ Even if the connected device conforms to the above mentioned Bluetooth standard, some devices may not be connected or work correctly, depending on the features or specifications of the device. □ While talking on the phone hands free, noise may occur, depending on the device or communication environment. • Because Bluetooth devices and wireless LAN (IEEE802.11b/g) use the same frequency, microwave interference may occur and result in communication speed deterioration, noise, or invalid connection if this unit is used near a wireless LAN device. in such as case , perform the following. □ Use this unit at least 10 m away from the wireless LAN device.

□ If this unit is used within 10 m of a wireless LAN device, turn off the wireless LAN device. □ Install this unit and Bluetooth device as near to each other as possible. □ Depending on the device to be connected, it may require some time to start communication. Others • Using the Bluetooth device may not function on cellular phones, depending on radio wave conditions and location where the equipment is being used. □ If you experience discomfort after using the Bluetooth device, stop using the Bluetooth device immediately.

Should any problem persist, consult your nearest Sony dealer. If you have any questions or problems concerning your unit that are not covered in this manual, consult your nearest Sony dealer. □ Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as it may cause an accident. □ where inflammable gas is present, in a hospital, train, airplane, or petrol station – near automatic doors or a fire alarm 40 Maintenance Replacing the lithium battery of the remote commander When the battery becomes weak, the range of the remote commander becomes shorter.

Replace the battery with a new CR2025 lithium battery. Use of any other battery may present a risk of fire or explosion. + side up Notes • For safety, turn off the ignition before cleaning the connectors, and remove the key from the ignition switch. □ Never touch the connectors directly with your fingers or with any metal device. Notes on the lithium battery • Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor. □ Wipe the battery with a dry cloth to assure a good contact. □ Be sure to observe the correct polarity when installing the battery. □ Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur. Cleaning the connectors The unit may not function properly if the connectors between the unit and the front panel are not clean.

In order to prevent this, detach the front panel (page 7) and clean the connectors with a cotton swab. Do not apply too much force. Otherwise, the connectors may be damaged. 5 PBAP (Phone Book Access Profile) SPP (Serial Port Profile) Supplied accessories: Remote commander: RM-X231 Microphone Parts for installation and connections (1 set) Optional accessories/equipment: USB connection cable for iPod: RC-100IP SiriusXM Vehicle Tuner: SXV100 Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information. Design and specifications are subject to change without notice. Troubleshooting The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures. For details on using the fuse and removing the unit from the dashboard, refer to the installation/connections manual supplied with this unit. If the problem is not solved, visit the support site on the back cover.

*1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna (aerial)'s performance, operating system, software application, etc. *2 Bluetooth standard profiles indicate the purpose of Bluetooth communication between devices. Power amplifier section Output: Speaker outputs Speaker impedance: 4 – 8 ohms Maximum power output: 52 W × 4 (at 4 ohms) General No power is being supplied to the unit. □ Check the connection or fuse. * If the unit is turned off and the display disappears, the unit cannot be operated with the remote commander.

– Turn on the unit. The power antenna (aerial) does not extend. * The power antenna (aerial) does not have a relay box. * The position of the fader control “FADER” is not set for a 2-speaker system. 2 kg (2 lb 11 oz) 42 □ An optional power amplifier is connected and you are not using the built-in amplifier. The contents of the memory have been erased. * The power supply lead or battery has been disconnected or not connected properly. □ The unit is reset. □ Store again in the memory. Stored stations and correct time are erased. the fuse has blown. Makes noise when the position of the ignition is switched. * The leads are not matched correctly with the car's accessory power connector. during playback or reception , demonstration mode starts. * If no operation is performed for 5 minutes with “DEMO-ON” set, demonstration mode starts.

– Set “DEMO-OFF” (page 36). The display disappears from/does not appear in the display window.



[You're reading an excerpt. Click here to read official SONY MEX-BT3100P user guide](http://yourpdfguides.com/dref/4677709)

<http://yourpdfguides.com/dref/4677709>

