



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY NWZ-B173F. You'll find the answers to all your questions on the SONY NWZ-B173F in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY NWZ-B173F User guide SONY NWZ-B173F Operating instructions SONY NWZ-B173F Instructions for use SONY NWZ-B173F Instruction manual SONY NWZ-B173F

SONY

Quick Start Guide
Краткое руководство / Короткий подбукс
Краткое руководство / Короткий подбукс
Краткое руководство / Короткий подбукс

WALKMAN

NWZ-B173/B173/B173/B173F

800 777 0000 (Japan) 800 777 0000 (Russia)

English

About the manuals

Contents

About Windows Operating System

How to Install the Bundled Software (User Guide included)

- 1 Connect your Walkman to your computer.
- 2 Install the bundled software on the computer.
- 3 Install the bundled software.
- 4 Install the bundled software.
- 5 Install the bundled software.
- 6 Install the bundled software.

Charging the Battery

Parts and Controls

Front

Back

Turning Your "WALKMAN" On and Off

How to Use Your "WALKMAN"

Music Library

Importing and Transferring Music

- 1 Import songs from CDs, etc. into Windows Media Player or iTunes software.
- 2 Connect your Walkman to your computer.
- 3 Transfer songs from Windows Media Player or iTunes to your Walkman.

Deleting songs transferred to your "WALKMAN"

Troubleshooting

- 1 Check the operation of the device by checking the operation of the Walkman and the operation of the software.
- 2 Connect your Walkman to a computer to charge the battery.
- 3 Press the RESET button to reset the device.
- 4 Check the operation of the device by checking the operation of the software.
- 5 Look for information on the location of the customer support Web site.
- 6 If the operation of the device does not improve, contact your nearest Sony office.

Обслуживание

Содержание

Об операционной системе Windows

Подготовка к установке прилагаемого программного обеспечения (Руководство пользователя включено)

- 1 Подключите Walkman к компьютеру.
- 2 Установите прилагаемое программное обеспечение на компьютер.
- 3 Установите прилагаемое программное обеспечение.
- 4 Установите прилагаемое программное обеспечение.
- 5 Установите прилагаемое программное обеспечение.
- 6 Установите прилагаемое программное обеспечение.

Использование "WALKMAN"

Библиотека музыки

Импорт песен и музыки

Загрузка аккумулятора батареи

Поиск и устранение неисправностей

- 1 Проверьте работу устройства, проверив работу Walkman и работу программного обеспечения.
- 2 Подключите Walkman к компьютеру для зарядки аккумулятора.
- 3 Нажмите кнопку RESET для сброса устройства.
- 4 Проверьте работу устройства, проверив работу программного обеспечения.
- 5 Ищите информацию о местонахождении веб-сайта службы поддержки клиентов.
- 6 Если работа устройства не улучшится, свяжитесь с ближайшим офисом Sony.

Меры предосторожности

Получение последней информации



You're reading an excerpt. Click here to read official SONY NWZ-B173F user guide
<http://yourpdfguides.com/dref/4291670>

Manual abstract:

You can record sound using the built-in microphone on your Walkman. You can also record the currently received FM program (NWZB172F/B173F only). Connect your Walkman to your computer to charge the battery. You may be able to resolve some issues by charging the battery. Press the RESET button with a small pin, etc. If you press the RESET button while operating your Walkman, the stored data and Walkman settings may be lost. After resetting the Walkman, press the button to turn on the Walkman. For recording sound by your Walkman. Look up information on the issue on one of the customer support Web sites. @@@@ starts/pauses song playback , or pauses/ restarts recording.

Rotate to find the beginning of a song, or fast-rewinds/forwards. Use a small pin, etc. see "How to Use your "WALKMAN". " Disables the operation buttons to avoid accidental operation while carrying your Walkman. attach the clip (supplied).

When connecting with USB, remove the USB cap. If the approaches listed above fail to resolve the issue, consult your nearest Sony dealer. cause/Remedy Your Walkman is not connected to a USB connector on your computer properly. @@Release the computer from Sleep or Hibernation status. @@Connect your Walkman directly to a USB connector, as connection via a USB hub may not work.

However, a USB hub that supplies power can be used. Another application is running on the computer. Disconnect your Walkman, wait a few minutes, and reconnect it. if the problem persists , disconnect the Walkman , restart the computer , and then reconnect the Walkman. The USB connector on your computer may have a problem. Connect your Walkman to another USB connector on your computer. the remaining battery power is insufficient. Charge the battery by connecting your Walkman to a running computer for at least 5 minutes. @@@@To turn on To turn off Press the button. press and hold the button.

@@@@The Home menu is the starting point of each application. @@Connect your Walkman to your computer. [Voice] Plays back/deletes sound files recorded with the built-in microphone on your Walkman. Plays back transferred songs on your Walkman. Plays FM radio, or plays back/deletes FM radio programs recorded with your Walkman. Sets the function for music, FM*1, voice recording, or your Walkman settings. Your Walkman A USB hub is being used. Becomes unstable while Connect your Walkman directly to a USB connector, as connection it is connected to the via a USB hub may not work. You can format the memory of your Walkman. If the memory is formatted, all shortcut icons and files including the User Guide (HTML document) will be erased and all settings will be returned to their default values.

Be sure to verify the files stored in the memory prior to formatting and export any necessary files to the hard disk of your computer or other devices beforehand. Exe] file stored in the [Storage Media] folder of your Walkman is copied to your computer for backup, and the WALKMAN Guide is installed to your computer. @@@@When formatting is complete, [COMPLETE] appears. @@For details on how to import songs from CDs, etc. , refer to the Help of Windows Media Player 11 or 12.

@@Do not format the memory of your Walkman in Windows Explorer. @@@@ exe] file in the [C] drive on your computer. @@Exe] file by formatting the built-in flash memory of your Walkman. You first need to copy the [Setup. @@@@Avoid playing the unit at so loud a volume that extended play might affect your hearing.

At a high volume outside sounds may become inaudible. Avoid listening to the unit in situations where hearing must not be impaired, for example, while driving or cycling. As the supplied headphones are of open-air design, sounds go out through the headphones. Remember not to disturb those close to you.

@@What can you do with the WALKMAN Guide? @@@@Connect your Walkman to your computer. Transfer songs from Windows Media Player 11 or 12 to your Walkman. @@MDR-E804YLA At high volume, prolonged listening to the personal audio player can damage the user's hearing. 2 Click here to transfer songs to your Walkman. Do not disconnect your Walkman while files are being transferred. If you do, the file being transferred will be damaged.

You cannot transfer contents with copyright protection since your Walkman does not support them. The battery for your Walkman is recharged while the Walkman is connected to a running computer. Hint You can also transfer data to your Walkman by dragging and dropping it in Windows Explorer on your computer. @@@@ if the display of the Walkman remains blank for more than 5 minutes , press the RESET button to reset the Walkman. If you turn on the computer, restart the computer, shut down the computer, or wake up the computer from Sleep or Hibernate status while your Walkman is connected to the computer, the Walkman may malfunction. in this case , press the RESET button of the Walkman to reset it. Disconnect the Walkman from the computer before performing these operations. To prevent battery deterioration, charge the battery at least once every half a year or every year. .



[You're reading an excerpt. Click here to read official SONY NWZ-B173F user guide](http://yourpdfguides.com/dref/4291670)
<http://yourpdfguides.com/dref/4291670>