



**Manual abstract:**

To read it, install the supplied software on your computer. Quick Start Guide Guide de démarrage Kurzanleitung Guía de inicio rápido Guida rapida Kullanna Kulavuzu NWZ-B183/B183F An alarm (beep) and a warning [Check the volume level] are meant to protect your ears when you turn the volume up to a level which is harmful for your ears for the first time. You can cancel the alarm and warning by pressing any button. O Prise pour écouteurs □ Touche RESET Note You can turn up the volume after canceling the alarm and warning. @@@@At ,, a high volume outside sounds may become inaudible.

@@As ,, the headphones are of open-air design, sounds go out through the headphones. Remember not to disturb those close to you.

Net/help/dmp/nwzb180/h\_ww/ About the in-ear headphones The earbuds seal your ears. Therefore, be aware that there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds, or the earbuds are suddenly removed from your ears. After use, be sure to take the earbuds off your ears gently.

To turn on To turn off Press the □ button. press and hold the □ button. A Hint ©2014 Sony Corporation Printed in China 4-529-730-11(1) If ,, music playback is paused and no operations are attempted for a certain period of time, your Walkman turns off automatically, except when the FM radio is activated. The display will be turned off if you do not attempt an operation for a ,, certain period of time. In such cases, press the BACK/HOME button to turn the display back on.

Kopfhörer For the latest information If you have any questions or issues with this product, or would like information on items compatible with this product, visit the following websites. For customers in the USA: <http://www.Jp/overseas/support/English> About the manuals This Quick Start Guide only describes the basic operating instructions and how to install the supplied software. For detailed information and operating instructions, refer to the Help Guide (HTML document) included in the supplied software after installation. You can access to the online Help Guide (HTML document/Full version) using various devices from the URL or QR code on the first page.

While browsing is free, you may charge the communication fee according to your carrier contract. How to Use Your Walkman The Home menu is the starting point of each application. To display [Music] on the Home menu To select an item Press and hold the BACK/HOME button. Press either side of the □/□ button to select an item, and then press the □ button to confirm. @@About the Operating System Make sure that the OS is Windows 8. @@The Mac OS is not supported by your Walkman. @@@@Sets the function for music, FM\*I, or your Walkman settings. @@@@For details on how to use, refer to the Help of it. @@If you do, the file being transferred will be damaged. @@2 Select the following order with the computer.

@@@@@For details on connecting to a computer, see the table below. 2 Connect your Walkman to your computer to charge the battery. You may be able to resolve some issues by charging the battery. @@@@@@You can then reset the Walkman safely. @@@@@@Note If ,, you charge your Walkman when it has not been used for a long period of time, your computer may not recognize it, or nothing may appear on the display. @@If the display of the Walkman remains blank for more than 10 minutes, disconnect the Walkman and press the RESET button to reset the Walkman. If ,, you turn on the computer, restart the computer, shut down the computer, or wake up the computer from Sleep or Hibernate status while your Walkman is connected to the computer, the Walkman may malfunction. In this case, disconnect the Walkman and press the RESET button of the Walkman to reset it. Disconnect the Walkman from the computer before performing these operations. To ,, prevent battery deterioration, charge the battery at least once every half a year or every year.

6 If the approaches listed above fail to resolve the issue, consult your nearest Sony dealer. Symptom I cannot charge the battery. Parts and Controls Front [Connecting USB] does not appear when your Walkman is connected to the computer. on your computer properly. ^Disconnect the Walkman, and then reconnect it.

Ω The battery is charged in an ambient temperature out of the range of 5 °C (41 °F) to 35 °C (95 °F). Icon □ You cannot charge the battery when the appears. ^Release the computer from Sleep or Hibernation status. Ω The USB connector on your Walkman is not connected to a USB connector on your computer properly. ^Disconnect the Walkman, and then reconnect it.

□ A USB hub is being used. ^Connect your Walkman directly to a USB connector, as connection via a USB hub may not work. However, a USB hub that supplies power can be used. Ω Another application is running on the computer. ^Disconnect your Walkman, wait a few minutes, and reconnect it. If the problem persists, disconnect the Walkman, restart the computer, and then reconnect the Walkman. Ω The USB connector on your computer may have a problem. ^Connect your Walkman to another USB connector on your computer. □ The remaining battery power is insufficient. @@@@@@When connecting with USB, remove the USB cap.

Becomes unstable □ Connect your Walkman directly to a USB while it is connector, as connection via a USB hub may not connected to the work. However, a USB hub that supplies power computer. Disables the operation buttons to avoid accidental operation while carrying your Walkman. .



[You're reading an excerpt. Click here to read official SONY NWZ-B183 user guide](http://yourpdfguides.com/dref/5588799)

<http://yourpdfguides.com/dref/5588799>