



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY NWZ-WS613. You'll find the answers to all your questions on the SONY NWZ-WS613 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY NWZ-WS613 User guide SONY NWZ-WS613 Operating instructions SONY NWZ-WS613 Instructions for use SONY NWZ-WS613 Instruction manual SONY NWZ-WS613

SONY

Quick Start Guide

NWZ-WS613/WS615

About the manuals

To see the detailed information about WALKMAN®, access to Help Guide on the internet:

<http://rd1.sony.net/help/dmg/wmzws613/>

While browsing is free, you may be charged a communication fee according to your carrier contract.

Regarding the basic operations, the customer support website URL and necessary information refer to "How to locate and Read the Help Guide" section on this manual.

©2014 Sony Corporation Printed in Malaysia 4-536-905-13B (1)

Main Functions of Your Walkman

Listening to music on your Walkman

Enjoy music as intended to your Walkman by operating the buttons on the Walkman.

Operating your Walkman by remote

Just turn the Remote Commander on and you can operate your Walkman by remote.

Using your Walkman with your smartphone

Connect your smartphone and your Walkman via a Bluetooth connection so you can listen to music stored on your smartphone using the Walkman or answer incoming calls to the smartphone. Make music share you, listen to sounds from a smartphone application and the Walkman at the same time. You can also use SongPlus, a smartphone application that allows you to operate the Walkman using your smartphone.

Refer to the Help Guide included on your computer or at the URL mentioned in the "About the manuals" section on the cover page of this manual for details.

Contents

Please check the items in the package:

- Li Walkman (1)
- Li Remote Commander (1)
- Li USB cradle (1)
- Li Earbuds (1 set)
- Li Streaming service (1 set)
- Li Adjustment band (1)
- Li Headset (1)
- Li Quick Start Guide (this manual)
- Li Using your Walkman while Swimming

Parts and Controls

The illustrations show here for reference only and may differ from the actual product.

1 Tactile dot	9 Terminals
2 Headband	10 "Play/Pause" button**
3 Earbud	11 EJECT button
4 Headphone section	12 O/P (Operation) lamp
5 Bluetooth lamp	13 (Power) button
6 Bluetooth button	14 (Previous) button
7 VOL (Volume) +/- button	15 (Next) button
8 Microphone	16 Built-in Bluetooth antenna
	17 Mark
18 LED button	19 Built-in microphone

** These are tactile dots. Use them to help with button operations.

Attaching Your Walkman to the USB Cradle (Supplied) and Charging the Battery

- 1 Dry and clean the terminals of your Walkman (1) using a soft dry cloth, if the terminal is wet or dirty.
- 2 Attach your Walkman to the USB cradle in the order of the left (1) part first, then the right (2) part.
- 3 Connect your Walkman to an operating computer using the USB cradle.

It takes about 1.5 hours to fully charge the battery.

Hint

- To prevent battery deterioration, charge the battery at least once every six months or every year.
- The Remote Commander cannot be charged because a lithium coin cell battery is used in it. If the remaining battery power is low or insufficient, replace the battery of the Remote Commander. For details on how to replace the battery of the Remote Commander, refer to the Help Guide included on your computer or at the URL mentioned in the "About the manuals" section on the cover page of this manual.

How to Install and Read the Help Guide

Install the "Help Guide" on your computer. This contains basic operations of your Walkman, the customer support website URL, and how to transfer content such as music to the Walkman.

- 1 Connect your Walkman to a running computer.
- 2 Open the following folders and double-click the executable file on your Walkman.
 - Windows 7 or earlier - [Start] - [Computer] - [WALKMAN] - [FOR_WINDOWS] - [Help_Guide_Installed.exe]
 - Windows 8 (Start screen) - [Desktop] - [File Explorer] - [Computer] - [WALKMAN] - [FOR_WINDOWS] - [Help_Guide_Installed.exe]
 - Windows 8.1 (Desktop) - [File Explorer] - [This PC] - [WALKMAN] - [FOR_WINDOWS] - [Help_Guide_Installer.exe]
 - Mac (Finder) - [WALKMAN] - [FOR_MAC] - [Help_Guide_Installer_for_mac]
- 3 Follow the on-screen instructions to complete the installation.
- 4 To read the Help Guide, double-click the shortcut or the alias icon generated on your computer.



[You're reading an excerpt. Click here to read official SONY NWZ-WS613 user guide](http://yourpdfguides.com/dref/5742897)
<http://yourpdfguides.com/dref/5742897>

Manual abstract:

You can cancel the alarm and warning by pressing any button. Note You can turn up the volume after canceling the alarm and warning. After the initial warning, the alarm and warning repeat every 20 cumulative hours that the volume is set to a level that is harmful for your ears. When this happens, the volume is turned down automatically. Refer to the Help Guide installed on your computer or at the URL mentioned in the "About the manuals" section on the cover page of this manual for details. The illustrations shown are for reference only and may differ from the actual product. 2 Open the following folders and double-click 1 Dry and clean the terminals of your the executable file on your Walkman. Windows How to install the earbuds To enjoy better sound quality, or to fit your ears, change the size of the earbuds or adjust the earbud position to fit comfortably and snugly in your left and right ears separately. Optional replacement earbuds can be ordered from your nearest Sony dealer. Install the earbuds onto the headphones so that the tip of the inner part of the earbuds fits into the position on the projection of the headphones.

Make sure that the earbuds fit straight on, not at an angle, to prevent the earbuds from detaching and remaining in your ears. Walkman using a soft dry cloth, if the terminal is wet or dirty. the order of the left part first, then the right part. 2 Attach your Walkman to the USB cradle in About the manuals To see the detailed information about WALKMAN, access to Help Guide on the internet. http://rd1.sony.net/help/dmp/nwzws610/h_ww/ While browsing is free, you may be charged a communication fee according to your carrier contract. Regarding the basic operations, the customer support website URL and Important Information, refer to "How to Install and Read the Help Guide" section on this manual.

Contents Please check the items in the package. Walkman (1) Remote Commander (1) USB cradle (1) Earbuds (1 set) Swimming earbuds (1 set) Adjustment band (1) Holder (1) Quick Start Guide (this manual) Using your Walkman while Swimming Tactile dot Neckband Earbud Headphone section Bluetooth lamp (Bluetooth) button VOL (Volume) +*/- button Press the VOL + button to turn up and the VOL - button to turn down the volume.

MODE button ©2014 Sony Corporation Printed in Malaysia 4-536-905-13(1) Terminals (Play) button*1 RESET button OPR (Operation) lamp (Power) button (Previous) button (Next) button Built-in Bluetooth antenna N-mark Built-in microphone 3 Connect your Walkman to an operating computer using the USB cradle. It takes about 1.5 hours to fully charge the battery. Make sure that the terminals of your Walkman and the USB cradle are in contact with each other. 7 or earlier: [Start] - [Computer] - [WALKMAN] - [FOR_WINDOWS] - [Help_Guide_Installer(.exe)]. Windows 8: [Start screen] - [Desktop] - [File Explorer] - [Computer] - [WALKMAN] - [FOR_WINDOWS] - [Help_Guide_Installer(.exe)]. Windows 8.1: [Desktop] - [File Explorer] - [This PC] - [WALKMAN] - [FOR_WINDOWS] - [Help_Guide_Installer(.exe)].

Mac: [Finder] - [WALKMAN] - [FOR_MAC] - [Help_Guide_Installer_for_mac]. 3 Follow the on-screen instructions to complete the installation. 4 To read the Help Guide, double-click the Note To prevent battery deterioration, charge the battery at least once every six months or every year. shortcut or the alias icon generated on your computer. Hint Tip of the inner part The Remote Commander cannot be charged because a lithium coin cell battery is used in it. If the remaining battery power is low or insufficient, replace the battery of the Remote Commander. on the right part for 3 seconds to turn on your Walkman. Symptom & Remedy You cannot connect using the Bluetooth function. If the Walkman is not connected, tap the model name.

You cannot operate your Walkman by the Remote Commander (supplied). Make sure that the Remote Commander is turned on. Make sure that your Walkman is turned on. Reset the Remote Commander and your Walkman. You cannot use the Remote Commander when it is wet. Dry the Remote Commander using a dry cloth. Replace the battery of the Remote Commander. Record them in the space provided below. Model No. To read it, install the supplied software on your computer.

and other countries. App Store is a service mark of Apple Inc. When the list of detected devices appears, select [NWZ-WS613] or [NWZ-WS615]. If passkey input is required, input "0000." Your Walkman and the smartphone are registered to each other and a connection is made. 1 Turn your Walkman on. 2 Turn the Remote Commander on. The Remote Commander is turned on by pressing and holding the button for 2 seconds, and the lamp starts blinking. When the Remote Commander is connected to your Walkman, the lamp goes off. Hint You can pair your Walkman and smartphone using the one-touch (NFC) function.

Refer to the Help Guide installed on your computer or at the URL mentioned in the "About the manuals" section on the cover page of this manual for details. 3 Press the desired button to operate your Walkman. The computer does not recognize your Walkman. Attach your Walkman to the USB cradle (supplied) properly and firmly. Charging will start (the OPR lamp lights up in orange) even if the connection was not made properly, but there is a possibility that the computer has not recognized the Walkman. In such a case, remove the Walkman from the USB cradle and then attach to the USB cradle again. If the remaining battery power is low or insufficient, charge the battery. When you use your Walkman for the first time, or if you have not used the Walkman for a long time, it may take a few minutes to be recognized by the computer, even if charging has already started (the OPR lamp lights up in orange). Check that the computer recognizes the Walkman after you have connected it to the computer for about 10 minutes. You cannot register (pair) to a Bluetooth device. If the support profiles are different, your Walkman and Bluetooth device cannot be paired. After use, be sure to take the earbuds off your ears gently. At a high volume outside sounds may become inaudible. As the headphones are of open-air design, sounds go out through the headphones. Remember not to disturb those close to you.

If tanning oil or sunscreen gets onto your Walkman or the Remote Commander, wash it off using lukewarm water. Otherwise, it may.



[You're reading an excerpt. Click here to read official SONY NWZ-WS613 user guide](http://yourpdfguides.com/dref/5742897)

<http://yourpdfguides.com/dref/5742897>