



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY RM-VZ320. You'll find the answers to all your questions on the SONY RM-VZ320 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY RM-VZ320 User guide SONY RM-VZ320 Operating instructions SONY RM-VZ320 Instructions for use SONY RM-VZ320 Instruction manual SONY RM-VZ320

The collage displays several pages from the SONY Remote Commander RM-VZ320 user manual. Key sections visible include:

- Startup Guide:** Instructions on how to use the remote, including a 'Set the manual timer code' section with a diagram of the remote's buttons.
- Searching for the correct code:** A section detailing how to find the correct code for a device, including a 'Check the manufacturer's code you have set' section.
- Adjusting the volume:** Instructions on how to adjust the volume using the remote's buttons.
- Remote Button Descriptions:** A detailed diagram of the remote's buttons with corresponding descriptions for each function.
- Other sections:** Fragments of 'Setting up the RM-VZ320', 'Specifications', and 'Troubleshooting' are also visible.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)
<http://yourpdfguides.com/dref/2405063>

Manual abstract:

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. @@@@Consult the dealer or an experienced radio/TV technician for help. @@@@Devices TV TV, IPTV, Cable set top box, Satellite receiver, Digital-to-analog converter, DVD player, DVD recorder, Blu-ray Disc/HD-DVD player, DVR (digital video recorder), PVR (personal video recorder), VCR, Video accessory, CD player, Cassette deck, DVD Home Theater, Amplifier, Receiver Button TV CBL (SAT) Factory setting Sony TV (00810) Under normal conditions, size AA (LR6) alkaline batteries will last up to one year. If the RM-VZ320 does not operate properly, the batteries might be drained. Replace both batteries with new ones. While keeping SET held down, press the desired Device Select button, then release both buttons. Notes Replace the batteries within 2 minutes after removing them, and do not press any button when replacing the batteries.*

Otherwise, your code settings may be cleared. Do not use an old battery with a new one, or mix different types of batteries together. If the electrolyte inside the battery should leak, wipe the contaminated area of the battery compartment with a cloth and replace the old batteries with new ones. To prevent electrolyte from leaking, remove the batteries when you plan not to use the RM-VZ320 for a long period of time. 3 Notes If the setting is incomplete, the SET indicator flashes once and the indicators turn off.

Start again from the beginning. If no operations are performed for 10 seconds while setting, the setting will be canceled, and must be restarted. To cancel the process, press SET any time. The SET indicator turns off. Enter the manufacturer's code (01454).

The SET indicator flashes three times and turns off. Hannspree 01348, 01745, 01783, 01826 Mitsubishi 00093, 00150, 00154, 00178, Harman/Kardon 00054 00250, 00836, 01250 The following tables show brand names/Motorola and their corresponding (Brand) Havermy 00093 00093 code Helios numbers (Code No.). @00451 00156, 00178, 00866, 01156 To set the Heran 01826 National 00051 Herosonic 01826 NEC 00051, 00053, 00154, 00156, 00178, 00704, 01704, 01797 Hewlett Packard 01494, 01502, 01642 NetTV 01755 Hisense 00145, 00156, 00748, 00753, Le tableau ci-dessous 01314, 02098n Thomson Tiane TMK TNCi Tobi Toshiba TruTech TVS Venturer Victor Videocon Vidikron Vidtech Viewsonic Viore Vision Vizio VU Wards Warumaia Waycon Westinghouse White Westinghouse Wyse Yapshe Zenith 00054, 00171, 01271, 01314, 01394, 01864, 01886 00171 00000, 00093, 00178, 00451, 01755, 01826 01144, 01240, 01331, 01610 00178 00093 00650 00051, 00054, 00154, 00156, 01156, 01254, 01687, 01756 00898, 02403, 02429 00051, 00250 00847 00051 00051, 00053, 00093, 00178, 01687 00054, 00150 00702 00753 00093 00178 00017 00748 00093, 00145, 00154, 00156, 00650, 00845, 01156, 01256, 01265, 01356, 01524, 01656, 01704, 02006 01723 00463 01865 00053, 00250, 00650 01540, 01541, 02436 00054, 01629 00178 00857, 00864, 00885, 01330, 01578, 01627, 01640, 01742, 01755, 02014, 02087 01684, 01811, 02104, 02352 01826 00864, 00885, 01756, 01758 02098 00054, 00178, 00866, 01156 00661 00156 00451, 00885, 00889, 01282, 01300, 01577, 01712, 01755, 01826, 02293 00463, 01661 01365 00250 00000, 00017, 00047, 00145, 00178, 00463, 01145, 01265, 01423, 01661 IPTV / Télévision IP / IPTV Brand ADB Amino AT&T Azteca BIG TV Cisco Entone MIO Satellite receiver / Récepteur satellite / Receptor de satélite Brand Code No. Brand Code No. Sony Airtel Astro Bell ExpressVu Century Coolsat Crossdigital DirecTV 40639 42243, 42248 41816, 42399 40775, 41170 40856 41806, 42147 41109 41377, 40392, 40566, 40639, 41142, 40247, 40749, 41749, 41856, 41076, 40099, 41109, 41442, 41443, 41444, 41609 40775, 41505, 41170, 41775 Net Brazil Netsat Next Level Pace Panasonic Pansat Philips Brand Code No. Brand Polaroid Code No. Code No. Brand Code No. 52254, 52586 51481, 51615, 51673, 52482 50858 52237 52452 52345, 52506, 52517 52302 52275 Motorola Reliance Scientific Atlanta SingTel Thomson TVB Verizon Wegener 51998, 50858, 52275, 52378 52452 50858, 52345, 52506, 52517 51998, 52275 52237 51615 52378 52567 Cable set top box / Décodeur de câblodistribution / Decodificador de cable Brand Code No.

Brand Sony ADB Amino Astro Bright House Cable One Cablevision Charter Cisco Comcast Cox Daeryung Digeo Digitelly Director Gehua General Instrument Homecast i3 Micro Insight 51006 51927 51602, 51822 50316 51376, 51877 51376, 51877 51376, 51877 51376, 51877, 52187 51877, 50877, 51982 51376, 51877, 51982, 52576 51376, 51877 51877, 50877 51187, 52187 52514 50476 50476 50476 52301 51602 51376, 51877 Jerrold Kaon Knology Mediacom Motorola MTS Myrio Pace Panasonic Philips Pioneer RCN Rogers Scientific Atlanta Sejin Shaw StarHub Suddene Olevia Omni Onida Onkyo Oppo Orion Palsonic Panasonic Panda Philco Philips PianoDisc Pioneer 10717 10675, 11268 10741, 10744, 10715, 10783, 10869, 11044, 11075 11071 10741, 10869 10717 10539 12099, 12500 10582, 10702, 11229 12080, 12192 10831 10573, 10664, 10695 10672 10783, 11061, 12499 11348, 11472 10717, 11472 10675, 11013, 11268, 12095, 12255, 12428, 12510, 12596, 12620 10571, 11769, 10627, 12147 10783 10702 10672 10558, 10623, 10867, 11164, 11602, 12365, 12472 11049 10790 10490, 10534 10815, 10717, 10790, 11020, 11149 10711 11127 10741, 10591, 10869, 11544, 11602, 12485 11416 10539 10539, 10503, 10675, 10646, 10821, 11177, 11268, 11354, 11472, 11506, 12229 10539, 12414 11273 10695, 10831, 11270, 11607, 12213 10522, 12083 10839, 10717, 11472 11521, 10521 12492 10741, 12572 10741, 10869, 11602 10717 11107 11316 12331 10778 11004, 12502 10503, 11769, 10627, 12147 10575, 11224, 12185, 12545 10695 10672, 11056 10490, 10503, 10703, 11362, 11490, 11579, 11641, 11762 10717 10675, 10790 12056, 10539, 10503, 10675, 12084, 10646, 11267, 11340, 11354, 11389, 11506, 12205, 12434 11024 10525, 10571, 10142, 10631, 11571, 12442 Polk Audio Presidian Proceed Proline Proscan ProVision RCA Rio Rotel Rowa Sampo Samsung Sansui Sanyo Schneider Semp Sharp Sherwood Sherwood Newcastle Shinco Shinsonic Sonashi Sonic Blue Soniq Sova Superscan SVA Sylvania 11013, 11020, 11061, 11086, 11316, 12110, 12140 10539 10675 10672 12616 10522, 12450 10778 10522, 10571, 11769, 10717, 10790, 10822, 11013, 11022, 11132, 12213, 12392, 12587, 12592, 12594 10869 10623 11004 10752 10490, 10573, 10744, 10199, 10820, 11044, 11075, 11470, 12069, 12329, 12369, 12489, 12556 10695 10695, 10873 10646 10503 10675, 10630, 10752, 11256, 12250 10741, 11043, 11077 11077 Symphonic TCL Teac Technics Technosonic Tedelux Telefunkon Terapin Theta Digital Tivo Toshiba Transonic Tredex Urban Concepts US Logic Venturer Videocon Viewmaster Viore Vizio Voxson Vitrak Virek Wharfedale Xbox Yamaha Zenith 10717, 11472 10533, 10839 10831 10869 10831 11122 10821 10717, 10752 10675, 10630, 10821, 11268, 12194, 12212 10675, 10821 12209, 12587 10675, 10571, 10717, 10790, 12380 10490, 10703 10730 11004 10790 11031 10571 11503 10503, 11769, 10695, 11045, 11154, 11503, 11606, 12165, 12277 10730 10804 10503 10839 10790, 12195 12209, 12521 11224 12154, 12553, 12580 11226, 12563 10730, 10831 11694 11694, 12587 10790 10522, 12083 10490, 10539, 10646, 10545, 10497, 10817, 11416, 12298, 12558 10503, 10741, 10591, 10869 Hallmark Hankook Hanns.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)
<http://yourpdfguides.com/dref/2405063>

G Hannspree Harman/Kardon Havermy Helios Hello Kitty Heran Herosonic Hewlett Packard Hisense Hitachi Hongmei HP Huafa Huari Humax Huodateji iLo Imperial Crown Infinity Insignia Inteq IRT JBL JCB Jean Jensen Jiahua Jinfeng Jinxing JVC Kangli KDS Ken Brown Kioto KLH Kolin Konka RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) 00093 01498, 01687 00753 01687 01399 00683, 00809, 00853 02012 00000, 00171, 01271 00748, 00753 00145 00000, 00650, 00810, 01300, 01755, 01685 01756 00047, 00178 00051, 00178, 00451, 01347, 01447, 01454, 02359 00051, 00156, 00178 00171 01520, 01826 00017 01498, 01687 01826 00171 00886 02337 00154, 00178 00093, 00864 00053 00000 00672, 00683 00748, 00865 01034, 01748, 01749, 01753, 02309, 02449 00178 00178 01783 01348, 01745, 01783, 01826 00054 00093 00865 00451 01826 01826 01494, 01502, 01642 00145, 00156, 00748, 00753, 01156, 01314, 02098, 02183, 02355, 02419 00145, 00156, 00178, 01145, 01156, 01256, 01643, 02215, 02431, 02433 00093 01494, 01502, 01642 00145 00145 01501 00051 01684 00661 00054 00171, 01204, 01423, 01517, 01564, 01710, 01780, 01892, 02002, 02049, 02088, 02417 00017 00451, 01661 00054 00000 00051, 00156 00761 00051 00051 00054, 00145, 00156 00053, 00463, 00650, 00731, 01253, 01601, 01774, 02271 00661 01498, 01687 01321 00054 00765, 00767 00053, 00150, 01240, 01331, 01610, 01755 00748 Searching for the correct code 1 Power on the device with its power switch. You can set the manufacturer's code using the Search function. 2 Aim the RM-VZ320 at the device you want to set. 3 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press the desired Device Select button, MGA then release both buttons. Midland 4 Enter 9 - 2 - 2 using the number buttons. Motorola The SET indicator flashes three times. Mudan NAD Mitsubishi Vision Kreisen Vizio Kunlun VU LG Wards Warumaia LXI Waycon Westinghouse M&S MAG Magnavox White Westinghouse Wyse Marantz Yapshe Mastro Zenith Matsushita Maxent Megatron Memorex 5 Press and hold Nationalto start searching.

NEC When the device turns off, release the button. NetTV If you overshoot the required code, you can search for the next or previous code using the Newave or button. NewSonic Nexus Electronics 6 Press . Nikko Nimbro The SET indicator flashes three times and turns off. Noblex Norcent 7 Check if the code number works correctly (see "Remote Button NuVision Descriptions").

Olevia If you still cannot operate the device, repeat steps to search for another Onida Optimus code that works for most functions of your device. Optoma Checking the manufacturer's code you have set 1 Press and hold Penney for more than 3 seconds. SET The SET indicator lights up. Petters While keeping Philco held down, press the desired Device Select button, SET then release both buttons. Philips Panda PARK Optonica Orion Panasonic 2 Enter 9 - 3 - 3 using the number buttons.

The SET indicator flashes three times. Pioneer Polaroid 3 Press . 4 When the SET Polyvision indicator starts flashing, count the number of flashes. Short flash(es) Portland indicate which digit (first, second, etc.), followed by long Prima flash(es) to indicate the digit number (i.e., 2 long flashes represent the number 2). "0" is indicated by rapid flashing. Determine the 5-digit code number this way. To recheck, press .

5 Press SET to finish. [US,FR,ES] 4-170-685-12(1) RM-VZ320_U/CA/E 01826 00876 00864, 00885, 01756, 01758 00051, 00661 02098 00178, 00856, 01178, 00017, 01265, 01423, 01768, 02358, 00054, 00178, 00866, 01156 02424 00661 00047, 00156 00054, 00154, 00156, 00178 00451, 00885, 00889, 01282, 00054 01300, 01577, 01712, 01755, 01498, 01687 01826, 02293 00051, 00054, 00463, 01661 00802, 01198, 01254, 01365, 01454, 01856, 01866, 01365 02372 00054, 00250 00704, 01454 00053 00000, 00017, 00047, 00145, 00250, 00650 00178, 00463, 01145, 01265, 01423, 01661 01755 00145, 00178 00150, 00154, 00178, 00463, 01670, 01892 00150, 00178 00017, 00047, 00051 00093, 00150, 00154, 00178, 00250, 00836, 01250 00093 00051 00156, 00178, 00866, 01156 00051 00051, 00053, 00154, 00156, 00178, 00704, 01704, 01797 01755 00093, 00178 01826 02183 00178 02104 00154 00748, 00824, 01365, 01589, 02110 01657, 02158 01144, 01240, 01331, 01610 00053, 01253, 02396 00154, 00166, 00250, 00650 01348 00093 00463, 01463 00051, 00054, 00250, 00650, 01271, 01457, 01480 00051 02104 00047, 00051, 00156, 00178, 01347 01523 00054, 00145, 00171, 00178, 00463, 01029, 01271, 01394, 01661 00000, 00051, 00054, 00178, 00605, 00639, 00690, 01454, 01744, 01806, 01856, 01866, 01867, 02372, 02374 00166, 00679, 00866, 01260, 01457 00765, 00865, 01276, 01314, 01498, 01523, 01687, 01766, 02002, 02120, 02121, 02425 00889, 01144 00451, 01661 00761, 00783, 01785 Teknika 00054, 51602 Tivo 52576 00150 00017, 01629 Telefunken 00702 51376, 51877 00093, 00154, 00171, 00178, Thomson 00753 00650, 01755 Tiane 00093 Samsung 00154, 00156, 00178, 00650, TMK 00178 00702, 00766, 00812, 00814, TNCi 00017 01060, converter / Convertisseur numérique Digital-to-analog 02051 Tobo 00748 Sansei analogique / 00451 00463, 01409, digital Toshiba Convertidor 01670, analógico 00093, 00145, 00154, 00156, Sansui 00171, 00650, 00845, 01156, 01256, 01892 01265, No. @@01704, Access HD 52185 01142 Gridlink 52348 02006 00842, TruTech 01723 Airlink 101 52491 Insignia 51415 Sanyuan 00093 TVS 00463 Alpha Digital 52185 01599 Lasonic 52348 Sceptre 01360, Venturer 01865 AMTC 52185 Magnavox 51563 Scotch 00178 Victor 00053, Apex Digital 52478 01711 Memorex 52486 00250, 00650 Scott 00178, Videocon 01540, Artec 52490 00054, 00154, 00156, MicroGEM 52489 01541, 02436 Sears 00047, Vidikron 00054, 01629 00171, CASTi 52305 00178 Philco 51563 Vidtech 00178 Semp 00156, Channel Master 52365 01356 RCA 52325, 52454 Viewsonic 00857, Shaofeng 00145 Coby 52667 Samsung 52592 00864, 00885, 01330, 01578, 01627, 01640, 01742, Sharp 00093, Coship 52487 00650, 00818 Sansonic 52348 02014, 02087 01755, Shencai 00145 Daewoo 52338 Sylvania 51563 01811, 02104, 02352 Viore 01684, Sheng 00093 Daytek Chia 52305 Tivax 52185 Vision 01826 Shenyang 00753 Digital Stream 52303 Ventura 52454 00885, 01756, 01758 Vizio 00864, Sherwood 01399 Dish Network 52470 Venturer 52454 VU 02098 System Sinotec 02012 Winegard 52454 00178, 00866, 01156 Wards 00054, Echostar 52470 00753 Skyworth 00748, Zenith 51415 Warumaia 00661 Evolution 52479 00650, 00810, 01300, Sony 00000, Zentech 52491 Waycon 00156 01685 GE 52360, 52450 Zinwell 52488 00885, 00889, 01282, Westinghouse 00451, Soundesign 00178 Goodmind 52450 01300, 01577, 01712, 01755, Sowa 00051, 00156, 00178 01826, 02293 Soyo 01520, 01826 White 00463, 01661 Westinghouse Spectroniq 01498, 01687 Wyse 01365 Squareview 00171 Yapshe 00250 SunBrite 02337 Zenith 00000, 00017, 00047, 00145, Superscan 00093, 00864 00178, 00463, 01145, 01265, Supreme 00000 01423, 01661 SVA 00748, 00865 i3 Micro Runco Insight Sampo Adjusting the volume Press VOL +/- to control the volume.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)

<http://yourpdfguides.com/dref/2405063>

Press **MUTING** to mute the sound. When a TV or other video device is selected, the TV's volume is controlled. When an audio device is selected, the amplifier's volume is controlled. When a DVD Home Theater is selected, its volume can be independently controlled. To change the factory preset of the volume control Example: When you want to hear the sound of your DVD player (set to the DVD button) via the connected amplifier (set to the AMP button) 1 Press and hold **SET** for more than 3 seconds. The **SET** indicator lights up. When keeping **SET** held down, press **DVD**, then release both buttons. 2 Enter 9 - 5 - 5 using the number buttons. The **SET** indicator flashes three times. 3 Press **AMP**. The **SET** indicator flashes three times and turns off. To reset the setting, press **DVD** again in Step 3.

Assigning a channel to each number button Channel selecting procedures can be programmed to the number buttons (0-9) for each device mode, which allows you to select any channel number directly with a single press of a number button. Example: To assign a channel to number button 9 in **CBL** mode 1 Press and hold **SET** for more than 3 seconds. The **SET** indicator lights up. When keeping **SET** held down, press **CBL**, then release both buttons. 2 Enter 9 - 7 - 1 using the number buttons.

The **SET** indicator flashes three times. 3 Press number button 9. The **SET** indicator flashes three times. 4 Enter the channel number using the number buttons, (dot), or **ENTER**. 5 Press **SET** to complete the programming. The **SET** indicator flashes three times and turns off. To cancel the process, press and hold **SET** for more than 3 seconds. To clear the program, press and hold the programmed number button for more than 3 seconds in Step 3. The **SET** indicator flashes three times and turns off. Voom 40869 JVC 40775, 41170, 41775 Brand Code No.

Brand Code No. @@Mitsubishi 40749 ADB 51927 Kaon 52514 Yes 40887 Motorola 40869, 40856 Amino 51602, 51822 Knology 51877 Zenega 40128 Multichoice 41959, 41960, 42059, 42060 Astro 50316 Mediacom 51376, 51877 Zenith 40856, 41856 Bright House 51376, 51877 Motorola 51376, 50476, 51187, 51951 Cable One 51376, 51877 MTS 51951 Cablevision 51376, 51877 Myrio 51602, 51822 Charter Pace 51376, DVD player / 51376, 51877, DVD / Reprodutor de DVD 51877, 51982 Lecteur 52187 Cisco 51877, 50877, 51982 Panasonic 51982 Comcast 51376, No. Philips 51305 Brand Code 51877, 51982, 52576 Brand Code No. Cox 51376, 51877 Pioneer 51877, Sony 11633, 10533, 10864, 11033, Cinerall 10730 50877 Daeryung 51877, 50877 RCN 51376 11070, 11431, 11516, 12138 CineVision 10876, 10869 Digeo 51187, 52187 Rogers 51877 Accurian 10675, 11416 Citizen 10695 Digitelly 52514 Scientific Atlanta 51877, 50877 Aiko 11728 Coby 10778, 11086, 11107, 11177, Director 50476 Sejin 51602 Aim 10672, 11177 11351, 11628, 12495, 12535, 12536, 12537, 12538, 12540 Gehua 50476 Shaw 51376 Aiwa 10641 Conia 10672 General 50476 StarHub 51927 Akai 10675, 10143, 10695, 10790, Instrument 12424, 12439 Contel 12331 51877 Suddenlink 51376, Homecast 52301 Akira 11316 Craig Warner 10831 51877, 52187 Time 51376, i3 Micro 51602 Alco 10790 Curtis Mathes 11087 Tivo 52576 Insight 51376, CyberHome 10816, 10874, 11023, 11024, Allegro 10869 51877 11129, 11537 Apex Digital 10672, 10717, 10794, 10796, 10797, 11004, 11020, 11056, Daewoo 10869, 11169, 11172, 11234 11061, 11100 Dapic 12517 Arrgo 11023 DEC 10778 Digital-to-analog converter / Convertisseur numérique Asahi 12615 Denon 10490, 10634, 12258 analogique / 10717, 10790, 11041, digital Diamond Convertidor 11071, analógico 10778, 10790 Audiovox 11121, 11122 Diamond Vision 11316 Audioworld 10790 No. Brand Code Brand Code digiRED 10717 No. Awa HD 10730 Access 52185 Gridlink 52348 Digitrex 10672, 11004, 11056, 11100 Axion 101 11071 Airlink 52491 Insignia 51415 Disney 10675, 11270, 12318, 12356 BBK Digital 11224 Alpha 52185 Lasonic 52348 DSE 10675 Bel Canto Design 11571 AMTC 52185 Magnavox 51563 Durabrand 11023, 11127, 12164 Blaupunkt 10717 Apex Digital 52478 Memorex 52486 DVD2000 10521 Blue Parade 10571 Artec 52490 MicroGEM 52489 Dynex 12255, 12388 Blue Sky 12623 CASTi 52305 Philco 51563 Electrohome 11607 Broksonic 10695 Channel Master 52365 RCA 52325, 52454 Emerson 10675, 10591, 10821, 11268, California Audio 10490 Coby 52667 Samsung 52592 12212 Labs Coship 52487 Sansonic 52348 Enterprise 10591 Celestial 11020 Daewoo 52338 Sylvania 51563 ESA 10821, 11268 Centrex 10672, 11004 Daytek 52305 Tivax 52185 Funai 10675, 11268 Changhong 10627, 11061 Digital Stream 52303 Ventura 52454 Gateway 11077 Cinea 10831 Dish Network 52470 Venturer 52454 GE 10522, 10815, 10717 System Winegard 52454 EchoStar 52470 Zenith 51415 Evolution 52479 Zentech 52491 GE 52360, 52450 Zinwell 52488 Goodmind 52450 10675, 11013, 11268, 12095, 12255, 12428, 12510, 12596, 12620 10571, 11769, 10627, 12147 10783 10702 10672 to the previous 11164, 10558, 10623, 10867, 11602, 12365, 12472 location. jWin 11049 : Kawasaki replays the scene Briefly 10790 Kenwood 10490, 10534 (Flash). 10815, 10717, 10790, :KLH Briefly fast forwards the 11020, 11149 sceneKonka +). 10711 (Flash Lenox 11127 Proceeds to the next location. :LG 10741, 10591, 10869, 11544, 11602, Fast : LiteOn reverses. 11416 12485 : Plays. Loewe 10539 10539, 10503, 10675, 10646, Fast forwards. : Magnavox 10821, 11177, 11268, 11354, : Records. 11472, 11506, 12229 Marantz 10539, 12414 : Pauses. McIntosh 11273 : Stops.

Memorex 10695, 10831, 11270, 11607, 12213 B, C buttons A, Microsoft 10522, 12083 D: (Live TV) Displays Master Mintek 10839, 10717, 11472 Mitsubishi 11521, 10521 Guide. Moserbaer 12492 GUIDE: Displays the program NAD 10741, 12572 10741, 10869, 11602 guideNEC (EPG). 10717 Sony 11633, 10533, 10864, 11033, Cinerall 10730 LIST:Nesa Displays the title of recorded 11070, 11431, 11516, 12138 Norcent 11107 CineVision 10876, 10869 Accurian 10675, 11416 Nordmende 11316 program. Citizen 10695 Aiko 11728 Olevia 12331 Coby 10778, 11086, 11107, 11177, Aim 10672, 11177 11351, 11628, 12495, 12535, Omni 10778 12536, 12537, 12538, 12540 Aiwa 10641 Onida 11004, 12502 Conia 10672 Akai 10675, 10143, 10695, 10790, Onkyo 10503, 11769, 10627, 12147 12424, 12439 Contel 12331 Oppo 10575, 11224, 12185, 12545 Akira 11316 Craig 10831 Orion 10695 : Proceeds to the previous Alco 10790 Curtis Mathes 11087 Palsonic 10672, 11056 CyberHome 10816, 10874, 11023, 11024, Allegro 10869 location. Panasonic 10490, 10503, 10703, 11362, 11129, 11537 Apex Digital 10672, 10717, 10794, 10796, 11490, : Panda replays the 11579, 11641, 11762 Briefly scene 10797, 11004, 11020, 11056, Daewoo 10869, 11169, 11172, 11234 10717 11061, 11100 Dapic 12517 (Flash).

Philco 10675, 10790 Arrgo 11023 DEC 10778 12056, 10539, 10503, 10675, :Philips fast forwards the 11340, Briefly Asahi 12615 Denon 10490, 10634, 12258 12084, 10646, 11267, Audiovox 10717, 10790, 11041, 11071, Diamond 10778, 10790 scene (Flash +). 11354, 11389, 11506, 12205, 11121, 11122 12434 Diamond Vision 11316 RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) :PianoDisc Proceeds to the next location.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)

<http://yourpdfguides.com/dref/2405063>

Audioworld 10790 11024 digiRED 10717 Awa 10730 Digitrex 10672, 11004, 11056, 11100 Fast : Pioneerreverses. 10525, 10571, 10142, 10631, 11571, 12442 Axion 11071 Disney 10675, 11270, 12318, 12356 BBK 11224 : Plays. DSE 10675 Bel Canto Design 11571 Durabrand 11023, 11127, 12164 : Fast forwards. Blaupunkt 10717 DVD2000 10521 : Records. Blue Parade 10571 Dynex 12255, 12388 Blue Sky 12623 : Pauses. Electrohome SET: Press to set up the RM-VZ320. The indicator lights or flashes 11607 10591, 10821, 11268, while Broksonic 10695 Emerson 10675, : Stops. California Audio 10490 12212 setting.

Labs Red button A: Enterprise 10591 Device Select buttons: Press to select the device to operate. Celestial 11020 ESA 10821, 11268 B: Green button Centrex 10672, 11004 Funai 10675, 11268 ///: Moves the cursor to select 11061 a menu item/enters the selected item. Changhong 10627, C: Yellow button Gateway 11077 VOL +/-: Turns the volume up/down. Cinea 10831 GE 10522, 10815, 10717 D: Blue button Remote Button Descriptions 10821, 11177, 11268, 11354, 41358, 42619 41899 Symphonic 10675, 10821 11472, 11506, 12229 41775, SKY 40856, 40887, 40775, 41505, 41170, TCL Brazil 12209, 12587 41358 10539, 12414 42262, 42527 SKY 40856, 42619 Teac Mexico 10675, 10571, 10717, 10790, 11273 41775 40775, Sonicbox 41899 12380 10695, 10831, 11270, 11607, 41664, 41821, 41948 Sonicview 42373, 42374, Technics 10490, 10703 42449 12213 40566 Star 40887 Technosonic 10730 10522, 12083 40869 Star Choice 40869 Tedelex 11004 10839, 10717, 11472 Strong 41806 Telefunken 10790 11521, 10521 40775, 41775 Supernova 40887 Terapin 11031 12492 40099, 40887 40856, TATA Sky 41997 Theta Digital 10571 10741, 12572 40128 Telefonica 42262, Tivo 11503 42263, 42272, 42527 10741, 10869, 11602 41899 Televisa 40887 Toshiba 10503, 11769, 10695, 11045, 10717 41775 40775, 11154, 11503, 11606, 12165, Thomson 41997 11107 40749, 41749, 41442, 41142, 12277 41442, 41443, 41444 Tivo 41142, 41443, 11316 41444 Transonic 10730 41749, 40790 Toshiba 40749, 41989 12331 Tredex 10804 TVB 41989 41664 10778 Urban Concepts 10503 UEC 41358 40856, 40887, 11004, 12502 41887, 41989 US Logic 10839 Ultrasat 41806 40099 10503, 11769, 10627, 12147 Venturer 10790, 12195 Uniden 40722 40887 10575, 11224, 12185, 12545 Videocon 12209, 12521 ViewSat 41994 40869 10695 Viewmaster 11224 Voom 40869 40775, 41170, 10672, 11056 41775 Vioreand Wireless 12154, 12553, 12580 Wire 40128 40722 10490, 10503, 10703, 11362, Vizio Ltd. 11226, 12563 India 11490, 11579, 11641, 11762 40749 Voxson 10730, 10831 Yes 40887 10717 40856 40869, Vtrak 11694 Zenega 40128 10675, 10790 42059, 42060 41959, 41960, Vtrek 11694, 12587 Zenith 40856, 41856 12056, 10539, 10503, 10675, Wharfedale 10790 12084, 10646, 11267, 11340, Xbox 10522, 12083 11354, 11389, 11506, 12205, 12434 Yamaha 10490, 10539, 10646, 10545, 10497, PianoDisc DVD player / 11024 Lector DVD / Reprodutor de DVD 10817, 11416, 12298, 12558 Pioneer 10525, 10571, 10142, 10631, Zenith 10503, 10741, 10591, 10869 11571, 12442 Brand Code No. Brand Code No. DSE Echostar Marantz McIntosh Expressvu Memorex Fortec Star GE Microsoft General Mintek Instrument Mitsubishi GOI Moserbaer Gradiente NAD Handan NEC Homecast Nesa HTS Norcent Network Hughes Systems Nordmende Humax Olevia Ikusi Omni Indovision Onida Innova Onkyo ISkyB Oppo Jerrold Orion JVC Palsonic Magnavox Panasonic Mitsubishi Panda Motorola Philco Multichoice Philips Insignia Integra IRT JBL JNC : Proceeds JVC Cable set top box/IPTV Satellite receiver 12069, 12329, 12369, 12489, 12556 10695 10695, 10873 10646 10503 RETURN: 10675, 10630, to the previous Returns 10752, 11256, 12250 Sherwood 10741, 11043, 11077 display/exits the menu. Sherwood 11077 MENU: Calls up the menu display. Newcastle Shinco 10717, 11472 INPUT: Changes the input mode. Shinsonic 10533, 10839 1 10831 ENTER, (dot): 9, 0, Sonashi SonicChanges the channel.

For example, Blue 10869 Soniqto change 10831 to channel 5, press 0 and Sova 11122 5 (or, press 5 and ENTER). Superscan 10821 SVA PAGE +/-: Page up/down 10717, 10752 Sylvania 10675, 10630, 10821, 11268, FAVORITES: Enables the Favorite 12194, 12212 Symphonic function. 10675, 10821 TCL 12209, 12587 Teac INFO: Displays program 10675, 10571, 10717, 10790, 12380 information. 10703 Technics 10490, OPTIONS: Displays the options Technosonic 10730 Tedelex 11004 menu. Telefunken 10790 RECALL: Switches between the Terapin 11031 Thetacurrent and previous channel. Digital 10571 Tivo 11503 +/-: Switches the channel up/ CH Toshiba 10503, 11769, 10695, 11045, 11154, 11503, 11606, 12165, down. 12277 Transonic 10730 Tredex 10804 Urban Concepts 10503 US Logic 10839 Venturer 10790, 12195 Videocon 12209, 12521 Viewmaster RETURN: 11224 Returns to the previous Viore 12154, 12553, 12580 display/exits the menu. Vizio 11226, 12563 Voxson 10730, 10831 MENU: Calls up the menu display. Vtrak 11694 INPUT: (TV/SAT) Switches the Vtrek 11694, 12587 output between SAT and TV. Wharfedale 10790 Xbox 1 10522, 12083 10646, 10545, 9, 0, ENTER, (dot): Yamaha 10490, 10539, 10497, 10817, 11416, 12298, Changes the channel.

For example, 12558 to to channel 5, 10869 Zenith change 10503, 10741, 10591, press 0 and Sansui Sanyo Schneider Semp Sharp DVD player/recorder : Skips to the previous chapter/track. : Briefly replays the scene (Flash). : Briefly fast forwards the scene (Flash +). : Skips to the next chapter/ track. : Fast reverses. : Plays. : Fast forwards. : Records (for DVD recorder). : Pauses. : Stops.

(SET UP) Calls up the system/ A: setup menu. B: (SUBTITLE) Switches the subtitle. C: (AUDIO) Changes the sound. D: (CLEAR) Clears the setting. GUIDE: Displays the program guide (EPG). LIST: Displays the Title List. RETURN: Returns to the previous display/exits the menu. MENU: Displays the DVD menu. INPUT: Changes the input mode. 9, 0: Number buttons 1 (dot): (+10) Selects numbers 10 and above.

Opens/closes the disc tray. : PAGE +/-: (DVD) Selects the DVD drive. PAGE : (HDD) Selects the internal HDD (hard disk drive). FAVORITES: (TOP MENU) Displays the Top Menu. INFO: (DISPLAY) Displays the playback information.

OPTIONS: Displays the options menu. RECALL: (DRIVE SELECT) Switches between HDD and DVD. +/-: Switches the channel up/ CH down (for DVD recorder). ENTER: Enters the selected item. DVD Home Theater : Skips to the previous chapter/track.

: Briefly replays the scene (Flash). : Briefly fast forwards the scene (Flash +). : Skips to the next chapter/ track. : Fast reverses. : Plays. : Fast forwards. : Records. : Pauses. : Stops. (SET UP) Calls up the system/ A: setup menu.

B: (SUBTITLE) Switches the subtitle. C: (AUDIO) Changes the sound. D: (CLEAR) Clears the setting. GUIDE: Displays the program guide (EPG). LIST: Enables the SOUND FIELD function. RETURN: Returns to the previous display/exits the menu. MENU: Displays the DVD menu. INPUT: Changes the input mode. 9, 0: Number buttons 1 (dot): (+10) Selects numbers 10 and above. Opens/closes the disc tray.

: FAVORITES: (TOP MENU) Displays the Top Menu.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)
<http://yourpdfguides.com/dref/2405063>

INFO: (DISPLAY) Displays the playback information. **OPTIONS:** Displays the amplifier menu. **RECALL: (BAND)** Selects FM/AM. **+/:** Presets or tunes frequency CH up/down.

ENTER: Enters the selected item. Blu-ray Disc/HD-DVD player : Skips to the previous chapter/track. : Briefly replays the scene (Flash +). : Briefly fast forwards the scene (Flash +). : Skips to the next chapter/ track.

: Fast reverses. : Plays. : Fast forwards. : Records (for BD recorder). : Pauses. : Stops. **(SET UP)** Calls up the system/A: setup menu. B: **(SUBTITLE)** Switches the subtitle. C: **(AUDIO)** Changes the sound. D: **(CLEAR)** Clears the setting.

GUIDE: Displays the program guide (EPG). **RETURN:** Returns to the previous display/exits the menu. **MENU:** Displays the Pop-up Menu/ Disc Menu.

INPUT: Changes the input mode. 9, 0: Number buttons 1 (dot): (+10) Selects numbers 10 and above. Opens/closes the disc tray. : **PAGE +:** (BD) Selects the BD drive. **PAGE :** (HDD) Selects the internal HDD (hard disk drive). **FAVORITES: (TOP MENU)** Displays the Top Menu. **INFO: (DISPLAY)** Displays the playback information.

OPTIONS: Displays the options menu. **ENTER:** Enters the selected item. **CD player :** Selects the previous track. : Selects the next track. : Fast reverses. : Plays. : Fast forwards. : Records. : Pauses. : Stops.

INPUT: (DISC SKIP) Selects the next disc. 9, 0: Selects the track number. 1 0 selects track 10. (dot): (+10) Selects numbers 10 and above. Opens/closes the disc tray. : **INFO: (DISPLAY)** Switches the display on and off. General Cable set top box (nonSony) (51376) DVD (BD) Sony DVD player (11033) DVR (PVR) Sony digital video recorder (22676) Sony VCR (60032) VCR Sony CD player (70000) CD AMP Sony receiver (82586) Specifications Operating distance Power requirements Battery life Dimensions Mass Approx. 11 m (36 ft) (varies depending on devices of different manufacturers) Two size AA (R6) dry batteries (not supplied) Approx. 1 year when using size AA (LR6) alkaline batteries (varies depending on frequency of button use - up to approx. 300 times per day.

) Approx. 52 × 236 × 26 mm (2 1/8 × 9 3/8 × 1 1/16 in.) (w/h/d) Approx. 120 g (4.2 oz) (not including batteries) Operate the device Turns the TV on and off (does not work for a CD player or cassette deck). **TV: POWER:** Turns the selected device on and off. **MUTING:** Mutes the volume. Press again to turn muting off. **SLEEP:** Enables the Sleep function (when available). The number 5, CH+, and buttons each have a tactile dot for ease of use.

GUIDE: Displays the program guide (EPG). **LIST:** Displays the title of recorded program/PVR menu. RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) 5 (or, press 5 and ENTER). **PAGE +/:** Page up/down **FAVORITES:** Enables the Favorite function. **INFO:** Displays program information.

OPTIONS: Displays the Satellite dish menu/Station Index. **RECALL:** Tunes to the last tuned station. **+/:** Switches the channel up/ CH down. **Cassette deck :** Rewinds. : Plays.

: Fast forwards. : Records. : Pauses. : Stops. **Reverses. A: D: Reverses*. Plays*. : : Pauses*. : Fast forwards*. : Rewinds*.**

LIST: Records*. INPUT: (DECK A/B) Switches between deck A and deck B (dual cassette deck only). **INFO: Stops*. * Activated when using a dual cassette deck (for deck A of Sony device). Clearing the automatic power-on control (Sony devices only) The Device Select buttons are preset to automatically turn on the device when pressed. To cancel the function: 1 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press , then release both buttons. 2 Enter 9 - 7 - 7 using the number buttons. The SET indicator flashes three times.**

3 Press the desired Device Select button. The SET indicator flashes three times and turns off. **Notes TV : VIDEO 1 input : VIDEO 2 input : HDMI input : RGB input : (PIP INPUT)** Changes the input mode of the "window" picture. : (PIP) Turns the "window" picture on and off. : (PIP MOVE) Moves the location of the "window" picture.

: (PIP STILL) Freezes the "window" picture. : (PIP SWAP) Switches between "main" and "window" picture. Red button A: B: Green button C: Yellow button D: Blue button **GUIDE:** Displays the program guide (EPG). **LIST: (CAPTION)** Displays closed captioning. **RETURN:** Returns to the previous display/exits the menu.

MENU: Calls up the menu display. **INPUT:** Changes the input mode. 1 9, 0, ENTER, (dot): Changes the channel. For example, to change to channel 5, press 0 and 5 (or, press 5 and ENTER). **PAGE +/:** (PIP CH +/) Changes the channel up/down in the "window" picture. **FAVORITES:** Enables the Favorite function. **INFO:** Displays program information. **OPTIONS:** Displays the options menu. **RECALL:** Selects the channel previously selected. **+/:** Switches the channel up/ CH down.

VCR : Rewinds. : Plays. : Fast forwards. : Records. : Pauses. : Stops. INPUT: Changes the input mode. 9, 0: Number buttons 1 Ejects a tape. : **INFO: (DISPLAY)** Displays the playback information. **OPTIONS: (ANT/SW)** Switches the antenna output.

RECALL: (DRIVE SELECT) Selects the deck. **+/:** Switches the channel up/ CH down. **ENTER:** Enters the selected item. 1 2 3 4 Aim the RM-VZ320 directly at the device. Press the Device Select button for the device you want to operate.

If you press four buttons in Step 4, the setting mode ends and the channel will be programmed. If another channel has already been set on a button, it will be overwritten with the new one. Once a number button has been programmed, it cannot function as regular number button. **DVR (digital video recorder)/PVR (personal video recorder) : Proceeds to the previous location. : Briefly replays the scene (Flash).**

: Briefly fast forwards the scene (Flash +). : Proceeds to the next location. : Fast reverses. : Plays. : Fast forwards. : Records. : Pauses. : Stops. **(REPLAY*)** Enables the Replay A: function for DVR/Replay TV. B: **(Live TV*)** Displays Master Guide.

GUIDE: Displays the program guide (EPG). **LIST:** Displays the title of recorded program. **RETURN:** Returns to the previous display/exits the menu. **MENU:** Calls up the menu display. **INPUT:** Changes the input mode. 9, 0: Number buttons 1 (dot): (+10) Selects numbers 10 and above. Opens/closes the disc tray. : **PAGE +/:** Page up/down, Thumbs* up/down **INFO: (DISPLAY)** Displays the playback information. **RECALL:** Selects the channel previously selected. **+/:** Switches the channel up/ CH down.

ENTER: Enters the selected item. * These buttons correspond to TiVo service or the Replay service. @@ : Plays. : Fast forwards. : Records.

: Pauses. : Stops. **INPUT:** Changes the input mode cyclically. @@@@1 Press and hold SET for more than 3 seconds. The SET indicator lights up.

While keeping SET held down, press , then release both buttons. 2 Enter 9 - 0 - 0 using the number buttons. The SET indicator flashes three times. To cancel, press any button except . 3 Press . @@@@@ Aim the RM-VZ320 directly at the device.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)

<http://yourpdfguides.com/dref/2405063>

Remove any obstacles in the path between the RM-VZ320 and the device. Make sure you have pressed the correct Device Select button. Check that the device has infrared remote capability. @@@@The batteries are weak, or not inserted correctly.

@@@@@@@The function of the buttons varies depending on settings/operating modes. The table of "Remote Button Descriptions" shows how the RM-VZ320 generally operates for each device in the preset mode. If your cable set top box can control volume, be sure to set its volume to a moderate level. If the volume on the cable set top box is turned down completely, you will not be able to adjust your TV's volume with the RM-VZ320. TV / Téléviseur / TV Español

Brand Code No. 01339 00650 00093, 00463 00761, 00783, 00842 00672, 00702, 00812, 01675, 02232 00753, 01733 00672 00250 00250, 00650 00051 00093, 00178, 00451, 01365, 01589, 02014, 02087 SET 00156, 00748, 00765, 00767, 00879, 02397 01738 POWER 00451, 00802, 00846, 00875 00171 Botones de 00661 00661, 00812 selección 00154 de 01032, 01315 00876, 00898 dispositivo 01254, 02153 01472, 01476, 01477, 01543 00463 00748 00054 00000 00765 00051, 00661 00753 00156, 00765, 00767, 00783, 01156 00000, 01687, 01756 00053 00672 00451 01671, 01672 Brand Coby Code No. 01634, 02306, 02315, 02344, Instalación de las baterías Abra el compartimiento de las baterías e inserte dos baterías tamaño AA (R6) secas (no incluidas). Inserte las baterías (primero el lado negativo) en el compartimiento de las baterías tal como se muestra debajo. Para los clientes de EE. UU.

ADVERTENCIA Guía de configuración Akira Alfide Anam Anam National Anhua AOC Apex Digital Astar Audiovox Aventura Baile Beijing Bell & Howell BenQ BGH Blue Sky BPL Broksonic Cailing Carver Celebrity Celera Changcheng Changfeng Changhong Chun Yun Chung Hsin Cinema Cinerall Citizen Acer Action Admiral Advent Akai 02345, 02348 EstaCommercial guía muestra la configuración y uso del RM-VZ320 para operar sus dispositivos. 00047, 01447 Français Solutions Si su dispositivo Sony 00753, 01156 ya ha sido configurado, consulte "Funcionamiento del dispositivo". Conrowa 00145, 00156, Establezca el código del fabricante Español Este equipo ha sido probado y se ha encontrado que cumple con los límites para dispositivos digitales de Clase B, de acuerdo con la Parte 15 de las normas de la FCC. Estos límites han sido diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede emitir energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede provocar interferencias perjudiciales en las radiocomunicaciones.

Sin embargo, no existe ninguna garantía de que tales interferencias no se produzcan en una instalación particular. @@@@Aumento de la separación entre el equipo y el receptor. @@@@Brand Code No. @@@@Brand Code No. Sony Airtel Astro Bell ExpressVu Century Coolsat Crossdigital DirecTV 40639 42243, 42248 41816, 42399 40775, 41170 40856 41806, 42147 41109 41377, 40392, 40566, 40639, 41142, 40247, 40749, 41749, 41856, 41076, 40099, 41109, 41442, 41443, 41444, 41609 40775, 41505, 41170, 41775 Net Brazil Netsat Next Level Pace Panasonic Pansat Philips Brand Code No.

Brand Polaroid Code No. Code No. Brand Code No. 52254, 52586 51481, 51615, 51673, 52482 50858 52237 52452 52345, 52506, 52517 52302 52275 Motorola Reliance Scientific Atlanta SingTel Thomson TVB Verizon Wegener 51998, 50858, 52275, 52378 52452 50858, 52345, 52506, 52517 51998, 52275 52237 51615 52378 52567 Cable set top box / Décodeur de câblodistribution / Decodificador de cable Brand Code No. Brand Sony ADB Amino Astro Bright House Cable One Cablevision Charter Cisco Comcast Cox Daeryung Digeo Digitelly Director Gehua General Instrument Homecast i3 Micro Insight 51006 51927 51602, 51822 50316 51376, 51877 51376, 51877 51376, 51877 51376, 51877, 52187 51877, 50877, 51982 51376, 51877, 51982, 52576 51376, 51877 51877, 50877 51187, 52187 52514 50476 50476 50476 52301 51602 51376, 51877 Jerrold Kaon Knology Mediacom Motorola MTS Myrio Pace Panasonic Philips Pioneer RCN Rogers Scientific Atlanta Sejin Shaw StarHub Suddene Olevia Omni Onida Onkyo Oppo Orion Palsonic Panasonic Panda Philco Philips PianoDisc Pioneer 10717 10675, 11268 10741, 10744, 10715, 10783, 10869, 11044, 11075 11071 10741, 10869 10717 10539 12099, 12500 10582, 10702, 11229 12080, 12192 10831 10573, 10664, 10695 10672 10783, 11061, 12499 11348, 11472 10717, 11472 10675, 11013, 11268, 12095, 12255, 12428, 12510, 12596, 12620 10571, 11769, 10627, 12147 10783 10702 10672 10558, 10623, 10867, 11164, 11602, 12365, 12472 11049 10790 10490, 10534 10815, 10717, 10790, 11020, 11149 10711 11127 10741, 10591, 10869, 11544, 11602, 12485 11416 10539 10539, 10503, 10675, 10646, 10821, 11177, 11268, 11354, 11472, 11506, 12229 10539, 12414 11273 10695, 10831, 11270, 11607, 12213 10522, 12083 10839, 10717, 11472 11521, 10521 12492 10741, 12572 10741, 10869, 11602 10717 11107 11316 12331 10778 11004, 12502 10503, 11769, 10627, 12147 10575, 11224, 12185, 12545 10695 10672, 11056 10490, 10503, 10703, 11362, 11490, 11579, 11641, 11762 10717 10675, 10790 12056, 10539, 10503, 10675, 12084, 10646, 11267, 11340, 11354, 11389, 11506, 12205, 12434 11024 10525, 10571, 10142, 10631, 11571, 12442 Polk Audio Presidian Proceed Proline Proscan ProVision RCA Rio Rotel Rowa Sampo Samsung Sansui Sanyo Schneider Semp Sharp Sherwood Sherwood Newcastle Shinco Shinsonic Sonashi Sonic Blue Soniq Sova Superscan SVA Sylvania 11013, 11020, 11061, 11086, 11316, 12110, 12140 10539 10675 10672 12616 10522, 12450 10778 10522, 10571, 11769, 10717, 10790, 10822, 11013, 11022, 11132, 12213, 12392, 12587, 12592, 12594 10869 10623 11004 10752 10490, 10573, 10744, 10199, 10820, 11044, 11075, 11470, 12069, 12329, 12369, 12489, 12556 10695 10695, 10873 10646 10503 10675, 10630, 10752, 11256, 12250 10741, 11043, 11077 11077 Symphonic TCL Teac Technics Technosonic Tedelex Telefunken Terapin Theta Digital Tivo Toshiba Trasonic Tredex Urban Concepts US Logic Venturer Videocon Viewmaster Viore Vizio Voxson Vtrak Vtrek Wharfedale Xbox Yamaha Zenith 10717, 11472 10533, 10839 10831 10869 10831 11122 10821 10717, 10752 10675, 10630, 10821, 11268, 12194, 12212 10675, 10821 12209, 12587 10675, 10571, 10717, 10790, 12380 10490, 10703 10730 11004 10790 11031 10571 11503 10503, 11769, 10695, 11045, 11154, 11503, 11606, 12165, 12277 10730 10804 10503 10839 10790, 12195 12209, 12521 11224 12154, 12553, 12580 11226, 12563 10730, 10831 11694 11694, 12587 10790 10522, 12083 10490, 10539, 10646, 10545, 10497, 10817, 11416, 12298, 12558 10503, 10741, 10591, 10869 Hallmark Hankook Hanns.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)
<http://yourpdfguides.com/dref/2405063>

G Hannspree Harman/Kardon Havermy Helios Hello Kitty Heran Herosonic Hewlett Packard Hisense Hitachi Hongmei HP Huafa Huari Humax Huodateji iLo Imperial Crown Infinity Insignia Inteq IRT JBL JCB Jean Jensen Jiahua Jinfeng Jinxing JVC Kangli KDS Ken Brown Kioto KLH Kolin Konka RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) 00093 01498, 01687 00753 01687 01399 00683, 00809, 00853 02012 00000, 00171, 01271 00748, 00753 00145 00000, 00650, 00810, 01300, 01755, 01685 01756 00047, 00178 00051, 00178, 00451, 01347, 01447, 01454, 02359 00051, 00156, 00178 00171 01520, 01826 00017 01498, 01687 01826 00171 00886 02337 00154, 00178 00093, 00864 00053 00000 00672, 00683 00748, 00865 01034, 01748, 01749, 01753, 02309, 02449 00178 00178 01783 01348, 01745, 01783, 01826 00054 00093 00865 00451 01826 01826 01494, 01502, 01642 00145, 00156, 00748, 00753, 01156, 01314, 02098, 02183, 02355, 02419 00145, 00156, 00178, 01145, 01156, 01256, 01643, 02215, 02431, 02433 00093 01494, 01502, 01642 00145 00145 01501 00051 01684 00661 00054 00171, 01204, 01423, 01517, 01564, 01710, 01780, 01892, 02002, 02049, 02088, 02417 00017 00451, 01661 00054 00000 00051, 00156 00761 00051 00051 00054, 00145, 00156 00053, 00463, 00650, 00731, 01253, 01601, 01774, 02271 00661 01498, 01687 01321 00054 00765, 00767 00053, 00150, 01240, 01331, 01610, 01755 00748 Búsqueda del código del fabricante Westinghouse M&S MAG Magnavox White Westinghouse Wyse Marantz Yapshe Mastro Zenith Matsushita Maxent Megatron Memorex Vision Kreisren Vizio Kunlun VU LG Wards Warumaia LXI Waycon Puede configurar el código del fabricante correcto usando la función Búsqueda. 1 Encienda el dispositivo con su botón de encendido. 2 Apunte el RM-VZ320 al dispositivo que desea configurar. 3 Presione y mantenga presionado el botón SET durante más de 3 segundos. Se encenderá la luz indicadora SET.

MGA Mientras tiene Midland presionado el botón SET, presione el botón de selección de Mitsubishi dispositivo deseado y luego suelte ambos botones. Mudan 4 Ingrese 9 - 2 - 2 usando los botones con números. NAD El indicador SET parpadea tres veces. National NEC Motorola 5 Presione y mantenga presionado para comenzar a buscar. NetTV Cuando el dispositivo se apague suelte el botón. Newave NewSonic Si se pasa del código que necesita, puede buscar el código anterior o Nexus Electronics siguiente con los botones . Nikko Nimbro Noblex Norcent 6 Presione . El indicador SET parpadeará tres veces y se apagará. NuVision 7 Compruebe si Olevia el número de código funciona correctamente (consulte Onida "Descripción de los botones del control remoto"). Optimus Si sigue sin poder operar el dispositivo, repita los pasos para buscar otro Optoma Optonica código que funcione con la mayoría de las funciones de su dispositivo.

Orion Panasonic Panda Comprobación del código del fabricante que PARK configuró Penney 1 Presione y mantenga presionado el botón SET durante más de 3 segundos. Philips Se encenderá la luz indicadora SET. Mientras tiene presionado el botón SET, presione el botón de selección de dispositivo deseado y luego suelte ambos botones. Pioneer Polyvision Portland Prima Petters Philco Polaroid 2 Ingrese 9 - 3 - 3 usando los botones con números. El indicador SET parpadea tres veces.

3 Presione . 01826 00876 00864, 00885, 01756, 01758 00051, 00661 02098 00178, 00856, 01178, 00017, 01265, 01423, 01768, 02358, 00054, 00178, 00866, 01156 02424 00661 00047, 00156 00054, 00154, 00156, 00178 00451, 00885, 00889, 01282, 00054 01300, 01577, 01712, 01755, 01498, 01687 01826, 02293 00051, 00054, 00463, 01661 00802, 01198, 01254, 01365, 01454, 01856, 01866, 01365 02372 00054, 00250 00704, 01454 00053 00000, 00017, 00047, 00145, 00250, 00650 00178, 00463, 01145, 01265, 01423, 01661 01755 00145, 00178 00150, 00154, 00178, 00463, 01670, 01892 00150, 00178 00017, 00047, 00051 00093, 00150, 00154, 00178, 00250, 00836, 01250 00093 00051 00156, 00178, 00866, 01156 00051 00051, 00053, 00154, 00156, 00178, 00704, 01704, 01797 01755 00093, 00178 01826 02183 00178 02104 00154 00748, 00824, 01365, 01589, 02110 01657, 02158 01144, 01240, 01331, 01610 00053, 01253, 02396 00154, 00166, 00250, 00650 01348 00093 00463, 01463 00051, 00054, 00250, 00650, 01271, 01457, 01480 00051 02104 00047, 00051, 00156, 00178, 01347 01523 00054, 00145, 00171, 00178, 00463, 01029, 01271, 01394, 01661 00000, 00051, 00054, 00178, 00605, 00639, 00690, 01454, 01744, 01806, 01856, 01866, 01867, 02372, 02374 00166, 00679, 00866, 01260, 01457 00765, 00865, 01276, 01314, 01498, 01523, 01687, 01766, 02002, 02120, 02121, 02425 00889, 01144 00451, 01661 00761, 00783, 01785 Runco Insight Sampo 00017, 01629 Telefunken 00702 51376, 51877 00093, 00154, 00171, 00178, Thomson 00753 00650, 01755 Tiane 00093 Samsung 00154, 00156, 00178, 00650, TMK 00178 00702, 00766, 00812, 00814, TNCi 00017 01060, converter / Convertisseur numérique Digital-to-analog 02051 Toba 00748 Sansei analogique / 00451 00463, 01409, digital Toshiba Convertidor 01670, analógico 00093, 00145, 00154, 00156, Sansui 00171, 00650, 00845, 01156, 01256, 01892 01265, No. @@@@ Se encenderá la luz indicadora SET. @@@@ 2 Ingrese 9 - 5 - 5 usando los botones numéricos. El indicador SET parpadeará tres veces.

3 Presione AMP. @@@@ Se encenderá la luz indicadora SET. @@@@ 2 Ingrese 9 - 7 - 1 usando los botones numéricos. El indicador SET parpadeará tres veces. 3 Presione el botón numérico 9. El indicador SET parpadeará tres veces. @@@@ 5 Presione SET para completar la programación. El indicador SET parpadeará tres veces y se apagará. @@@@ Brand Code No. @@@@ Mitsubishi 40749 ADB 51927 Kaon 52514 Yes 40887 Motorola 40869, 40856 Amino 51602, 51822 Knology 51877 Zenega 40128 Multichoice 41959, 41960, 42059, 42060 Astro 50316 Mediacom 51376, 51877 Zenith 40856, 41856 Bright House 51376, 51877 Motorola 51376, 50476, 51187, 51951 Cable One 51376, 51877 MTS 51951 Cablevision 51376, 51877 Myrio 51602, 51822 Charter Pace 51376, DVD player / 51376, 51877, DVD / Reproductor de DVD 51877, 51982 Lecteur 52187 Cisco 51877, 50877, 51982 Panasonic 51982 Comcast 51376, No.

Philips 51305 Brand Code 51877, 51982, 52576 Brand Code No. Cox 51376, 10533, 10864, 11033, 51877 Pioneer 51877, 50877 Sony 11633, Cinerall 10730 Daeryung 51877, 50877 RCN 51376 11070, 11431, 11516, 12138 CineVision 10876, 10869 Digeo 51187, 52187 Rogers 51877 Accurian 10675, 11416 Citizen 10695 Digitelly 52514 Scientific Atlanta 51877, 50877 Aiko 11728 Coby 10778, 11086, 11107, 11177, Director 50476 Sejin 51602 Aim 10672, 11177 11351, 11628, 12495, 12535, 12536, 12537, 12538, 12540 Gehua 50476 Shaw 51376 Aiwa 10641 Conia 10672 General 50476 StarHub 51927 Akai 10675, 10143, 10695, 10790, Instrument 12424, 12439 Contel 12331 Suddenlink 51376, 51877 Homecast 52301 Akira 11316 Craig Warner 10831 51877, 52187 Time 51376, i3 Micro 51602 Alco 10790 Curtis Mathes 11087 Tivo 52576 Insight 51376, CyberHome 10816, 10874, 11023, 11024, Allegro 10869 51877 11129, 11537 Apex Digital 10672, 10717, 10794, 10796, 10797, 11004, 11020, 11056, Daewoo 10869, 11169, 11172, 11234 11061, 11100 Dapic 12517 Arrgo 11023 DEC 10778 Digital-to-analog converter / Convertisseur numérique Asahi 12615 Denon 10490, 10634, 12258 analogique / 10717, 10790, 11041, digital Diamond Convertidor 11071, analógico 10778, 10790 Audiovox 11121, 11122 Diamond Vision 11316 Audioworld 10790 No.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)

<http://yourpdfguides.com/dref/2405063>

Brand Code Brand Code digiRED 10717 No. Awa HD 10730 Access 52185 Gridlink 52348 Digitrex 10672, 11004, 11056, 11100 Axion 101 11071 Airlink 52491 Insignia 51415 Disney 10675, 11270, 12318, 12356 BBK Digital 11224 Alpha 52185 Lasonic 52348 DSE 10675 Bel Canto Design 11571 AMTC 52185 Magnavox 51563 Durabrand 11023, 11127, 12164 Blaupunkt 10717 Apex Digital 52478 Memorex 52486 DVD2000 10521 Blue Parade 10571 Artec 52490 MicroGEM 52489 Dynex 12255, 12388 Blue Sky 12623 CASTi 52305 Philco 51563 Electrohome 11607 Broksonic 10695 Channel Master 52365 RCA 52325, 52454 Emerson 10675, 10591, 10821, 11268, California Audio 10490 Coby 52667 Samsung 52592 12212 Labs Coship 52487 Sansonic 52348 Enterprise 10591 Celestial 11020 Daewoo 52338 Sylvania 51563 ESA 10821, 11268 Centrex 10672, 11004 Daytek 52305 Tivax 52185 Funai 10675, 11268 Changhong 10627, 11061 Digital Stream 52303 Ventura 52454 Gateway 11077 Cinea 10831 Dish Network 52470 Venturer 52454 GE 10522, 10815, 10717 System Winegard 52454 EchoStar 52470 Zenith 51415 Evolution 52479 Zentech 52491 GE 52360, 52450 Zinwell 52488 Goodmind 52450 Ingrese el código del fabricante (01454). El indicador SET parpadeará tres veces y se apagará. Decodificador de cable (no de marca Sony) (51376) DVD (BD) Reproductor de DVD Sony (11033) DVR (PVR) Videgrabadora digital Sony (22676) VCR Sony (60032) VCR Reproductor de CD CD Sony (70000) Receptor Sony (82586)

AMP Solución de problemas Si tiene problemas con la configuración o el funcionamiento del RM-VZ320: Realice con cuidado el procedimiento de configuración de la "Guía de configuración". Si el RM-VZ320 no funciona, intente repetir el procedimiento de configuración con otro código de fabricante (si hay otros en la enumeración de códigos de su dispositivo). Si sigue sin poder operar el RM-VZ320, intente con la función Búsqueda (consulte "Búsqueda del código del fabricante"). Apunte el RM-VZ320 directamente al dispositivo. Quite cualquier obstáculo en el camino entre el RM-VZ320 y el dispositivo. Asegúrese de haber presionado el botón de selección de dispositivo correcto. Controle que el dispositivo tenga capacidad para infrarrojo de control remoto. Por ejemplo, si su dispositivo no incluía un control remoto, probablemente no sea capaz de ser controlado por el RM-VZ320. Las baterías están agotadas o no están insertadas correctamente. Reemplácelas por nuevas o insértelas correctamente.

* El código de cinco dígitos es el código establecido por el fabricante. Si la configuración está incompleta, el indicador SET parpadeará una vez y los indicadores se apagará. Vuelva a comenzar desde el principio. Si no se realizan operaciones en el transcurso de 10 segundos cuando se está realizando la configuración, la configuración se cancelará y deberá volver a iniciarse. Para cancelar el proceso, presione SET en cualquier momento.

El indicador SET se apaga. Funcionamiento del dispositivo 4 Cuando el indicador SET comience a parpadear, cuente el número de parpadeos. Los parpadeos cortos indican el dígito (primero, segundo, etc.), seguidos de los parpadeos largos que indican el número del dígito (p. RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) ej., 2 parpadeos largos representan el número 2). Los parpadeos rápidos representan el "0". Determine de esta forma el número de código de 5 dígitos. Para chequear nuevamente, presione . 5 Presione SET para finalizar.

Notas Para anular el control de encendido automático (solamente de los dispositivos Sony) Los botones de selección del dispositivo están configurados para encender un dispositivo en forma automática cuando se presionan. Para cancelar la función: @@Se encenderá la luz indicadora SET. @@2 Ingrese 9 - 7 - 7 usando los botones con números. El indicador SET parpadea tres veces. 3 Presione el botón de selección de dispositivos que desea. El indicador SET parpadeará tres veces y se apagará. Para volver a establecer la función, siga el mismo procedimiento descrito arriba. Si presiona cuatro botones en el Paso 4, el modo de configuración finalizará y el canal habrá quedado programado. Si ya había un canal configurado en un botón, se sobrescribirá con el nuevo.

Una vez que un botón numérico ha sido programado, no puede funcionar como un botón numérico común.

dispositivo para operar. //// : Mueve el cursor para seleccionar un elemento del menú. Accede al elemento seleccionado. VOL +/-: Sube/baja el volumen.

Enciende y apaga el TV (no funciona con un reproductor de CD o TV: casetera).

POWER: Enciende y apaga el dispositivo seleccionado. MUTING: Silencia el volumen. Presione nuevamente para silenciar el volumen. SLEEP: Habilita la función Sleep (cuando está disponible). El número 5, CH+ y el botón tienen un punto táctil cada uno para facilitar el uso.

10675, 11013, 11268, 12095, 12255, 12428, 12510, 12596, 12620 10571, 11769, 10627, 12147 10783 10702 10672 10558, anterior. la ubicación 10623, 10867, 11164, 11602, 12365, 12472 : jWin Muestra otra 11049 brevemente vez Kawasaki la escena (Flash).10790 Kenwood 10490, 10534 :KLH Avanza brevemente la 10790, 11020, 10815, 10717, escena 11149 (Flash +). Konka 10711 Va a :Lenoxx la siguiente ubicación. 11127 10741, 10591, 10869, 11544, Rebobina rápidamente. : LG 11602, 12485 : Reproduce. 11416 LiteOn 10539 Avanza rápidamente. : Loewe Magnavox 10539, 10503, 10675, 10646, : Graba. 10821, 11177, 11268, 11354, 11472, 11506, 12229 : Pausa. Marantz 10539, 12414 McIntosh 11273 : Stops.

Memorex 10695, Botones A, B, C 12213 10831, 11270, 11607, D: (Live TV) Muestra la guía Microsoft 10522, 12083 Mintek 10839, 10717, 11472 maestra. Mitsubishi 11521, 10521 GUIDE: Muestra la12492 de guía Moserbaer NAD 10741, programación (EPG). 12572 NEC 10741, 10869, 11602 Brand Code No. Brand Code No. LIST:Nesa Muestra el título del 10717 Sony 11633, 10533, 10864, 11033, Cinerall 10730 11070, 11431, 11516, 12138 Norcent CineVision 10876, 10869 programa grabado.11107 Accurian 10675, 11416 Nordmende 11316 Ciiizen 10695 Aiko 11728 Olevia 12331 Coby 10778, 11086, 11107, 11177, Aim 10672, 11177 11351, 11628, 12495, 12535, Omni 10778 12536, 12537, 12538, 12540 Aiwa 10641 Onida 11004, 12502 Conia 10672 Akai 10675, 10143, 10695, 10790, Onkyo 10503, 11769, 10627, 12147 12424, 12439 Contel 12331 Oppo 10575, 11224, 12185, 12545 Akira 11316 Craig 10831 Orion 10695 Alco 10790 Curtis Mathes 11087 Palsonic 10672, 11056 CyberHome 10816, 10874, 11023, 11024, Allegro 10869 Panasonic 10490, 10503, 10703, 11362, : Va a la ubicación 11579, 11641, 11762 11129, 11537 Apex Digital 10672, 10717, 10794, 10796, 11490, anterior.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)

<http://yourpdfguides.com/dref/2405063>

10797, 11004, 11020, 11056, Daewoo 10869, 11169, 11172, 11234 : Panda Muestra otra 10717 brevemente vez 11061, 11100 Dapic 12517 Philco la escena (Flash).10675, 10790 10503, 10675, Arrgo 11023 DEC 10778 Philips 12056, 10539, Asahi 12615 Denon 10490, 10634, 12258 12084, 10646, escena : Avanza brevemente la 11267, 11340, Audiovox 10717, 10790, 11041, 11071, 11354, 11389, 11506, 12205, Diamond 10778, 10790 11121, 11122 (Flash +). 12434 Diamond Vision 11316 RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) Audioworld 10790 11024 digiRED 10717 :PianoDisc siguiente ubicación.
Va a la Pioneer Awa 10730 10525, 10571, 10142, 10631, Digitrex 10672, 11004, 11056, 11100 11571, 12442 Axion 11071 : Rebobina rápidamente.
Disney 10675, 11270, 12318, 12356 BBK 11224 DSE 10675 : Reproduce. Bel Canto Design 11571 Durabrand 11023, 11127, 12164 : Avanza rápidamente.
Blaupunkt 10717 DVD2000 10521 Blue Parade 10571 : Graba. Dynex 12255, 12388 Blue Sky 12623 Electrohome 11607 : Pausa. Broksonic 10695 Emerson 10675, 10591, 10821, 11268, California Audio 10490 12212 : Detiene.

Labs Enterprise 10591 Botón rojo A: SET: Presione para Celestial configurar el 11020 RM-VZ320. El indicador se enciende o ESA 10821, 11268 Centrex 10672, 11004 B: Botón verde Funai 10675, 11268 parpadea durante la configuración. 10627, 11061 Changhong Gateway 11077 C: Botón amarillo Cinea 10831 Botones de selección de dispositivo: Presione para seleccionar el 10522, 10815, 10717 GE Descripción de los botones del control remoto Symphonic 10675, 10821 11472, 11506, 12229 41775, SKY 40856, 40887, 40775, 41505, 41170, TCL Brazil 12209, 12587 41358 10539, 12414 42262, 42527 SKY 40856, 42619 Teac Mexico 10675, 10571, 10717, 10790, 11273 41775 40775, Sonicbox 41899 12380 10695, 10831, 11270, 11607, 41664, 41821, 41948 Sonicview 42373, 42374, Technics 10490, 10703 42449 12213 40566 Star 40887 Technosonic 10730 10522, 12083 40869 Star Choice 40869 Tedelex 11004 10839, 10717, 11472 Strong 41806 Telefunken 10790 11521, 10521 40775, 41775 Supernova 40887 Terapin 11031 12492 40099, 40887 40856, TATA Sky 41997 Theta Digital 10571 10741, 12572 40128 Telefonica 42262, Tivo 11503 42263, 42272, 42527 10741, 10869, 11602 41899 Televisa 40887 Toshiba 10503, 11769, 10695, 11045, 10717 41775 40775, 11154, 11503, 11606, 12165, Thomson 41997 11107 40749, 41749, 41442, 41142, 12277 41442, 41443, 41444 Tivo 41142, 41443, 11316 41444 Transonic 10730 41749, 40790 Toshiba 40749, 41989 12331 Tredex 10804 TVB 41989 41664 10778 Urban Concepts 10503 UEC 41358 40856, 40887, 11004, 12502 41887, 41989 US Logic 10839 Ultrasat 41806 40099 10503, 11769, 10627, 12147 Venturer 10790, 12195 Uniden 40722 40887 10575, 11224, 12185, 12545 Videocon 12209, 12521 ViewSat 41994 40869 10695 Viewmaster 11224 Voom 40869 40775, 41170, 10672, 11056 41775 Vioreand Wireless 12154, 12553, 12580 Wire 40128 40722 10490, 10503, 10703, 11362, Vizio Ltd. 11226, 12563 India 11490, 11579, 11641, 11762 40749 Voxson 10730, 10831 Yes 40887 10717 40856 40869, Vtrak 11694 Zenega 40128 10675, 10790 42059, 42060 41959, 41960, Vtrek 11694, 12587 Zenith 40856, 41856 12056, 10539, 10503, 10675, Wharfedale 10790 12084, 10646, 11267, 11340, Xbox 10522, 12083 11354, 11389, 11506, 12205, 12434 Yamaha 10490, 10539, 10646, 10545, 10497, PianoDisc DVD player / 11024 Lector DVD / Reproductor de DVD 10817, 11416, 12298, 12558 Pioneer 10525, 10571, 10142, 10631, Zenith 10503, 10741, 10591, 10869 11571, 12442 Echostar Marantz McIntosh Expressvu Memorex Fortec Star GE Microsoft General Mintek Instrument Mitsubishi GOI Moserbaer Gradiente NAD Handan NEC Homecast Nesa HTS Norcent Network Hughes Systems Nordmende Humax Olevia Ikusi Omni Indovision Onida Innova Onkyo ISkyB Oppo Jerrold Orion JVC Palsonic Magnavox Panasonic Mitsubishi Panda Motorola Philco Multichoice Philips Insignia Integra IRT JBL JNC JVC : Va a Decodificador de cable/IPTV Receptor de satélite General Cambia de canal.

Por ejemplo, para cambiar al canal 5, presione 0 y 5 (o presione 5 y ENTER).

PAGE +/-: Avanza/retrocede la página FAVORITES: Habilita la función Favorito. INFO: Muestra información de D: Botón azul programación. GUIDE: Muestra la guía de OPTIONS: Muestra el menú del programación (EPG). satélite/índice de la estación. LIST: Muestra el título del RECALL: Sintoniza la última programa grabado/el menú RM-VZ320_U/CA/E [US,FR,ES] 4-170-685-12(1) PVR. estación sintonizada. +/-: Cambia el canal hacia CH arriba/abajo. 12069, 12329, 12369, 12489, 12556 10695 10695, 10873 10646 10503 10675, 10630, 10752, 11256, RETURN: 12250 a la visualización Vuelve Sherwood 10741, 11043, 11077 anterior/sale del menú. Sherwood 11077 Newcastle MENU: Muestra el menú. Shincos 10717, 11472 INPUT: Cambia el modo de Shinosonic 10533, 10839 Sonashi entrada.

10831 Sonic Blue 1 10869 ENTER, (punto): 9, 0, Soniq 10831 Sova Cambia de canal. Por ejemplo, para 11122 Superscan cambiar al 10821 5, presione 0 y 5 canal SVA 10717, 10752 (o Sylvania presione 5 y 10630, 10821, 11268, 10675, ENTER). 12212 PAGE +/-: 12194, 10821 Avanza/retrocede la Symphonic 10675, TCL página 12209, 12587 Teac FAVORITES: Habilita la 10790, 10675, 10571, 10717, función 12380 Favorito. 10490, 10703 Technics Technosonic Muestra información de 10730 INFO: Tedelex 11004 programación. Telefunken 10790 Terapin 11031 OPTIONS: Muestra el menú de Theta Digital 10571 Tivo opciones. 11503 Toshiba 10503, 11769, 10695, 11045, RECALL: Cambia entre el canal 11154, 11503, 11606, 12165, actual y el 12277 anterior. Transonic +/-: Cambia el canal hacia 10730 CH Tredex 10804 arriba/abajo. Urban Concepts 10503 US Logic 10839 Venturer 10790, 12195 Videocon 12209, 12521 Viewmaster 11224 Viore 12154, 12553, 12580 Vizio RETURN: 11226, 12563 la visualización Vuelve a Voxson 10730, 10831 Vtrak anterior/sale del menú. 11694 Vtrek MENU: Muestra el menú. 11694, 12587 Wharfedale 10790 INPUT: (TV/SAT) Cambia la salida Xbox 10522, 12083 Zenith 1 10503, 10741, 10591, 10869 9, 0, ENTER, (punto): Sansui Sanyo Schneider Semp Sharp Reproductor/grabador de DVD : Va al capítulo/pista anterior. : Muestra otra vez brevemente la escena (Flash). : Avanza brevemente la escena (Flash +). : Va al siguiente capítulo/pista. : Rebobina rápidamente.

: Reproduce. : Avanza rápidamente. : Graba (para la grabadora de DVD). : Pausa. : Detiene.

(CONFIGURACIÓN) Muestra A: el menú del sistema/ configuración. B: (SUBTÍTULO) Cambia el subtítulo. C: (AUDIO) Cambia el sonido. D: (BORRAR) Borra la configuración. GUIDE: Muestra la guía de programación (EPG). LIST: Muestra la lista de títulos.



[You're reading an excerpt. Click here to read official SONY RM-VZ320 user guide](http://yourpdfguides.com/dref/2405063)

<http://yourpdfguides.com/dref/2405063>