



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY SU-WL450. You'll find the answers to all your questions on the SONY SU-WL450 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY SU-WL450
User guide SONY SU-WL450
Operating instructions SONY SU-WL450
Instructions for use SONY SU-WL450
Instruction manual SONY SU-WL450

SONY

Wall-Mount Bracket

取扱説明書	JP
Operating Instructions	GB
Mode d'emploi	FR
Manual de instrucciones	ES
Bedienungsanleitung	DE
Gebruiksaanwijzing	NL
Istruzioni per l'uso	IT
Bruksanvisning	SE
Instrukcja obsługi	PL
Manual de Instruções	PT
Bedjeningsvejledning	DK
Käyttöohje	FI
Bruksanvisning	NO
Οδηγίες Χρήσης	GR

Kullanım Kılavuzu	TR
Kezelési utasítás	HU
Návod k použití	CZ
Návod na obsluhu	SK
Instrucţiuni de utilizare	RO
Инструкции за работа	BG
Инструкция по эксплуатации	RU
Інструкція з експлуатації	UA
Hướng dẫn Sử dụng	VN
操作手冊	CT
使用说明书	CS
คู่มือการใช้งาน	TH
Petunjuk Penggunaan	ID

4 530 872 02 | 1

SU-WL450



[You're reading an excerpt. Click here to read official SONY SU-WL450 user guide](http://yourpdfguides.com/dref/5588753)

<http://yourpdfguides.com/dref/5588753>

Manual abstract:

To Customers **CAUTION** If the following precautions are not observed, injury or property damage may occur. **WARNING** If the following precautions are not observed, serious injury or death through fire, electric shock, or the product dropping can result. To Customers Sufficient expertise is required for installing this product. Be sure to subcontract the installation to Sony dealers or licensed contractors and pay special attention to safety during the installation. Sony is not liable for any damages or injury caused by mishandling or improper installation, or installing any other than the specified product. Your Statutory Rights (if any) are not affected. Be sure to subcontract the installation to licensed contractors and keep small children away during the installation. If the Wall-Mount Bracket or the TV is not installed correctly, the following accidents may occur. Be sure licensed contractors carry out installation. Ω The TV may fall and cause a serious injury such as a bruise or a fracture.

Ω If the wall on which the Wall-Mount Bracket is installed is unstable, uneven, or not perpendicular to the floor, the unit may fall and cause injury or property damage. $\text{\textcircled{R}}$ (Refer to your TV's operating instructions for its weight. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Do not apply excessive force on the topside of the TV. If you do so, the TV may fall and cause injury or property damage. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Be sure to read this instruction manual thoroughly to do the installation work safely. Sony is not liable for any damages or injury caused by mishandling or improper installation. Please give this manual to the customer after installation. This instruction manual shows the correct handling of the product and important precautions necessary to prevent accidents. Be sure to read this manual thoroughly and use the product correctly. Keep this manual available for future reference.

Products by Sony are designed with safety in mind. If the products are used incorrectly, however, it may result in a serious injury through fire, electric shock, the product toppling over, or the product dropping. Be sure to observe the precautions for safety to prevent such accidents. Precautions \square If you use the TV installed on the Wall-Mount Bracket for a long time, the wall behind or above the TV may become discolored or the wallpaper may come unstuck, depending on the material of the wall. Ω If the Wall-Mount Bracket is removed after installing it on the wall, the screw holes are left. Ω Do not use the Wall-Mount Bracket in a place where it is subjected to mechanical vibrations. Be sure to subcontract moving or dismantling of the TV to licensed contractors. If persons other than licensed contractors transport or dismount the TV, it may fall and cause injury or property damage. Be sure that two or more persons carry or dismount the TV. Installing the WallMount Bracket To Sony Dealers **WARNING** The following instructions are for Sony dealers only.

Be sure to read safety precautions described above and pay special attention to safety during the installation, maintenance and checking of this product.

CAUTION Specified products This Wall-Mount Bracket is designed for use with the products specified TVs. For TVs, refer to their operating instructions to verify that the Wall-Mount Bracket can be used. do not remove screws , etc. , after mounting the TV. If you do so, the TV may fall and cause injury or property damage. Do not make alterations to the parts of the WallMount Bracket. If you do so, the Wall-Mount Bracket may fall and cause injury or property damage. Do not install the WallMount Bracket on wall surfaces where the corners or the sides of the TV protrude away from the wall surface. Do not install the Wall-Mount Bracket on wall surfaces such as a pillar, where the corners or the sides of the TV protrude away from the wall surface.

If a person or object happens to hit the protruded corner or side of the TV, it may cause injury or property damage. Do not mount any equipment other than the specified product. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Do not apply any load other than the TV on the Wall-Mount Bracket. Do not shake the TV left/ right, up/down. If you do so, the TV may fall and cause injury or property damage.

Do not lean on or hang from the TV. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ GB Do not install the TV over or under an airconditioner. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Do not allow the AC power cord or the connecting cable to be pinched. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ this may cause a fire or an electric shock. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Be careful not to subject the TV to shock during installation.

If the TV is exposed to shock, it may fall or break apart. this may cause injury. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ If you fail to do so, the TV may fall and cause injury. After proper installation of the TV, secure the cables properly. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ 3 GB Installation procedure differs , depending on your TV. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ \square Refer to the "Installation Guide". $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Ω Confirm the installing position of your TV. $\text{\textcircled{R}}$ $\text{\textcircled{R}}$ Select screws suitable for the material of the wall. 100 100 300 Installing the TV onto the wall Unit: mm 100 Never install the TV as shown below: Air circulation is blocked. Checking the parts \square Verify that all the parts are included.

Ω Identify the parts by their shape, referring to the "Installation Guide", 1. A Base (20) (1) B Pulley (2) C PSW 6x20 (4) D PSW 4x20 with Bush (2) E Spacer (20) (2) F Belt (1) G Bush (20) (M4) (2) H PSW 4x20 (2) I Base Adaptor (2) J PSW 4x10 (8) K Spacer (60) (2) L PSW 6x50 (2) M Bush (M4) (2) N PSW 4x50 (2) O Wall-Mount Attachment (S) (2) P Spacer (2) Q Washer (1) R PSW 5x12 (1) Wall Note If \square you intend to route the cables in the wall, make a hole in the wall to insert the cables before beginning the installation. To prevent pinching the cables, prepare a hole in the wall somewhere outside the perimeter of the Base (20) \square , Base Adaptor \square For details, refer to the TV's instruction manual. Allow for suitable clearance between the TV and the ceiling and protruding parts of the wall as shown below. Refer to the "Installation Guide", 2 and the Table of "Preparing for installation of the TV to the wall", 3. Refer to Installation Guide, 3 and "Installing the TV to the wall" of TV's instruction manual, 7. In case of selecting 2-b or 2-c, then skip this step. Screws for installing the Base (20) \square . refer to the specifications on page 6. When selecting 2-a, please use the hole positions of Base Adaptor \square **WARNING** The wall that the TV will be mounted on should be \square able to support a weight of at least four times that of the TV (Refer to your TV's operating instructions for its weight.). Determine the strength of the wall the TV will be \square mounted on. reinforce the wall sufficiently , if necessary. 2 Install the TV onto the Base. 4 Decide the positions of the \square For the location of the Pulleys \square to the hang on the Base, refer to the TV installation dimensions table. For details, refer to the TV's instruction manual. Ω Hold the TV securely with both hands and gently hang the Pulleys \square attached to the rear of the TV to the Base, making sure to confirm the shape of the holes.



[You're reading an excerpt. Click here to read official SONY SU-WL450 user guide](http://yourpdfguides.com/dref/5588753)
<http://yourpdfguides.com/dref/5588753>

⚠ After installing the TV on the wall, confirm the Pulleys □ are firmly latched into the Base. refer to the “Installation Guide”, 5. WARNING Be □ sure that two or more persons hold the TV when carrying it.

3 Preventing the bottom of the TV from shifting. ⚠ Take up the slack of Belt □ and attach it to the wall tightly. Note Try □ to pull the bottom of the TV forwards yourself slightly, to make sure that it does not move forward. If there is any movement, it is not fixed correctly, and the Belt □ should be secured firmly again. Installing the Base on the wall □ Use four or more screws of 8 mm diameter or equivalent (not supplied). ⚠ Install the Base (20) □ on the wall horizontally. refer to the “Installation Guide”, 4. GB Confirming the completion of the installation Check the following points. ⚠ The Pulleys □ are firmly hung onto the Base. ⚠ The cord and the cable are not twisted or pinched.

□ The Belt □ is tight with no slack. WARNING Improper placement of the AC power cord, etc. , may □ cause fire or electric shock through a short circuit. Be sure to confirm the completion of the installation for safety. Preparing for the installation of the TV Prepare installation of the TV, following the “Installing the TV to the wall” of TV’s instruction manual. @@Make sure to connect the cables before installing the TV on the wall. You will be unable to connect the cables when the TV is installed. Refer to the operating instructions supplied with your TV. @@@@ refer to the “Installation Guide”, 7. WARNING Be □ sure that two or more persons hold the TV when removing it.

8 Design and specifications are subject to change without notice. Till kunder SE UPP Om du inte efterföljer följande säkerhetsföreskrifter finns det risk för personskador eller skador på egendom. Överlåt installationen till behörig personal och se till att små barn inte befinner sig i närheten när installationen utförs. Om produkterna emellertid används felaktigt kan det leda till allvarliga personskador till följd av brand, elstötar eller av att produkten vält eller fallit ned. Leda till brand eller □ elektriska stötar till följd av en kortslutning.

For tv'er skal du læse deres betjeningsvejledning for at finde ud af.



[You're reading an excerpt. Click here to read official SONY SU-WL450 user guide](#)

<http://yourpdfguides.com/dref/5588753>