




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY XAV-65. You'll find the answers to all your questions on the SONY XAV-65 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY XAV-65
User guide SONY XAV-65
Operating instructions SONY XAV-65
Instructions for use SONY XAV-65
Instruction manual SONY XAV-65

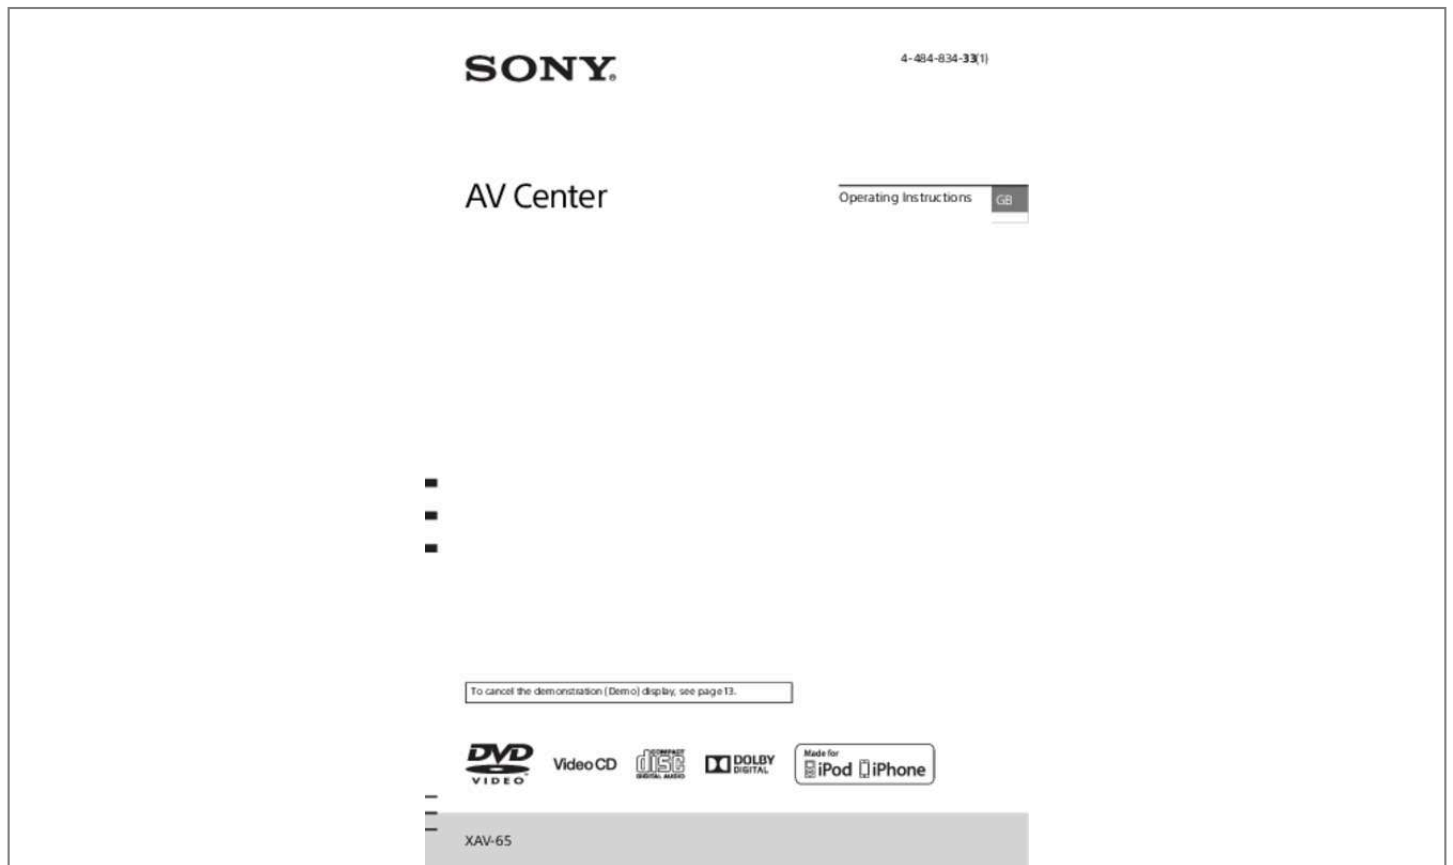

[You're reading an excerpt. Click here to read official SONY XAV-65 user guide](http://yourpdfguides.com/dref/5585629)
<http://yourpdfguides.com/dref/5585629>

Manual abstract:

Refer servicing to qualified personnel only. @@@@Refer servicing to qualified personnel only. Laser Diode Properties □ Emission Duration: Continuous □ Laser Output: Less than 46.8 μW (This output is the value measurement at a distance of 70 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.) Note on the lithium battery Do not expose the battery to excessive heat such as direct sunlight, fire or the like. Warning if your car's ignition has no ACC position After turning the ignition off, be sure to press and hold OFF on the unit until the display disappears. Otherwise, the display does not turn off and this causes battery drain. 2GB Table of Contents Warning. . .

.....
.....
.....
.....
.....
.. 2 Guide to Parts and Controls ...
.....
.....
4 Getting Started Resetting the Unit
.....
.....
..... 6 Setting the Clock
.....
.....
.....
... 6 Listening to the Radio Listening to the Radio
.....
.....
. 7 Storing and Receiving Stations ...
.....
.....
.. 7 Using Radio Data System (RDS)
.....
.. 8 Playback Playing a Disc ...
.....
.....
.....
.. 9 Playing an iPod/USB Device ...
.....
.....
.... 10 Searching and Playing Tracks
.....
.....
10 Available Options
.....
.....
.. 11 Picture EQ ...
.....
.....
.....
.. 11 Aspect ...
.....
.....
.....
11 DVD Audio Level.....
.....
.....
11 Settings General Settings.....
.....
.....

. . . 12 Touch Panel Adjust
. 12 Sound Settings
. 13 Sound Adjust
. 13 Screen Settings
13 Visual Settings
. 14 Additional Information Auxiliary Audio/Video Equipment
. 15 Rear View Camera
. 15 Precautions
. 15 Maintenance
. 18 Specifications
. 19 Troubleshooting
. 20 Language Code List
. 23 3GB Guide to Parts and Controls Main unit □ SOURCE Turn on the power.	

Change the source. Each press displays a selectable source in a popup on the current display. -OFF Press and hold for 1 second to exit the source. Press and hold for more than 2 seconds to turn off the unit. When the unit is turned off, remote commander operation is not available. Volume control dial Rotate to adjust the volume. □ HOME Open the HOME menu. When pressed during disc, iPod or USB playback, playback is paused and there is no sound. To resume playback, touch . -DSPL (display) Press and hold to open the display menu.

The monitor off function is set on the display menu. When the monitor off function is activated, the monitor is turned off. Touch anywhere on the display to turn back on. □ Receptor for the remote commander □ Disc slot □ □ (disc eject) □ USB port Open the cover to connect a USB device. □ AUX terminal □ Reset button □ Display/touch panel 4GB RM-X170 remote commander (supplied with India model only) The remote commander can be used to operate the audio controls.

For menu operations, use the touch panel. □ ZAP (zapping) (page 7) □ □/□/□/□ (cursor)/ENTER □ MODE Select the radio band. □ VOL (volume) +/- Screen displays Playback screen: Home screen: Remove the insulation film before use. □ MONITOR OFF □ POSITION This button is not supported. □ □ (return) Return to the previous display/return to the menu on a Video CD (VCD).

□ EQ (equalizer) Select an equalizer curve. □ Number buttons (0 - 9) □ CLEAR □ ATT (attenuate) Attenuate the sound. To cancel, press again or press VOL +. □ □ (play/pause) □ □□/□□ (previous/next) □ DVD playback setting buttons □ Indications Lights up when the sound is attenuated. □ Application specific

area Display playback controls/indications or show the unit's status. Displayed items differ depending on the source. 5GB □ Common area Accesses the Sound Adjust settings menu directly (page 13). (option) Open the option menu. Option menu differs depending on the source. □ Clock (page 6) When the source selects [AUX Front], [AUX Rear] or [Rear Camera], the clock is not displayed.

□ Switch from the HOME screen to the playback screen. □ (option) Open the HOME option menu. Press HOME, then touch . [Icon View] Selects the icon display: [Line View] or [Grid View]. To return to the home screen, touch □ Source select keys Change the source. . Getting Started Resetting the Unit Before operating the unit for the first time, or after replacing the car battery or changing connections, you must reset the unit. 1 Press the reset button on the unit.

Use a pointed object, such as a ballpoint pen. Note Pressing the reset button will erase the clock setting and some stored contents.

Setting the Clock 1 2 3 4 Press HOME, then touch [Settings]. Touch , then touch [Clock Adjust]. The setting display appears. Touch □/□ to set the hour and minute. Touch [Set].

The setting is complete. To activate/deactivate the CT function (page 8), touch [Clock Time]. 6GB Listening to the Radio Storing and Receiving Stations Caution When tuning to stations while driving, use Best Tuning Memory (BTM) to prevent an accident. Listening to the Radio To listen to the radio, press HOME then touch [Tuner]. Storing automatically (BTM) Reception controls/indications □ □ □ □ □ 1 2 3 Select the desired band ([FM1], [FM2], [FM3], [AM1], or [AM2]).

Touch . Touch [BTM], then [Search]. The unit stores the first six available stations in presets ([1] to [6]). Tuning 1 □ □ □ □ □ Touch the current band. The band list appears. 2 3 Touch the desired band ([FM1], [FM2], [FM3], [AM1], or [AM2]). Perform tuning. To tune automatically Touch / . Scanning stops when the unit receives a station. Repeat this procedure until the desired station is received.

To tune manually Touch / repeatedly until the desired frequency is received. To skip frequencies continuously, touch and hold / . Reception controls (□ to □) □ □ □ Current band icon Opens the band list. [PTY] (Program Types) (FM only) Opens the PTY list (page 8). [ZAP] (ZAPPIN™) Helps to find a desired station by listening to preset stations for a few seconds. Opens the tuner option menu. □ □ / Tunes in automatically. / Tunes in manually. Touch and hold to continuously skip frequencies. [1] to [6] Selects a preset station.

Touch and hold to store the currently displayed frequency in that preset. □ Storing manually 1 While receiving the station that you want to store, press and hold the desired preset number ([1] to [6]). □ Receiving stored stations 1 2 Select the band. Touch the desired preset number ([1] to [6]). Reception indications (□) □ Frequency Searching for the desired station from preset stations (Tuner Preset ZAPPIN) Tuner Preset ZAPPIN helps you to find a desired station by listening to preset stations for a few seconds.

7GB 1 2 While listening to radio, touch [ZAP].



[You're reading an excerpt. Click here to read official SONY XAV-65 user guide](http://yourpdfguides.com/dref/5585629)

<http://yourpdfguides.com/dref/5585629>

Tuner Preset ZAPPIN starts, and subsequent stations are received in sequence. Type of programs News (News), Current Affairs (Current Affairs), Information (Information), Sport (Sports), Education (Education), Drama (Drama), Cultures (Culture), Science (Science), Varied Speech (Varied), Pop Music (Pop Music), Rock Music (Rock Music), Easy Listening (M.O.R.

Music), Light Classics M (Light classical), Serious Classics (Serious classical), Other Music (Other Music), Weather & Metr (Weather), Finance (Finance), Children's Progs (Children's program), Social Affairs (Social Affairs), Religion (Religion), Phone In (Phone In), Travel & Touring (Travel), Leisure & Hobby (Leisure), Jazz Music (Jazz Music), Country Music (Country Music), National Music (National Music), Oldies Music (Oldies Music), Folk Music (Folk Music), Documentary (Documentary) Note You cannot use this function in countries/regions where no PTY data is available. Touch [ZAP] again when the desired station is received. Using Radio Data System (RDS) Display items Band name, RDS* Frequency, program service name Preset number * During RDS reception. RDS services This unit automatically provides RDS services as follows: PTY (Program Types) Displays the currently received program type. Also searches for a designated program type. CT (Clock Time) The CT data from the RDS transmission sets the clock. Selecting program types (PTY) 1 2 During FM reception, touch [PTY]. To scroll the list, touch /. Touch the desired program type. The unit searches for a station broadcasting the selected program type.

To close the PTY list, touch . 8GB 4 Playback For playable discs or file types, see page 16. Follow the instructions in the menu for interactive operations. To return to the previous display, touch . To deactivate PBC functions, set [Video CD PBC] to [OFF] (page 14). Notes During PBC playback, the track number, playback item, etc., do not appear on the playback display. Resume playback is unavailable during playback with PBC. Playing a Disc Depending on the disc, some operations may be different or restricted. Refer to the operating instructions supplied with the disc.

1 Configuring audio settings To change the audio language/format When playing a DVD Video, the audio language can be changed if the disc is recorded with multilingual tracks. You can also change the audio format when playing a disc recorded in multiple audio formats (e.g., Dolby Digital). During playback, touch the screen and then .

Touch repeatedly until the desired audio language/format appears. Example: Dolby Digital 5.1 ch Insert the disc (label side up), then playback starts. If a DVD menu appears Touch the desired item in the DVD menu. You can also use the menu control panel, which can be displayed by touching the screen anywhere except the DVD menu items.

Touch /// to move the cursor, then touch [ENTER] to confirm. Example of playback indications (DVD) Audio language Audio format/ channel numbers If the same language is displayed two or more times, the disc is recorded in multiple audio formats. To change the audio channel When playing a VCD, you can listen to both left and right channels, right channel only or left channel only, via both right and left speakers. During playback, touch repeatedly until the desired audio channel appears. The options are indicated below. [Stereo]: Standard stereo sound (default) [Left]: Left channel sound (monaural) [Right]: Right channel sound (monaural) Current source icon, format Playback status, elapsed playback time Chapter/title number, audio format Touch the display if the indications are not displayed. For audio discs, some indications are always displayed during playback. Using PBC (playback control) functions The PBC menu interactively assists with operations while a PBC-compatible VCD is played. 1 2 3 Start playing a PBC-compatible VCD. The PBC menu appears.

Touch . The menu control panel appears. Touch the number keys to select the desired item, then touch [ENTER]. 9GB Playing an iPod/USB Device In these Operating Instructions, "iPod" is used as a general reference for the iPod functions on the iPod and iPhone, unless otherwise specified by the text or illustrations. For details on the compatibility of your iPod, see "About iPod" (page 18) or visit the support site on the back cover. MSC (Mass Storage Class)-type USB devices (such as a USB flash drive, digital media player, Android phone) compliant with tLanguage Unit status: Any status Option English () , Español, Русский Purpose To select the display language. Touch Panel Adjust Unit status: Any status Option – Purpose To adjust the touch panel calibration if the touching position does not correspond with the proper item. Time Format Unit status: Any status Option 12-hour () , 24-hour Purpose To change the time format. Output Color System Unit status: No source selected Option NTSC, PAL () Purpose To change the color system according to the connected monitor. (SECAM is not supported).

) Clock Time Unit status: Any status Option OFF () , ON Purpose To activate the CT function. Camera Input Unit status: Any status Option OFF Normal () Reverse Purpose To deactivate the input. To display the picture from the rear view camera. To flip the picture from the rear view camera horizontally. Clock Adjust Unit status: Any status Option – Purpose To set the clock.

(Available only when [Clock Time] is set to [OFF].) 12GB Steering Control You can operate the unit with buttons on the steering wheel. For safety, park your car before making this setting. Unit status: Any status Option User External () Purpose To display the instruction and panel for steering wheel control. To deactivate steering wheel control.

To use rotary commander control. Option EQ3 OFF () , R&B, Pop, Rock, Hip-Hop, Dance, Electronica (no-India model), Bollywood (India model), Custom Subwoofer: (ATT, -10 - +10) : 0 Balance: (L 15 - 0 - R 15) : 0 Fader: (Front 15 - 0 Rear 15) : 0 Purpose To select the equalizer curve; customize the equalizer curve. When setting [Custom], selects the equalizer settings: [Low], [Mid], [High]. For India model, the initial setting is [Bollywood]. User Defined This setting is available only when [Steering Control] is set to [User]. The steering button panel appears. Press and hold a button to be assigned to the steering wheel. Then press and hold the respective button on the steering wheel. Unit status: Any status Option – Purpose To display the instruction and control panel. To adjust the volume level of the subwoofer.

(Available only when [Subwoofer] is set to [ON].) To adjust the sound balance between left and right speakers. To adjust the sound balance between front and rear speakers. HPF: 80 Hz, To select the cut-off frequency of 100 Hz, 120 Hz, the front/rear speakers. 140 Hz, 160 Hz, OFF () To select the cut-off frequency of LPF: OFF () , 80 Hz, 100 Hz, the subwoofer.



[You're reading an excerpt. Click here to read official SONY XAV-65 user guide](http://yourpdfguides.com/dref/5585629)
<http://yourpdfguides.com/dref/5585629>

For details, refer to the manual supplied with the disc. Playback order of MP3/WMA/Xvid files Folders and files are arranged in ascending order of updated date and time. MP3/WMA/Xvid Folder (album) MP3/WMA/Xvid file (track/video) Note on playback operations of DVDs and VCDs Some playback operations of DVDs and VCDs may be intentionally set by software producers. Since this unit plays DVDs and VCDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VCDs.

Notes on DATA CDs, DATA DVDs and USB playback □ Some DATA CDs/DATA DVDs (depending on the equipment used for its recording, or the disc condition) may not play on this unit. □ Finalization is required for some discs (page 17). □ The unit is compatible with the following standards. For DATA CDs □ ISO 9660 level 1/level 2 format, Joliet/Romeo in the expansion format About WMA files WMA*1 files meeting the following requirements can be played. Playback is not guaranteed for all WMA files meeting the requirements.

Codec □ Media File format: ASF file format □ File extension: .wma □ Bit rate: 48 to 192 kbps (Supports variable bit rate (VBR))*2 17GB □ Sampling frequency*3: 44.1 kHz About iPod □ You can connect to the following iPod models. Update your iPod devices to the latest software before use. Compatible iPhone/iPod models.

Compatible Model iPhone 5 iPhone 4S iPhone 4 iPhone 3GS iPod touch (5th generation) iPod touch (4th generation) iPod touch (3rd generation) iPod classic iPod nano (7th generation) iPod nano (6th generation) iPod nano (5th generation) USB □ □ □ □ □ □ □ □ □ About MP3 files MP3 files meeting the following requirements can be played. Playback is not guaranteed for all MP3 files meeting the requirements. Codec □ Media File format: MP3 (MPEG-1 Layer3) file format □ File extension: .mp3 □ Bit rate: 48 to 192 kbps (Supports variable bit rate (VBR))*2 □ Sampling frequency*3: 32, 44.1, 48 kHz About Xvid files Xvid files meeting the following requirements can be played. Playback is not guaranteed for all Xvid files meeting the requirements. Codec □ Media File format: Xvid file format □ File extension: .avi □ Profile: MPEG-4 Advanced Simple Profile □ Bit rate: Max. 8 Mbps □ Frame rate: Max. 30 fps (30p/60i) □ Resolution: Max.

720 × 576*4 About JPEG files JPEG*5 files meeting the following requirements can be played. Playback is not guaranteed for all JPEG files meeting the requirements. Codec □ Media File format: Compatible with DCF 2.0/Exif 2.21 file format □ File extension: .jpg □ Profile: Baseline Profile □ Number of pixels: Max. 6,048 × 4,032 pixels (24,000,000 pixels) *1 Copyright protected WMA file cannot be played back. *2 For MSC, non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency. *3 Sampling frequency may not correspond to all encoders. *4 These numbers indicate the maximum resolution of playable video, and do not indicate the player's display resolution.

The display resolution is 800 × 480. *5 Some photo files cannot be played back, depending on their file formats. □ "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

If you have any questions or problems concerning your unit that are not covered in these Operating Instructions, consult your nearest Sony dealer. Maintenance Replacing the lithium battery of the remote commander Under normal conditions, the battery will last approximately 1 year. (The service life may be shorter, depending on the conditions of use.) When the battery becomes weak, the range of the remote commander becomes shorter. Replace the battery with a new CR2025 lithium battery.

Use of any other battery may present a risk of fire or explosion. 18GB + side up Region code: Labeled on the bottom of the unit □ Notes on the lithium battery □ Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor. □ Wipe the battery with a dry cloth to assure a good contact. □ Be sure to observe the correct polarity when installing the battery. □ Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur. USB Player section Interface: USB (Full-speed) Maximum current: 1 A Power amplifier section Outputs: Speaker outputs Speaker impedance: 4 – 8 ohms Maximum power output: 55 W × 4 (at 4 ohms) General Outputs: Video output terminal (rear) Audio output terminals (front, rear/sub switchable) Power antenna (aerial)/Power amplifier control terminal (REM OUT) Inputs: Illumination control terminal Remote controller input terminal Antenna (aerial) input terminal Parking brake control terminal Reverse input terminal Camera input terminal AUX audio input terminal (Front) AUX Audio/Video input terminal (Rear) USB port External input terminal Power requirements: 12 V DC car battery (negative ground (earth)) Dimensions: Approx. 178 mm × 101.5 mm × 169 mm (7 1/8 × 4 × 6 3/4 in) (w/h/d) Mounting dimensions: Approx. 178 mm × 100 mm × 165 mm (7 1/8 × 4 × 6 1/2 in) (w/h/d) Mass: Approx.

1.6 kg (3 lb 9 oz) Package contents: Main unit (1) Remote Commander (1): RM-X170 (India model only) Parts for installation and connections (1 set) Optional accessories/equipment: Remote Commander: RM-X170 (except for India model) Mobile monitor: XVM-B62 Rear View Camera: XA-R800C Mounting bracket: GMD-D100 Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information. Design and specifications are subject to change without notice. WARNING Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire. Specifications Monitor section Display type: Wide LCD color monitor Dimensions: 6.2 in System: TFT active matrix Number of pixels: 1,152,000 pixels (800 × 3 (RGB) × 480) Color system: PAL/NTSC/SECAM/PAL-M automatic select Tuner section FM Tuning range: 87.5 – 108.0 MHz Antenna (aerial) terminal: External antenna (aerial) connector Intermediate frequency: 150 kHz Usable sensitivity: 10 dBf Selectivity: 70 dB at 400 kHz Signal-to-noise ratio: 70 dB (mono) Separation at 1 kHz: 30 dB Frequency response: 20 - 15,000 Hz AM Tuning range: 531 – 1,602 kHz Antenna (aerial) terminal: External antenna (aerial) connector Intermediate frequency: 9,267 kHz or 9,258 kHz/4. 5 kHz Sensitivity: 44 μV DVD/CD Player section Signal-to-noise ratio: 80 dB Frequency response: 20 – 20,000 Hz Wow and flutter: Below measurable limit Harmonic distortion: 0.



[You're reading an excerpt. Click here to read official SONY XAV-65 user guide](http://yourpdfguides.com/dref/5585629)

<http://yourpdfguides.com/dref/5585629>

05% Region code The region system is used to protect software copyrights. 19GB The region code is located on the bottom of the unit, and only DVDs labeled with an identical region code can be played on this unit. DVDs labeled can also be played. If the problem is not solved, visit the support site on the back cover.

General No power is being supplied to the unit. □ Check the fuse. □ The connection is not correct. □ Connect the yellow and red power supply leads. There is no beep sound.

□ An optional power amplifier is connected and you are not using the built-in amplifier. The contents of the memory have been erased. □ The power supply lead or battery has been disconnected or it is not connected properly. Stored stations and correct time are erased. The fuse has blown. The unit makes a noise when the position of the ignition is switched. □ The leads are not matched correctly with the car's accessory power connector. The display disappears from/does not appear on the monitor. □ The dimmer is set to [ON] (page 12). □ The display disappears if you press and hold OFF.

□ Press OFF on the unit until the display appears. □ The monitor off function is activated (page 4). □ Touch anywhere on the display to turn the display back on. The display does not respond to your touch correctly. □ Touch one part of the display at a time. If two or more parts are touched simultaneously, the display will not operate correctly. □ Calibrate the touch panel of the display (page 12). □ Touch the pressure sensitive panel firmly. □ The rear monitor cannot be operated. Icons displayed on the rear monitor are disabled.

Menu items cannot be selected. □ Unavailable menu items are displayed in gray. If you try to play any other DVD, the message [Playback prohibited by region code.] will appear on the monitor screen. Depending on the DVD, no region code may be labeled even though playing the DVD is prohibited by area restrictions.

Copyrights US and foreign patents licensed from Dolby Laboratories. MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson. Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. "DVD VIDEO," "DVD-R," "DVD-RW," "DVD+R," and "DVD+RW" are trademarks. ZAPPIN is a trademark of Sony Corporation. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

All other trademarks are trademarks of their respective owners. Troubleshooting If there are any problems with your unit/mobile device, make sure your car is parked in a safe place before examining any issues. The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures. For details on using the fuse and removing the unit from the dashboard, refer to the installation/connections manual supplied with this unit. Radio reception The stations cannot be received. The sound is hampered by noises. □ The connection is not correct. □ Connect the REM OUT lead (blue/white striped) or accessory power supply lead (red) to the power supply lead of a car's antenna (aerial) booster (only when your car has built-in radio antenna (aerial) in the rear/side glass). □ Check the connection of the car antenna (aerial).

20GB □ If the auto antenna (aerial) will not extend, check the connection of the power antenna (aerial) control lead. Preset tuning is not possible. □ The broadcast signal is too weak. □ □ □ □ □ □ □ RDS PTY displays [PTY not found.].

□ The current station is not an RDS station. □ RDS data has not been received. □ The station does not specify the program type. The WMA file sampling rate is not 44.1 kHz.

The MP3 file bit rate is not 48 to 192 kbps. The WMA file bit rate is not 48 to 192 kbps. The unit is in pause/reverse/fast-forward mode. The settings for the outputs are not made correctly. The DVD output level is too low (page 11). The volume is too low. The ATT function is activated. The format is not supported (such as DTS). □ Check if the format is supported by this unit (page 16). Picture There is no picture/picture noise occurs.

□ A connection has not been made correctly. □ Check the connection between this unit and other equipment, and set the input selector of the equipment to the source corresponding to this unit. □ The disc is defective or dirty. □ Installation is not correct. □ Install the unit at an angle of less than 45° in a sturdy part of the car. @@The picture does not fit in the screen. □ The aspect ratio is fixed on the DVD. There is no picture/picture noise occurs in the rear monitor. □ A source/mode which is not connected is selected. If there is no input, no picture appears in the rear monitor.

□ The color system setting is incorrect. @@□ The picture of the rear view camera is displayed on this unit. @@@□ The disc is defective or dirty. □ The disc is not playable. □ The DVD is not playable due to the region code.

□ The disc is not finalized (page 17). □ The disc format and file version are incompatible with this unit (page 16, 17). □ Press □ to remove the disc. MP3/WMA/Xvid files do not play. □ Recording was not performed according to the ISO 9660 level 1 or level 2 format or the Joliet or Romeo expansion format (DATA CD), or the UDF Bridge format (DATA DVD) (page 17).

□ The file extension is incorrect (page 17). □ Files are not stored in MP3/WMA/Xvid format. □ If the disc contains multiple file types, only the selected file type (audio/video) can be played. □ Select the appropriate file type using the list (page 10). MP3/WMA/Xvid files take longer to play than others. □ The following discs take a longer time to start playback. □ a disc recorded with a complicated tree structure. □ a disc to which data can be added. Certain functions cannot be performed. □ Depending on the disc, you may not be able to perform operations such as stop, search, or repeat/shuffle play.

For details, refer to the manual supplied with the disc. The soundtrack/subtitle language or angle cannot be changed. □ Use the DVD menu instead of the direct selection button on the remote commander (page 9). □ Multilingual tracks, multilingual subtitles, or multi-angles are not recorded on the DVD. □ The DVD prohibits changing. Sound There is no sound/sound skips/sound cracks. □ A connection has not been made correctly.



[You're reading an excerpt. Click here to read official SONY XAV-65 user guide](http://yourpdfguides.com/dref/5585629)

<http://yourpdfguides.com/dref/5585629>

Check the connection between this unit and the connected equipment, and set the input selector of the equipment to the source corresponding to this unit. The disc is defective or dirty. Installation is not correct.

Install the unit at an angle of less than 45° in a sturdy part of the car. The MP3 file sampling rate is not 32, 44.1, or 48 kHz. 21GB The operation buttons do not function. The disc will not eject.

Press the reset button (page 4). DTS formatted discs are not playable on this unit. Use a compatible disc format (page 16). USB device not supported For details on the compatibility of your USB device, visit the support site on the back cover. The character cannot be displayed with the unit.

USB playback Items cannot be played via a USB hub. Connect iPod/USB devices to this unit without USB hub. Items cannot be played. Reconnect the USB device. The USB device takes longer to play. The USB device contains large-sized files or files with a complicated tree structure. The sound is intermittent. The sound may be intermittent at a high bit rate of more than 320 kbps. Error displays/messages Disc Error The unit cannot read the data due to some problem. The data is damaged or corrupted.

The disc is corrupted. The disc is incompatible with this unit. The disc is not finalized. The disc is dirty or inserted upside down. Clean or insert the disc correctly. A blank disc has been inserted. The disc cannot play due to a problem. Insert another disc. The disc is not compatible with this unit. Insert a compatible disc.

Press to remove the disc. Hubs not supported. USB hubs are not supported on this unit. No Playable Data The disc does not contain playable data. The iPod has no playable data.

Load music data/files into the iPod. Overcurrent Caution on USB The USB device is overloaded. Disconnect the USB device, then change the source by pressing the SOURCE button. Indicates that the USB device is out of order, or an unsupported device is connected. Playback prohibited by region code. The DVD's region code differs from the unit's region code. The sound in DTS format is not audible. Discs in DTS format are not supported. Sound is not output if the DTS format is selected. 22GB Language Code List Language code list The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code 1027 1028 1032 1039 1044 1045 1051 1052 1053 1057 1059 1060 1061 1066 1067 1070 1079 1093 1097 1103 1105 1109 1130 1142 1144 1145 1149 1150 1151 1157 1165 1166 1171 1174 1181 Language Afar Abkhazian Afrikaans Amharic Arabic Assamese Aymara Azerbaijani Bashkir Byelorussian Bulgarian Bihari Bislama Bengali; Bangla Tibetan Breton Catalan Corsican Czech Welsh Danish German Bhutani Greek English Esperanto Spanish Estonian Basque Persian Finnish Fiji Faroese French Frisian 1345 Code 1183 1186 1194 1196 1203 1209 1217 1226 1229 1233 1235 1239 1245 1248 1253 1254 1257 1261 1269 1283 1287 1297 1298 1299 1300 1301 1305 1307 1311 1313 1326 1327 1332 1334 Language Irish Scots Gaelic Galician Guarani Gujarati Hausa Hindi Croatian Hungarian Armenian Interlingua Interlingue Inupiak Indonesian Icelandic Italian Hebrew Japanese Yiddish Javanese Georgian Kazakh Greenlandic Cambodian Kannada Korean Kashmiri Kurdish Kirghiz Latin Lingala Laothian Lithuanian Latvian; Lettish Malagasy 1503 1505 1506 1482 1483 1489 1491 1495 1498 1501 1502 1436 1463 1481 Code 1347 1349 1350 1352 1353 1356 1357 1358 1363 1365 1369 1376 1379 1393 1403 1408 1417 1428 1435 Language Maori Macedonian Malayalam Mongolian Moldavian Marathi Malay Maltese Burmese Nauru Nepali Dutch Norwegian Occitan (Afan)Oromo Oriya Punjabi Polish Pashto; Pushto Portuguese Quechua RhaetoRomance Kirundi Romanian Russian Kinyarwanda Sanskrit Sindhi Sangho SerboCroatian Singhalese Slovak Slovenian 1703 Not specified Code 1507 1508 1509 1511 1512 1513 1514 1515 1516 1517 1521 1525 1527 1528 1529 1531 1532 1534 1535 1538 1539 1540 1543 1557 1564 1572 1581 1587 1613 1632 1665 1684 1697 Language Samoan Shona Somali Albanian Serbian Siswati Sesotho Sundanese Swedish Swahili Tamil Telugu Tajik Thai Tigrinya Turkmen Tagalog Setswana Tonga Turkish Tsonga Tatar Twi Ukrainian Urdu Uzbek Vietnamese Volapük Wolof Xhosa Yoruba Chinese Zulu 23GB <http://www.sony-asia.com/section/support> <http://www.sony-asia.com/caraudio/> <http://www.sony-asia.com/>

sony.net/ ©2013 Sony Corporation Printed in China .



[You're reading an excerpt. Click here to read official SONY XAV-65 user guide](http://www.sony-asia.com/section/support)
<http://yourpdfguides.com/dref/5585629>