



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THERMADOR CM302BS. You'll find the answers to all your questions on the THERMADOR CM302BS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THERMADOR CM302BS
User guide THERMADOR CM302BS
Operating instructions THERMADOR CM302BS
Instructions for use THERMADOR CM302BS
Instruction manual THERMADOR CM302BS

Thermador® **QUICK COOKING GUIDE**
This page applies to single, upper or lower ovens
Single Oven Model CM301 or Double Oven Model CM302

UPPER OVEN LOWER OVEN TIMER 1 TIMER 2 SELF CLEAN
 OVEN LIGHT OVEN LIGHT TIMER 1 OFF TIMER 2 OFF CLOCK TIME
 OVEN OFF OVEN OFF PANEL LOCK CLOCK STOP TIME
 1 2 3 4 5 6 7 8 9 0
 START
 CS-1 BROS./DESEPT CS-2 LARGE ROAST/POULTRY/CASSEROLES CS-3 SMALL ROAST/POULTRY/APPEZIZERS CS-4 VEGETABLES CS-5 BROZEN FOODS

FAST PREHEAT CONVECTION PROBE COOKSMART 12-345
 BAKE CONVECTION BAKE WARM WARM/NOONWAVE
 BROIL CONVECTION ROAST PROOF PAUSE/RESUME
 BROIL CONVECTION BROIL ISH/GRILL DEBROIL

Illustration shows CM302 Control Panel.

- For double ovens only, select oven before proceeding.
To start any oven mode after selection, touch START.
- To cancel any operation, touch **OVEN OFF**.

To set Bake, Roast, Convection, Convection Roast, Convection Bake

- Touch cooking mode.
- Touch number pads only for temperature other than one displayed.
- Touch START.

To set Broil or Convection Broil

- Touch BROIL or CONVECTION BROIL mode.
- Touch number pads only for temperature other than one displayed.
- Touch START.

To set a cooking mode for an automatic timed function, be certain that the CLOCK is set for the correct Time of Day.

To set timed cooking - to start now and stop automatically

- Select Upper or Lower oven.
- Touch cooking mode for oven to be used.
- Touch number pads only for temperature other than one displayed.
- Touch COOK TIME.
- Touch number pads for hours and minutes to cook.
- Touch START.

Oven displays cook time and stop time.

To set timed cooking - to delay start and stop

- Touch cooking mode for oven to be used.
- Touch number pads only for temperature other than one displayed.
- Touch COOK TIME.
- Touch number pads for hours and minutes to cook.
- Touch STOP TIME.
- Touch number pads for time of day you want oven to turn off.
- Touch START.

Oven displays start time and cook time.

For direct assistance for CM models: 5551 McFadden Avenue, Huntington Beach, CA 92649 • 800 735-4328 phone 1-888/SPD-COOK 50200 | 10% Rev. A • © 2000 Thermador • Litho Date: 03/04



[You're reading an excerpt. Click here to read official THERMADOR CM302BS user guide](http://yourpdfguides.com/dref/3569350)

<http://yourpdfguides.com/dref/3569350>

Manual abstract:

To set Bake, Roast, Convection, Convection Roast, Convection Bake 1. Touch cooking mode. 2. Touch number pads only for temperature other than one displayed. 3. Touch START. · To cancel any operation, touch OVEN . OFF To set Broil or Convection Broil 1. Touch BROIL or CONVECTION BROIL mode. 2.

Touch number pads only for temperature other than one displayed. 3. Touch START. To set a cooking mode for an automatic timed function, be certain that the CLOCK is set for the correct Time of Day. To set timed cooking - to start now and stop automatically 1.

Select Upper or Lower oven. 2. Touch cooking mode for oven to be used. 3. Touch number pads only for temperature other than one displayed. 4. Touch COOK TIME. 5. Touch number pads for hours and minutes to cook. 6. Touch START. Oven displays cook time and stop time. For direct assistance for CM models: phone 1-888/SPD-COOK To set timed cooking - to delay start and stop 1. Touch cooking mode for oven to be used. 2.

Touch number pads only for temperature other than one displayed. 3. Touch COOK TIME. 4. Touch number pads for hours and minutes to cook. 5. Touch STOP TIME. 6. Touch number pads for time of day you want oven to turn off. 7.

Touch START. Oven displays start time and cook time. 5551 McFadden Avenue, Huntington Beach, CA 92649 · 800/735-4328 5020011096 Rev. A · © 2000 Thermador · Litho Date: 03/04 QUICK COOKING GUIDE This page applies ONLY to SINGLE OVEN Model CM301 or UPPER OVEN of Model CM302

UPPER OVEN OVEN LIGHT OVEN OFF LOWER OVEN OVEN LIGHT OVEN OFF TIMER 1 TIMER 2 SELF CLEAN FAST PREHEAT BAKE BROIL BROIL CONVECTION CONVECTION BAKE CONVECTION ROAST CONVECTION BROIL CS+4 VEGETABLES PROBE WARM PROOF DEHYDRATE COOKSMART 1-2-3-4-5 MICROWAVE PAUSE/ RESUME DEFROST TIMER 1 OFF PANEL LOCK TIMER 2 OFF CLOCK CLOCK TIME STOP TIME 1 2 3 4 CS+1 BREADS/DESERT CS+2 LARGE ROAST/POUL TRY/CASSEROLES CS+3 SMALL ROASTS/POULTRY/APPETIZERS 5 6 START 7 8 9 0 CS+5 FROZEN FOODS Illustration shows CM302 Control Panel. When using microwave modes, DO NOT operate the oven empty.

COOKSMART™ COOKSMART combines convection heat and microwave energy to cook food in approximately onehalf the conventional cooking time. Always preheat oven when using CookSmart modes. @@Touch the number pads to enter the minimum conventional cooking time. NOTE: Set the time in hours and minutes. 5.

@@6. @@7. @@To restart after interruption, touch PAUSE/RESUME. 8. @@Touch COOKSMART. 2. Touch number pad (1, 2, 3 or 4) to enter the desired food category. 3. @@@@Touch START. 1.

Touch MICROWAVE pad, power level preset for HI. @@2. Touch COOK TIME pad and then the number pads for amount of time. Tip: Set the time in minutes and seconds. 3. Touch START. To interrupt the mode to stir or check the doneness of the food, touch PAUSE / RESUME. To restart after interruption, touch PAUSE / RESUME. To end or cancel before the cooking time has expired, touch OVEN OFF. 3.

Select MICROWAVE pad. 4. @@5. Select COOK TIME. 6.

Touch number pad to enter cook time. (set time in minutes and seconds). 7. Touch START. 8.

After cooking ends,touch OVEN/OFF .



[You're reading an excerpt. Click here to read official THERMADOR CM302BS user guide](http://yourpdfguides.com/dref/3569350)

<http://yourpdfguides.com/dref/3569350>