



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THERMADOR T36BT71FS. You'll find the answers to all your questions on the THERMADOR T36BT71FS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THERMADOR T36BT71FS
User guide THERMADOR T36BT71FS
Operating instructions THERMADOR T36BT71FS
Instructions for use THERMADOR T36BT71FS
Instruction manual THERMADOR T36BT71FS

USE & CARE GUIDE

For Built-in Refrigerators

GUIDE D'UTILISATION ET D'ENTRETIEN

Pour réfrigérateurs encastrés

MANUAL DE USO Y CUIDADO

Para los refrigeradores
empotrados

Model /Modèle/Modelo

T36BT..
T36IB..
T36IT..

For questions about features, operation/performance, parts, accessories or service, call 1-800-735-4328. In Canada, call for assistance 1-800-735-4328, for installation and service, call 1-800-735-4328 or visit our website at... www.thermador.com

Para consultas respecto a características, operación/desempeño, partes, accesorios o servicio, llame al 1-800-735-4328.

En Canadá, para obtener asistencia llame al 1-800-735-4328, para instalación y servicio llame al 1-800-735-4328 o visite nuestra página de Internet... www.thermador.com

Au Canada, pour assistance, composez le 1-800-735-4328, pour installation ou service le 1-800-735-4328 ou visitez notre site web à... www.thermador.com



9000 439 086

Thermador®



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](#)

<http://yourpdfguides.com/dref/3654433>

Manual abstract:

. T36IB.. T36IT.. 9000 439 086 Content IMPORTANT SAFETY INSTRUCTIONS

.....

.....

.....

.....

.....

.....

..... Congratulations ...

.....

.....

.....

.....

.....

.....

.....

.....

..... Your new appliance ...

.....

.....

.....

.....

.....

.....

.....

.....

..... Your new appliance .

.....

.....

.....

.....

.....

.....

.....

.....

.....

. Installation

.....

.....

.....

.....

.....

.....

.....

.....

..... Connection to the power supply

.....

.....

.....

.....

.....

.....

.....

.. Connecting the water

.....
.....
.....

.....
.....
.....
.....

..... Switching on the appliance ..

.....
.....
.....

.....
.....
.....
.....

..... Switching off and disconnecting the appliance .

.....
.....
.....

.....
.....
.....

.... Functions

.....
.....
.....

.....
.....
.....
.....

..... Variable interior design .

.....
.....
.....

.....
.....
.....
.....

.... "Cool-fresh" drawer ..

.....
.....

.....
.....
.....

.....
.....
.....

Control panel

.....
.....

.....
.....

.....
.....
.....
.....

.. *Setting the temperature*

.....
.....
.....

.....
.....
.....
.....

..... *Super function*

.....
.....
.....

.....
.....
.....
.....

.....
.....

.. *Setup mode*

.....
.....
.....
.....

.....
.....
.....
.....

Settings which can be changed in Setup mode

.....
.....
.....

.....
.....

Vacation mode

.....
.....
.....
.....

.....
.....
.....

..... *Sabbath mode*

.....
.....
.....
.....

.....
.....
.....

..... *Refrigerating*

.....
.....

.....
.....
.....

.....
.....

Freezing and storing

.....
.....
.....

.....
.....

..... *IceMaker*

.....
.....
.....

.....
.....
.....

..... *Operating noises*

.....
.....

.....
.....
.....

.....
.....

..... *How to save energy*

.....
.....
.....

.....
.....

..... *Defrosting*

.....

.....
.....
.....

.....
.....
.....
.....

.....
... *Cleaning the appliance* ..

.....
.....

.....
.....
.....

.....
.....

.. *Odors* ...

.....

.....
.....

.....
.....

.....

..... *Warning messages via the display*

.....
.....

.....
.....

.....
.....

Appliance self-test

.....
.....

.....
.....

.....
.....

..... *Resetting factory settings* ..

.....
.....

.....
.....

.....
.....

.....
Water filter

.....

.....

.....

.....

.....

.....

.....

.....

.....

... *Filter Product Data Sheet* ...

.....

.....

.....

.....

.....

.....

.....

..... *Troubleshooting*

.....

.....

.....

.....

.....

.....

.....

.....

..... *Changing the bulb*

.....

.....

.....

.....

.....

.....

.....

... *Changing the odor filter* ...

.....

.....

.....

.....

.....

.....

.....

.....

.. *Service* ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

STATEMENT OF LIMITED PRODUCT WARRANTY

English

. Français

. . . Español

Do not allow children to climb, stand or hang on the shelves in the refrigerator. They could seriously injure themselves and damage the refrigerator. After your refrigerator is in operation, do not touch the cold surfaces in the refrigerator compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

In refrigerators with an automatic icemaker, avoid contact with the moving parts of the ejector mechanism, or with the heating element located on the bottom of the icemaker. Do not place fingers or hands on the automatic icemaking mechanism while the refrigerator is plugged in. Do not refreeze frozen foods which have thawed completely. Use the motorized shelf carefully. Do not squeeze hands between motorized shelf and the evap cover. Unplug your refrigerator before cleaning and making repairs. NOTE: We strongly recommend that any servicing be performed by a qualified individual. Before replacing a burned-out light bulb, set the power switch in the OFF position to turn off the lights in order to avoid contact with a live wire filament. A burned-out light bulb may break when being replaced. NOTE: Setting the refrigerator temperature controls to OFF does not remove power to the light circuit.

Electrical Connection The appliance comes with an UL listed, 3-wire power supply cord. The appliance requires a 3-wire receptacle. The receptacle must be installed by a licensed electrician only. Grounding instruction This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Improper connection of the equipment grounding conductor may result in electric shock. Have the appliance checked by a qualified electrician or service technician if you are in doubt as to whether the appliance has been properly grounded. Some local regulations may require a separate ground. In such cases, the required accessory ground wire, clamp and screw must be purchased separately. Never ground the appliance to plastic plumbing lines, gas lines or water pipes. WARNING RISK OF CHILD ENTRAPMENT Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigeration products are still dangerous... even if they will sit for "just a few days".

If you are getting rid of your old appliance, please follow these instructions to help prevent accidents. Before you throw away your old refrigeration product: Take off the doors. Leave the shelves in place so that children may not easily climb inside. CFC DISPOSAL Your old refrigerator may have a cooling system that used CFC's (chlorofluorocarbons). CFC's are believed to harm stratospheric ozone. If you are throwing away an old refrigeration product, make sure the CFC refrigerant is removed for proper disposal by a qualified servicer. If you intentionally release this CFC refrigerant, you can be subject to fines and imprisonment under provisions of environmental legislation. Definitions m WARNING m Congratulations With the purchase of your new bottom freezer you have opted for a modern, high-quality domestic appliance. Your bottom freezer is distinguished by its economical energy consumption. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition. If you have any questions particularly concerning installation and connection of the appliance please do not hesitate to contact our customer service, see section "Service".



You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide

Further information and a selection of our products can be found on our home page. Please read these operating instructions as well as the installation instructions and all information enclosed with the appliance and follow accordingly. Retain all documents for subsequent use or for the next owner.

WARNING This indicates that death or serious injuries may occur as a result of not observing this warning.

CAUTION CAUTION This indicates that minor or moderate injuries may occur as a result of not observing this warning. This symbol is used to draw the user's attention to something in particular. **IMPORTANT** Save these instructions for local inspector's use. Observe all governing codes and ordinances. People who have limited physical, sensory or mental abilities or inadequate knowledge must not use this appliance unless they are supervised or given meticulous instructions.

Note to installer Be sure to leave these instructions with the consumer. **Note to consumer** Keep these instructions with your Owner's Manual for future reference. **General information** The refrigerator compartment of this appliance is suitable for refrigerating food. The freezer compartment of this appliance is suitable for: storing frozen food, freezing food, making ice. This appliance is designed for domestic use only. **5** Your new appliance These operating instructions refer to several models. **Diagrams may vary.** **2-door model** Refrigerator compartment **1** Control panel **2** Butter and cheese compartment for storage of various, condiments, bottles and jars **3** Motorized shelf **4** Button for Motorized shelf **5** Door storage bins **6 7 8 9** Glass shelves in refrigerator for storing cooked food, dairy products, meat products **Gallon door bin** Vegetable container "Cool-fresh" drawer **Freezer compartment** **10** Ice Maker * **11** Ice cube container Capacity max. 5.5 lbs/2.

5 kg **12** Internal freezer drawer **13** Freezer door drawer **14** Water filter * not visible **6** Your new appliance These operating instructions refer to several models. **Diagrams may vary.** **3-door model (French door)** Refrigerator compartment **1** Control panel **2** Butter and cheese compartment for storage of various, condiments, bottles and jars **3** Motorized shelf **4** Button for Motorized shelf **5** Door storage bins **6 7 8 9** Glass shelves in refrigerator for storing cooked food, dairy products, meat products **Gallon door bin** Vegetable container "Cool-fresh" drawer **Freezer compartment** **10** Ice Maker * **11** Ice cube container Capacity max. 11 lbs/5 kg **12** Internal freezer drawer **13** Freezer door drawer **14** Water filter * prior lights come on. The preset temperatures (factory settings) are reached after approx. 28 hours. Do not put any food in the appliance beforehand. Do not use the first ice cubes from the ice maker! Discard the ice production of the first 24 hours after switching on the icemaker. To change the preset temperatures see "Setting the temperature". Switching off and disconnecting the appliance **Switching off the appliance** Press the **POWER** button.

If switching off the appliance for a period longer than 2 weeks, remove the water filter. Before switching on the appliance again, install a new filter (see "Exchanging the filter"). **Disconnecting the appliance** If you do not use the appliance for a prolonged period: Shut off the water supply line. Shut off the water supply line several hours before switching off the appliance. Remove and discard the water filter.

Secure the filter cap! Take all food out of the appliance. Pull out the mains plug or switch off the fuse. Empty the ice cube container. Clean the appliance interior (see "Cleaning the appliance"). To prevent odors, leave the doors open.

9 Functions **Door alarm** If one of the appliance doors is left open, an alarm signal sounds after one minute. The alarm is switched off with the **ALARM OFF** button and by closing the door. If the door has still not been closed properly, the alarm sounds again after one minute. Activate and deactivate the door heater

Variable interior design Refrigerator compartment You can re-arrange the shelves and the containers in the door inside the refrigerator compartment as required. **Glass shelves** The height of the glass shelves can be adjusted. Simultaneously hold down the **SUPER COOL** and **ALARM OFF** buttons for 3 seconds. **French door style** The display shows the momentary status. **Motorized shelf** The 3-door variant allows for the left refrigerator compartment door to be opened without first having to open the right door. (Refrigerator compartment) The appliance features a motorized height-adjustable shelf. Lift the shelf at the front and move it up or down in the guides.

Lower the shelf to the required position and snap it into the preset openings in the guide. To remove the shelves: Care should be taken when closing the door.

The appliance could become damaged! The folding rail attached to the door of the left refrigerator compartment has to be folded if the doors are closed. A heater is integrated in the folding rail for avoiding condensation and has to be switched on as soon as damp forms on the rail. The height of this shelf can be adjusted when it is loaded. **Toggle switch up:** Shelf moves up **Toggle switch down:** Shelf moves down **Maximum load of the motorized shelf:** 22.1 lbs/10 kg In case of overload the mechanism is blocked temporarily. Lift the shelf at the front, move it as far as the openings on the guide rail and remove. **10 Drawers**

Insert the shelf at the required height and press down. **Door storage compartment** To remove the drawers, lift them slightly and remove.

To remove the drawers, lift them slightly and remove. To replace the drawers, lift them at the front slightly and reinsert in the pullout. Move the drawer upwards and slide it backwards. Using a screwdriver, turn the locks on the pullouts by 90°. Lift the container and remove.

To replace the drawers, lift them at the front slightly and reinsert in the pullout. Move the drawer upwards and slide it backwards. "Cool-fresh" drawer The temperature in this compartment is kept at almost 0 °C. This provides optimum storage conditions for fresh food such as fish, meat and poultry. The temperature in the "cool-fresh" drawer can be reduced slightly with the slide control.

We recommend the following controller position: **COLD:** dairy **COLDER:** Fish and meat **Freezer compartment** The drawers in the freezer compartment can be taken out for cleaning. While taking out the big freezer drawer, the upper drawer has to be taken out first. Insert the container at the required height and press down. Place the bottle holder at the required position in the gallon door bin. Using a screwdriver, turn the locks on the pullouts by 90°. **11 Control panel** To utilize all the functions of your appliance, we recommend that you familiarize yourself thoroughly with the control panel and the setting options.



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](http://yourpdfguides.com/dref/3654433)
<http://yourpdfguides.com/dref/3654433>

*A Button POWER Switches the appliance on and off. F m CAUTION! The appliance is not isolated from the mains when switched off by the POWER button.
B Button ICE Switches on/off the Ice Maker. See section on "Ice Maker".*

C Button ALARM OFF Switches off the alarm. See section on "Warning messages via the display". D Button SUPER COOL Switches the Super function on and off for the refrigerator compartment. See section on "Super function". E Button SUPER FREEZER Switches the Super function on and off for the freezer compartment. See section on "Super function". G H Display The set required temperature of the appliance is indicated on the display. Activated special functions are indicated via symbols, e.g. Super function SUPER.

In Setup mode the menus as well as the setting options are indicated on the display. See section on "Setup mode". < > buttons Select the menus in Setup mode. See section on "Setup mode". The required temperature adjustment is activated with the < > buttons.

See section on "Setting the temperature". + buttons Select the available parameters of the menu. See section on "Setup mode". The displayed temperature of the appliance is also changed with the + buttons. See section on "Setting the temperature".

I J Button SETUP This button activates and also ends Setup mode. When Setup mode is ended with the SETUP button, the changed settings are saved. Button VACATION Switches Vacation mode on and off. See section on "Vacation mode". Each button depression is acknowledged by a signal if the ON setting is activated in Setup mode, Tone menu. Symbols at Display Refrigerator compartment, see page 13. Freezer compartment, see page 13. The Super function is activated, see page 13. Setting options in setup mode, see page 14. The Vacation Mode is activated, see page 16.

Ice Maker ON/OFF, see page 18. An Alarm is indicated, see page 20. Change water filter cartridge, see page 21. 12 Freezer Setting the temperature To adjust the required temperature: Activate the Setup mode with the < or > buttons. The temperature can be set from 7 °F to 9 °F (14 °C to 23 °C). We recommend a setting of 0 °F (18 °C). The temperature can be changed with the + buttons (warmer) or (colder). The temperature can be adjusted in 1 °F (0.5 °C) steps. To adjust the required temperature: Activate the Setup mode with the < button.

The symbol is displayed. Super function When the Super function is activated, the appliance is cooled as cold as possible to a preset temperature set at the factory. After approx. 50 hours the refrigerator automatically switches back to the temperature set before Super function. The Super function is ended: by pressing the SUPER button again, by activating the Eco function, by activating the Vacation mode, by activating the Sabbath mode.

for the freezer compartment. > for the refrigerator compartment. Set the required temperature with the + (warmer) or (colder) buttons. < Set the required temperature with the + (warmer) or (colder) buttons. Depending on the model, the appliance can also be switched off via the temperature setting. When the highest temperature has been reached, OFF is displayed. Super cooling The Super function is ideal for the rapid cooling of drinks and refrigerating large quantities of food. The function is activated by pressing the SUPER COOL button. Refrigerator The temperature can be set from 35 °F to 46 °F (+2 °C to +8 °C). We recommend a setting of 37 °F (+3 °C). The temperature can be changed with the + buttons (warmer) or (colder). The temperature can be adjusted in 1 °F (0.5 °C) steps. To adjust the required temperature: Activate the Setup mode with the > button. The symbol is displayed.

The SUPER REFRIGERATOR symbol and the Super temperature are displayed. Set the required temperature with the + (warmer) or (colder) buttons. 13 Super freezing The Super function is used to freeze large quantities of fresh food and should be switched on some hours before the fresh food is placed in the freezer. In general, 46 hours is adequate. If the max. freezing capacity is used, 24 hours are required. The function is activated by pressing the SUPER FREEZER button. Setup mode There are several menus for adjusting the appliance functions to individual requirements. These adjustments can be made in Setup mode. To activate Setup mode: Press the SETUP button.

To select between the different setting options within one menu: Press the + or - button. A modified setting is saved when the next menu is selected with the < or > button. To end Setup mode: Press the SETUP button. All modified settings are saved. The SUPER FREEZER symbol and the Super temperature are displayed.

The first menu (temperature unit) is displayed. To switch to the next menu: If no button is pressed within 12 seconds, Setup mode ends automatically. All modified settings are saved. The required temperature is displayed again. Press the < or > button.

The next menu and the current setting (usually On/Off) are displayed. Settings which can be changed in Setup mode Menu Temperature unit Setting options °F (degrees Fahrenheit) °C (degrees Celsius) English French On Off On Off Displayed text °F °C ENGLISH FRANCAIS TONE ECO MODE Language Sound Energy-saving mode (eco function) 14 Temperature unit The temperature can be displayed in degrees Fahrenheit (°F) or degrees Celsius (°C). Press the SETUP button. Language setting When the appliance has been switched on, error messages and settings in Setup mode are displayed in English.

Alternatively the information can be displayed in French. Switch on Setup mode. Press the > button until ENGLISH is displayed. Energy-saving mode When the Economy function (Eco) is activated, the appliance switches to an energy-saving mode. This Economy functions set at the factory to be energetically more favorable. The background light of the display is reduced also.

The Economy function is activated in Setup mode. The first menu (temperature unit) is displayed. Press the + or - button to switch between degrees Fahrenheit (°F) or degrees Celsius (°C). Press the SETUP button to save the setting. Press the + or - button to switch to FRANCAIS. Press the SETUP button to save the setting. Press the + or - button to change On/Off. Press the SETUP button to save the setting. ECONOMY is displayed in the standard display. The function is ended by: switching off the Eco function in Setup mode, activating the Super function, changing the required temperature of the appliance, switching off the appliance with the POWER button.

15 Vacation mode If you are away for a prolonged period, you can switch the appliance to an energetically more favorable mode.



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](http://yourpdfguides.com/dref/3654433)

<http://yourpdfguides.com/dref/3654433>

When Vacation mode is active, the appliance switches to Eco function (see section on "Energysaving mode"), the interior light switches off, the Super function ends (if switched on). To switch on Vacation mode: Press the VACATION button. Sabbath mode When Sabbath mode is active the Super function switches off, the ice maker switches off, the acknowledgment signal is deactivated when the button is pressed (if switched on), the interior light switches off, the background light of the display is reduced. To switch on Sabbath mode: Refrigerating Arrange food as follows: On the shelves: Cakes and pastries, ready meals, dairy products, meat and sausage In the vegetable container: Vegetables, lettuce, fruit In the door (from top to bottom): Butter, cheese, eggs, gallons, small bottles, large bottles, milk, juice cartons When placing food in the appliance, please note: The VACATION symbol is displayed. Instead of the required temperature, the presetting temperature is displayed. To end Vacation mode, press the VACATION button. The previous settings and temperature values are used again. Allow warm food and drinks to cool down outside the appliance. Place food in the appliance well packed or wrapped. Flavor and freshness will then be retained. This will also prevent transfer of flavors and discoloration of the plastic parts. Do not allow oil and grease to come into contact with plastic parts or the door seal. Store high percentage alcohol upright in sealed containers only. Press and hold down the SUPER COOL button. Press the VACATION button. Hold down the SUPER COOL button for a further 3 seconds. The VACATION symbol flashes on the display. m
WARNING Do not store explosive substances in the appliance. Risk of explosion! When buying food, please note: SABBATH is displayed.

To end Sabbath mode, press the VACATION button. The previous settings and temperature values are used again. The "purchase freshness" is important for the shelf-life of your food. In principle the following applies: The fresher the food is, the longer it will keep. When buying food, always note the degree of freshness. 16 Freezing and storing Store the frozen produce **CAUTION** Do not refreeze frozen food which is thawing or which has thawed. Boil or fry the food before refreezing it. No longer store the frozen produce for the max. storage period. When purchasing deep-frozen food, comply with the following: Check whether the packaging is damaged.

Check the sell-by date. The temperature of the supermarket freezer must be lower than 0 °F (18 °C). If not, the storage life of the food is reduced. Purchase deep-frozen food last. Wrap in newspaper or place in a cold bag and take home.

At home immediately place deepfrozen food in the freezer compartment. Use the deepfrozen food before the sell-by date runs out. How to wrap food correctly Place the food in the wrapping. Press out all the air. Seal the wrapping.

Label the wrapping with the contents and date. The following products are not suitable for wrapping food: Wrapping paper, greaseproof paper, cellophane, refuse bags and used shopping bags. The following products are suitable for wrapping food: Plastic film, polyethylene blown film, aluminium foil and freezer tins. These products can be purchased from your dealer. The following products are suitable for sealing the wrapped food: Rubber bands, plastic clips, string, cold-resistant adhesive tape or similar. Bags and polyethylene blown film can be sealed with a film sealer. Foods Butter Milk, Cream Cottage cheese Cream cheese Hard cheese Eggs fresh, in shell Raw yolks and whites Mayonnaise Summer sausage opened unopened Bacon Luncheon meat Vacuum-packed diners, unopened Corned beef Beef, Veal, Lamb, Pork fresh cooked Poultry Storage Time 6 to 9 months Not recommended 4 to 6 months Do not freeze! 6 to 9 months

Do not freeze! 1 to 2 months 1 to 2 months 1 month 1 to 2 months 3 to 4 months 1 month (drained) 4 to 12 months 2 to 3 months Thawing the frozen food Depending on the type and purpose of the food, thaw: at room temperature, in the refrigerator, in an electric oven, with/without hot air fan, in the microwave oven. fresh cooked Vegetables Asparagus Broccoli, green peas, lima beans, cauliflower Carrots, beets and turnips, lettuce Onions, peppers Fruits Apples Apricots, berries, cherries Grapes Pineapples, cut 9 to 12 months 4 to 6 months 8 to 10 months Freezing food yourself Freeze fresh, undamaged food only. To prevent food from losing its flavour or drying out, place in airtight containers. Food should be frozen solid as quickly as possible.

8 months (cooked) 6 months 1 month (whole) 6 to 12 months Source: United States Department of Agriculture, FSIS 17 IceMaker As soon as the freezer has cooled down to freezing temperature, the ice cube tray fills with water. Cold air is blown directly over the tray. As soon as they are frozen, the ice cubes fall into the ice cube container. When the ice cube container is full, ice making switches off automatically. The ice maker can make approx. 100 ice cubes within 24 hours. Switching off the ice maker The water supply line must be shut off several hours before the appliance or ice maker is switched off. To switch off the ice maker: Press the ICE button. Operating noises Quite normal noises Grumbling refrigerating unit is running. Fan in the recirculating air system is running.

Bubbling, humming or gurgling noises refrigerant is flowing through the tubes. Water is flowing into the ice maker. Clicking motor is switching on or off. Solenoid valve on the water connection is opening/closing. Rumbling ice cubes are falling into the ice cube container.

Do the ice cubes have an unusual odor? Ice is a porous material which can absorb odors from the environment. Ice cubes which have been in the ice cube container for a long time may absorb such odors, stick together and slowly become smaller. We recommend that these ice cubes are no longer used. Other means of preventing odors: The ice cube container should be cleaned occasionally with warm water. Make sure that you switch off the ice maker before cleaning the container.

Rinse out and wipe dry. Check the contents of the freezer for spoilt or out-of-date food. All odorous foods should be wrapped thoroughly or stored in airtight containers to prevent the build-up of odors. The water filter may have to be replaced in some models. In some cases the quality of the water connection in the house should be checked. **CAUTION** Do not place any bottles or food for rapid cooling in the ice cube container. The ice maker may become blocked and be damaged. Switching on the ice maker Make sure that the ice cube container is under the ice maker and has been inserted as far as possible. Noises which can easily be eliminated The appliance is not level Level the appliance with the aid of a spirit level.



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](http://yourpdfguides.com/dref/3654433)
<http://yourpdfguides.com/dref/3654433>

Use the height-adjustable feet or place something underneath.

Drawers, baskets or storage areas wobble or stick Check the removable parts and, if required, reinsert them. Receptacles are touching each other Move bottles or receptacles away from each other. Press the ICE button on the control panel (if not yet switched on). 18 How to save energy Install the appliance in a dry, ventilated room; do not expose to direct sunlight and do not place near a heat source (e.g. radiator, cooker). If required, use an insulating plate. Allow warm food and drinks to cool down before placing them in the appliance. Defrost frozen food by placing it in the refrigerator. The low temperature of the frozen food will refrigerate the food in the refrigerator compartment.

Open the appliance door as briefly as possible! Cleaning the appliance m WARNING m To avoid electrical shock which can cause death or severe personal injury, disconnect power to appliance before cleaning. After cleaning, reconnect power. m WARNING m Clean the appliance with lukewarm water and a little dishwashing liquid. Do not let the water used for cleaning drip onto the control panel or light. Check the ventilation openings on the base panel.

Remove dirt with a vacuum cleaner. After cleaning: Reinsert the mains plug or switch on the fuse. Switch on the appliance with the POWER button. Have your supplier inform you about special cleaning and care information for appliance surfaces. Wipe appliance surfaces with a damp cloth.

Then immediately wipe dry. Defrosting The appliance is defrosted automatically. To avoid personal injuries or property damage, observe the following: Do not clean the appliance with a steam cleaner. Do not let the water used for cleaning drip onto the top or control panel. Do not use abrasive or acidic cleaning agents or solvents which may damage the surfaces of the appliance. Never clean shelves and containers in the dishwasher. The parts may warp. Switch off the appliance with the POWER button! Pull out the mains plug or switch off the fuse. Clean the door seal with water only and dry thoroughly.

Odors If the appliance is emitting unpleasant odors: Switch off the appliance with the POWER button! Pull out the mains plug or switch off the fuse.

Take all food out of the appliance. Clean the interior. See section on „Cleaning the appliance“. Thoroughly clean all packing containers used in the appliance. Pack strong-smelling food in airtight containers to prevent the build up of odors. Switch on the appliance again with the POWER button. Stack food in the appliance. After 24 hours check whether the odors have been eliminated. 19 Door alarm Warning messages via the display If several warning messages are displayed simultaneously, deal with each message individually. While a warning message is displayed, buttons cannot be pressed.

Cause An appliance door has not been closed properly or has been open too long. Remedial action Close the door. The display goes out. Appliance self-test Before you call customer service, conduct an appliance self-test. Switch off the appliance and wait 5 minutes.

Keep the door closed. Switch on the appliance. Temperature alarm (Freezer compartment) Sensor fault A temperature alarm is indicated by the required temperature flashing and the ALARM symbol coming on. A signal also sounds if the Tone function has been activated in Setup mode. Cause Power failure Large quantities of fresh produce placed in the appliance Fault with the appliance Remedial action Press the ALARM OFF button.

The signal stops. The highest temperature in the appliance is displayed for several seconds. Determine the cause of the temperature alarm. When the required temperature is reached again, the ALARM symbol goes out and the signal stops. Cause A technical defect is possible. Remedial action Conduct an appliance self-test. Simultaneously hold down the SETUP and ALARM OFF buttons for 5 seconds. The self-test starts. Different messages are displayed in succession. If a fault is detected during the self-test, the ALARM symbol and a corresponding error message, e.

g. for a sensor fault, are displayed. Low voltage The display light has gone out. Cause The mains voltage has dropped below the permitted limit value.

Remedial action Buttons cannot be pressed. When the mains voltage reaches the stipulated value again, the warning message goes out. If the warning message is prolonged, inform your power supply company. Inform customer service about the error message. If the appliance self-test does not establish any faults, the required temperature is displayed on completion of the self-test. 20 Water filter Resetting factory settings m WARNING Recommended after a change of owner.

To purchase a water filter substitute cartridge contact your local dealer or call 18005786890. If the following display is indicated: m To avoid serious illness or death, do not use water that is microbiological or chemical unsafe or of unknown quality without adequate disinfection or other treatment before or after use of filter. The filter has to be changed immediately. Exchanging the filter Simultaneously hold down the SETUP and ALARM OFF buttons for 3 seconds. If the factory settings are reset: an appliance which is switched off switches on, the Super function switches off, settings changed in Setup mode are reset to factory settings.

m WARNING m 1. Rotate the filter cap on the base panel by 90°/180° in an anticlockwise direction. 2. Pull the used filter cartridge out of the appliance. After installing a new water filter always discard the ice production of the first 24 hours after switching on the icemaker.

If ice has not been used for a prolonged time, discard all ice cubes in the bin and discard the ice production of the next 24 hours. If appliance or ice was not actively used for several weeks or months or ice cubes have an unpleasant taste or odor, change water filter. Air trapped in system may cause water and cartridge to eject. Use caution when removing. The filter should be changed at least every 6 months. If the following display is indicated: 3. Remove the cap from the used filter. Take a new filter cartridge out of the packaging and remove the protective cap. 4. Push the cap onto the new filter cartridge.

The age of the filter is close to the maximum life time. Order a new water filter. 21 Deactivating the filter display The appliance might be used without a water filter. If you choose this option replace the water filter by a water filter substitute cartridge. In this case the filter display might be deactivated to prevent filter change messages. To purchase a water filter substitute cartridge contact your local dealer or call 18005786890. 5. Présentez la cartouche filtrante à l'horizontale et poussez-la avec le couvercle complètement dans l'orifice ménagé dans le panneau de base.



[You're reading an excerpt. Click here to read official THERMADOR](http://yourpdfguides.com/dref/3654433)

[T36BT71FS user guide](http://yourpdfguides.com/dref/3654433)

<http://yourpdfguides.com/dref/3654433>

6. Imprimez doucement à la cartouche filtrante une rotation de 90-180° dans le sens des aiguilles d'une montre, jusqu'à ce que la saillie du couvercle se retrouve à l'horizontale.

After changing the filter, reset the filter display. The appliance might be used without a water filter. If you choose this option replace the water filter by a water filter substitute cartridge. To purchase a water filter substitute cartridge contact your local dealer or call 18005786890. **WARNING** To avoid serious illness or death, do not deactivate the filter display while using an water filter.

To deactivate the filter display: Resetting the filter display If the filter display is not reset, the next required filter change cannot be signalled by the display. After each filter change: Simultaneously hold down the SETUP and ICE buttons for 3 seconds. Re-activate the filter display by pressing the SETUP and ICE buttons for 3 seconds simultaneously. Simultaneously hold down the SUPER COOL and ICE buttons for 3 seconds. 22 Filter Product Data Sheet Performance Data Sheet For Filter Model 9000 077 095 Using Replacement Cartridge 9000 077 104 This system has been tested according to NSF/ANSI Standards 42 and 53 for the reduction of the substances listed below.

The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible unit for water leaving the system, as specified in NSF/ANSI 42 and 53. Note that while the testing was performed under standard laboratory conditions, actual performance may vary. System tested and certified by NSF International in Model 9000 077 095 against NSF/ANSI Standard 53 for the reduction of Cysts and Turbidity and against Standard NSF/ANSI 42 for the reduction of Chlorine Taste and Odor; Nominal Particulate Class I to a capacity of 739.68 gallons (2800 liters). Substance Average Influent Concentration on 166.500 10.7 Influent Challenge Concentration mg/L Min. 50.000/L 11 x 1 NTU Product Water Concentration Average % Reduction Maximum Permissible Product Water Concentration 99.95 0.

5 NTU Max. Effluent Min. % Reduction NSF Test Cysts * Turbidity 1 0,31 99.99 97.10 1 0.49 99.99 95.42 511077-03 511078-03 Particulate Class I Particle site: > 0,5 to < 1 µm Chlorine taste and odor 5.700.000 At least 10.

000 particles/ml 2,0 mg/L ±10% 30.583 99.52 > 85 % 69.000 98.9 511079-03 1.

9 0.05 97.3 > 50 % 0.06 96.84 511081-03 * Based on the use of Cryptosporidium parvum oocysts.

Application Guide lines/Water Supply Parameters Water pressure: 30120 psi (207827 kPa) Water temperature *: 33 °F/100 °F (0.6 °C/38 °C) Service flow: 0.75 gpm (2.83 lpm) Systems must be installed and operated in accordance with manufacturer's recommended procedures and guidelines Change filter at least every 69 months. Flush new filter for 5 minutes. See warranty card for complete details. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts. Entire System (excluding disposable cartridges) is warranted for a period of one year. Disposable cartridges are warranted for defects in material and workmanship only.

Service life of disposable filter cartridges varies with local water conditions and is thus not warranted. For estimated costs of replacement elements please visit your local appliance dealer or parts distributor. Manufactured by: Cuno Engineered Products 1000 Apollo Road Eagan, MN 55121-2240 U.S.A. 23 Troubleshooting Fault Appliance has no cooling capacity. The interior light does not function. The display does not come on. The refrigerating unit switches on more and more frequently and for longer. Possible cause: Power failure; the fuse has actuated; the mains plug is not in properly.

Remedial action Check that the power is on. The fuse must be switched on. Check that the mains plug is plugged in. Do not open the door unnecessarily. Switch on Super function.

Remove obstacles and dirt. Select a warmer temperature (see "Setting the temperature"). Change the bulb (see "Changing the bulb"). Check whether it can be moved. Clean the appliance.

Pack strong-smelling foods in airtight containers (see "Odors"). Appliance door opened frequently. Large quantities of fresh food placed in the appliance. The ventilation openings have been covered. The temperature in the refrigerator or freezer compartment is too cold. The interior light does not function. Temperature has been set too low. The bulb is defective. The light switch is sticking. The appliance is giving off odors.

Strong-smelling foods have not been packed in airtight containers. Ice Maker Fault Ice maker does not appear to be running. Possible cause: The ice maker is not connected to the power supply. The ice maker has no water supply. The freezer compartment temperature is too high. Small ice cubes over a prolonged period. Remedial action Call customer service. Ensure that the water supply line is connected properly. Check temperature of the freezer compartment. If required, lower the temperature.

Other domestic appliances which use water Avoid using e.g. a dishwasher, washing machine are in operation. or shower at the same time. Water filter must be changed.

Wrong water pressure. A wrong water valve has been installed. Instructions for changing the water filter can be found in the enclosed installation instructions. Check water pressure. The water pressure must be between 25 and 120 p.

s.i. (1.728.25 bar). Self-tapping valves and 3/16 inch (4.76 mm) saddle valves reduce the water pressure and may eventually block the pipe. The manufacturer is not liable for damage to property due to an incorrect installation or water connection. 24 Fault Possible cause: Remedial action Dispose of old ice cubes. Use the ice maker more frequently.

Empty and wash out the ice cube container. Check whether the frozen food has been packed in airtight containers. See section on "Odors". Reinsert the container and slide it backwards to the end position (see section "Variable interior design"). Check water pressure. The water pressure must be between 25

and 120 p.s.i. (1.728.25 bar). Check temperature of the freezer compartment. If required, lower the temperature. Self-tapping valves and 3/16 inch (4.76 mm) saddle valves reduce the water pressure and may eventually block the pipe.

The manufacturer is not liable for damage to property due to an incorrect installation or water connection. Check water pressure. The water pressure must be

between 25 and 120 p.s.i. (1.728.25 bar). Ice cubes have an unpleasant odor/ Ice which is stored for a long time may absorb odors which impair their taste.



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](http://yourpdfguides.com/dref/3654433)
<http://yourpdfguides.com/dref/3654433>

flavor. The ice cube container is dirty. Unsealed packages in the freezer transfer odor/flavor particles to the ice cubes. Clean the inside of the appliance. Ice maker is not producing any ice. The ice cube container is in the false position.

The water pressure is too low. The freezer compartment temperature is too high. A wrong water valve has been installed. The ice maker is not producing enough ice or the ice cubes are misshapen. The water pressure is too low. The freezer compartment temperature is too low. Check temperature of the freezer compartment. If required increase the temperature. Change the water filter. Instructions for changing the water filter can be found in the enclosed installation instructions.

Check water pressure. The water pressure must be between 25 and 120 p.s.i. (1.

728.25 bar). Check temperature of the freezer compartment. If required increase the temperature. Ice is forming in the supply hose to the ice maker. The water pressure is too low. The freezer compartment temperature is too low. Water is flowing out of the appliance. Close shut-off valve immediately. The water pipe in the appliance is defective. Call customer service immediately. The water pressure is too low. The valve may leak if the water pressure is too low. The water pressure must be between 25 and 120 p.s.

i. (1.728.25 bar). Self-tapping valves and 3/16 inch (4.76 mm) saddle valves reduce the water pressure and may eventually block the pipe. The manufacturer is not liable for damage to property due to an incorrect installation or water connection. A wrong water valve has been installed. 25 Changing the bulb m
WARNING m Pull out the defective halogen bulb. To avoid electrical shock which can cause death or severe personal injury, disconnect power to appliance before making repairs.

After making repairs, reconnect power. Switch off the appliance with the POWER button! Pull out the mains plug or switch off the fuse. CAUTION Never touch a halogen bulb with bare fingers. When inserting a glass halogen bulb, always hold with a soft cloth. We recommend that a service technician changes the bulb.

Insert a new halogen bulb. Touch the halogen bulb with a soft cloth only. Attach the cover and connect to the clip. Insert a new halogen bulb. Touch the halogen bulb with a soft cloth only.

Halogen bulb at the side Halogen bulb type: 10 W/12 V/socket G4 Halogen bulbs above Halogen bulb type: 20 W/12 V/socket G4 Insert the disc. Insert the cover rail. Release the cover and remove from the clip. Pull out the defective halogen bulb. Pull out the cover rail forwards. To loosen the cover rail use a screwdriver. Remove the disc forwards. 26 Changing the odor filter Replacement filters are available from your dealer. Service If you need service, first see the "Troubleshooting" section of this book. After checking "Troubleshooting", additional help can be found by calling the Thermador Customer Interaction Center, 18007354328 (toll-free), from anywhere in the U.

S.A. In Canada, contact your designated Thermador Canada service company or call 18007354328. Write down the following information about your freezer to better help you obtain assistance or service if you ever need it. Dealer name: Address: STATEMENT OF LIMITED PRODUCT WARRANTY Thermador Fridge-Freezer What this Warranty Covers & Who it Applies to: The limited warranty provided BSH Home Appliances in this Statement of Limited Product Warranty applies only to the Thermador Fridge-Freezer ("Product") sold to you, the first using purchaser, provided that the Product was purchased: (1) for your normal, household (non-commercial) use, and has in fact at all times only been used for normal household purposes; (2) new at retail (not a display, "as is", or previously returned model), and not for resale, or commercial use; and (3) within the United States or Canada, and has at all times remained within the country of original purchase. The warranties stated herein apply only to the first purchaser of the Product and are not transferable. Please make sure to return your registration card; while not necessary to effectuate warranty coverage, it is the best way for Thermador to notify you in the unlikely event of a safety notice or product recall. How Long the Warranty Lasts: Thermador warrants that the Product is free from defects in materials and workmanship for a period of three hundred sixty-five days (365) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever. Repair/Replace as Your Exclusive Remedy: During this warranty period, Thermador or one of its authorized service providers will repair your Product without charge to you (subject to certain limitations stated herein) if your Product proves to have been manufactured with a defect in materials or workmanship.

If a reasonable number of attempts to repair the Product have been made without success, then Thermador will replace your Product (upgraded models may be available to you, in Thermador's sole discretion, for an additional charge). All removed parts and components shall become the property of Thermador at its sole option. All replaced and/or repaired parts shall assume the identity of the original part for purposes of this warranty and this warranty shall not be extended with respect to such parts. Thermador's sole liability and responsibility hereunder is to repair manufacturer-defective Product Open the filter holder. Phone number: Purchase date: Model number: Pull out used odor filter.

Insert a new odor filter. FD number: Serial number: Type: You will need to know your complete model number and serial number. Close the filter holder. 27 only, using a Thermador-authorized service provider during normal business hours. For safety and property damage concerns, Thermador highly recommends that you do not attempt to repair the Product yourself, or use an unauthorized servicer; Thermador will have no responsibility or liability for repairs or work performed by a non-authorized servicer.

If you choose to have someone other than an authorized service provider work on your Product, THIS WARRANTY WILL AUTOMATICALLY BECOME NULL AND VOID. Authorized service providers are those persons or companies that have been specially trained on Thermador products, and who possess, in Thermador's opinion, a superior reputation for customer service and technical ability (note that they are independent entities and are not agents, partners, affiliates or representatives of Thermador). Notwithstanding the foregoing, Thermador will not incur any liability, or have responsibility, for the Product if it is located in a remote area (more than 100 miles from an authorized service provider) or is reasonably inaccessible, hazardous, threatening, or treacherous locale, surroundings, or environment; in any such event, if you request, Thermador would still pay for labor and parts and ship the parts to the nearest authorized service provider, but you would still be fully liable and responsible for any travel time or other special charges by the service company, assuming they agree to make the service call.



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](http://yourpdfguides.com/dref/3654433)
<http://yourpdfguides.com/dref/3654433>

Extended Limited Warranty: Thermador also provides these additional limited warranties: 2 Year Limited Warranty: Thermador will repair or replace any component that proves to be defective in materials or workmanship (excludes labor charges). 5 Year Limited Warranty on Electronics: Thermador will repair or replace any Thermador microprocessor or printed circuit board if it proves to be defective in materials or workmanship (excludes labor charges). Lifetime

Warranty against Stainless Steel Rust Through: Thermador will repair or replace any component that proves to be defective in materials or workmanship (excludes labor charges). Out of Warranty Product: Thermador is under no obligation, at law or otherwise, to provide you with any concessions, including repairs, prorates, or Product replacement, once this warranty has expired. Warranty Exclusions: The warranty coverage described herein excludes all defects or damage that are not the direct fault of Thermador, including without limitation, one or more of the following: (1) use of the Product in anything other than its normal, customary and intended manner (including without limitation, any form of commercial use, use or storage of an indoor product outdoors, use of the Product in conjunction with air or water-going vessels); (2) any party's willful misconduct, negligence, misuse, abuse, accidents, neglect, improper operation, failure to maintain, improper or negligent installation, tampering, failure to follow operating instructions, mishandling, unauthorized service (including selfperformed "fixing" or exploration of the appliance's internal workings); (4) adjustment, alteration or modification of any kind; (5) a failure to comply with any applicable state, local, city, or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations; (6) ordinary wear and tear, spills of food, liquid, grease accumulations, or other substances that accumulate on, in, or around the Product; and (7) any external, elemental and/or environmental forces and factors, including without limitation, rain, wind, sand, floods, fires, mud slides, freezing temperatures, excessive moisture or extended exposure to humidity, lightning, power surges, structural failures surrounding the appliance, and acts of God. In no event shall Thermador have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures or objects around the Product. Also excluded from this warranty are scratches, nicks, minor dents, and cosmetic damages on external surfaces and exposed parts; Products on which the serial numbers have been altered, defaced, or removed; service visits to teach you how to use the Product, or visits where there is nothing wrong with the Product; correction of installation problems (you are solely responsible for any structure and setting for the Product, including all electrical, plumbing or other connecting facilities, for proper foundation/flooring, and for any alterations including without limitation cabinetry, walls, floors, shelving, etc.

); and resetting of breakers or fuses. TO THE EXTENT ALLOWED BY LAW, THIS WARRANTY SETS OUT YOUR EXCLUSIVE REMEDIES WITH RESPECT TO PRODUCT, WHETHER THE CLAIM ARISES IN CONTRACT OR TORT (INCLUDING STRICT LIABILITY, OR NEGLIGENCE) OR OTHERWISE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESS LIMITED WARRANTY IS EFFECTIVE. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR CONSEQUENTIAL, SPECIAL, INCIDENTAL, INDIRECT, "BUSINESS LOSS", AND/OR PUNITIVE DAMAGES, LOSSES, OR EXPENSES, INCLUDING WITHOUT LIMITATION TIME AWAY FROM WORK, HOTELS AND/OR RESTAURANT MEALS, REMODELLING EXPENSES IN EXCESS OF DIRECT DAMAGES WHICH ARE DEFINITELY CAUSED EXCLUSIVELY BY THERMADOR, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. No attempt to alter, modify or amend this warranty shall be effective unless authorized in writing by an officer of BSH. How to Obtain Warranty Service: To obtain warranty service for your Product, you should contact the nearest Thermador authorized service center. BSH Home Appliances 5551 McFadden Avenue, Huntington Beach, CA 92649 / 8009442904 28

Table de matières INSTRUCTIONS DE SÉCURITÉ IMPORTANTES .

.....

.....

.....

.....

.....

.....

... Félicitations

.....

.....

.....

.....

.....

.....

.....

..... Présentation de votre nouvel appareil ...

.....

.....

.....

.....

.....

.....

..... Présentation de votre nouvel appareil ..

.....

.....

.....
.....

.....
.....
.....

Installation

.....
.....
.....

.....
.....
.....

.... *Raccordement à l'alimentation électrique*

.....
.....
.....

.....
.....
.....

... *Raccordement de l'eau*

.....
.....
.....

.....
.....
.....

..... *Allumage de l'appareil* ...

.....
.....
.....

.....
.....
.....

.. *Extinction et débranchement de l'appareil*

.....
.....
.....

.....
.....
.....

. *Fonctions*

.....
.....
.....

.....
.....
.....

..... Aménagement variable de l'intérieur

.....
.....
.....
.....
.....
.....

Tiroir fraîcheur

.....
.....
.....
.....
.....

Panneau de commande

.....
.....
.....
.....
.....
.....

Réglage de la température

.....
.....
.....
.....
.....

Fonction Super

.....
.....
.....
.....
.....

..... Mode Configuration (Setup)

.....
.....
.....
.....

..... Réglages modifiables en mode Configuration (Setup)

.....

.....
.....
.....

..... *Mode Vacances*

.....
.....
.....

.....
.....
.....

.....
.....

.. *Mode Sabbat*

.....
.....
.....
.....

.....
.....
.....

..... *Réfrigération*

.....
.....
.....

.....
.....
.....

.. *Congélation et rangement*

.....
.....
.....
.....
.....

.... *Distributeur de glaçons*

.....
.....
.....
.....

... *Bruits de fonctionnement*

.....
.....
.....

.....

.....

.....

.....

Comment économiser de l'énergie .



[You're reading an excerpt. Click here to read official THERMADOR T36BT71FS user guide](#)

<http://yourpdfguides.com/dref/3654433>

.....

.....

.....

.....

.....

.....

.....

Dégivrage

.....

.....

.....

.....

.....

.....

.....

.....

.....

Nettoyage de l'appareil

.....

.....

.....

.....

.....

.....

.....

..... Odeurs

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... Messages d'avertissement apparus à l'afficheur

.....

.....

.....

.....

..... Autodiagnostic de l'appareil

.....

.....

.....

.....

.....

.....

.....

..... Remise de l'appareil sur ses réglages usine

.....

.....

.....

.....
.....
.....
.. *Filtre à eau*

.....
.....
.....

.....
.....
.....
.....

..... *Filtre à eau feuilles de données sur le produit*

.....
.....
.....

.....
.....
.....

. *Dérangements et remèdes*

.....
.....
.....
.....

.....
.....
.....

.. *Changement de l'ampoule*

.....
.....
.....
.....

.....
.....
.....

.... *Changement du filtre à odeurs*

.....
.....
.....
.....

.....
.....
.....

.. *Service après-vente*

.....
.....
.....
.....

.....
.....
.....

..... *CONDITIONS DE LA GARANTIE PRODUIT LIMITÉE*

.....
.....

