



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THERMADOR VTN30RQ. You'll find the answers to all your questions on the THERMADOR VTN30RQ in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THERMADOR VTN30RQ  
User guide THERMADOR VTN30RQ  
Operating instructions THERMADOR VTN30RQ  
Instructions for use THERMADOR VTN30RQ  
Instruction manual THERMADOR VTN30RQ

**Thermador®**

**CARE & USE MANUAL  
FOR HOODS and VENTILATORS**

#### IMPORTANT SAFETY INSTRUCTIONS



##### WARNING

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

A. Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.  
B. Before servicing or cleaning unit, switch power off at service panel and lock service disconnect to prevent power from being switched on accidentally. When the service disconnect cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.



##### WARNING

**TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK VENTED TO THE OUTDOORS.**

**CAUTION: For General Ventilating Use Only. Do Not Use To Exhaust Hazardous or Explosive Materials and Vapors.**



##### WARNING

**TO REDUCE THE RISK OF A COOKTOP GREASE FIRE**

a) Never leave surface units unattended at high settings. Boil-overs cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.  
b) Always turn hood ON when cooking at high heat or when cooking flaming foods.  
c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.  
d) Use proper pan size. Always use cookware appropriate for the size of the surface element.



##### WARNING

**TO REDUCE THE RISK OF INJURY TO PERSONS, IN THE EVENT OF A COOKTOP GREASE FIRE, OBSERVE THE FOLLOWING:**

A. **SMOTHER FLAMES** with a close-fitting lid, cookie sheet, or other metal tray, then turn off the gas burner or the electric element. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately EVACUATE AND CALL THE FIRE DEPARTMENT.  
B. **NEVER PICK UP A FLAMING PAN** - You may be burned.  
C. **DO NOT USE WATER**, including wet dishcloths or towels - a violent steam explosion will result.  
D. **Use an extinguisher ONLY if:**  
1. You know you have a Class ABC extinguisher, and you already know how to operate it.  
2. The fire is small and contained in the area where it started.  
3. The fire department is being called.  
4. You can fight the fire with your back to an exit.



[You're reading an excerpt. Click here to read official THERMADOR VTN30RQ user guide](http://yourpdfguides.com/dref/3549305)

<http://yourpdfguides.com/dref/3549305>

**Manual abstract:**

If you have any questions, contact the manufacturer. B. @@@@CAUTION: For General Ventilating Use Only. Do Not Use To Exhaust Hazardous or Explosive Materials and Vapors. @@Boil-overs cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings. b) Always turn hood ON when cooking at high heat or when cooking flaming foods. c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter. d) Use proper pan size.

Always use cookware appropriate for the size of the surface element. !! WARNING TO REDUCE THE RISK OF INJURY TO PERSONS, IN THE EVENT OF A COOKTOP GREASE FIRE, OBSERVE THE FOLLOWING: A. SMOTHER FLAMES with a close-fitting lid, cookie sheet, or other metal tray, then turn off the gas burner or the electric element. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately EVACUATE AND CALL THE FIRE DEPARTMENT.

B. NEVER PICK UP A FLAMING PAN - You may be burned. C. DO NOT USE WATER, including wet dishcloths or towels - a violent steam explosion will result. D.

Use an extinguisher ONLY if: 1. You know you have a Class ABC extinguisher, and you already know how to operate it. 2. The fire is small and contained in the area where it started. 3. The fire department is being called. 4. You can fight the fire with your back to an exit. ! READ AND SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS - Hoods See Care and Use Manual of Downdraft. The ventilator should be turned on 5 minutes before cooking in order to draw the currents of air toward the hood.

That way when heat, smoke, moisture, grease and cooking odors arise, they will be carried toward the hood and forced outside, thereby minimizing their drift into other rooms. Drafts across the cooking surface from an open window, door etc., may cause the escape of heat, moisture, grease and cooking odors from the hood. Such drafts should be prevented whenever possible. The best job of ventilation in the kitchen is done when the only air currents are those created by the ventilator itself. CLEANINGINSTRUCTIONS For maximum efficiency, clean filter and hood regularly. Do not allow grease to accumulate on the hood or the ventilator surface. 1. To Clean the Filter Remove the filter by applying slight thumb pressure on the sides of the clips, and pulling the filter out by the top of the filter frame. Filter may be washed in the dishwasher or washed in warm soapy water, drain and dry before installing.

2. To Clean Hood Surface Use only mild soap or detergent for cleaning all hood surfaces. Dry surfaces with a cloth for maximum luster. Enamel Surface Use only mild soap or detergent for cleaning all hood surfaces. Dry surface with clean cloth for maximum luster.

Stainless Steel Surface The stainless steel used in the manufacture of these hoods is resistant to most stains and surface rust when cleaned and protected with a stainless steel cleaner/polish. Apply this type of product regularly according to manufacturer's directions to maintain appearance and protect the finish from surface damage. Filter Cleaning Pull open the housing door and remove the filters. Filters may be washed in hot sudsy water, or sprayed with a household kitchen cleaner (such as Fantastik®), then rinsed with hot water, or washed in the dishwasher. Replace after they are dry.

H64/65 Remove two (2) shipping screws from base of each lamp shade. Lamp shade will now snap out for easy cleaning. Install two (2) 75 Watt (maximum) flood lamps. For best results, use reflector flood (not supplied with hood) into lamp shade sockets. ON H65 ONLY Install two (2) 250 Watt (maximum) infrared heat lamps, using type R-40 (not supplied with hood), into angled sockets only. CAUTION Do not use scouring powders or abrasive cleaners on the hood as these may permanently mar the finish. Do not use oven cleaners to clean the stainless steel hood even if recommended by the manufacturer of the cleaner. Note: When installing the Ventilator on Downdraft Models UCV30AB, UCV30AW, UCV30AS, UCV36AB, UCV36AW, UCV36AS, UCV45AB, UCV45AW, UCV45AS, see Installation Instructions (P/N 5060004249) included with the range. WARRANTY FULL ONE YEAR WARRANTY Covers one year from date of installation, or date of occupancy on a new, or previously unoccupied dwelling. Save your dated receipt or other evidence of installation/occupancy date.

Thermador Will Pay For: All repair labor and replacement parts found to be defective due to materials and workmanship. Service must be provided by a Factory Authorized Service Agency, during normal working hours. For a Service Agency nearest you, please call 800/735-4328. Thermador Will Not Pay For: 1. Service by an unauthorized agency, Damage or repairs due to service by an unauthorized agency or the use of unauthorized parts. 2. Service visits to: · Teach you how to use the appliance. · Correct defects or repairs due to improper installation. You are responsible for providing electrical wiring and other connecting facilities. · Reset circuit breakers or replace home fuses. · Damage caused from accident, alteration, misuse, abuse, improper installation or installation not in accordance with local electrical codes or plumbing codes, or improper storage of the appliance. · Service labor during limited warranty period. · Travel fees and associated charges incurred when the product is installed in a location with limited or restricted access. (i.e. , airplane flights, ferry charges, isolated geographic regions). · Repairs due to other than normal home use. This warranty applies to appliances used in residential applications; it does not cover their use in commercial installations. The warranty is for products purchased and retained in the 50 states of the U.S.

A. the District of Columbia and Canada. Should the appliance be sold by the original purchaser during the warranty period, the new owner continues to be protected until the expiration date of the original purchaser's warranty period. Products for use in Canada must be purchased through the Canadian distribution channel to ensure regulatory compliance and warranty coverage. This warranty gives you specific legal rights. You may also have other rights which vary from state to state. HOW TO OBTAIN SERVICE · Contact the Factory Authorized Service Agent in your area · Contact the Dealership where you purchased the appliance. · Call the Thermador Customer Support Call Center at 800-735-4328 · Write us at: BSH Home Appliances Corp., 5551 McFadden Avenue, Huntington Beach, CA, 92649 Note: The Thermador products referred to throughout this manual are manufactured by BSH Home Appliances Corp. Refer to installation instructions and consult your countertop supplier prior to making counter opening.

Consult with a heating and ventilating engineer for your specific ventilation requirements. For the most detailed information, refer to installation instructions accompanying product or write BSH Home Appliances Corp.



[You're reading an excerpt. Click here to read official THERMADOR VTN30RQ user guide](http://yourpdfguides.com/dref/3549305)  
<http://yourpdfguides.com/dref/3549305>



Se debe prender el ventilador 5 minutos antes de cocinar para sacar las corrientes de aire hacia la campana. Esto garantiza que al producirse calor, humo, humedad, grasa u olores de cocinar, éstos sean transportados hacia afuera, en lugar de desplazarse a las otras habitaciones. Las corrientes que pasan encima de la estufa debido a una ventana o puerta abierta pueden causar el escape de humedad, grasa y olores de cocinar de la campana. Tales corrientes deben evitarse si es posible. Se logra la mejor ventilación en la cocina donde las únicas corrientes de aire son aquellas creadas por el ventilador mismo. **INSTRUCCIONES DE LIMPIEZA** Para lograr una máxima eficiencia, limpie el filtro y la campana regularmente. No permite que se acumule grasa en la campana o la superficie del ventilador. 1.

Para limpiar el filtro Quite el filtro aplicando una presión ligera con los dedos a los lados de los sujetadores, y jale el filtro hacia arriba agarrándolo por la parte superior del bastidor del filtro. Se puede lavar el filtro en una lavavajillas o en agua tibia jabonosa, y se debe drenar y secar antes de volver a instalarlo. 2. Para limpiar Use sólo un jabón o detergente suave para limpiar todas las superficies de la campana. Seque las superficies con un trapo para lograr el máximo brillo. Superficie esmaltada Use sólo un jabón o detergente suave para limpiar todas las superficies de la campana. Seque las superficies con un trapo para lograr el máximo brillo. Superficie de acero inoxidable El acero inoxidable que se usa en la fabricación de estas campanas es resistente a la mayoría de las manchas y la oxidación superficial, cuando es limpiado y protegido con un limpiador/pulidor para acero inoxidable. Aplique este tipo de producto regularmente de acuerdo a las instrucciones del fabricante para mantener su apariencia y proteger el acabado de daños en la superficie. Limpiar los filtros Abre la puerta del bastidor y saque los filtros.

Se pueden lavar los filtros en agua tibia jabonosa, o se puede aplicar un limpiador de cocina normal (como Fantastik®), luego se deben enjuagar con agua caliente o lavarlos en una lavavajillas. Vuelva a instalar los filtros después de secarlos. H64/65 Quite los dos (2) tornillos de transporte de la base de cada pantalla de la lámpara. Ahora es fácil sacar la pantalla para limpiarla. Instale dos (2) reflectores de 75 Watt (máximo). Para lograr mejores resultados, utilice un reflector (que no se incluye con la campana) en los casquillos para lámparas de la pantalla. SÓLO PARA H65 Instale dos (2) lámparas infrarrojas de calentamiento de 250 Watt (máximo), utilizando sólo el tipo R-40 (no se incluye con la campana), en los casquillos angulares solamente. CUIDADO No utilice polvo desengrasador o limpiadores abrasivos con la campana ya que éstos pueden dañar el acabado permanentemente. No utilice limpiadores de horno para limpiar la campana de acero inoxidable, aún si lo recomienda el fabricante del limpiador. Nota: Cuando instala el ventilador en los modelos de corriente descendente UCV30AB, UCV30AW, UCV30AS, UCV36AB, UCV36AW, UCV36AS, UCV45AB, UCV45AW, UCV45AS, vea las instrucciones de instalación (N/P 5060004249) que se incluyen con la unidad.

**GARANTIA GARANTÍA COMPLETA DE UN AÑO** Esta garantía es válida por un año a partir de la fecha de instalación o la fecha de ocupación de una vivienda nueva o previamente desocupada. Guarde su recibo fechado u otra muestra de la fecha de instalación/ocupación. Thermador Pagará: Toda la mano de obra y refacciones de partes defectuosas debido a fallas del material o mano de obra. @@@@Thermador No Pagará: 1. @@@2.

@@ Corregir defectos o reparaciones debido a una instalación incorrecta. Usted es responsable de proporcionar el cableado eléctrico y otras conexiones. Poner los cortacircuitos o reemplazar fusibles en su casa. Daños causados por accidente, alteración, mal uso, abuso, instalación no apropiada o instalación que no cumple con los códigos locales eléctricos o de fontanería, o el almacenamiento no apropiado del aparato. Mano de obra para el servicio durante el período de la garantía limitada.

Gastos viáticos y otros gastos generados cuando el producto está instalado en un lugar con acceso limitado o restringido, (ej. vuelos aéreos, viajes con transbordador, regiones geográficas aisladas). Reparaciones debido a un uso casero anormal. Esta garantía aplica a aparatos utilizados en aplicaciones residenciales. Estos productos no han sido diseñados para una instalación comercial y la garantía no aplica cuando se usan de esta forma. Esta garantía sirve para productos comprados en los 50 estados de los EE.UU., el Distrito de Columbia y Canadá. En caso que el comprador original venda el aparato durante el período de garantía, el nuevo propietario sigue estando protegido hasta la fecha de vencimiento del período de garantía del comprador original. Los productos para el uso en Canadá deben comprarse a través del canal de distribución canadiense para asegurar su conformidad regulatoria y cobertura de la garantía.

Esta garantía le brinda derechos legales específicos y puede que usted tenga otros derechos que pueden variar de estado a estado. **CÓMO OBTENER SERVICIO** . . . . Contacte al Representante de Fábrica Autorizado en su área. Contacte al Distribuidor donde usted compró el aparato. Llame al Centro de Soporte de Clientes de Thermador al 800-735-4328. Escribanos a: Thermador 5551 McFadden Avenue, Huntington Beach CA, 92649. Nota: Los productos Thermador a que se refiere este manual son fabricados por BSH Home Appliances Corp. Refiérase a las instrucciones de instalación y consulte a su proveedor de la mesa de trabajo antes de cortar ésta. Consulte a un ingeniero de calefacción y ventilación para ver sus requerimientos específicos de ventilación. Para obtener la información más detallada, refiérase a las instrucciones de instalación que vienen incluidas con el producto o escriba a BSH Home Appliances Corp. indicando el número de modelo.

BSH Home Appliances Corp. se reserva el derecho de modificar las especificaciones o el diseño sin previo aviso. Algunos modelos están certificados para ser usados en Canadá. BSH Home Appliances Corp. no es responsable de productos que son transportados desde los Estados Unidos para ser utilizados en Canadá.

Consulte a su distribuidor local en Canadá.



[You're reading an excerpt. Click here to read official THERMADOR VTN30RQ user guide](http://yourpdfguides.com/dref/3549305)  
<http://yourpdfguides.com/dref/3549305>



[You're reading an excerpt. Click here to read official THERMADOR VTN30RQ user guide](#)

<http://yourpdfguides.com/dref/3549305>