




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON 14MH10C. You'll find the answers to all your questions on the THOMSON 14MH10C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON 14MH10C**  
**User guide THOMSON 14MH10C**  
**Operating instructions THOMSON 14MH10C**  
**Instructions for use THOMSON 14MH10C**  
**Instruction manual THOMSON 14MH10C**

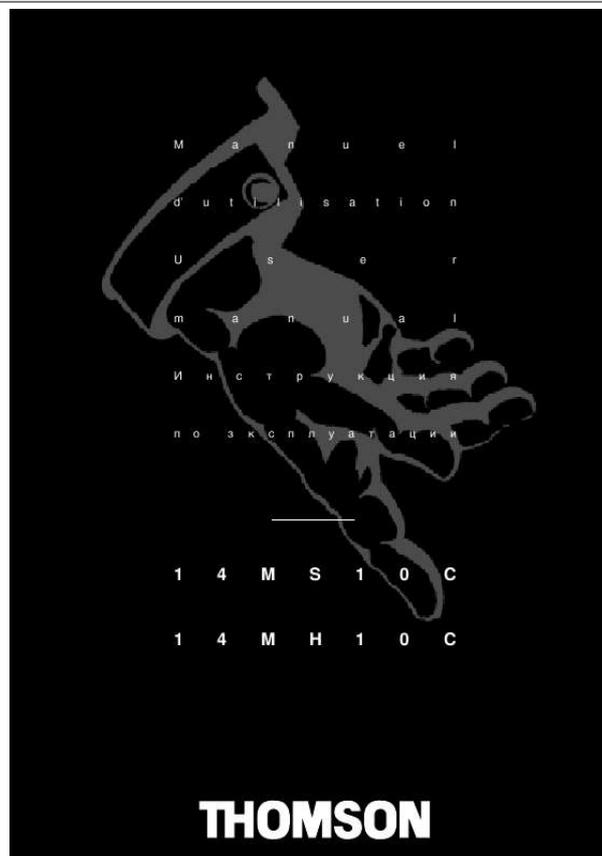

[You're reading an excerpt. Click here to read official THOMSON 14MH10C user guide](http://yourpdfguides.com/dref/2178511)  
<http://yourpdfguides.com/dref/2178511>

**Manual abstract:**

*Operation* Please read the following instructions carefully and follow them closely, they concern your personal safety and can affect the operation of your equipment. Television sets require ventilation to avoid overheating which can damage components. Make sure that the rear ventilation openings are not covered up by curtains, cloths, newspapers, etc. There must be enough room inside built-in units to allow cooling air to circulate freely. Do not install the set next to heating. The appliance is designed to operate in a dry room. Should you, for any special reason, wish to use it outdoors (e.g. balcony, veranda, tent, etc.), always make sure it is properly protected against any form of moisture (dew, rain, splashing).

Before turning on a cold set in a warm room, wait until any condensation on the screen has evaporated. Never open up the rear panel of the television set. Have your aerial installed by an authorised dealer or specialist. At the end of the evening TV programme or in the event of prolonged absence, you should switch off your set using the ON/OFF button. Even if the ON/OFF switch is in the OFF position, the set is not completely disconnected from the mains.

To disconnect the set completely, pull out the mains plug. **GB DO NOT OBSTRUCT VENTILATION OPENINGS. AVOID WATER, HEAT, DIRECT SUNLIGHT.** Do not place audio loudspeakers next to your TV set as the magnets in the speakers may cause coloured patches on the screen. Remove the mains plug from the wall outlet in the following cases: 1.

During thunderstorms. It is wise to disconnect the aerial plug too in this case. 2. If you notice any odour or smoke coming from your set. Additional information: Your TV set is adequately shielded to prevent X-ray emission. Acceleration voltage does not exceed the maximum value of 26 kV. Work by unqualified technicians, modification of the high-voltage setting or replacement of the tube with a model that does not comply with the manufacturer's specifications can lead to a considerable increase in X-ray emission. @.@Cleaning The screen should be cleaned using liquid window cleaner. · Never use abrasive cleaners. @.@.@.@Demagnetisation The earth's magnetic field may affect your television set, causing coloured patches to appear on the screen.

If this happens: · Switch off the set using the ON/OFF button. · Wait about an hour and then switch on again using the ON/OFF button. This operation demagnetises the screen automatically. If coloured patches are still visible, repeat the procedure. 1 Connections GB 220 - 240V ~ 50Hz 2 1. Aerial Socket Enables connection of the aerial and, if required, a video recorder (see manual for latter). To tune the channel reserved for your video recorder, start up the recorder then carry out MANUAL CHANNEL SETTING operations. Store at programme 99 if you have a SECAM video recorder or at any programme ending with a 9 (9,19,29, etc.) if you have a PAL recorder. Each time you use the video recorder, switch to the channel assigned to it.

GB 2. SCART Socket This is used to connect: a VHS, 8 MM, SVHS or Hi8 video recorder or camcorder, a PAY TV decoder, a video games console. To use the connected device, select the audiovisual programme by pressing the This selection is automatic for some devices. AV is displayed at the bottom of the screen. If you have an S-VIDEO device, press the of the screen for a few seconds.

button again. S-VIDEO is then displayed at the bottom button. When you switch off the device and if you have not changed channel during play, the TV set automatically returns to the previous channel. If the TV set has been switched on by the video recorder, it will be placed on standby when the video recorder is switched off. 3.

Audio / Video CINCH Sockets These are used to connect a VHS or 8 mm camcorder. @.@.@.@.@.@.@.@ "Please respect the environment! @.@.@Ensure that the aerial lead is connected to the TV set. @.@Switch off any equipment connected via the SCART socket. @.@.@.@.@.@.@.@.@.@Automatic search begins. @.@.@.@The Programme Organizer menu then appears automatically. @.@.@You can also use the Press the buttons on the remote control. EURO VL PR01 AUTO INSTALL. button to confirm the change. The programmes stored under the old and new numbers are then swapped. Repeat this operation to change other programme numbers.

Erasing a Programme Select the programme to be erased using the button. Enter 0 or 00 on the numerical keypad of the remote control. Press to confirm. The programme is erased. button, then press Check that all the programmes are in the required order using the to leave the menu. 6 Manual Channel Setting Press the button twice to call up the channel setting menu. 1. Selecting the Broadcasting Standard Select the broadcasting standard using the buttons. EURO DKK' VL PR GB EURO DK Western Europe, Tunisia, Morocco Eastern Europe, Middle East, Africa, French Territories (B,G standards) (D,K,K' standards) 2. Channel Search Select the 2nd line of the menu using the Start the search by pressing: the the button for a forward search, button for a backward search. EURO VL button. The search fully covers the VL, VH and U bands starting PR from the channel on the screen. The cursor moves and as soon as a channel is found, the picture appears on the screen. Wait for the menu to go to the bottom of the screen for optimum reception. If the picture corresponds to the channel required, go to the 4th line (PR), otherwise continue the search.

If you wish to stop the automatic search, press the button. 3. Programme Number and Storing in Memory Select the 4th line of the menu using the button. EURO VL PR If fine tuning is necessary, see Fine Tuning Enter a programme number using the numerical buttons of the remote control. You can also use the buttons.

Store the programme number you have allocated to the channel by pressing the The 2nd line of the menu is then selected again. button. Restart the search using the buttons. To search for channels in another broadcasting standard, repeat the above operations from SELECTING THE BROADCASTING STANDARD. 7. 4. Fine Tuning Only necessary in the event of interference If fine tuning is necessary, select the 3rd line of the menu GB using the button. buttons. PR EURO VL If necessary, adjust the picture using the Select the 4th line (PR) using the button to allocate a programme number to the channel and store it in memory (see Programme Number and Storing in Memory) If a channel has required fine tuning, it will be stored in memory with the AFC (Automatic Frequency Control) deactivated. Press the button to leave the menu.

8 Picture Adjustments Press the button to call up the Picture Menu. GB = BRIGHTNESS = COLOUR = CONTRAST = SHARPNESS = TINT Select the function to be adjusted using the The tint function is only active in NTSC mode. @.@.@.@button. Sleep Timer Press the green Menu.



[You're reading an excerpt. Click here to read official THOMSON 14MH10C user guide](http://yourpdfguides.com/dref/2178511)  
<http://yourpdfguides.com/dref/2178511>

@@The standby indicator will flash (see Day to Day Operation). To cancel the sleep time function: press the green button to call up the menu. button once or several times to return to: : When the display indicates :, the sleep timer function is deactivated. The sleep timer function is also deactivated when the television set is switched to standby from the main ON/OFF switch. The television is then child locked and the standby indicator flashes (see Day to Day Operation). 9 Day to Day Operation Switching On - Selecting Programmes Switch on the television set using the main ON/OFF switch if the indicator is off.

GB If it is on, enter the desired programme number. For programmes 1 to 9: Press the corresponding number on the remote control. For programmes 10 to 99 (e.g. 24) : Press and hold the decimal (tens) number (2): 2 then press the units (4) number briefly: 2 4 Volume Adjustment - Sound Mute Press the buttons to turn the sound up or down.

button to turn the sound off. Press the The sound returns if the button is pressed again. Zapping Press the buttons to scroll through the programmes stored in memory. Personal Adjustments Press the red button to call up your personal adjustments (See Picture Adjustments). Display Press the yellow b.



[You're reading an excerpt. Click here to read official THOMSON](#)

[14MH10C user guide](#)

<http://yourpdfguides.com/dref/2178511>