



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON 21MF10C. You'll find the answers to all your questions on the THOMSON 21MF10C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON 21MF10C
User guide THOMSON 21MF10C
Operating instructions THOMSON 21MF10C
Instructions for use THOMSON 21MF10C
Instruction manual THOMSON 21MF10C



[You're reading an excerpt. Click here to read official THOMSON 21MF10C user guide](http://yourpdfguides.com/dref/2178640)
<http://yourpdfguides.com/dref/2178640>

Manual abstract:

Therefore, the model you bought may not support some of the functions or settings described hereinafter. About set-up To ensure your own safety and safe operation of the equipment, observe the following instructions thoroughly. TV sets require sufficient ventilation to prevent their components from overheating, which will cause failure. Do not block the ventilation openings at the rear. If you place your TV set in a specific unit, make sure there is enough space for unhindered air circulation. Do not place the TV set in the close vicinity of a heater. 5 cm 10 cm 10 cm 10 cm 10 cm In the following cases, we recommend that you pull out the mains connector: 1. During a thunderstorm. In such a case, it is advisable that you also disconnect the TV set from the aerial socket. 2. When odour or smoke emanates from the set. Further information: The TV set shielding is sufficient to prevent X-radiation to the exterior. The accelerator voltage does not exceed 26 kV. Any operation performed by a non skilled person, change of high voltage or replacement of the teletube by a model not complying with the manufacturer specification are likely to cause considerable increase in X-radiation. A TV set modified in such a way no longer complies with the manufacturer specification and shall not be put in operation again.

About cleaning The screen is to be cleaned with liquid glass cleaners. · Never use abrasive products. · Clean the front side and the housing with a soft cloth soaked with neutral cleaner. @@@@ · Wait about one hour before switching the set on again. This procedure performs automatic degaussing of the screen.

Should there still be coloured spots on the screen, repeat the operation. Do not place speakers in close vicinity of the TV set since the electromagnet of the speakers may cause coloured spots to appear on the screen. The TV set has been designed for use in dry rooms. Should you exceptionally operate it in the open air (example: on the balcony, in the veranda or tent), you must absolutely protect it against moisture (dew, rain, splash water). Prior to put up into operation a cold TV set in a warm room, you should wait until the possibly misted-up screen has dried by itself. In no case should you dismantle your TV set yourself. By the end of your TV evening or when away from home for a longer period, we recommend that you turn off the TV set with the On/Off-switch. Even when the On/Off-switch is in the Off-position, your TV set is not fully disconnected from the mains. To deenergize the set completely, the mains plug must be pulled out. 1 GB Connections The mains socket (1) is for supplying the TV set with power.

This TV set is suitable for use on A.C. mains supply, 220-240 V - 50 Hz only. It must not be connected to D.C. mains. Do NOT under any circumstances plug the severed plug into any mains socket as this could result in electric shock. The aerial socket (2) is for connecting an external antenna or equipment fitted with a modulator (VCR, satellite receiver, etc.). When connecting additional equipment to the aerial socket, you must assign a channel number to it.

To do so, switch the external equipment on, then search for its modulator channel on the TV set, assign the channel number found to the equipment (for SECAM VCR's, select channel number 99) and store. From now on, every time you want to use the external equipment connected, you must select the channel number assigned to it. VCR's without an integrated modulator do not require this setting. The SCART socket (3) enables you to connect a VCR or camcorder (VHS, 8 mm, S-VHS or Hi-8), Canal+ decoder or videogame console. The type of connection shown on the opposite is highly recommended, given that it provides improved picture quality.

To operate the external equipment connected, you must select its AV socket by means of the av key. With certain equipment, selection of proper AV socket is performed automatically. When connecting an S-Video equipment, make sure you press the av key twice. @@@@ find and store the channels, which may be received in your area. @@@@How to switch on the set? With the On/Off-button fitted on the set.

@@To switch the TV set on again, type in a channel number. @@ · Start the Automatic Channel Set-up by pressing the ok key. @@How to change the channel number? @@1. @@2. Then key in the new channel number on the remote control. 3. Validate with key ok. @@How to delete a channel number? Delete any programme the picture quality of which appears to be poor. 1. Select the channel with the key pr+ and pr-.

2. On the remote control, type in 0. 3. Then validate with ok: the channel number is now deleted. @@@@When switching the TV on the first time, a set-up window automatically comes up on the screen. If it doesn't, you may call it up by pressing 3 times the menu key of the remote control. · Depending on the model of your TV set, you'll have to select from the options listed below the one that fits with your country: EURO : Western Europe, Tunisia, Morocco FR : France, Luxembourg UK : United Kingdom, Eire DK : Eastern Europe, Middle East, Africa, French DOM-TOM Via Manual Channel Set-up 1. Press the menu key twice to call up the menu window. Depending on the model of your TV set, you'll have to select from the options listed below the one that fits with your country: EURO : Western Europe, Tunisia, Morocco FR : France, Luxembourg UK : United Kingdom, Eire DK : Eastern Europe, Middle East, Africa, French DOM-TOM Select corresponding option by means of the directional keys Left/Right. 2.

Select the second line with the directional keys Up/Down. Depending on your TV model, the layout of this line may vary. 4 When the line begins with VL, VH or U go to point 5. 3. When the line begins with CH or CC: Make use of the directional keys Left/Right to select either CH (aerial) or CC (cable).

4. Validate by pressing ok. 5. Press the directional key Left or Right to start Channel Set-up in either descending or ascending order. When a channel is found, the pictures appear.

If the pictures are poor, make use of the directional keys Up/Down to select the line -> .<- and try to improve picture quality with the directional keys Left/Right. 6. Then select PR- with the Up/Down keys and enter the number of the programme/channel corresponding to the pictures. This operation can also be performed with directional keys Left/Right. 7. Store the programme by pressing ok. To find the next programme, re-start Channel Set-up by means of the directional keys Left/Right. To leave the menu, press exit. How to adjust the picture? Press the key menu once to call up the menu window.

With the directional keys Up/Down, select the feature you want to adjust (brightness, colour, contrast, sharpness, tint). Now perform the adjustment by means of the directional keys Left/Right. Tint adjustment is possible for NTSC-pictures only. To close the menu window, press exit. Settings are stored until you proceed to another change.



[You're reading an excerpt. Click here to read official THOMSON 21MF10C user guide](http://yourpdfguides.com/dref/2178640)
<http://yourpdfguides.com/dref/2178640>

How to modify the preferences? 1. Press the menu key once. 2. Adjust the picture as described above. 3. Store by pressing the red key. Note: Settings performed as described above supersede the "average adjustments" made by the manufacturer. How to restore the preferences? With the red key. How to adjust the volume? With the key volume + or -. To switch the sound on or off, press mute. How to zap? With key pr+ or pr-. How to display a channel number? @@@@How to program switching-off? @@To exit the menu, press exit. @@When the programmed remaining time is over, the TV set will switch on standby. Switching the TV set off by means of the On/Off-button deactivates programmed switching-off. 5 GB How to use Videotext? (If included) Press the key text to display the Summary (page 100). Calling up a page How to prevent the TV set from being operated? Hold key B on the remote control down for over 4 seconds until the red LED on the TV set flashes. The keys of the TV set are now locked and switching it on again will be possible by means of the remote control only. Keep the remote control out of the reach of children. To unlock the .



[You're reading an excerpt. Click here to read official THOMSON 21MF10C user guide](http://yourpdfguides.com/dref/2178640)
<http://yourpdfguides.com/dref/2178640>